1. Description

1.1. Project

Project Name	bootloader
Board Name	bootloader
Generated with:	STM32CubeMX 4.18.0
Date	01/13/2017

1.2. MCU

MCU Series	STM32F1
MCU Line	STM32F103
MCU name	STM32F103C8Tx
MCU Package	LQFP48
MCU Pin number	48

2. Pinout Configuration
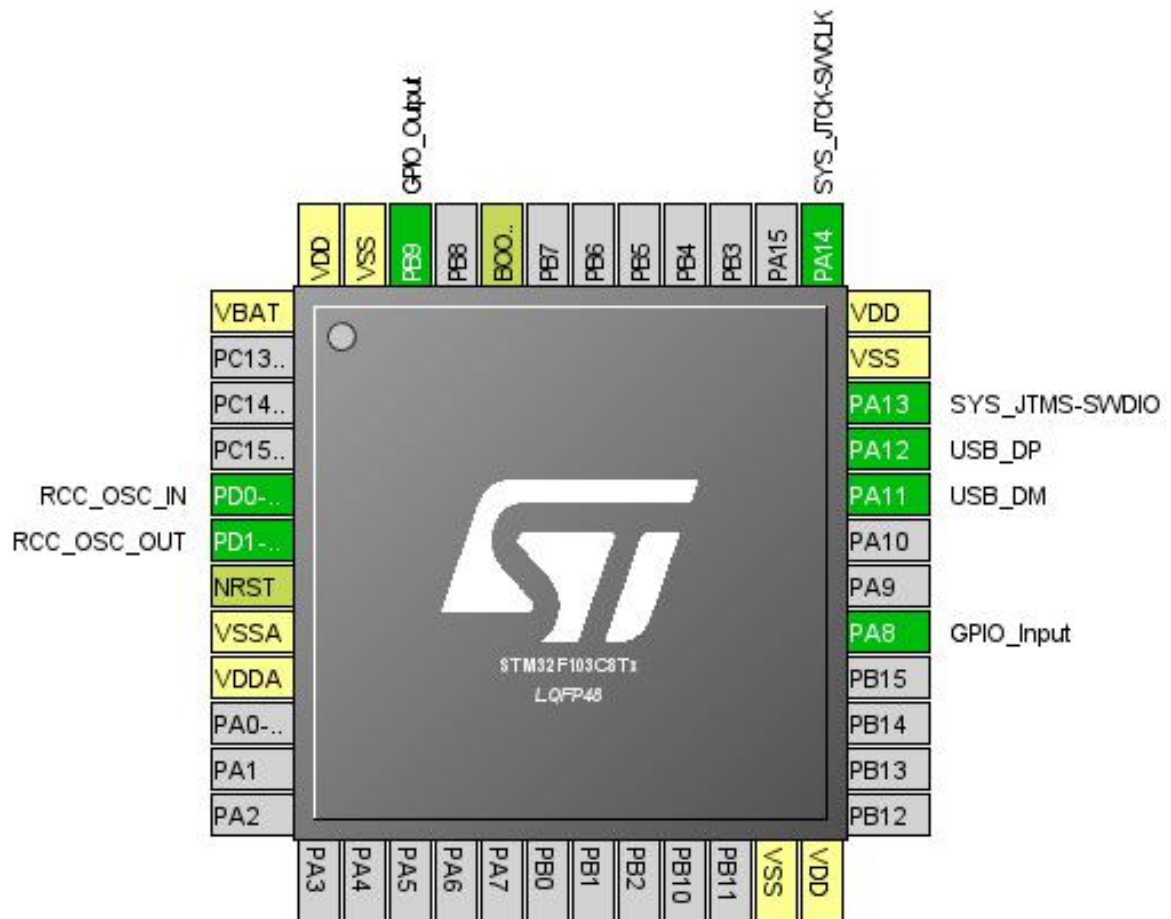
3. Pins Configuration

Pin Number LQFP48	Pin Name (function after reset)	Pin Type	Alternate Function(s)	Label
1	VBAT	Power		
5	PD0-OSC_IN	I/O	RCC_OSC_IN	
6	PD1-OSC_OUT	I/O	RCC_OSC_OUT	
7	NRST	Reset		
8	VSSA	Power		
9	VDDA	Power		
23	VSS	Power		
24	VDD	Power		
29	PA8 *	I/O	GPIO_Input	
32	PA11	I/O	USB_DM	
33	PA12	I/O	USB_DP	
34	PA13	I/O	SYS_JTMS-SWDIO	
35	VSS	Power		
36	VDD	Power		
37	PA14	I/O	SYS_JTCK-SWCLK	
44	BOOT0	Boot		
46	PB9 *	I/O	GPIO_Output	
47	VSS	Power		
48	VDD	Power		

* The pin is affected with an I/O function

4. Clock Tree Configuration
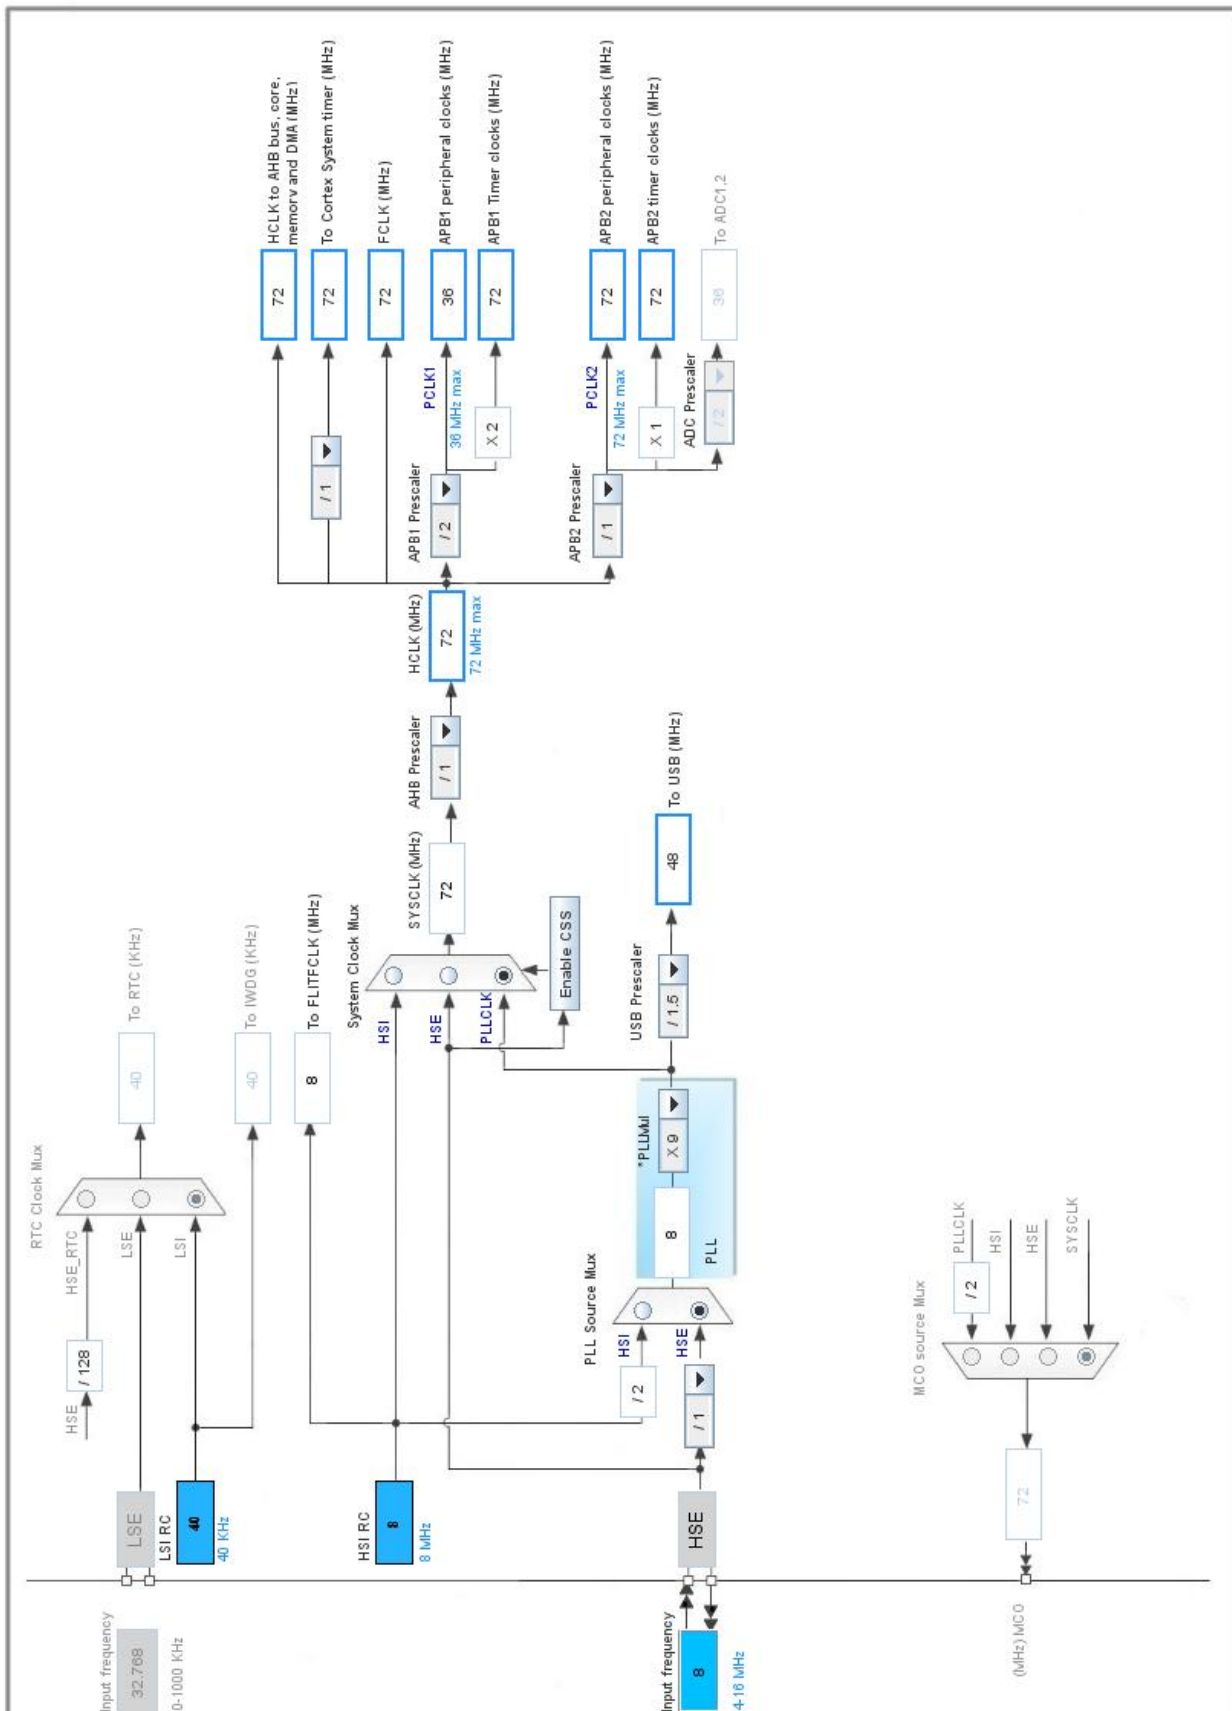
5. IPs and Middleware Configuration

5.1. CRC
mode: Activated

5.2. RCC
High Speed Clock (HSE): Crystal/Ceramic Resonator

5.2.1. Parameter Settings:

System Parameters:

VDD voltage (V)	3.3
Prefetch Buffer	Enabled
Flash Latency(WS)	2 WS (3 CPU cycle)

RCC Parameters:

HSI Calibration Value	16
HSE Startup Timout Value (ms)	100
LSE Startup Timout Value (ms)	5000

5.3. SYS
Debug: Serial Wire
Timebase Source: SysTick

5.4. USB
mode: Device (FS)

5.4.1. Parameter Settings:

Basic Parameters:

Speed	Full Speed 12MBit/s
Endpoint 0 Max Packet size	8 Bytes

Power Parameters:

Low Power	Disabled
Link Power Management	Disabled
Battery Charging	Disabled

5.5. USB_DEVICE

Class For FS IP: Download Firmware Update Class (DFU)

5.5.1. Parameter Settings:

Basic Parameters:

USBD_MAX_NUM_INTERFACES (Maximum number of supported interfaces)	1
USBD_MAX_NUM_CONFIGURATION (Maximum number of supported configuration)	1
USBD_MAX_STR_DESC_SIZ (Maximum size for the string descriptors)	512
USBD_SUPPORT_USER_STRING (Enable user string descriptor)	Enabled
USBD_SELF_POWERED (Enabled self power)	Enabled
USBD_DEBUG_LEVEL (USBD Debug Level)	0: No debug message

Class Parameters:

USBD_DFU_MAX_ITF_NUM (DFU maximum interface numbers)	1
USBD_DFU_XFER_SIZE	1024
USBD_DFU_APP_DEFAULT_ADD (Base Address 0x)	**0x08000000 ***
USBD_DFU_MEDIA Interface	@Internal Flash /0x08000000/03*016Ka,01*016Kg,01*064Kg,07*128Kg,04*016Kg,01*064Kg,07*1

5.5.2. Device Descriptor:

Device Descriptor:

VID (Vendor IDentifier)	**1253 ***
LANGID_STRING (Language Identifier)	English(United States)
MANUFACTURER_STRING (Manufacturer Identifier)	**nichtgedacht ***

Device Descriptor FS:

PID (Product IDentifier)	57105
PRODUCT_STRING (Product Identifier)	STM32 DownLoad Firmware Update
SERIALNUMBER_STRING (Serial number)	00000000001A
CONFIGURATION_STRING (Configuration Identifier)	DFU Config
INTERFACE_STRING (Interface Identifier)	DFU Interface

* User modified value

6. System Configuration

6.1. GPIO configuration

IP	Pin	Signal	GPIO mode	GPIO pull/up pull down	Max Speed	User Label
RCC	PD0-OSC_IN	RCC_OSC_IN	n/a	n/a	n/a	
	PD1-OSC_OUT	RCC_OSC_OUT	n/a	n/a	n/a	
SYS	PA13	SYS_JTMS-SWDIO	n/a	n/a	n/a	
	PA14	SYS_JTCK-SWCLK	n/a	n/a	n/a	
USB	PA11	USB_DM	n/a	n/a	n/a	
	PA12	USB_DP	n/a	n/a	n/a	
GPIO	PA8	GPIO_Input	Input mode	**Pull-up ***	n/a	
	PB9	GPIO_Output	Output Push Pull	**n/a**	Low	

6.2. DMA configuration

nothing configured in DMA service

6.3. NVIC configuration

Interrupt Table	Enable	Preenmption Priority	SubPriority
Non maskable interrupt	true	0	0
Hard fault interrupt	true	0	0
Memory management fault	true	0	0
Prefetch fault, memory access fault	true	0	0
Undefined instruction or illegal state	true	0	0
System service call via SWI instruction	true	0	0
Debug monitor	true	0	0
Pendable request for system service	true	0	0
System tick timer	true	0	0
USB low priority or CAN RX0 interrupts	true	0	0
PVD interrupt through EXTI line 16	unused		
Flash global interrupt	unused		
RCC global interrupt	unused		
USB high priority or CAN TX interrupts	unused		

* User modified value

7. Power Consumption Calculator report

7.1. Microcontroller Selection

Series	STM32F1
Line	STM32F103
MCU	STM32F103C8Tx
Datasheet	13587_Rev17

7.2. Parameter Selection

Temperature	25
Vdd	3.3

8. Software Project

8.1. Project Settings

Name	Value
Project Name	bootloader
Project Folder	/array_data01/STM32-boot--02/bootloader
Toolchain / IDE	SW4STM32
Firmware Package Name and Version	STM32Cube FW_F1 V1.4.0

8.2. Code Generation Settings

Name	Value
STM32Cube Firmware Library Package	Copy only the necessary library files
Generate peripheral initialization as a pair of '.c/.h' files	No
Backup previously generated files when re-generating	No
Delete previously generated files when not re-generated	Yes
Set all free pins as analog (to optimize the power consumption)	No