

Added Load and Save commands to 6809/6800 and FLEX: ASSIST09.

 flexonsbd.blogspot.com/2018/05/assist09load-save.html

Saturday, May 26, 2018

Added Load and Save commands to ASSIST09.

Added Load and Save commands for Windows.


The Load and Punch commands in ASSIST09 are for tapes, so they're not practical. I regularly use FLEX, so I only used the monitor to change or check the contents of memory, but upon further reflection, I realized that for simple file loading and saving, the monitor alone would suffice without having to boot the OS.

Since ASSIST09 makes it easy to add commands, I created an extended command that allows saving and loading files in Motorola's S-format on Windows.

Image of operation

ASSIST09 side: LOAD, SAVE (built-in as extended commands)

Windows side: slwin.exe (must be started beforehand)

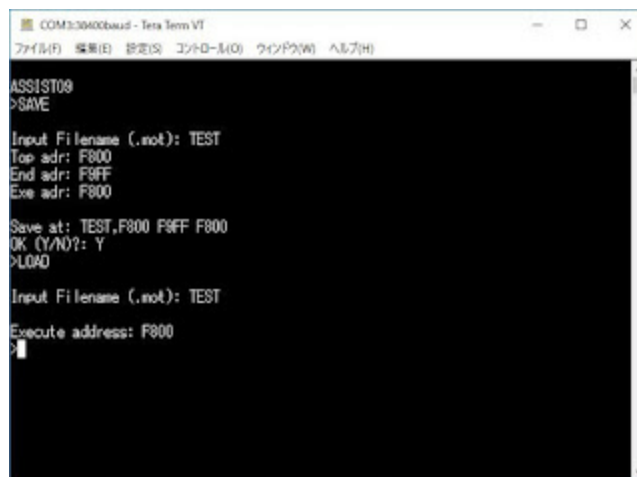

```
COM3:30400baud - Tera Term VT
ファイル(F) 編集(E) 設定(S) コントロール(C) ウィンドウ(W) ヘルプ(H)

ASSIST09
>SAVE


Input Filename (.not): TEST
Top adr: F800
End adr: F8FF
Exe adr: F800

Save at: TEST,F800 F8FF F800
OK (Y/N)? Y
>LOAD

Input Filename (.not): TEST
Execute address: F800
>
```

Command input process

Format

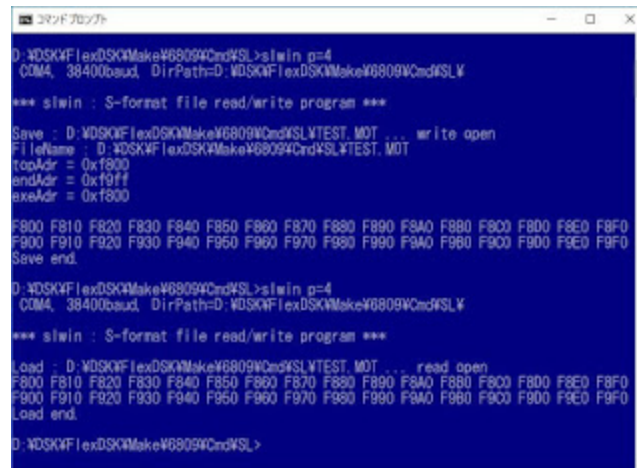

```
D:\DSK\FlexDSK\Make\6809\Cmd\SLV>slwin p=4
COM4, 38400baud, DirPath=D:\DSK\FlexDSK\Make\6809\Cmd\SLV

*** slwin : S-format file read/write program ***

Save : D:\DSK\FlexDSK\Make\6809\Cmd\SLVTEST.MOT ... write open
Filename : D:\DSK\FlexDSK\Make\6809\Cmd\SLVTEST.MOT
loadAddr = 0x1800
endAddr = 0x19ff
exeAddr = 0x1800

F800 F810 F820 F830 F840 F850 F860 F870 F880 F890 F8A0 F8B0 F8C0 F8D0 F8E0 F8F0
F900 F910 F920 F930 F940 F950 F960 F970 F980 F990 F9A0 F9B0 F9C0 F9D0 F9E0 F9F0
Save end.

D:\DSK\FlexDSK\Make\6809\Cmd\SLV>slwin p=4
COM4, 38400baud, DirPath=D:\DSK\FlexDSK\Make\6809\Cmd\SLV

*** slwin : S-format file read/write program ***

Load : D:\DSK\FlexDSK\Make\6809\Cmd\SLVTEST.MOT ... read open
F800 F810 F820 F830 F840 F850 F860 F870 F880 F890 F8A0 F8B0 F8C0 F8D0 F8E0 F8F0
F900 F910 F920 F930 F940 F950 F960 F970 F980 F990 F9A0 F9B0 F9C0 F9D0 F9E0 F9F0
Load end.

D:\DSK\FlexDSK\Make\6809\Cmd\SLV>
```

Programs that run on the Windows side

Save command: Enter SAVE (ret)

, then enter the file name, starting address, ending address, and execution address in that order. You will be prompted for confirmation; enter Y to save the contents of the specified memory range in Motorola's S-format.

Load command: Enter LOAD (ret)

, then enter the file name. The saved file will be loaded back to its original location, display the execution start address, and then exit.

On the Windows side, open a command prompt window, navigate to the folder where you want to save the file, and start slwin.exe. You can specify the port number, baud rate, and save folder as startup options, so specify it like this:

slwin p=4 b=38400 path

. If omitted, the port number is 1, the baud rate is 38400 baud, and the save folder is the current directory.

~~(I'll upload slwin.exe to GitHub.)~~ I don't know how to add files to GitHub... I'll upload it when I figure it out.

(Added May 29) I still don't know how to add it, so for now I'll upload it to [Microsoft OneDrive](#).

File format conversion

Motorola's S-format is convenient because it can save the execution address, but there are times when you might want to convert it to another format. For example, when sending data to a ROM writer, I use Intel's hex-format.

I use my own software, CvtMotHexBin.exe, which can convert between S-format, Hex-format, and Binary formats.

~~(I'll also upload CvtMotHexBin.exe to GitHub.)~~ I don't know how to add files to GitHub... I'll upload it once I figure it out.

(Added May 29) I still don't know how to add it, so for now I'll upload it to [Microsoft OneDrive](#)

. (Added May 31) I uploaded a buggy version, so I've replaced it with a corrected version.