


AERODROME

Benina BENGHAZI

Benina GND	TWR
121.9	121.3
	118.1

AD Elev 433	ARP: N32 05. 8 E020 16.2
RFF: CAT 8	AD HR: H24

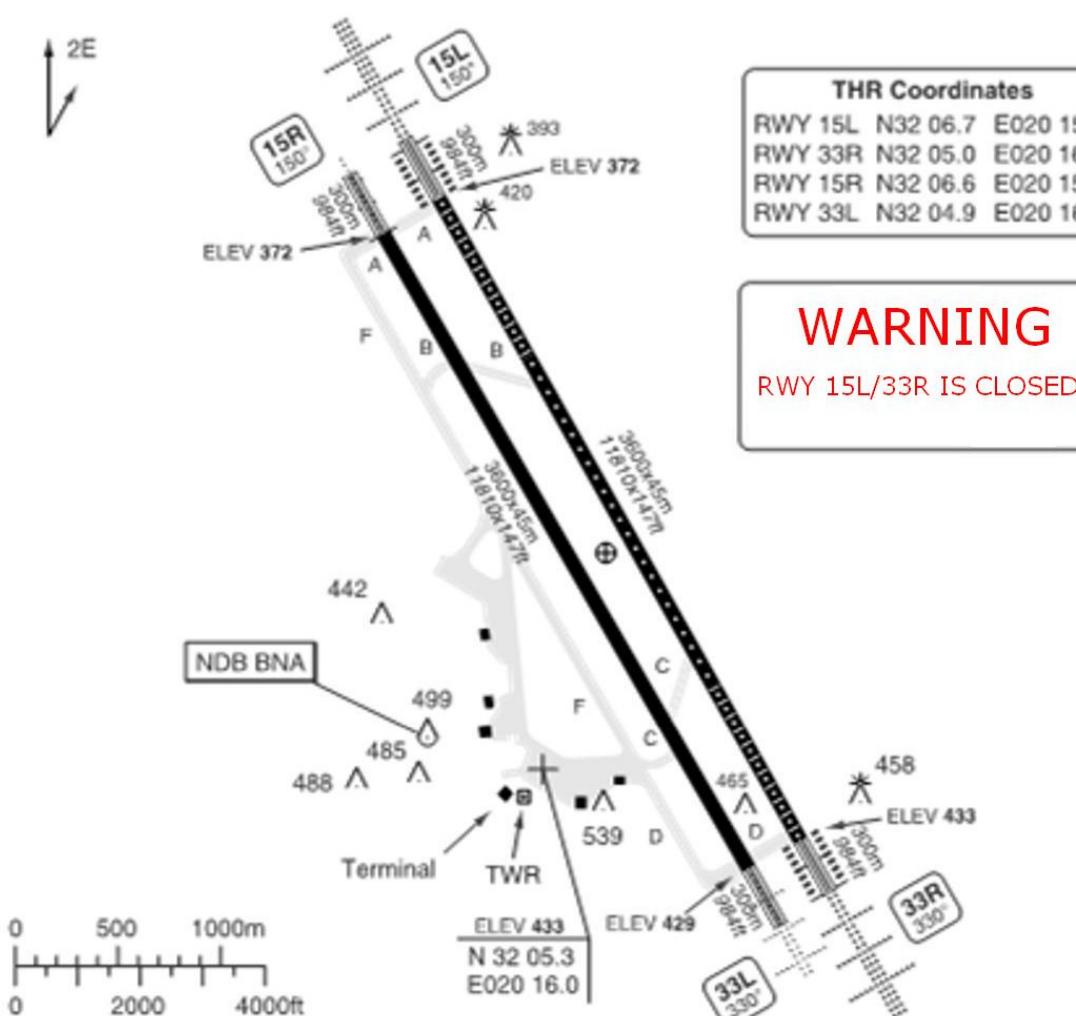

RWY	Slope	TORA m/ft	LDA m/ft	ALS	REDL	RCLL	Additional
15L	+0.5	3600 / 11810	3600 / 11810	H-A ①	H ②	30m	V 3°
33R	-0.5	3600 / 11810	3600 / 11810	H-A ①	H ②	30m	V 3°
15R	+0.5	3600 / 11810	3600 / 11810	L-E ③	L	-	P 3° L/R
33L	-0.5	3600 / 11810	3600 / 11810	L-C ④	L ⑤	-	P 3.3° L/R

① LIL red 900m. ② CLL white. ③ 420m. ④ 600m. ⑤ Last 600m red.

JAR OPS**TAKE OFF MINIMA**

RWY	Facilities	RVR	
		B	C
15L/33R	RCLL + REDL	LVP	200m
	RCL (day only) or RCL + REDL	LVP	250m
All	RCL (day only) or RCL + REDL		400m
	NIL (day only)		500m

GENERAL INFORMATION

1. NOTE

First 240m/787ft of RWY 33R obscured from TWR.

2. TWY RESTRICTIONS

TWY D white CLL.

High speed TWY C white edge lights.

Other TWY's partly lighted.

Stopbars exist partly.

WARNING

RWY 15L/33R IS CLOSED

15R/33L IS THE ACTIVE RWY, PLEASE EXPECT LANDING AND DEPARTING
ON THE ACTIVE RWYs

USE THE SAME SID's AND STAR's CHART FOR THE 15L/33R FOR DEPARTING AND
ARRIVING TO RWY 15R/33L


AERODROME

Benina BENGHAZI

Benina GND	TWR
121.9	121.3
	118.1

121.3
118.1

AD Elev 433 | ARP: N32 05. 8 E020 16.2 | RFF: CAT 8 | AD HR: H24

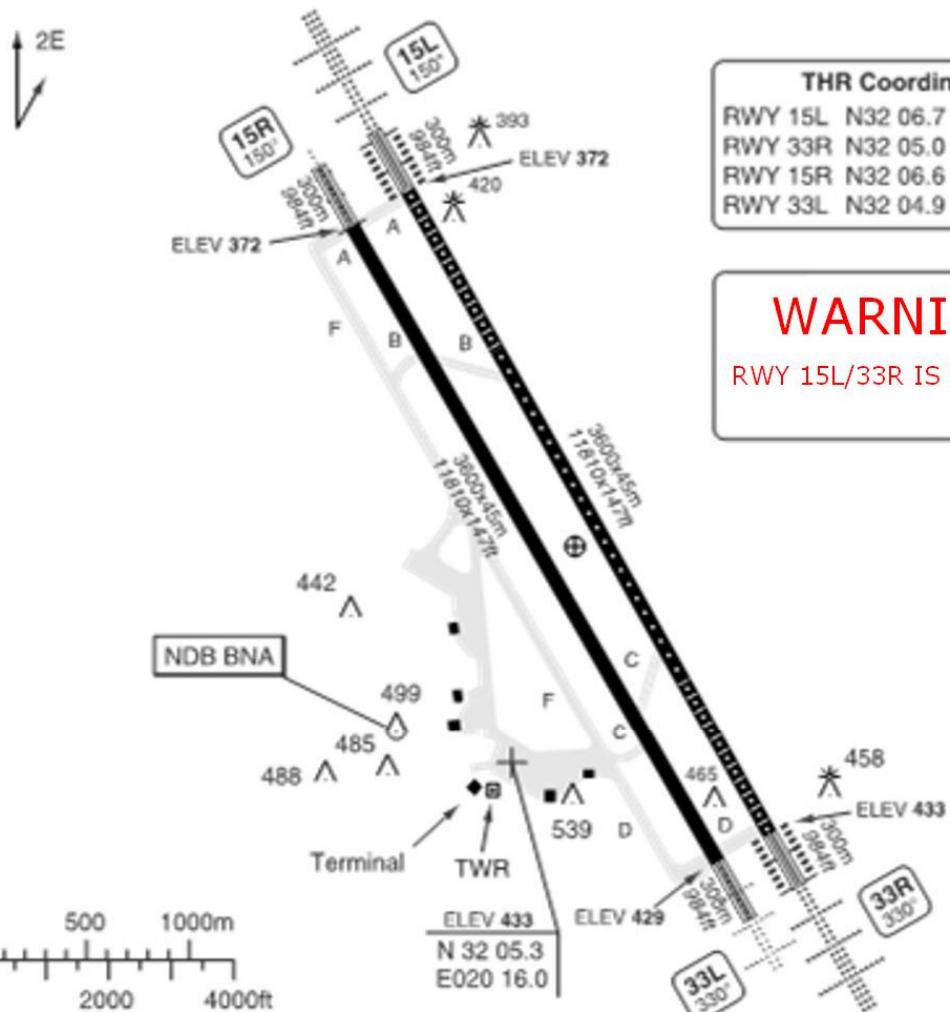

RWY	Slope	TORA m/ft	LDA m/ft	ALS	REDL	RCLL	Additional
15L	+0.5	3600 / 11810	3600 / 11810	H-A ①	H ②	30m	V 3°
33R	-0.5	3600 / 11810	3600 / 11810	H-A ①	H ②	30m	V 3°
15R	+0.5	3600 / 11810	3600 / 11810	L-E ③	L	-	P 3° L/R
33L	-0.5	3600 / 11810	3600 / 11810	L-C ④	L ⑤	-	P 3.3° L/R

① LIL red 900m. ② CLL white. ③ 420m. ④ 600m. ⑤ Last 600m red.

JAR OPS

TAKE OFF MINIMA

RWY	Facilities	RVR	
		B	C
15L/33R	RCLL + REDL	LVP	200m
	RCL (day only) or RCL + REDL	LVP	250m
All	RCL (day only) or RCL + REDL	400m	400m
	NIL (day only)	500m	500m

AERODROME

GENERAL INFORMATION

1. NOTE

First 240m/787ft of RWY 33R obscured from TWR.

2. TWY RESTRICTIONS

TWY D white CLL.

High speed TWY C white edge lights.

Other TWY's partly lighted.

Stopbars exist partly.


ENGINE FAIL PROCEDURE

RWY 15L/R:

Climb on 150°. At D4.5 BNA turn RIGHT to BNA HP.

RWY 33L/R:

Climb on 330°. At **1300** turn RIGHT to BNA HP.

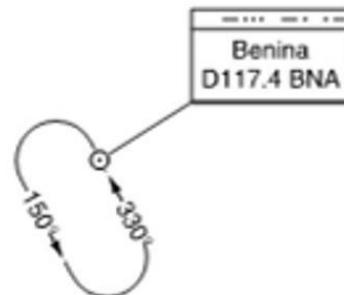

WARNING

RWY 15L/33R IS CLOSED


15R/33L IS THE ACTIVE RWY, PLEASE EXPECT LANDING AND DEPARTING ON THE ACTIVE RWYs

WARNING

RWY 15L/33R IS CLOSED


Libya - HLLB / BEN

Benina BENGHAZI

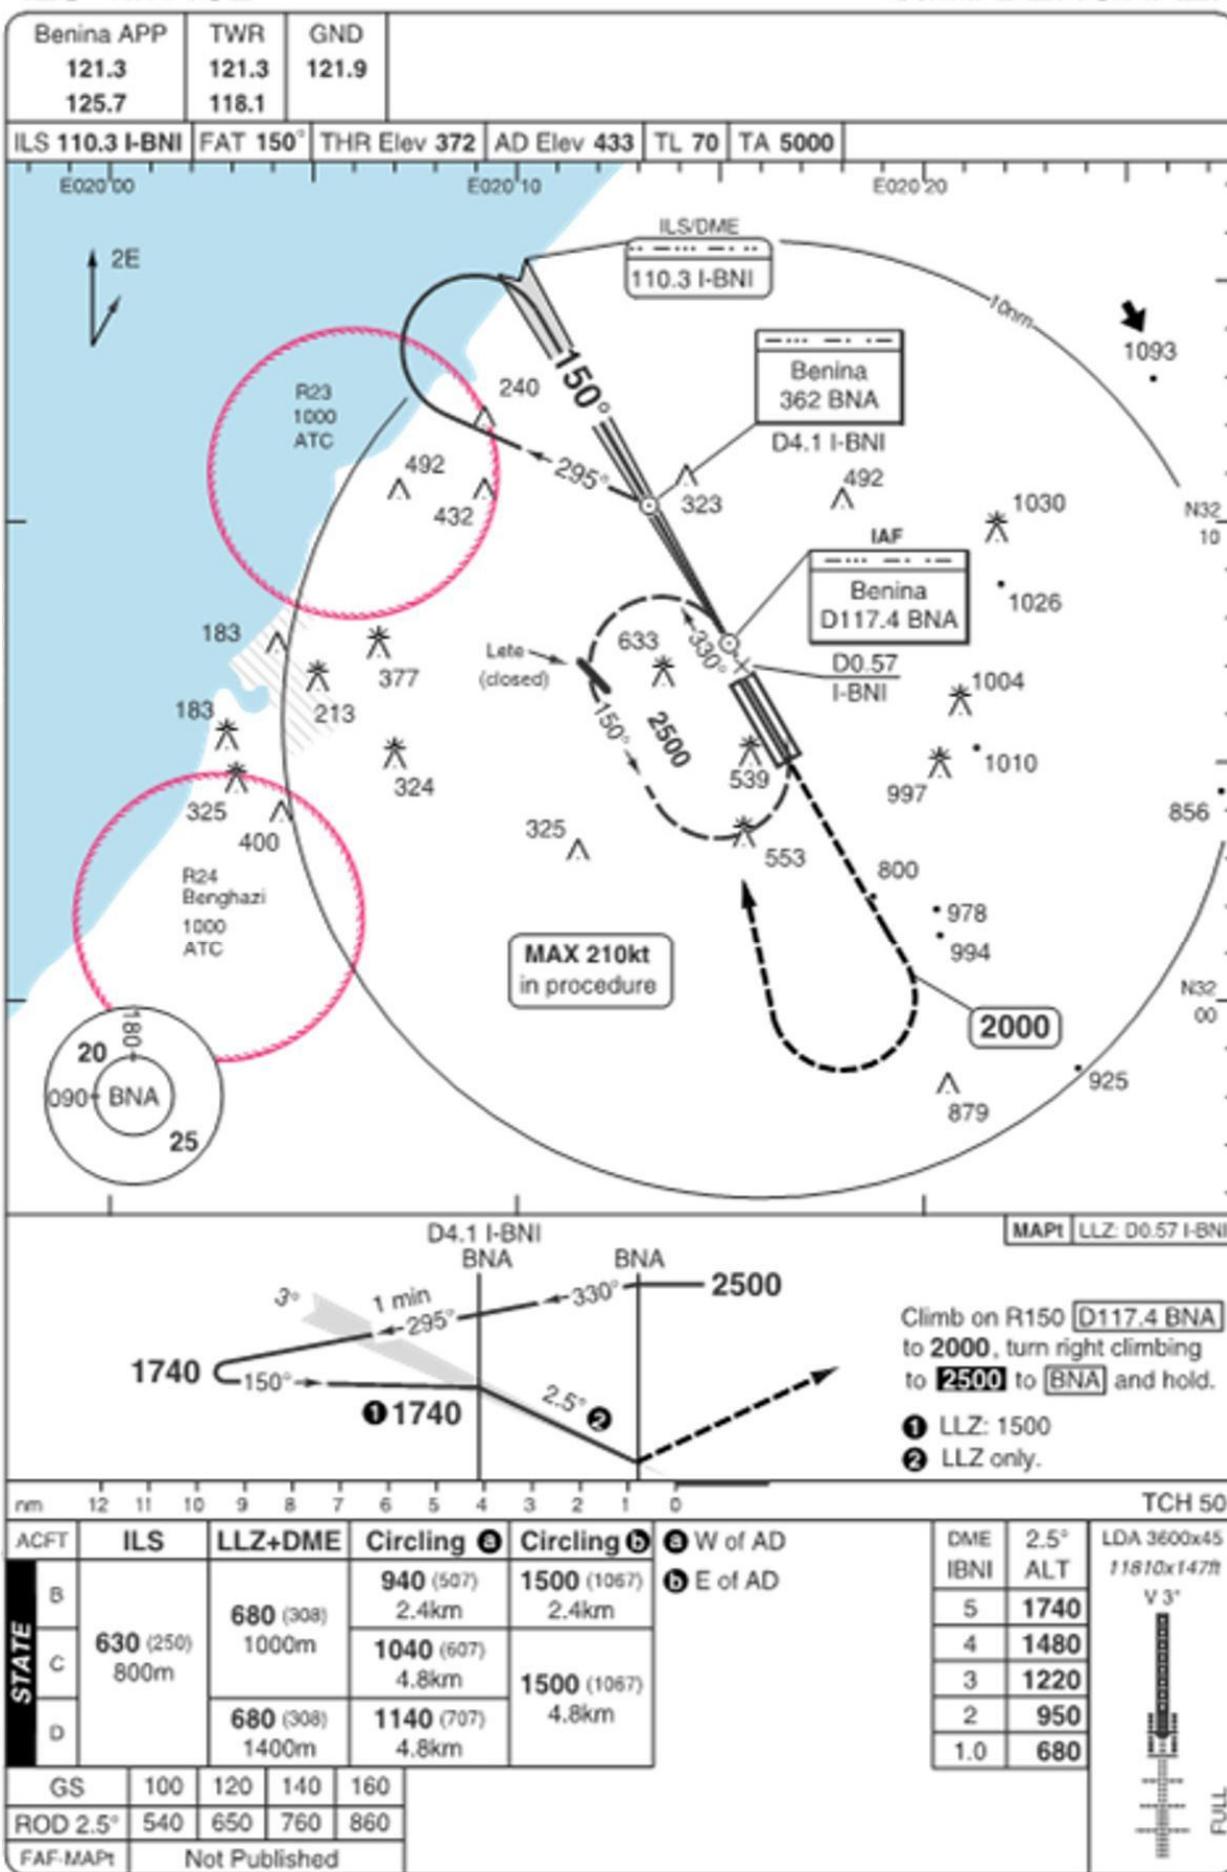
ILS RWY 15L


FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS

NDB RWY 15L/R

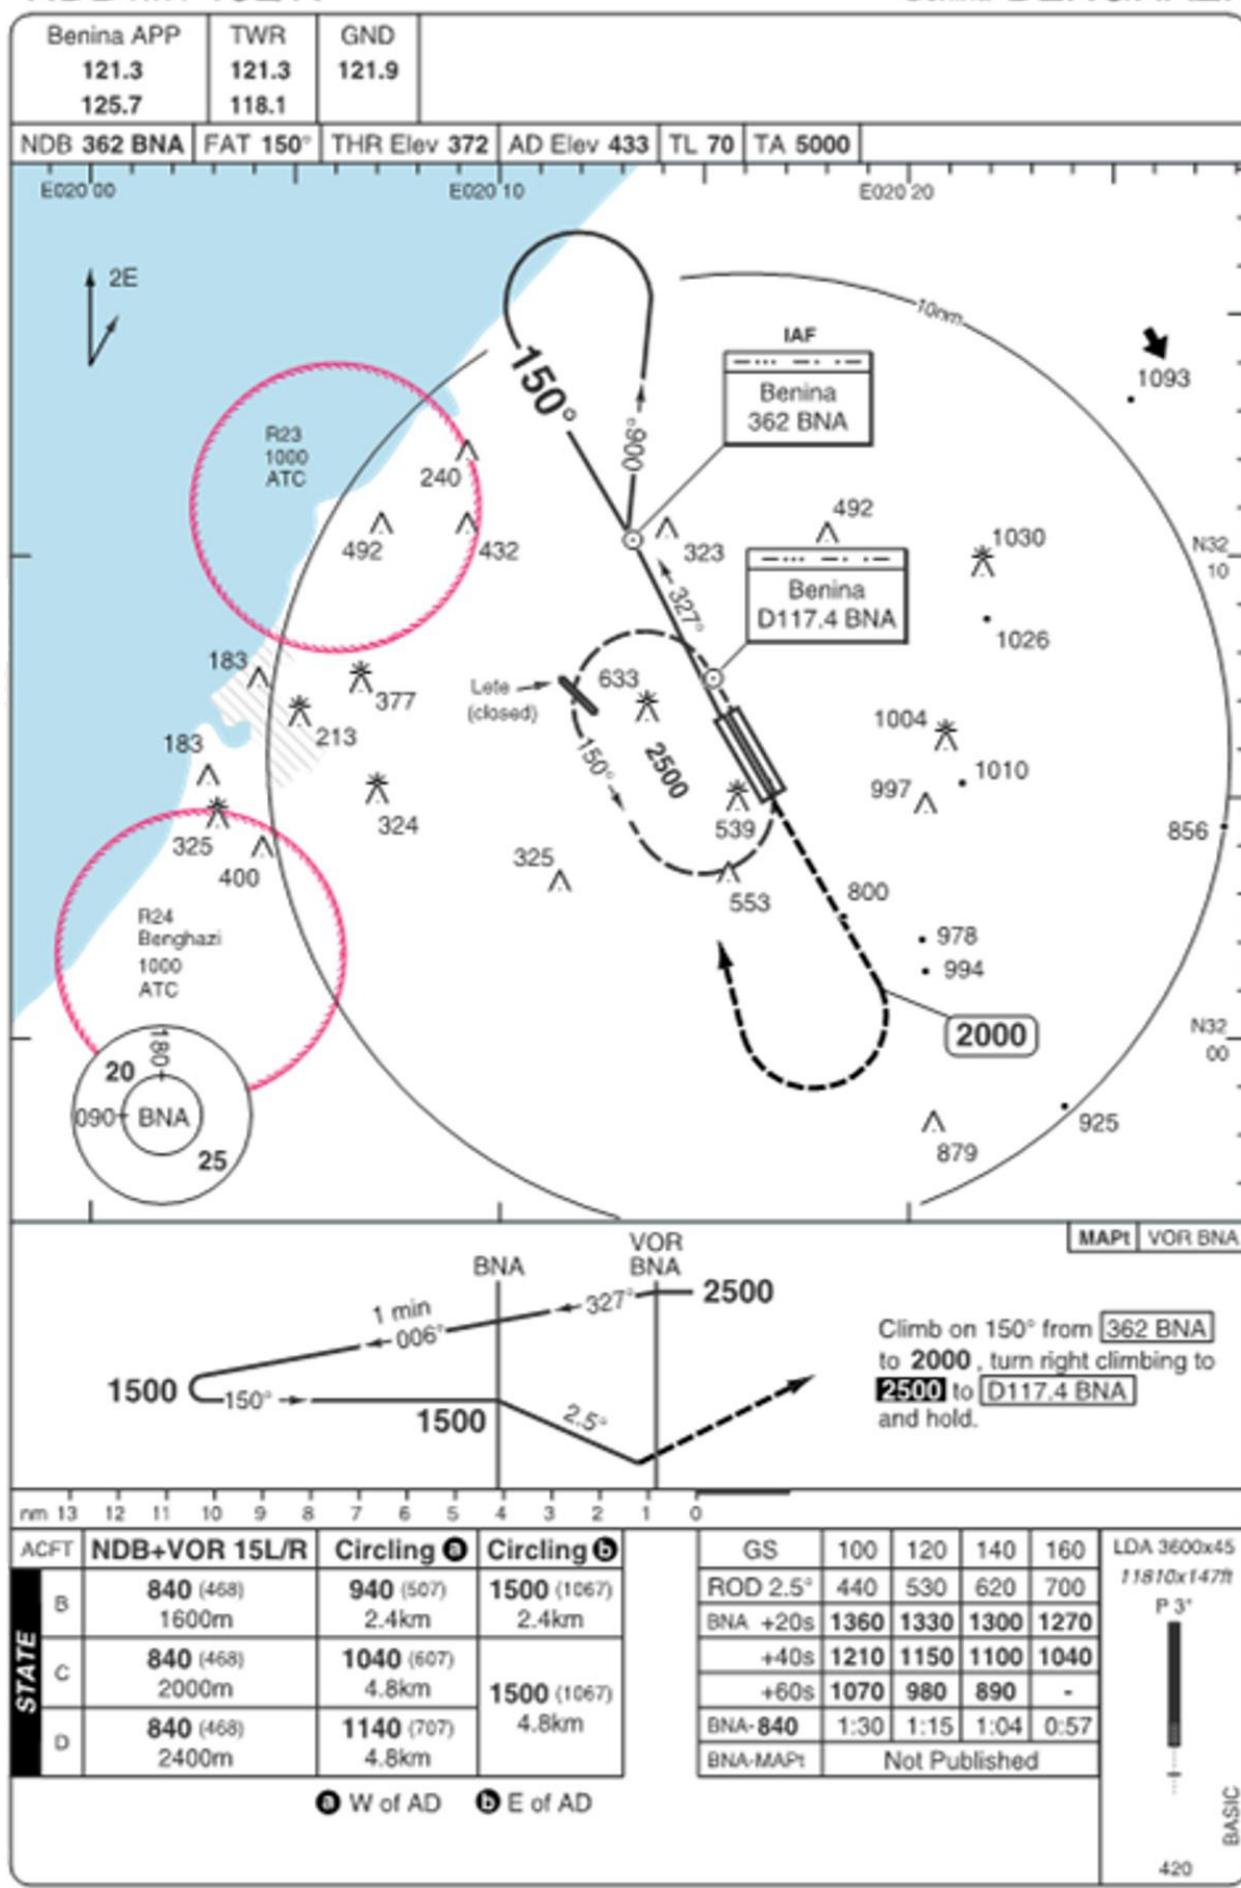

NDB RWY 33L/R

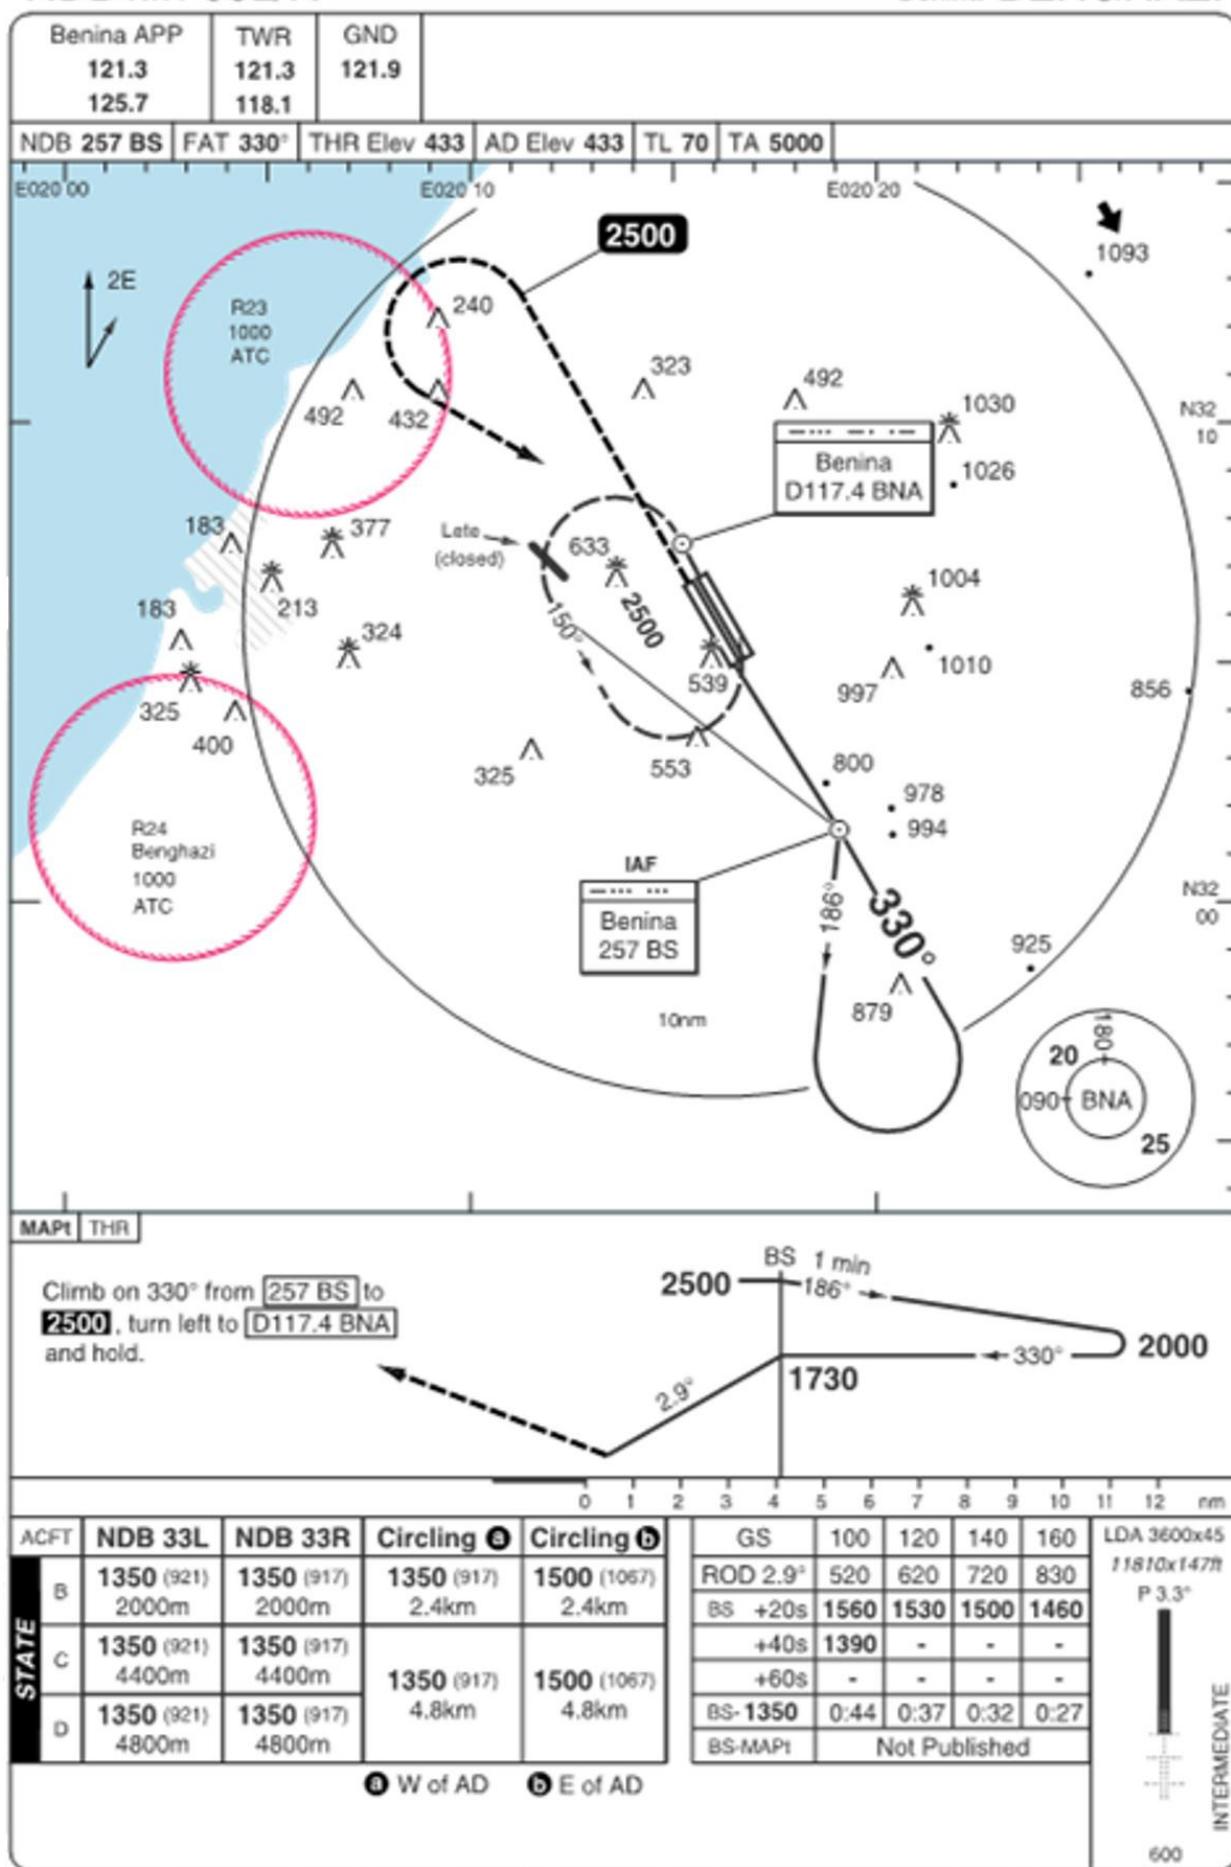


FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS

Libya - HLLB / BEN

Benina BENGHAZI

SID RWY 15L

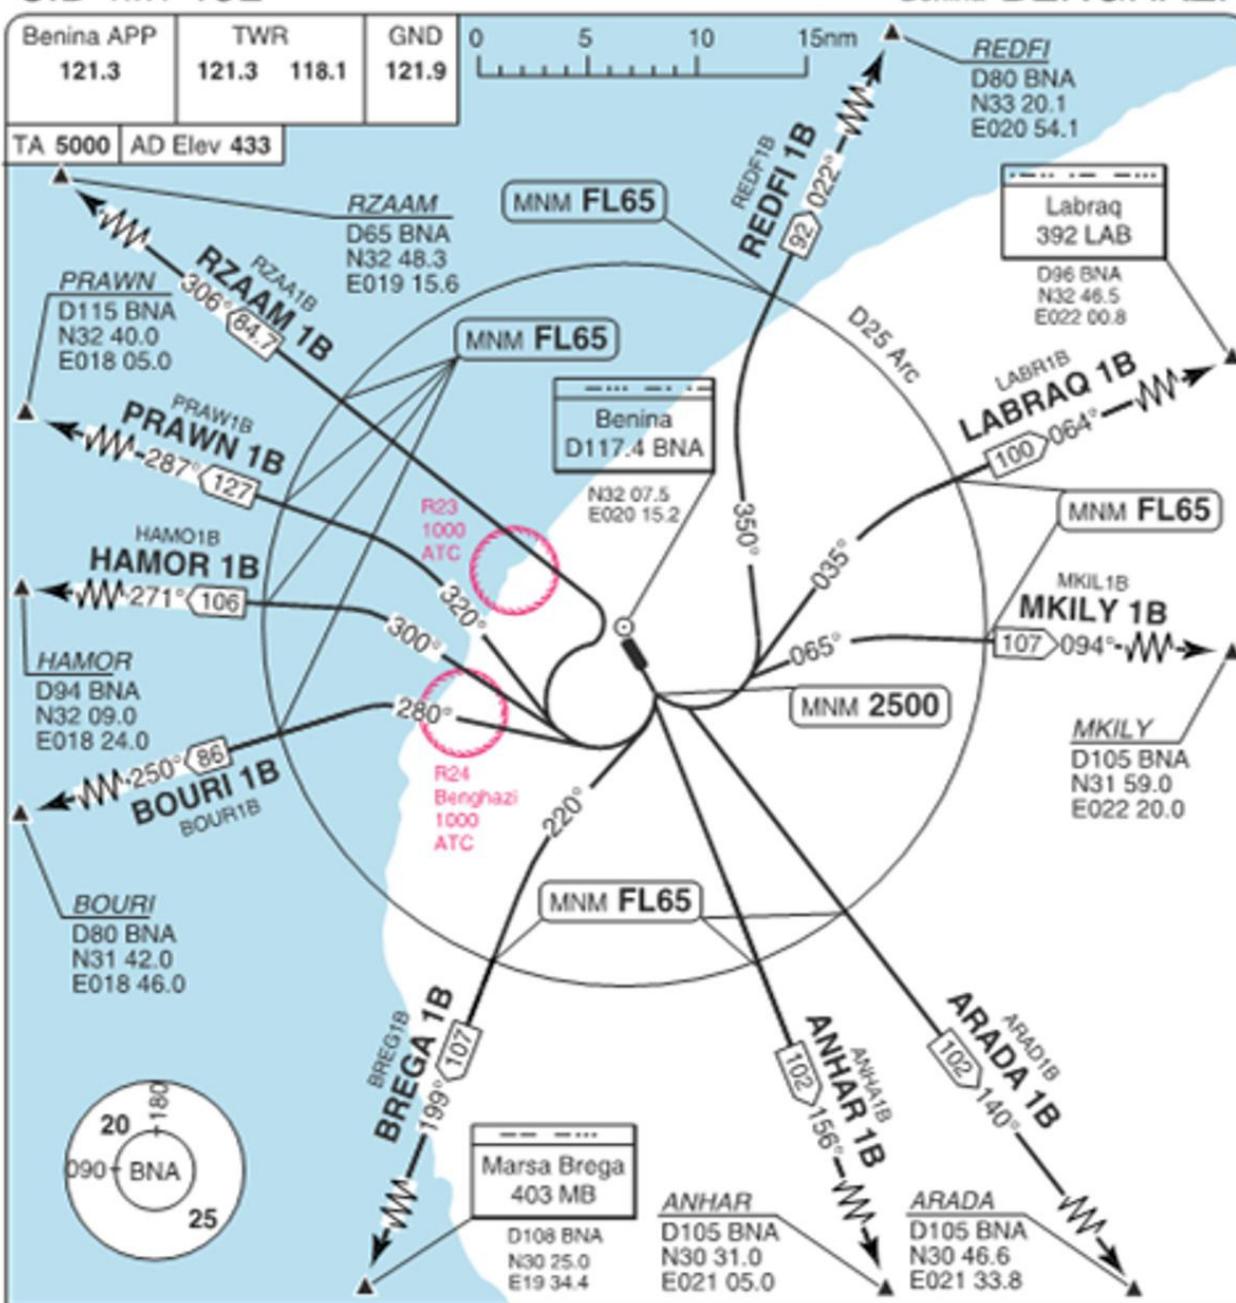ALT RESTRICTION: Climb to **2500**.


INITIAL CLIMB: Climb on 150° to 2000 - follow SID.

SID	Routing	Altitudes
REDFI 1B	Turn left - 350° - R022° BNA - M1 - REDFI.	D25 BNA MNM FL65
LABRAQ 1B	Turn left - 035° - R064° BNA - W861 - LABRAQ.	D25 BNA MNM FL65
MKILY 1B	Turn left - 065° - R094° BNA - A411 - MKILY.	D25 BNA MNM FL65
ARADA 1B	R140° BNA - R2 - ARADA.	D25 BNA MNM FL65
ANHAR 1B	R156° BNA - W856 - ANHAR.	D25 BNA MNM FL65
BREGA 1B	Turn right - 220° - R199° BNA - W9 - BREGA.	D25 BNA MNM FL65
BOURI 1B	Turn right - 280° - R250° BNA - W861 - BOURI.	D25 BNA MNM FL65
HAMOR 1B	Turn right - 300° - R271° BNA - V300 - HAMOR.	D25 BNA MNM FL65
PRAWN 1B	Turn right - 320° - R287° BNA - A411 - PRAWN.	D25 BNA MNM FL65
RZAAM 1B	Turn right - BNA - R306° BNA - RZAAM.	D25 BNA MNM FL65

FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS

SID RWY 33R

Benina BENGHAZI

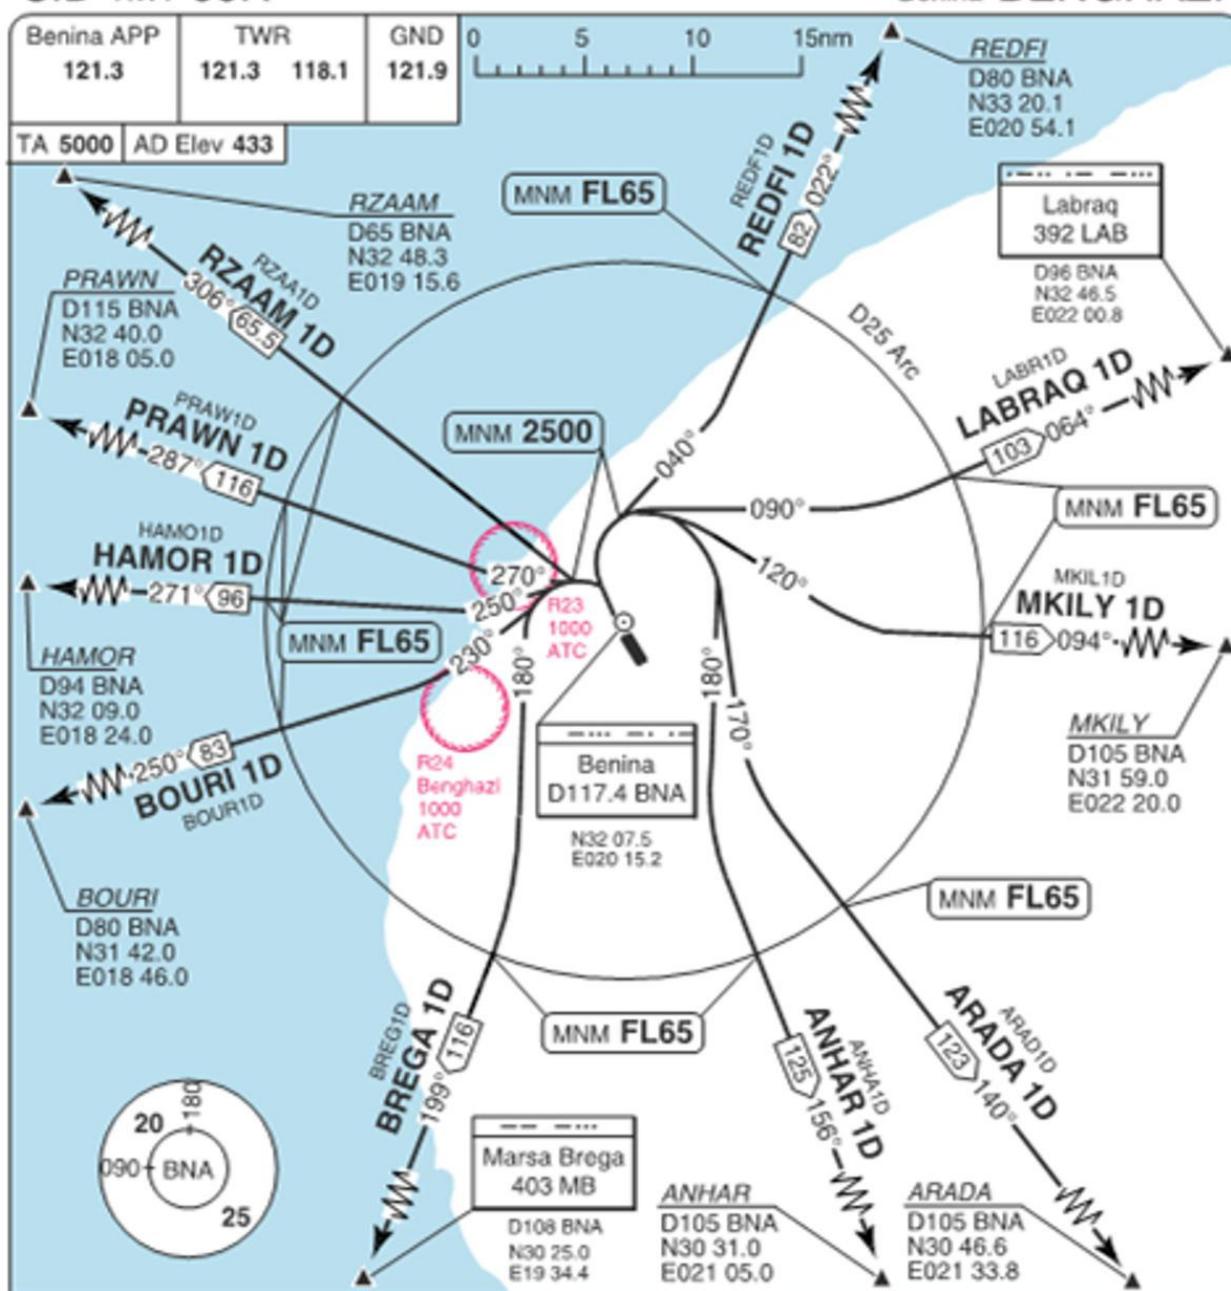
**ALT RESTRICTION:** Climb to 2500.**INITIAL CLIMB:** Climb on 330° - BNA - follow SID.

SID	Routing	Altitudes
REDFI 1D	Turn right - 040° - R022° BNA - M1 - REDFI.	D25 BNA MNM FL65
LABRAQ 1D	Turn right - 090° - R064° BNA - W861 - LABRAQ.	D25 BNA MNM FL65
MKILY 1D	Turn right - 120° - R094° BNA - A411 - MKILY.	D25 BNA MNM FL65
ARADA 1D	Turn right - 170° - R140° BNA - R2 - ARADA.	D25 BNA MNM FL65
ANHAR 1D	Turn right - 180° - R156° BNA - W856 - ANHAR.	D25 BNA MNM FL65
BREGA 1D	Turn left - 180° - R199° BNA - W9 - BREGA.	D25 BNA MNM FL65
BOURI 1D	Turn left - 230° - R250° BNA - W861 - BOURI.	D25 BNA MNM FL65
HAMOR 1D	Turn left - 250° - R271° BNA - V300 - HAMOR.	D25 BNA MNM FL65
PRAWN 1D	Turn left - 270° - R287° BNA - A411 - PRAWN.	D25 BNA MNM FL65
RZAAM 1D	Turn left - R306° BNA - RZAAM.	D25 BNA MNM FL65

FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS

STAR RWY 15 BRAVO (B), RWY 33 ECHO (E)


Benina BENGHAZI

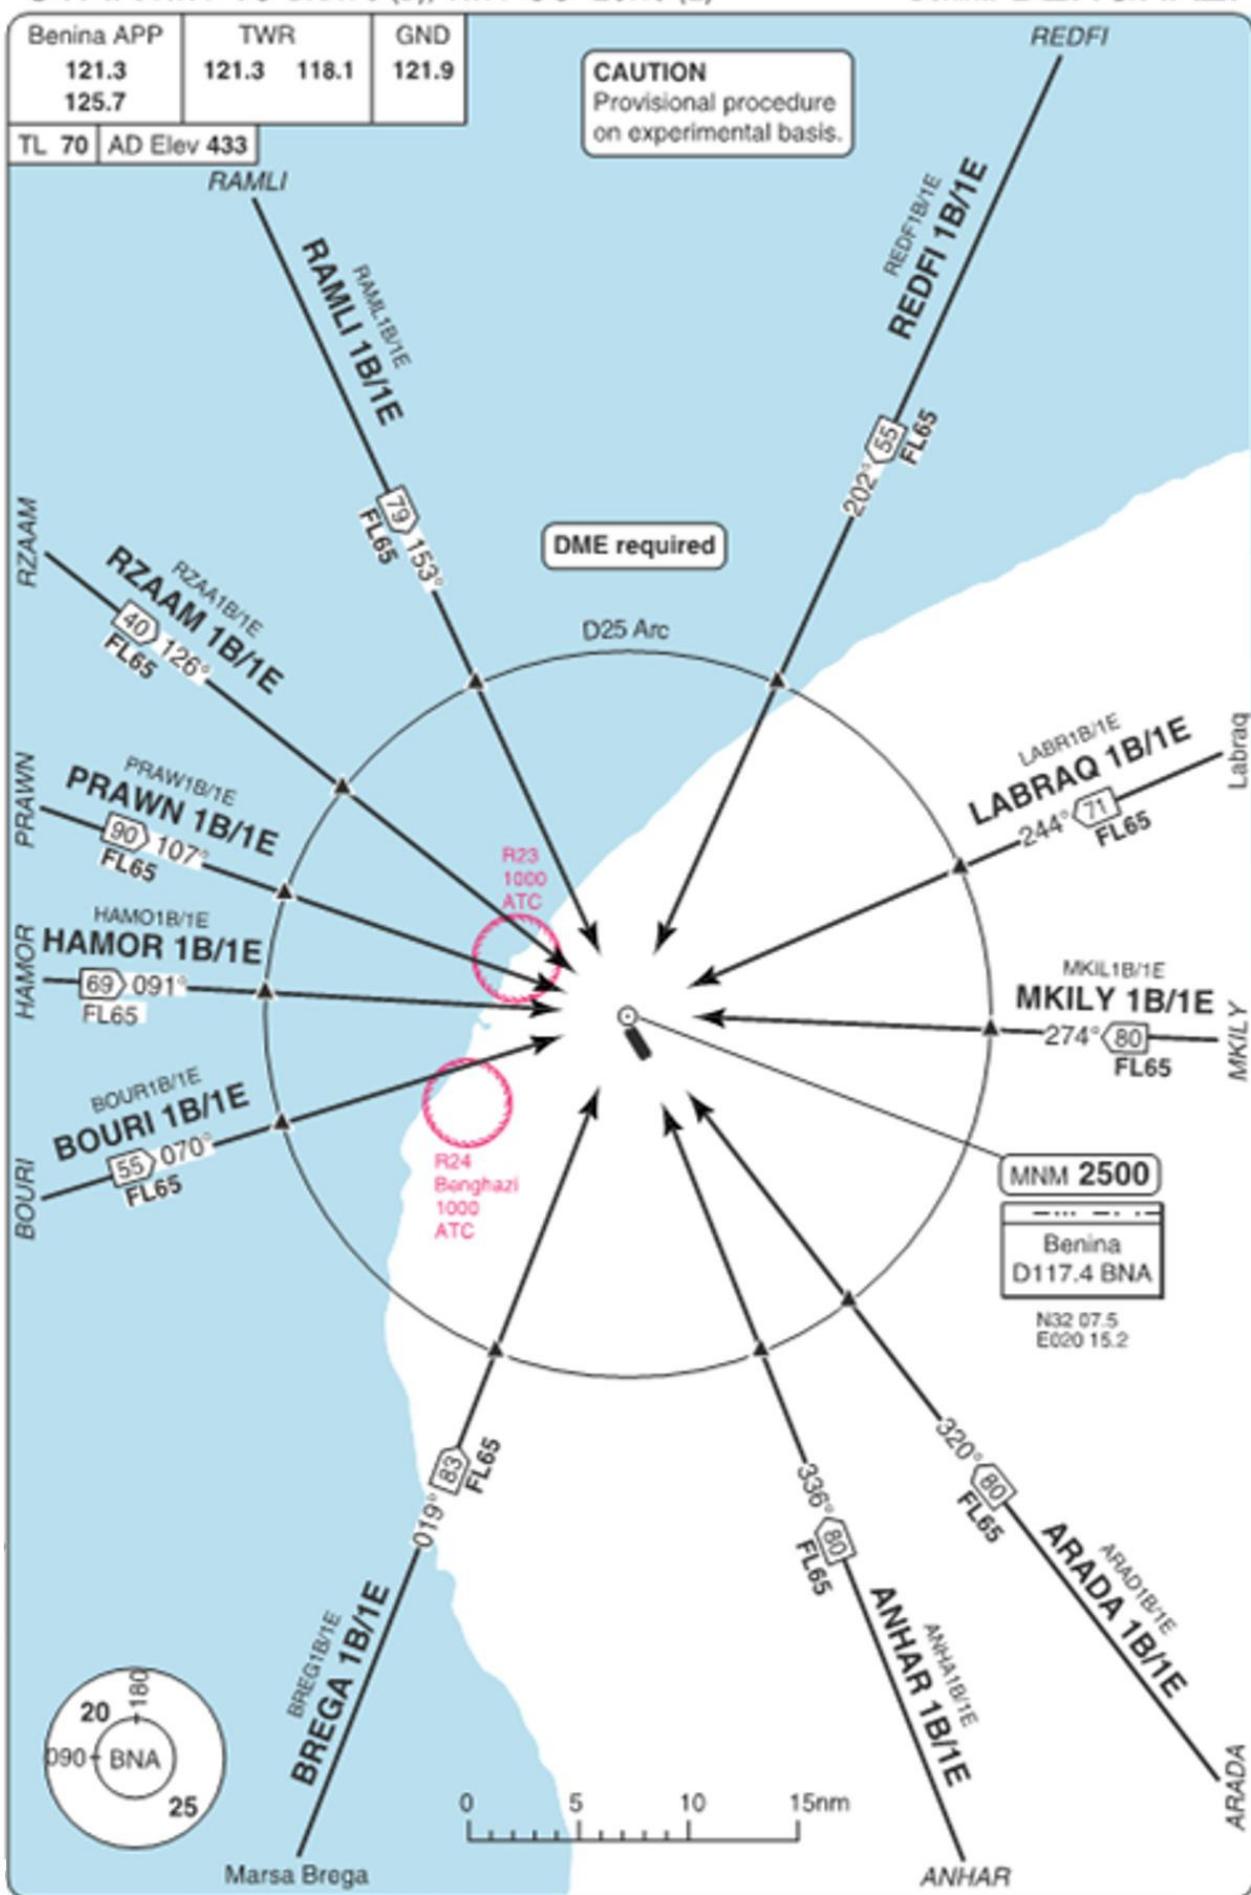

FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS

STAR RWY 15L/R ALPHA (A)


Libya - HLLB / BEN
Benina BENGHAZI

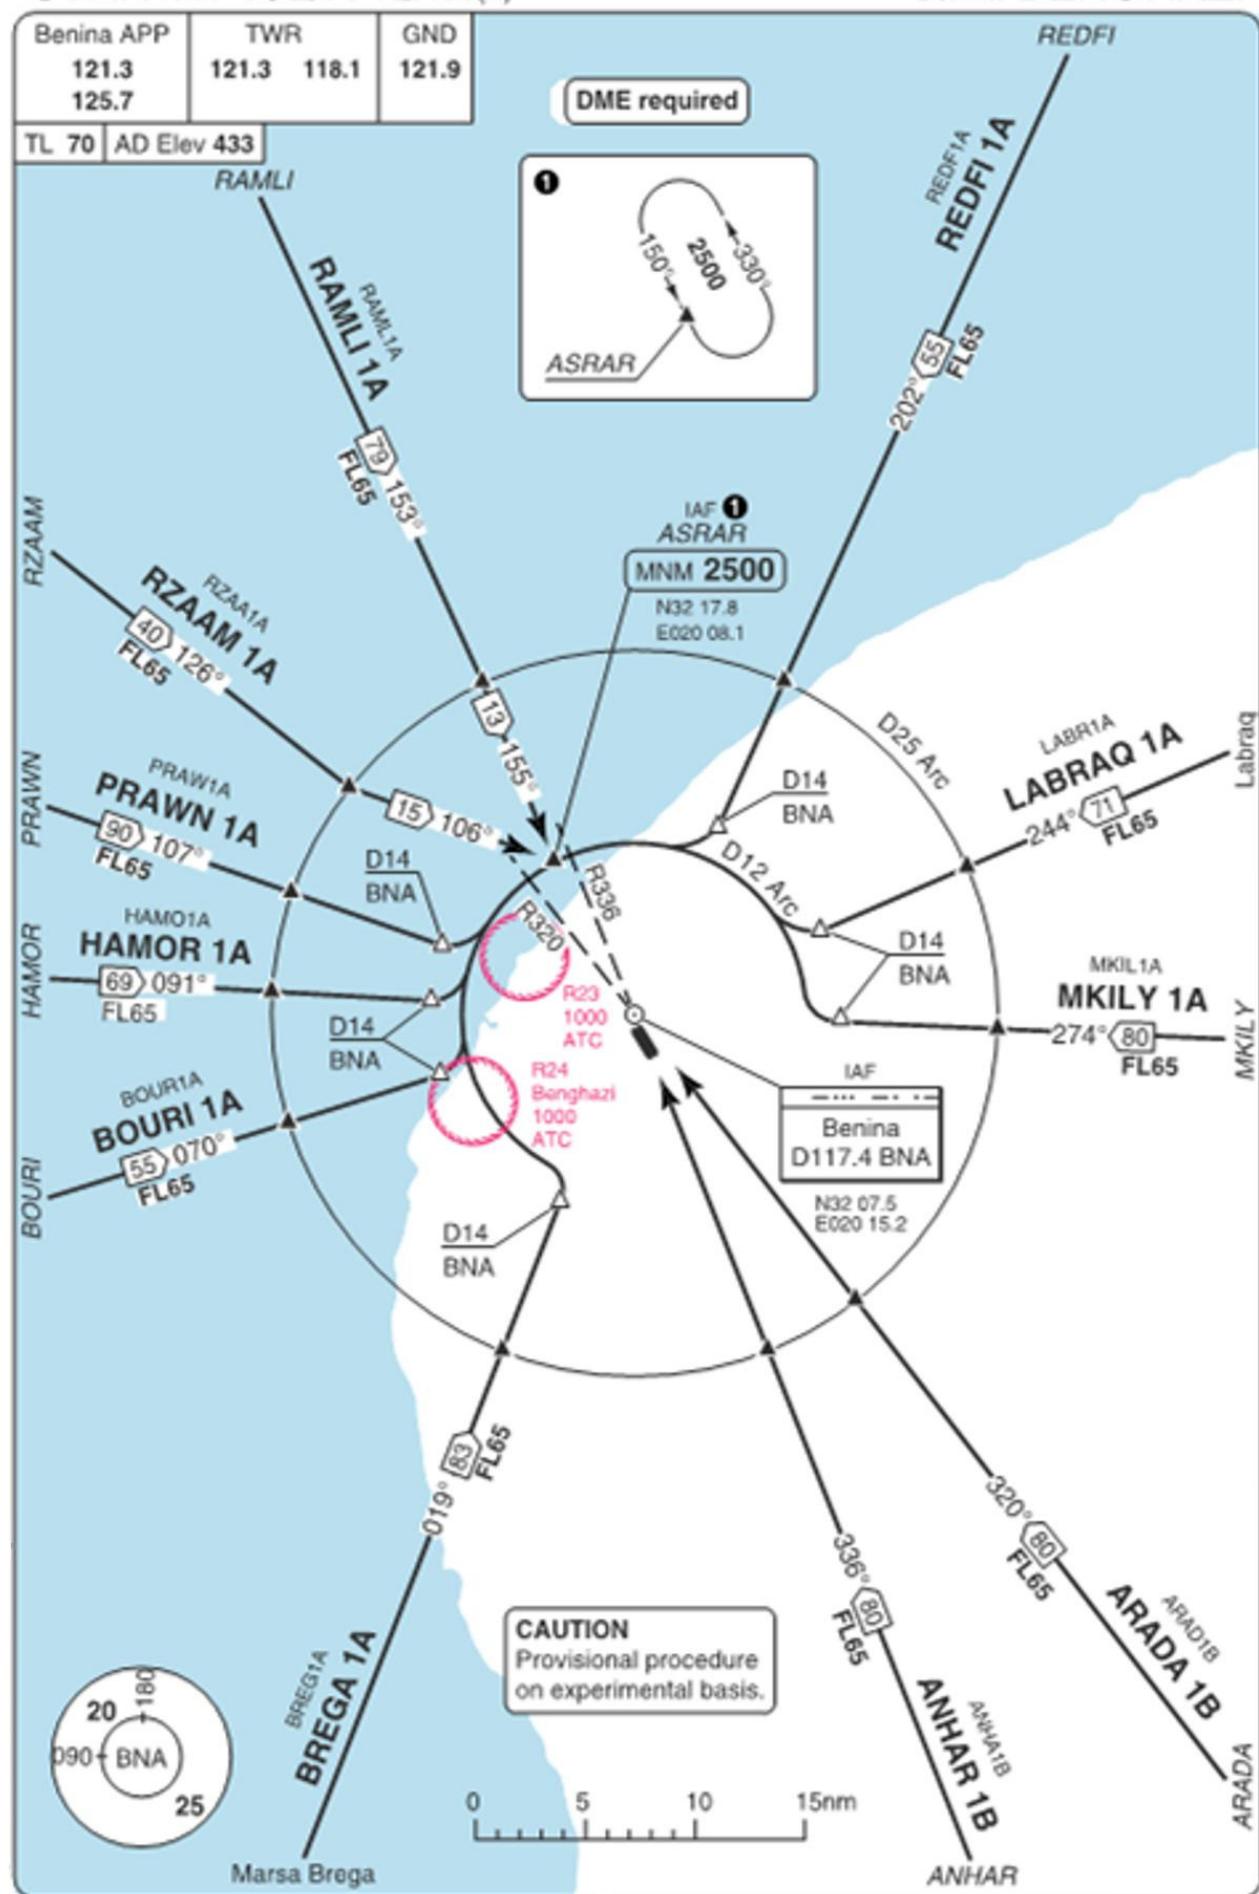

FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS


STAR RWY 33L/R DELTA (D)

Benina BENGHAZI

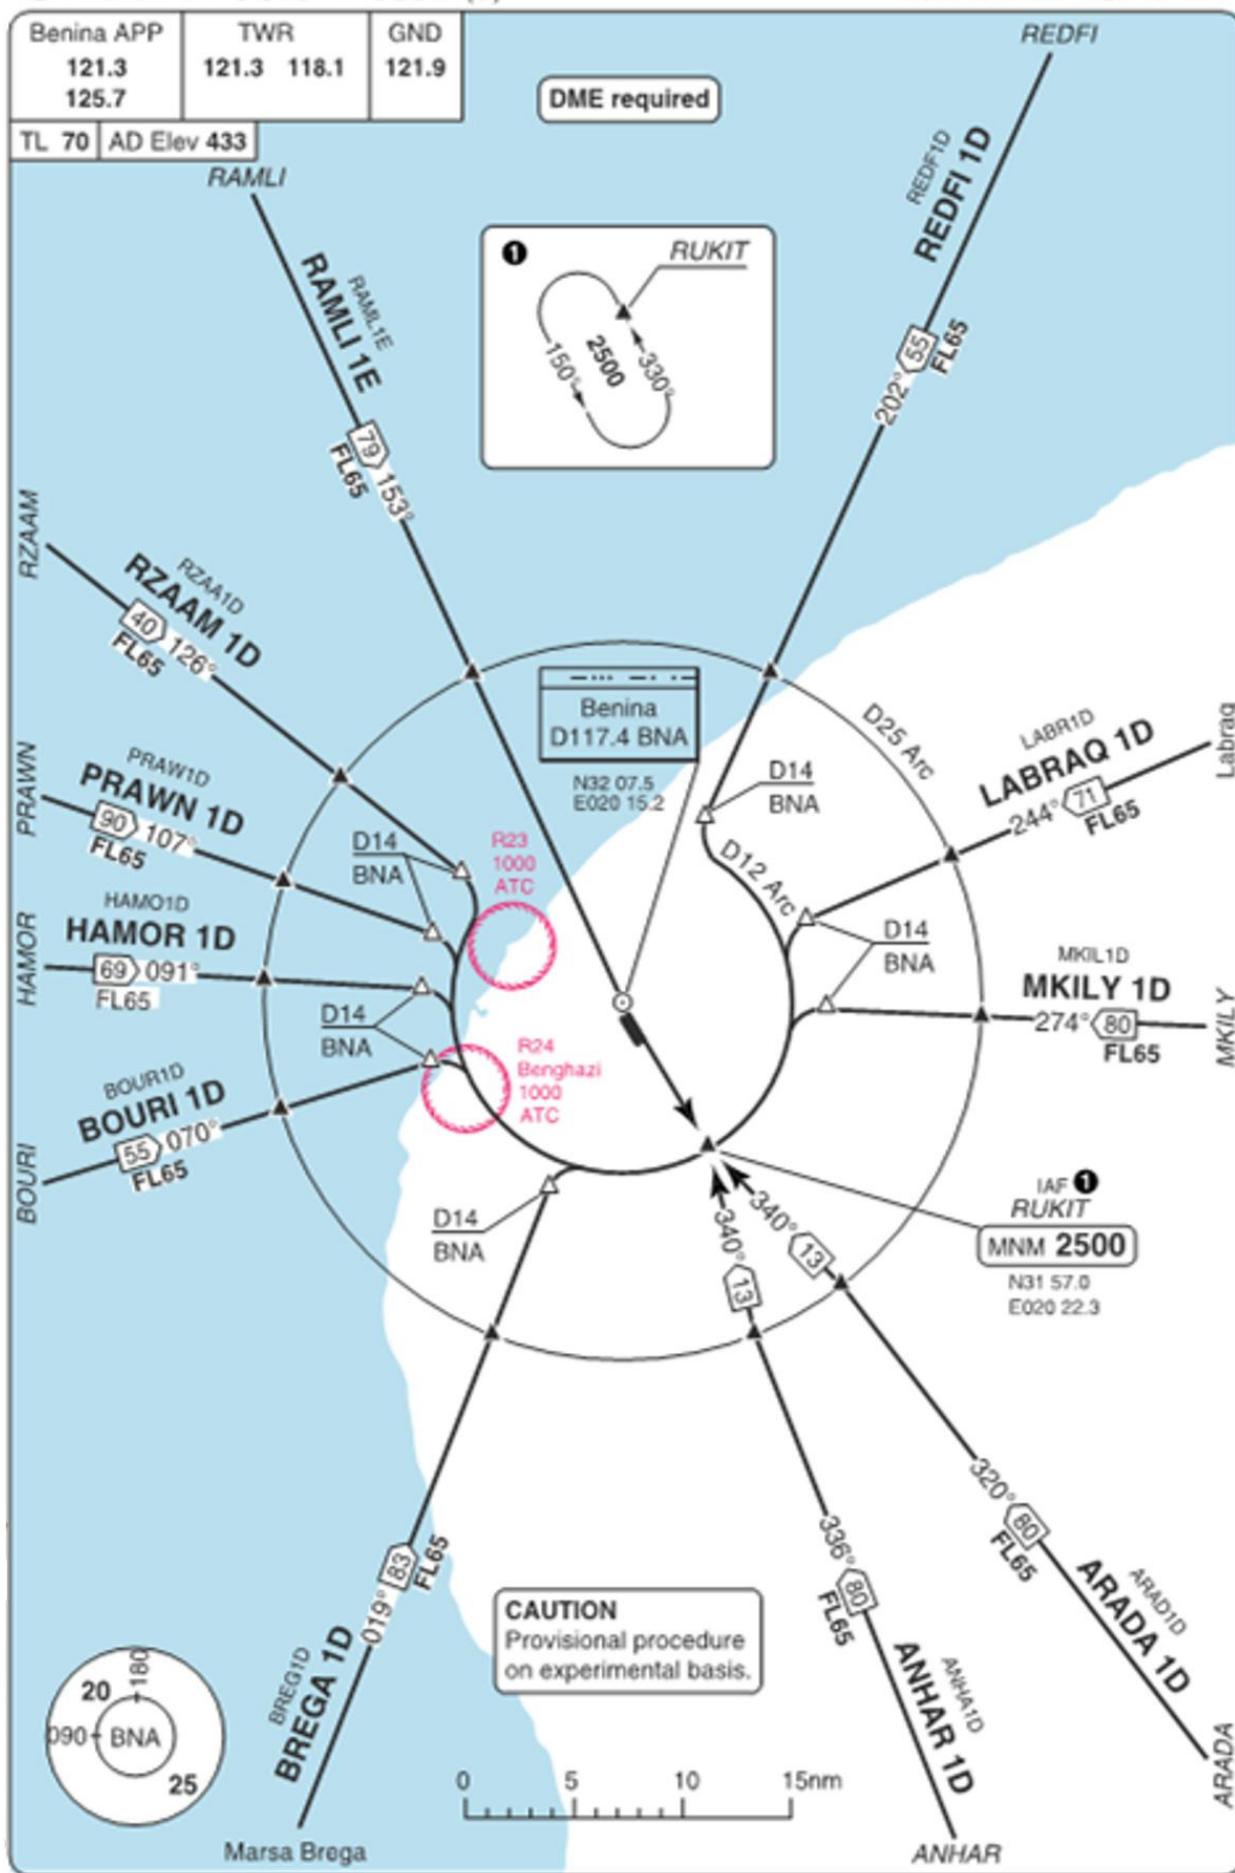


FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS

VOR RWY 15L/R

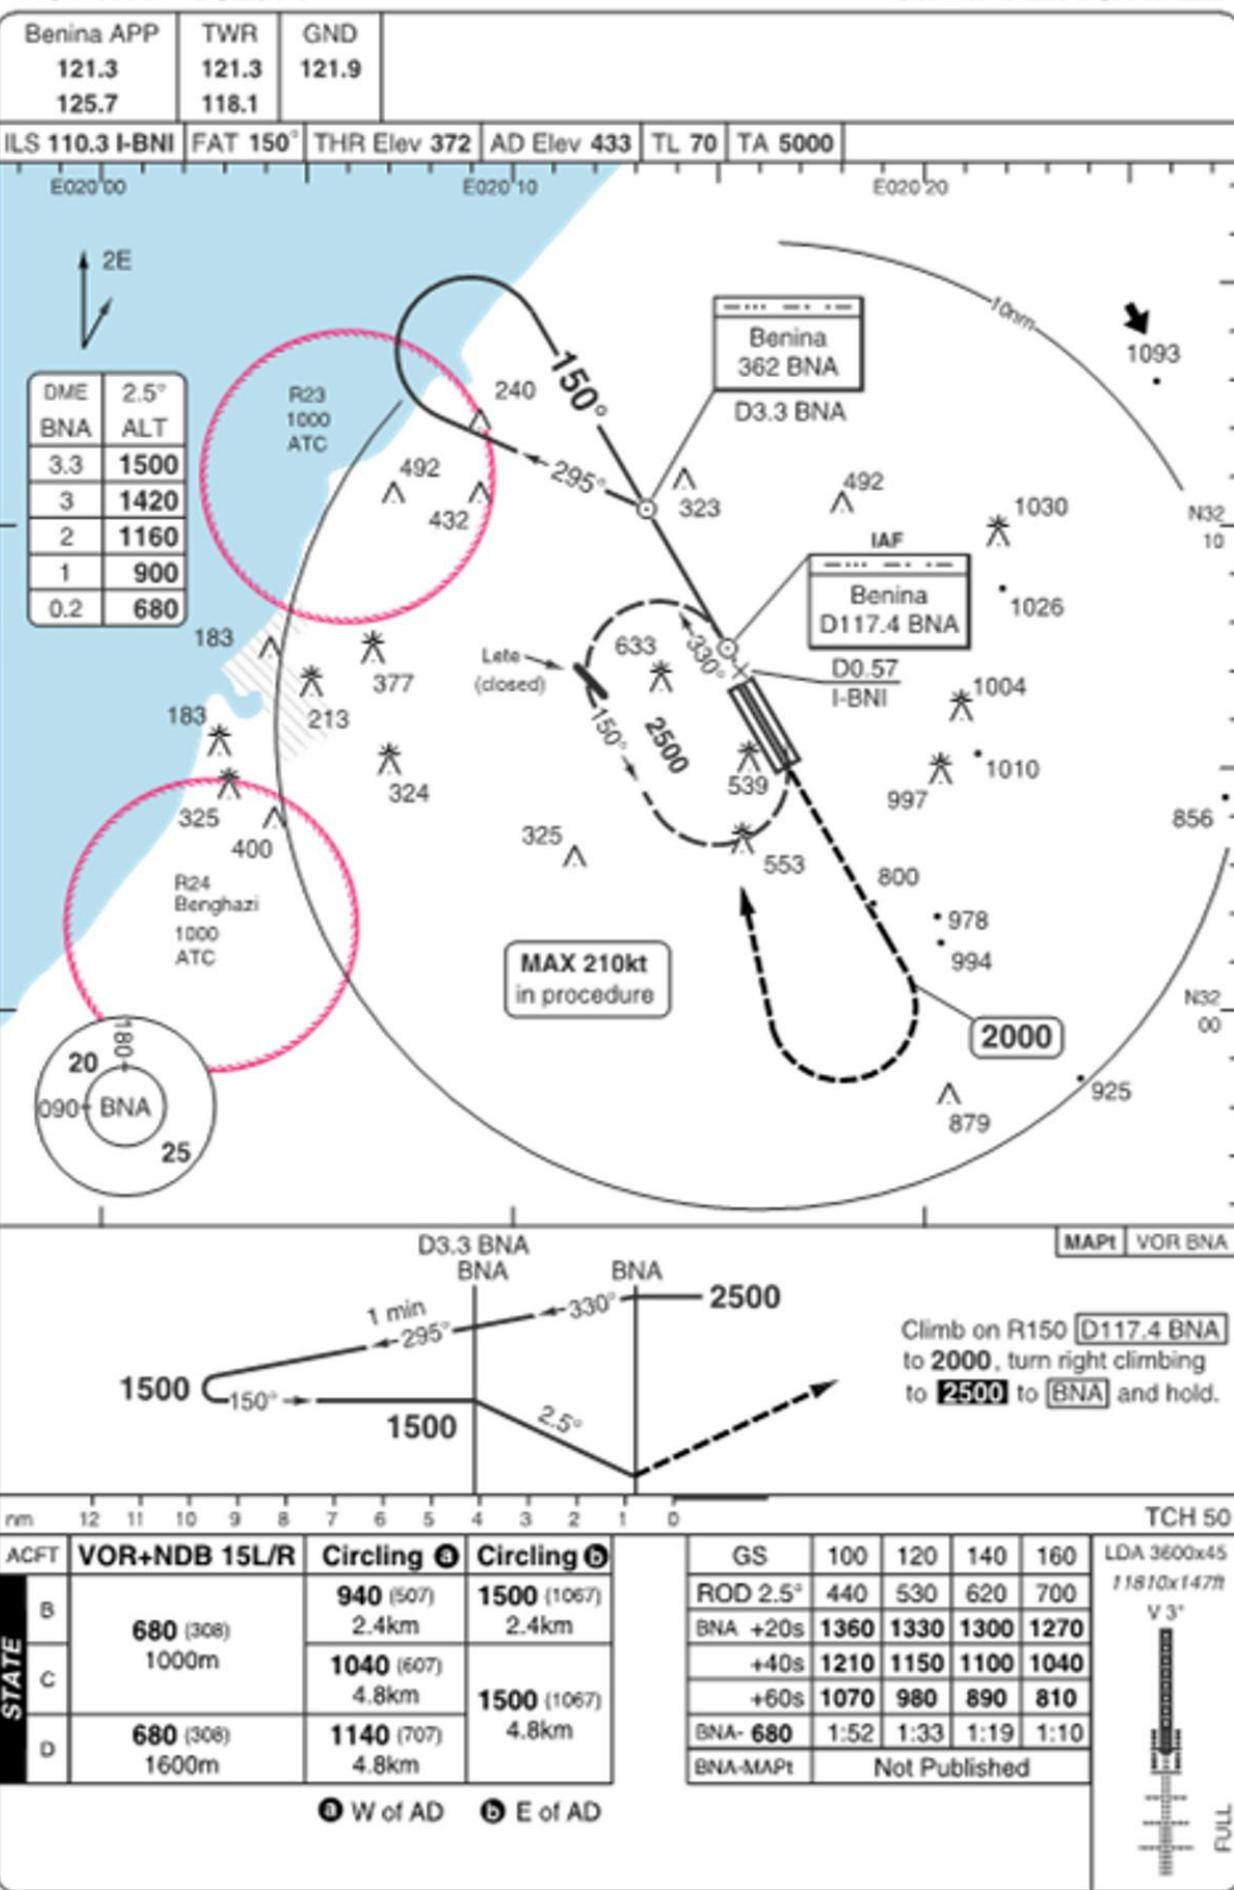

FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS

VOR RWY 33L/R

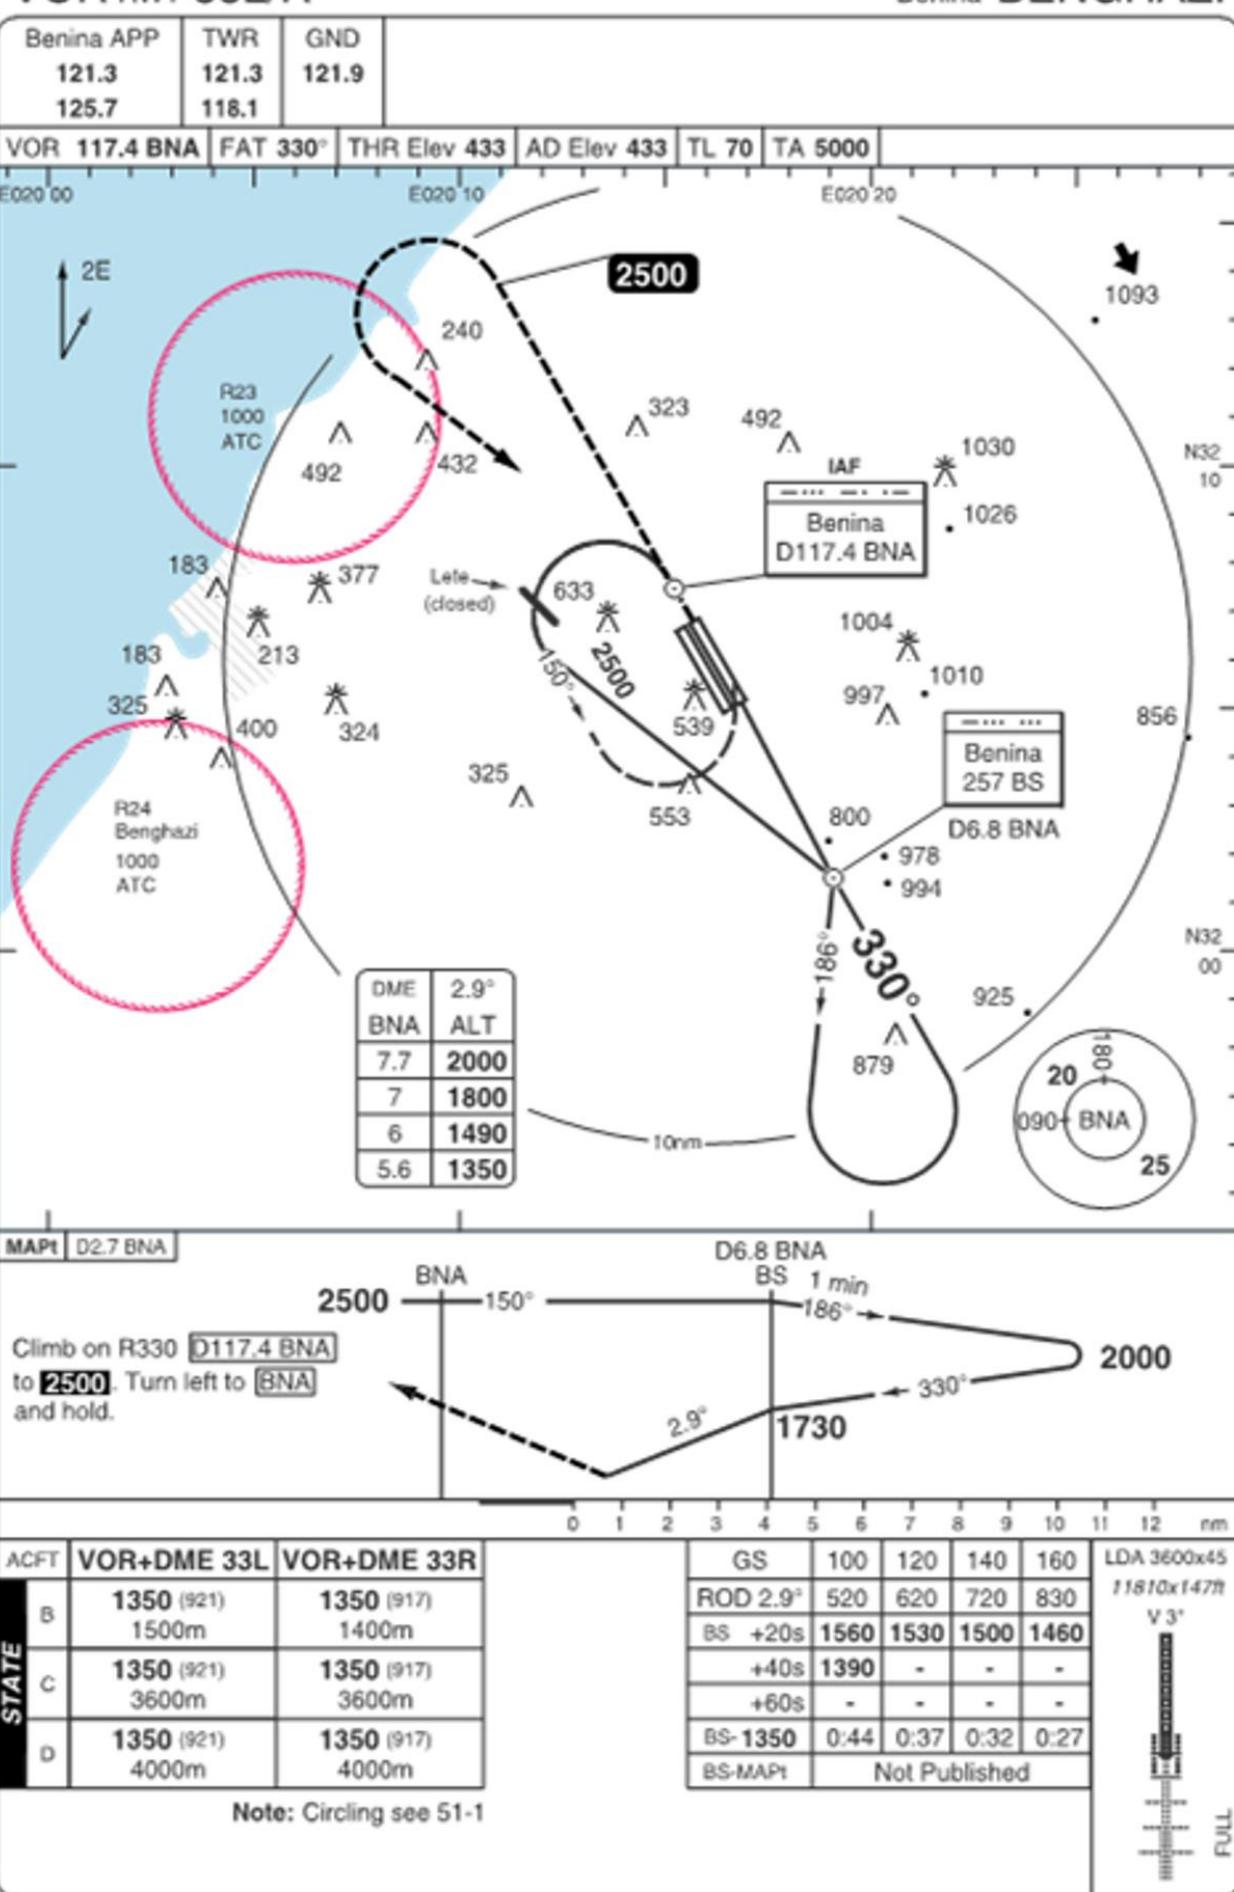

FOR FLIGHT SIMULATION USE ONLY, NOT FOR REAL WORLD FLIGHTS