Experience in Modeling a Microcontroller Instruction Set Using B

Valério Medeiros Jr¹, David Déharbe²

¹ Federal Institute of Education, Science and Technology of Rio Grande do Norte, Natal, RN, Brazil
² Federal University of Rio Grande do Norte, Natal, RN, Brazil

Abstract. This paper presents a formal model, developed in B, of the Z80 instruction set. The formal model includes different libraries that specify entities commonly used in microcontrolers and microprocessors. Not only this model can be used for documentation purposes, but also to simulate and test the assembly code. It is also a fundamental component to extend the reach of the B method from the specification of the functional requirements of a system to an assembly-level implementation thereof.

1 Introduction

The B method [1] supports the formal development of software from a specification of functional requirements down to an imperative implementation of those requirements, amenable to synthesis to a programming language such as C or Ada. However, the synthesis step is not amenable to proof of correctness, and [6] proposed an approach to extend the scope of the B method up to the assembly level language. One key component of this approach is to build, within the framework of the B method, formal models of the instruction set of such assembly languages.

This work presents a formal model of the instruction set of the Z80 microcontroller [17]. This microcontroller was chosen because of several factors: it contains essential and common concepts of microcontrollers and even microprocessors; it has extensive available documentation; and it has been widely used. A first, partial, Z80 model presented in [10] was fully verified, but it used constructs that made it impossible to animate.

The new model supports animation in ProB[9]. Essentially, the new model³ no longer contains definitions derived from infinite sets. Using B constructs for modularity, auxiliary libraries of basic modules were developed as part of the construction of microcontroller model. Such library has many definitions of concepts common in microcontrollers. Besides the new Z80 model, a petroleum production test system was developed using Z80 assembly language to analyse the code simulation and the verification process.

The formal model of an instruction set has several applications. Animation allows to simulate the execution of assembly programs including support for interrupts, input and output instructions. Other possible uses include documentation, the construction of simulators, and can be possibly the starting point of a verification effort for the actual implementation of a Z80 design. Moreover, the model of the instruction set could be instrumented with non-functional aspects, such as the number of cycles it takes to execute an instruction, to prove lower and upper bounds on the execution time of a routine. Two aspects of such formalization are of particular importance to us: provide a more solid documentation artifact for microcontrollers and build a reference model for a formal compilation approach in B.

³ The interested reader in more details is invited to visit our repository at: http://code.google.com/p/b2asm/.

It is often the case that the official documentation of an instruction uses textual description, mathematical formulas, examples, etc. Sometimes, the instruction descriptions have a specific notation, some informations are organized in different sections of document and the textual descriptions are not standardized. The manuals also have semi-formal and informal descriptions, these descriptions may leave errors, inconsistency and ambiguity. For example, in the official manual of the microcontroller Z80 [17], the semantics of an instruction (in particular its effects on the flag register) are described informally, and is this description is scattered in different pages. Furthermore, the official manual of the microcontroller Z80 has also several problems that were identified over time [15].

A solution to avoid ambiguity and inconsistencies is to specify formally the assembly instruction set, making it possible to prove properties of the instructions. The formal model also restricts the definitions to correct typing and uses only well-defined expressions. Furthermore, the developer may use the refinement capabilities of the B method to specify at different levels of abstraction and add more specific details or useful restrictions in refined models.

This paper is structured as follows. Section 2 presents the elementary libraries and the modeling of some elements common to microcontrollers. Section 3 presents the B model of the Z80 instruction set. Related work are discussed in section 4. Finally, the last section is devoted to the conclusions.

2 Model structure and basic components

We have developed a reusable set of basic definitions to model hardware concepts and data types concepts. The models contains definitions to represent: registers, interruptions, input and output ports, memory and instructions. These definitions are grouped into separated development projects and are available as libraries. Thus the workspace is composed of the following:

Power contains the standard definition of exponentiation, as well as some basic properties, e.g. values of different powers of two. Given this definition, these properties have been proved interactively with the Atelier-B prover.

Hardware Library defines bit vectors with size 8 and 16, basic functions to manipulate bit vectors and important assertions. Details are given in sections 2.1, 2.2 and 2.3.

Types Library defines sets of naturals and integers represented with 8 bits and 16 bits, basic conversion functions between those types and bit vectors, and important assertions. It is presented in section 2.4.

Platform defines functions of the arithmetic logic unit, memory unit, registers and assembly instructions. Section 3 provides additional details.

The dependencies between those libraries are depicted in Figure 1.

2.1 Bit representation and manipulation

The entities defined in the module $BIT_DEFINITION$ are the type for bits, logical operations on bits (negation, conjunction, disjunction, exclusive disjunction), and a conversion function from Booleans to bits.

We model bits as a set of integers: BIT = 0..1. The negation is an unary function on bits and it is defined as:

$$\textit{bit_not} \in \textit{BIT} \rightarrow \textit{BIT} \land \textit{bit_not} = \{0 \mapsto 1, 1 \mapsto 0\}$$

The module also provides lemmas on negation that may be useful for the users of the library to develop proofs:

$$\forall (bb).(bb \in BIT \Rightarrow bit_not(bit_not(bb)) = bb)$$

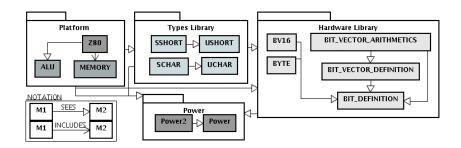


Fig. 1. Dependency diagram of the Z80 model.

Conjunction is a binary function on bits and it is defined as:

```
bit\_and \in BIT \times BIT \rightarrow BIT \land \\ \forall (b1, b2).(b1 \in BIT \land b2 \in BIT \Rightarrow \\ ((bit\_and(b1, b2) = 1) \Leftrightarrow (b1 = 1) \land (b2 = 1)))
```

The module provides the following lemmas for commutativity and associativity:

```
\forall (b1, b2).(b1 \in BIT \land b2 \in BIT \Rightarrow (bit\_and(b1, b2) = bit\_and(b2, b1))) \land \\ \forall (b1, b2, b3).(b1 \in BIT \land b2 \in BIT \land b3 \in BIT \Rightarrow (bit\_and(b1, bit\_and(b2, b3)) = bit\_and(bit\_and(b1, b2), b3)))
```

The module provides definitions of *bit_or* (disjunction) and *bit_xor* (exclusive disjunction), as well as lemmas on those operators. These are standard and their expression in B is similar as for *bit_and*.

Finally, the conversion from Boolean to bit is simply defined as:

```
bool\_to\_bit \in \mathbf{BOOL} \rightarrow BIT \land bool\_to\_bit = \{\mathbf{TRUE} \mapsto 1, \mathbf{FALSE} \mapsto 0\}
```

All the lemmas that are provided in this module have been automatically proved by the prover of Atelier-B.

2.2 Representation and manipulation of bit vectors

Sequences are predefined objects in B and are natural candidate to represent bit vectors. In B, sequences are functions whose the domain is an integer range with lower bound 1 (one). Indices in bit vectors usually range from 0 (zero) upwards and the model we propose obeys this convention by making an offset where necessary, so that predefined functions and proof rules may be used. We define bit vectors as non-empty sequences of bits: $BIT_VECTOR = \text{seq } 1(BIT)$. As BIT_VECTOR is an infinite set, this definition hinders the animation in ProB. As a workaround, we defined specialized types BYTE and BV16 without reference to BIT_VECTOR .

We also define two functions bv_set and bv_clear that, given a bit vector, and a position of the bit vector, return the bit vector resulting from setting the corresponding position to 1 and 0, and a function bv_get that, given a bit vector and a valid position, returns the value of the bit at that position. Only the first definition is shown here:

```
bv\_set \in BIT\_VECTOR \times \mathcal{N} \rightarrow BIT\_VECTOR \wedge bv\_set = \lambda \ v, n. (v \in BIT\_VECTOR \wedge n \in \mathcal{N} \wedge n < size(v) \mid v \Leftrightarrow \{n+1 \mapsto 1\})
```

Function $bv_catenate$ takes as parameters two bit vectors v and w, and returns the concatenation of v and w, such that v constitutes the most significant part of the result.

```
bv\_catenate \in BIT\_VECTOR \times BIT\_VECTOR \rightarrow BIT\_VECTOR \land bv\_catenate = \lambda \ v,w \ . \ (v \in BIT\_VECTOR \land w \in BIT\_VECTOR \mid v \ `w)
```

Additionally, the module provides definitions for the classical logical combinations of bit vectors: bit_not, bit_and, bit_or and bit_xor. Only the first two are presented here. The domain of the binary operators is restricted to pairs of bit vectors of the same length:

```
\begin{array}{l} bv\_not \in BIT\_VECTOR \rightarrow BIT\_VECTOR \land \\ bv\_not = \lambda \, v.(v \in BIT\_VECTOR \mid \quad \lambda \, i.(1..size(v)) \mid bit\_not(v(i))) \land \\ bv\_and \in BIT\_VECTOR \times BIT\_VECTOR \rightarrow BIT\_VECTOR \land \\ bv\_and = \lambda \, v_1, v_2.(v_1 \in BIT\_VECTOR \land v_2 \in BIT\_VECTOR \land \\ size(v_1) = size(v_2) \mid \lambda \, i.(1..size(v_1)) \mid bit\_and(v_1(i), v_2(i))) \end{array}
```

We provide several lemmas on bit vector operations. These lemmas express properties on the size of the result of the operations as well as classical algebraic properties such as associativity and commutativity.

2.3 Modeling bytes and bit vectors of length 16

Bytes, i.e. bit vectors of length 8, are a common entity in hardware design. We provide the following definitions:

```
BYTE\_WIDTH = 8 \land BYTE\_INDEX = 1 .. BYTE\_WIDTH \land PHYS\_BYTE\_INDEX = 0 .. (BYTE\_WIDTH-1) \land BYTE = (BYTE\_INDEX \rightarrow BIT) \land \forall (b1).(b1 \in BYTE \Rightarrow \mathbf{size}(b1) = BYTE\_WIDTH \land b1 \in \mathbf{seq1}(BIT))
```

 $BYTE_INDEX$ is the domain of the functions modeling bytes. It starts at 1 to be compatible with sequences. However, since the hardware community starts indexing from zero, definition $PHYS_BYTE_INDEX$ provides functionalities obeying this convention. Type BYTE is as a specialized type of BIT_VECTOR , with a size constraint. Other specific definitions are provided to facilitate further modeling: the type BV16 is created for bit vectors of length 16 in a similar way.

2.4 Bit vector arithmetic

Bit vectors are used to represent and combine numbers: integer ranges (signed or unsigned). Therefore, our library includes functions to manipulate such data, for example, the function bv_to_nat maps bit vectors to natural numbers:

```
bv\_to\_nat \in BIT\_VECTOR \to \mathcal{N} \land bv\_to\_nat = \lambda v.(v \in BIT\_VECTOR \mid \sum i.(i \in dom(v).v(i) \times 2^{i-1}))
```

An important lemma associated to this definition is:

$$\forall n.(n \in \mathcal{N}_1 \Rightarrow bv_to_nat(nat_to_bv(n)) = n).$$

2.5 Basic data types

The definition of instruction sets usually have bit vector and integer types as listed in table 1. For each type, a number of functions are defined, including conversion between different types.

Usually, each type module just needs to specialize definitions that are given in the hardware modeling library. For example, the function bv_to_nat from bit vector arithmetic is specialized

Table 1. Details of basic data types

Type Name	Range	Physical Size	Num. POs	Library
BIT	01	1 bit		Hardware
BYTE	_	1 bytes	153	Hardware
BV16	=	2 bytes	75	Hardware
UCHAR	0255	1 byte	30	Types
SCHAR	-128127	1 byte	26	Types
USHORT	065.535	2 byte	62	Types
SSHORT	-32.76832.767	2 bytes	58	Types

to $byte_uchar$. As the set BYTE is a subset of the BIT_VECTOR , this function can be defined as follows:

$$byte_uchar \in BYTE \rightarrow \mathcal{N} \land byte_uchar = \lambda(v).(v \in BYTE|bv_to_nat(v))$$

The definitions of the library types reuse the basic definitions from the hardware library. This provides greater confidence and facilitates the proof process, because the prover can reuse the previously defined lemmas.

We also created lemmas on pairs of dual conversion functions, such as:

```
\forall (val).(val \in UCHAR|byte\_uchar(uchar\_byte(val)) = val) \land \\ \forall (by).(by \in BYTE|uchar\_byte(byte\_uchar(by)) = by)
```

Nearly 50% of all these proof obligations shown in the Table 1 are verified automatically or with few user commands. However many others proof obligations are difficult to verify, as they involve functions that contain arithmetic expressions that are difficult to manipulate with the interactive prover of AtelierB.

2.6 Verification

This section presents the verification of the aforementioned modules using AtelierB provers. By default, AtelierB [4] does not generate proof obligations to check the type of functions defined in the PROPERTIES clause of a machine. For example, the definition $inc \in \{0,1\} \rightarrow \{0,1\} \land inc = \lambda(x).(x \in \{0,1\}|x+1)$, does not create a proof obligation to check the consistency of the definition. However, this definition is inconsistent since inc(1) = 2 and $2 \notin \{0,1\}$.

To avoid such inconsistencies, we state separately the required properties in the ASSERTIONS clause: this causes corresponding proof obligations to be generated and verified. However, we have not been able to build the corresponding proofs using the base of rules included in the free distribution of AtelierB. So we formalized new proof rules to check these properties in AtelierB and used them in the interactive prover of AtelierB.

The hardware library has many conversion functions with arithmetic, for example, Bit_vector to Natural, Natural to Bit_vector, Integer to Bit_vector and Bit_vector to Integer. These functions are organized in modules and each module contains auxiliary functions for a data type. The modules are represented by gray rectangles in Figure 2.

The conversion functions need to satisfy two properties: bijectivity and equality to the reverse of the dual conversion function. Three such proof obligations were verified automatically with AtelierB: $(uchar_schar \in UCHAR \rightarrow SCHAR)$, $(schar_uchar \in SCHAR \rightarrow UCHAR)$ and $(byte_bv16 = bv16_byte^{-1})$. For the remaining proof obligations, we again had to create new proof rules. There are three kinds of proof rules, that we illustrate by giving one example each:

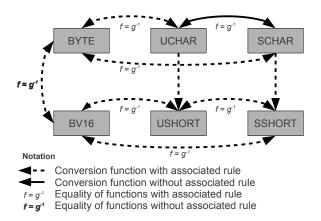


Fig. 2. Conversion functions

- 1. For the proof obligation (byte_uchar $\in BYTE \rightarrow UCHAR$), the proof rule is: $\lambda \ v\theta.(v\theta \in 1 ... 8 \rightarrow \{0,1\} \mid 128 \times v\theta(8) + 64 \times v\theta(7) + 32 \times v\theta(6) + 16 \times v\theta(5) + 8 \times v\theta(4) + 4 \times v\theta(3) + 2 \times v\theta(2) + 1 \times v\theta(1)) \in (1 ... 8 \rightarrow \{0,1\}) \rightarrow 0 ... 255$
- 3. For the proof obligation (byte_uchar= uchar_byte^-1), the proof rule is: $\lambda \ v\theta.(v\theta \in 1 ... 8 \to \{0,1\} \mid 128 \times v\theta(8) + 64 \times v\theta(7) + 32 \times v\theta(6) + 16 \times v\theta(5) + 8 \times v\theta(4) + 4 \times v\theta(3) + 2 \times v\theta(2) + 1 \times v\theta(1)) = (\lambda \ v\theta.(v\theta \in 0 ... 255 \mid [(v\theta \ \textit{mod}\ 2)/1, (v\theta \ \textit{mod}\ 4)/2, (v\theta \ \textit{mod}\ 8)/4, (v\theta \ \textit{mod}\ 16)/8, (v\theta \ \textit{mod}\ 32)/16, (v\theta \ \textit{mod}\ 64)/32, (v\theta \ \textit{mod}\ 128)/64, (v\theta \ \textit{mod}\ 256)/128]))^{-1}$

Eight proof obligations require that conversion functions are finite. These proof obligations were verified using the expression evaluator of ProB. Finally, we have included rules related to binary arithmetic as developed in [3]. These rules are used in the interactive theorem prover with binary arithmetic to prove important properties [7,11].

3 A B model of the Z80 instruction set

The Z80 is a CISC microcontroller developed by Zilog [17]. The Z80 is composed by different elements and a simplified internal organization is shown in the Figure 3. This figure has some important elements of Z80 CPU: ALU, registers of 8 and 16 bits and input/output ports.

The Z80 has 158 different instructions, including all the 78 from Intel 8080 microprocessor, and all of them were formally specified in B. These instructions are classified into these categories: load and exchange; block transfer and search; arithmetic and logical; rotate and shift; bit manipulation; jump, call and return; input/output; and basic cpu control. Each category of instruction has different elements of specification.

This section shows the elements that make up the different types of instructions. The main elements are specified in the microcontroller module Z80 and parts of it are presented below. Basically, the state of microcontroller is formed by data from program counter, ports, registers, etc. The transitions between the states are actioned by execution of instruction or an external

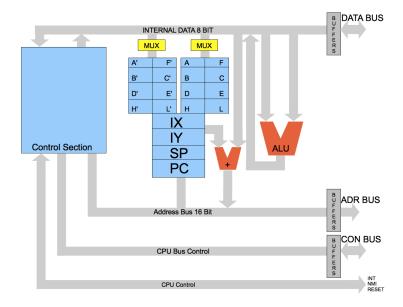


Fig. 3. Simplified internal organization of Z80 CPU.

action. Groups of registers are represented by the variables of the specification states that appear in clause *VARIABLES*. The declaration of valid states of variables is in the *INVARIANT* clause and the initial state is defined in the *INITIALISATION* clause. The assembly instructions are defined by the clause *OPERATIONS* and, in general, each instruction has three actions: update the program counter, update the flag register and its main effect. General functions that can be used in others microcontroller models are defined in the modules of data types. Specific functions of the microcontroller are defined in the ALU (arithmetic logic unit) module.

The main module includes an instance of the memory module and accesses the definitions from basic data types modules and the ALU module.

MACHINE	SEES
Z80	$ALU, BIT_DEFINITION, BIT_VECTOR_DEFINITION,$
INCLUDES	$BYTE_DEFINITION$, $BV16_DEFINITION$,
MEMORY	$UCHAR_DEFINITION$, $SCHAR_DEFINITION$,
	$SSHORT_DEFINITION$, $USHORT_DEFINITION$

3.1 Modeling registers

The Z80 CPU includes alternative set of accumulator, flag and general registers. The CPU contains a stack pointer (sp), program counter (pc), two index registers (ix) and iy), an interrupt register (i), a refresh register (r), two bits (iff1, iff2) used to control the interruptions, a pair of bits to define the interruption mode (im) and the input and output ports $(i-o_ports)$. These definitions are represented by INVARIANT.

INVARIANT

```
 \begin{array}{l} \mathit{rgs8} \in \mathit{id\_reg\_8} \to \mathit{BYTE} \land \mathit{pc} \in \mathit{INSTRUCTION} \land \mathit{sp} \in \mathit{BV16} \land \mathit{ix} \in \mathit{BV16} \land \mathit{iy} \in \mathit{BV16} \land \mathit{i\_} \in \mathit{BYTE} \land \mathit{r\_} \in \mathit{BYTE} \land \mathit{iff1} \in \mathit{BIT} \land \mathit{iff2} \in \mathit{BIT} \land \mathit{im} \in (\mathit{BIT} \times \mathit{BIT}) \land \mathit{i\_o\_ports} \in \mathit{BYTE} \to \mathit{BYTE} \\ \end{array}
```

The internal registers contains 176 bits of read/write memory that are represented by identifiers used as parameters in the instructions. It includes two sets of six general purpose registers which may be used individually as 8-bit registers or as 16-bit register pairs. The working registers are represented by variable rgs8. The domain of rgs8 (id_reg8) is a set formed by identifiers of registers of 8 bits. These registers are called main register set (a0,b0,c0,d0,e0,f0,h0,l0) and alternate register set ($a_0,b_0,c_0,d_0,e_0,f_0,h_0,l_0$). These registers can be accessed in pairs, forming 16-bits, resulting in another set of identifiers of 16-bits registers, named id_reg16 . These sets are represented below.

SETS

```
id\_reg\_8 = \{ a0, f0, b0, c0, d0, e0, h0, l0, a\_0, f\_0, b\_0, c\_0, d\_0, e\_0, h\_0, l\_0 \}; id\_reg\_16 = \{ AF, BC, DE, HL, SP \}
```

The main working register of Z80 is the accumulator (rgs8(a0)) used for arithmetic/logic, input/output and loading/storing operations. Another important element is the "f" register (rgs8(f0)), that is used as a **flag register**. This register uses only six bits to represent the execution result status of each instruction. According to the official manual the bits 3 and 5 are not used and the others bits have the follow meaning: $bv_get(rgs8(f0),0)$ - the carry bit; $bv_get(rgs8(f0),1)$ - the add/subtract bit; $bv_get(rgs8(f0),2)$ - the parity or overflow bit; $bv_get(rgs8(f0),4)$ - the half carry bit; $bv_get(rgs8(f0),6)$ - the zero bit; and $bv_get(rgs8(f0),7)$ - the sign bit. These bits also can be used to specify security properties for microcontroller programs.

Assuring the absence of overflow: To assure that an overflow does not happen, the developer can add this expression $(bv_get(rgs8(f0), 0) \neq 1 \land bv_get(rgs8(f0), 2) \neq 1)$ in the invariant.

3.2 Manipulation data functions from Z80

There are some specific functions from Z80 to manipulate the data. In addressing mode, the function $bv_ireg_plus_d$ receives the value of a register (ix or iy) used as a base to point to a region in memory from which data is to be stored or retrieved. An additional byte is included in indexed instructions to specify an offset from this base. This displacement is specified as a two's complement signed integer. This function is defined as:

```
\begin{array}{l} bv\_ireg\_plus\_d: (BV16 \times SCHAR \rightarrow BV16) \land \\ bv\_ireg\_plus\_d = \lambda \ ( \ ix\_iy \ , \ offset \ ) \ . \ ( \ ix\_iy \in BV16 \land \ offset \in SCHAR \\ | \ ushort\_bv16 \ ( \ (bv16\_ushort \ ( \ ix\_iy \ ) + \ offset \ ) \ \ mod \ 2^{16} \ ) \ ) \end{array}
```

Another derived function is $bv_(ireg_plus_d)$, this returns the value in the memory address returned by $bv_ireg_plus_d$ function and its definition is similar.

There is a specific function to refresh the flag register, it is named $update_reg_flag$. It is typed and defined as follow: $update_flag_reg \in (BIT \times BIT \times BIT \times BIT \times BIT \times BIT) \rightarrow (\{f0\} \times BYTE)$. This function is defined as:

```
 \begin{array}{l} \textit{update\_flag\_reg} = \lambda \; (\textit{s7} \; , \; \textit{z6} \; , \textit{h4} \; , \textit{pv2} \; , \textit{n1} \; , \textit{c0} \; ) \; . \; (\; \textit{s7} \in \textit{BIT} \; \land \; \textit{z6} \in \textit{BIT} \; \land \; \textit{h4} \in \textit{BIT} \; \land \; \textit{pv2} \in \textit{BIT} \; \land \; \textit{c0} \in \textit{BIT} \; | (\; \textit{f0} \mapsto [\textit{c0}, \; \textit{n1}, \; \textit{pv2}, \; 1, \; \textit{h4}, \; 1, \; \textit{z6}, \; \textit{s7}]) \; ) \end{array}
```

3.3 Program, stack and data memory

The Z80 uses a unique memory for storing program instructions, data stack and general-purpose data. The memory has 16-bit addresses and each address holds a byte. Thus, the memory is very simple: $mem \in BV16 \rightarrow BYTE$.

In general, the instructions can access all memory address, but it is dangerous. The user may mistakenly access and change data in memory. For added security, it is important that the program instructions has limited access by region. Thus the designer can specify address regions in a refinement model to restrict the access from instructions. The address regions can be specified using constants (PROGRAM_R_ADR,DATA_R_ADR,STACK_R_ADR), these define respectively a range of restricted address for: programs instructions, general purpose data and data stack.

Assuring the absence of overlapping of address regions: To assure that address regions are well defined, then the designer must to verify the expression: $PROGRAM_R_ADR \cap DATA_R_ADR \cap = \{\} \land STACK_R_ADR \cap DATA_R_ADR \cap = \{\} \land PROGRAM_R_ADR \cap STACK_R_ADR = \{\}$

Preserving the consistency of the memory: In general, the access to some address regions is dangerous. Then, each instruction has a specific pre-condition that verify if the new address memory, that will be updated, is member of its region. For example, the PUSH program instruction allows write only in the region of stack (STACK_R_ADR).

3.4 Arithmetic logic unit

There are many functions in the module ALU. In general, the definition of these functions use basic definitions or previously defined functions. For example, the function half8UCHAR is used to get the half part of UCHAR value. It is important to know the half carry and it is used in the function add8UCHAR.

```
half8UCHAR \in UCHAR \rightarrow UCHAR \land half8UCHAR = \lambda \ (ww).(ww \in UCHAR \mid ww \ mod \ 2^4)
```

The function add8UCHAR receives a bit carry and two UCHAR values and returns respectively the sum, the sign bit, the carry bit, the half carry bit and the zero bit. It is typed as follows: $add8UCHAR: (BIT \times UCHAR \times UCHAR) \rightarrow (UCHAR \times BIT \times BIT \times BIT)$ and its definition is:

```
 \begin{array}{l} add8UCHAR = \lambda \; (carry,w1,\;w2). \\ (carry \in BIT \wedge w1 \in UCHAR \wedge w2 \in UCHAR \mid \\ \quad \; (((carry + w1 + w2 \;) \; \mathbf{mod} \; 2^8 \;), \\ bool\_bit(\; carry + uchar\_schar(w1) + uchar\_schar \; (w2) < 0), \\ bool\_bit(\; carry + w1 + w2 > UCHAR\_MAX), \\ bool\_bit(\; carry + half8UCHAR(w1) + half8UCHAR(w2) \geq 2^4), \\ bool\_bit(\; (\; (carry + w1 + w2 \;) \; \mathbf{mod} \; 2^8 \;) = 0)) \end{array} \right)
```

A related function to subtract operation is subtract8UCHAR. There are the same functions for the SCHAR type, they are respectively add8SCHAR and subtract8SCHAR, all these functions are of 8 bits (BYTE) and defined similarly. In the same way, the arithmetic functions for 16 bits (BV16) are defined. The module ALU has several others functions, for example: $instruction_next \in USHORT \to USHORT$ - It receives the actual value from program counter register (pc) and returns its increment; and $is_negative \in BYTE \to BIT$ - It returns the most significant bit, in other words, the signal bit. As the logic functions that are defined in the BYTE and BV16 module are included in the ALU module, they can be seen and used directly in the ALU and Z80 modules.

3.5 Modeling the actions and instructions

Each instruction is represented by a B operation in Z80 module. The main module (Z80) has three categories of operations: a category represents the instructions of microcontrollers, a second category represents the input and output of data (shown in 3.6) and the last category represents the external actions (shown in 3.7). A simple example of instruction category is $LD_{-}(nn)_{-}A^{-4}$ shown below. The pre-defined functions are necessary many times to model the instructions, these functions facilitate the construction of instruction set model. By default, all parameters in operations are either predefined elements in the model or integers values in decimal representation. This instruction use the updateAddressMem operation from Memory module and it receives a address memory and its new memory value. It also increments the program counter (pc) and update the refresh register (r_{-}) . The other instructions have a similar structure.

3.6 Modeling the input/output instructions

The Z80 has an extensive set of input and output (I/O) instructions and 256 ports for devices. This model can transfer data blocks between the I/O devices and any of the internal registers or memory address.

The $IN_{-}r(C)$ ⁴ instruction is represented by the following B operation. It receives an register identifier "rr" and, it stores the value from "rr" in the C port address. Besides, it increments the program counter and updates the flag registers.

```
 \begin{split} \textbf{IN\_r\_9C0} & (rr) = \\ \textbf{PRE} & rr \in id\_reg\_8 \land rr \neq f0 \quad \textbf{THEN} \\ \textbf{ANY} & negative \ , \ zero \ , \ half\_carry \ , \ pv \ , \ add\_sub \ , \ carry \\ \textbf{WHERE} \\ & negative \in BIT \land zero \in BIT \land half\_carry \in BIT \land pv \in BIT \land \\ & add\_sub \in BIT \land carry \in BIT \land \\ & negative = is\_negative \ (io\_ports \ (rgs8 \ (c0)\ )) \land \\ & zero = is\_zero \ (io\_ports \ (rgs8 \ (c0)\ )) \land half\_carry = 0 \land \\ & pv = parity\_even \ (io\_ports \ (rgs8 \ (c0)\ )) \land add\_sub = 0 \land carry = z\_c \\ \textbf{THEN} \\ & rgs8 := rgs8 \Leftrightarrow \{ \ (rr \mapsto io\_ports \ (rgs8 \ (c0)\ )) \ , \\ & update\_flag\_reg(negative,zero,half\_carry,pv,add\_sub,carry)\}|| \\ & pc := instruction\_next \ (pc) \ || \ r\_ := update\_refresh\_reg(r\_) \\ \textbf{END} \\ \textbf{END} \\ \end{split}
```

3.7 Modeling the external actions

The external actions change the state of the microcontroller, for example, refreshing the I/O ports and interruptions request. The external actions are also modeled by operations and they are named with the prefix "ext_" and followed by the name of action. There are four external

⁴ The B tools does not allow to use parentheses in identifiers, and the characters {"(",")"} are replaced respectively by {"9","0"} in the actual specification.

actions: $ext_update_io_ports$, ext_NMI and ext_INT , ext_Reset . The $ext_update_io_ports$ just change the state of I/O port, see.

```
 \begin{array}{l} \mathbf{ext\_update\_io\_ports}(\mathit{address}, \mathit{value}) \! = \\ \mathbf{PRE} \ \mathit{address} \in \mathit{UCHAR} \ \land \quad \mathit{value} \in \mathit{SCHAR} \ \mathbf{THEN} \\ \mathit{io\_ports} \ ( \ \mathit{uchar\_byte} \ ( \ \mathit{address} \ ) \ ) := \mathit{schar\_byte} \ ( \ \mathit{value} \ ) \\ \mathbf{FND} \\ \end{array}
```

The other external actions are related to interruptions. The interruptions allow that the devices suspend a routine from CPU and start another service routine. This service routine can exchange data or signals between CPU and external devices. When a routine is finished, then the CPU comes back to the last routine that was interrupted.

For the interrupts, the following elements are important: the interrupt flip-flops (iff1 and iff2), the types of interrupts (maskable and non-maskable), the interrupt mode (set with the IM 0, IM 1, IM 2 instructions) and the i_ register.

Flip-flops iff1 and iff2 control the maskable interrupts (INT). When iff1 is set, the interrupt is enabled, otherwise it is disabled; iff2 is used only as backup for iff1. The instructions EI and DI respectively enable and disable the maskable interruptions, setting iff1 to 1 and 0.

The interruptions and the *reset* action can change the state of program counter. Theses actions are modeled by B operations and its main effects are presented here⁵.

NMI - Non-maskable interrupts cannot be disabled by the programmer. Then, when a device makes a request, sp is pushed, pc receives 66H (102 in decimal), iff1 is reset, iff2 stores iff1 and the refresh register is updated.

```
 \begin{array}{l} \mathbf{updateStack}(\{\ (sp\_minus\_two \mapsto pc\_low), (sp\_minus\_one \mapsto pc\_high\ )\ \})|| \\ sp := sp\_minus\_two \mid|\ pc := 102 \mid|\ iff1 := 0 \mid|\ iff2 := iff1 \mid| \\ r\_ := update\_refresh\_reg(r\_) \end{array}
```

INT - Maskable Interrupt is usually reserved for important functions that can be enabled and disabled by the programmer. When a maskable interrupt action happens, both iff1 and iff2 are cleared, disabling the interrupts, sp is pushed, the refresh register is updated and the other effects depend on the interrupt mode register (im).

- − The mode 0 is compatible with 8080 and this mode is selected when $im = (0 \mapsto 0)$. When a non-maskable interrupt happens, the CPU fetches an instruction of one byte from an external device, usually an RST instruction, and the CPU executes it. The instruction code is received from an external device by data bus and it is represented by integer parameter called $byte_bus$.
- The mode 1 is the simplest and this mode is selected when $im = (0 \mapsto 1)$. Simply, when a non-maskable interruption happens, the program counter receives 38H (56 in decimal).
- − The mode 2 is the most flexible and this mode is selected when $im = (1 \mapsto 1)$. When a non-maskable interruption happens, an indirect call can be made to any address memory. The program counter receives a bit vector of size 16 composed with two parts: the most significant part of the i_ register and the least significant part of the $byte_bus$ with the last bit cleared.

The essential part of maskable interrupt is shown below, where $byte_bus$ is a parameter of the INT operation:

```
IF im = (0 \mapsto 0) THEN
```

⁵ Some definitions of constants: sp_minus_two holds the value of stack pointer minus 2, sp_minus_one is the value of stack pointer minus 1, pc_high holds the most significant 8 bits and pc_low holds the least significant 8 bits.

```
IF byte\_bus \in opcodes\_RST\_instruction
  THEN
        pc := byte\_bus - 199 \parallel
        \mathbf{updateStack}(\ \ stack(\ sp\_minus\_one) \mapsto pc\_low,
        stack(sp\_minus\_two) \mapsto pc\_high \} ) ||
        sp := sp\_minus\_two \mid r\_ := update\_refresh\_req(r\_)
  ELSIF byte\_bus = opcode\_...\_instruction
  END
ELSIF im = (0 \mapsto 1) THEN
  pc := 56
  stack(sp\_minus\_two) \mapsto pc\_high \} ) ||
  sp := sp\_minus\_two \mid r\_ := update\_refresh\_req(r\_)
ELSIF im = (1 \mapsto 1) THEN
  pc := bv16\_ushort(byte\_bv16(i\_,bv\_clear(rotateleft(uchar\_byte(byte\_bus)),0)))||
  \mathbf{updateStack}(\ \ \mathit{stack}(\ \mathit{sp\_minus\_one}) \mapsto \mathit{pc\_low},
  stack(sp\_minus\_two) \mapsto pc\_high \} ) ||
  sp := sp\_minus\_two \mid \mid r\_ := update\_refresh\_reg(r\_)
END
\mathbf{RESET} - This just resets the registers related to the interruptions.
iff1 := 0 \mid | iff2 := 0 \mid | im := (0 \mapsto 0) \mid | pc := 0 \mid | i_{-} := [0,0,0,0,0,0,0,0] \mid |
rgs8 := rgs8 \Leftrightarrow \{ (a\theta \mapsto [0,0,0,0,0,0,0,0], (f\theta \mapsto [0,0,0,0,0,0,0,0]) \} | \}
r_{-} := [0,0,0,0,0,0,0,0,0] \mid\mid sp := [0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0]
```

The modeling of instruction set, interruptions and input/output ports become the animation interesting. The animation in ProB is not so fast and practical as a simulation, for example in [13], because ProB works manipulating logic and math concepts that can have infinite sets and non determinism, then ProB requires more processing, specially when it works analysing complex expressions or very large expressions. However, a user of ProB with this modeling can: execute manually a sequence of Z80's instructions that represent a program and view the visited states of ports, memory and registers. It is important to debug the effect action on the state space computed; create a tracing of the states; analyse constants, functions and expressions; and search possible violations.

The Z80 formal model provides many benefits, because of the verification of generated proof obligations guarantees: the correct use of data types, the developed security properties and the well-defined of all the expressions. Furthermore, the designer has a big flexibility to create new and specific security properties, this is very useful to adjust the verification in accordance with the requirements. Moreover, this example of model could replace or improve the used documentation for users and assembly programmers. Z80 model is also useful to develop verified software up to the assembly level.

A case study using the first version of Z80 model was also created and verified since the first abstract B model up to B assembly model. This case study is an object from the pilot project developed to analyse a petroleum production test system in each oil field. Its modeling was developed according to [12] and its B assembly model can be executed manually in ProB. The modeling of instruction set and the B assembly model allow to simulate the execution of microcontroller and analyse several important properties.

4 Related work

There exists several approaches to model hardware and instruction set using B a. The paper [16] reports a method to specify, design and construct sound and complete instruction set model by stepwise refinement and formal proof using Event-B. It also discusses desirable properties of the instruction set model. However, our work [10] and [14] use the B method, that seems quite appropriated to software development, because it has an implementable language defined, called B0, a model-driven approach [6] to develop software from the functional specification level down to assembly, and tools to convert the models to a programming language.

A related experience on using B in the design of secure micro-controllers is present in [2]. It tries to show the feasibility of such a technique for high confidence trustful devices. The work [14] describes a similar approach with MIPS CPU architecture and it shows how the CPU is formally specified and implemented using the B method.

5 Conclusions

This work has shown an approach to the formal modeling of the instruction set of microcontroller using the B method. During the construction of this model, some problems were found in the official reference for Z80 microcontroller [17]. We have consulted different sources [13,15,17] to avoid such problems in modeling and have developed a case study: a verified embedded software. This case study was interesting to as a feasibility analysis of the approach to derive formally assembly code from a specification of functional requirements in the B method.

The following works are directly related to the objective this paper. The approach to develop verified software down to the assembly level using B was described in [5]. A first case study for this approach was reported in [6], presenting more details as well as a small software that developed up to assembly level in three different platforms. A general view of a previous used in verification process were presented in [10]. The model presented in the current paper added support for animation in ProB and the representation of external actions (interruptions). This set of papers present an important step to software verification up to assembly language, showing the current difficulties and suggesting improvements in tools supporting the B method.

In the future, we plan to improve the support for the development of software with the B method from functional specification to assembly level, using the Z80 model presented in this work. For instance, the mechanic compilation from B algorithmic constructs to assembly platform is also envisioned. Finally, another important activity is to develop a formal model of a platform used in LLVM Compiler [8], which would enable us to integrate different compilation techniques into our B-based framework.

Acknowledgements: The animation of the model would not have been possible without the help of Michael Leuschel who kindly provided feedback and developed several improvements to ProB to meet our needs.

References

- 1. J. R. Abrial. The B Book: Assigning Programs to Meanings. Cambridge University Press, 1 edition, 1996.
- 2. Marc Benveniste. On using b in the design of secure micro-controllers: An experience report. *Electronic Notes in Theoretical Computer Science*, 280(0):3 22, 2011. Proceedings of the B 2011 Workshop, a satellite event of the 17th International Symposium on Formal Methods (FM 2011).

- Gottfried Wilhelm Leibniz By Karl Immanuel Gerhardt. Leibnizens mathematische schriften. G. H. Pertz, 1859. Available at: http://www.archive.org/details/leibnizensmathe07leibgoog. Accessed on January 10, 2012.
- 4. Clearsy. Atelier B web site. Available at: http://www.atelierb.eu, 2009. Accessed on January 10, 2012
- B. P. Dantas, D. Déharbe, S.S.L. Galvão, A. Martins, and V. G. Medeiros. Proposta e avaliação de uma abordagem de desenvolvimento de software fidedigno por construção com o método B. In Seminário Integrado de Software e Hardware, Belém - PA, 2008. XXXV SEMISH.
- B. P. Dantas, David Déharbe, S. L. Galvão, A. M. Moreira, and V. G. Medeiros Jr. Applying the B
 method to take on the grand challenge of verified compilation. In *Brazilian Symposium on Formal Methods*, Salvador BA, 2008. SBMF.
- Emeritus James L. Hein. Discrete Structures, Logic, and Computability. Portland State University, 2010.
- 8. Chris Lattner and Vikram S. Adve. Llvm: A compilation framework for lifelong program analysis & transformation. In CGO, pages 75–88, 2004.
- 9. Michael Leuschel and Michael Butler. ProB: A model checker for B. In Keijiro Araki, Stefania Gnesi, and Dino Mandrioli, editors, *FME 2003: Formal Methods*, LNCS 2805, pages 855–874, Pisa, Italy, 2003. Springer.
- 10. V. G. Medeiros Jr. and David Déharbe. Formal construction of a microcontroller instruction set model using b. In *Brazilian Symposium on Formal Methods*, Gramado RS, 2009. SBMF.
- 11. Umesh Vazirani Sanjoy Dasgupta, Christos Papadimitriou. *Algorithms*. Mc Graw Hill, 2006. Available at http://www.cs.berkeley.edu/vazirani/algorithms/all.pdf. Accessed on January 10, 2012.
- Paulo Sérgio Silva. Automação da drenagem no teste de produção convencional em tanque cilíndrico. Master's thesis, UFRN-PPgEEC, 2008.
- 13. Vladimir Soso. Z80 simulator ide. on-line, 2002. Available at: http://www.oshonsoft.com. Accessed on January 10, 2012.
- 14. Paul Subotic and Ramunas Gutkovas. Provably correct software project: Behaviourly correct mips simulator. Technical report, Uppsala university, 2010.
- 15. Sean Young. The Undocumented Z80 Documented, November 2003. Available at: http://www.myquest.nl/z80undocumented/z80-documented.pdf. Accessed on January 10, 2012.
- 16. Fangfang Yuan, Stephen Wright, Kerstin Eder, and David May. Managing complexity through abstraction: A refinement-based approach to formalize instruction set architectures. In Shengchao Qin and Zongyan Qiu, editors, ICFEM, volume 6991 of Lecture Notes in Computer Science, pages 585–600. Springer, 2011.
- 17. Zilog. Z80 Family CPU User Manual. ZiLOG Worldwide Headquarters, 910 E. Hamilton Avenue, 2001. Available at:http://www.zilog.com/docs/z80/um0080.pdf. Accessed on January 10, 2012.