


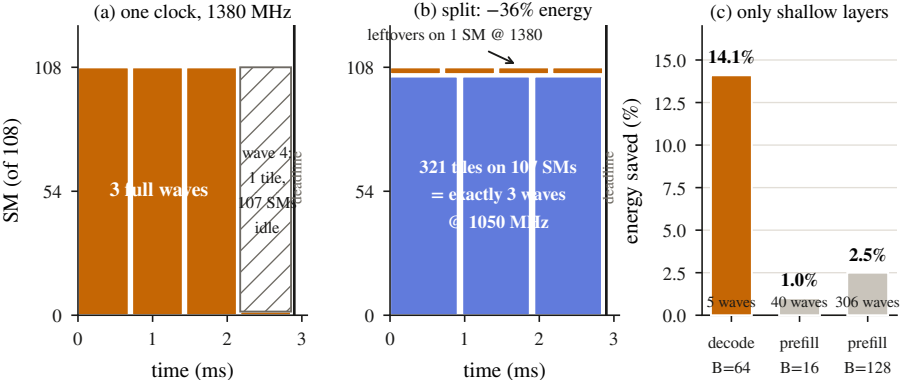

A wave is one round of work across all 108 SMs. 325 tiles need $\lceil 325/108 \rceil = 4$ waves, and the 4th holds a single tile -- but it still costs a full wave of time, so every tile must run at 1380 MHz to make the deadline. Hand those leftovers to one dedicated SM and the other 107 have exactly 3 waves, so they meet the same deadline at 1050 MHz. 99% of the work moves to the cheap clock. The deeper the layer, the less one wasted wave matters.