

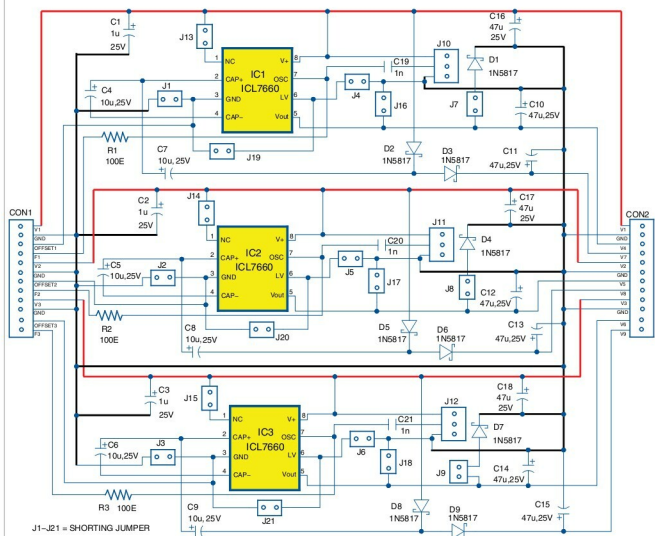


Fig. 1: Circuit diagram of the configurable DC-DC converter module

TABLE II
FUNCTIONS OF THE JUMPERS IN THE CIRCUIT

Jumpers				Function	Basic configuration
Pin of the IC	IC1	IC2	IC3		
3 (GND)	J1	J2	J3	Jumpers J1, J2 and J3 are used to connect pin 3 of the ICs to ground or leave these open. If left open, external offset voltage can be applied individually to pin 3 of the ICs.	Closed
6 (LV)	J4	J5	J6	Jumpers J4, J5 and J6 are used to connect or disconnect pin 6 to ground.	Open
5 (Vout)	J7	J8	J9	Jumpers J7, J8 and J9 are used to connect or disconnect an external diode to pin 5, if needed.	Open
5 (Vout)	J17	J18	J19	Jumpers J17, J18 and J19 are used to connect or disconnect pin 5 to ground.	Closed
7 (OSC)	J10	J11	J12	Jumpers J10, J11 and J12 are used to connect capacitors C17, C18 and C19, respectively, to positive power supply or ground, or leave the corresponding capacitor open. Pin 7 of each IC can be driven from external TTL or CMOS clock signal under the condition that the corresponding jumper J10 or J11 or J12 is open. External frequency should be according to the datasheet of the IC.	Open
1 (BOOST/NC)	J13	J14	J15	Jumpers J13, J14 and J15 are used to connect or disconnect pin 1 of the ICs to positive power supply of the corresponding ICs.	Open
3 (GND) and 6 (LV)	J20	J21	J22	If closed, you can connect pin 3 and pin 6 (if needed).	Open