

Totally Integrated Automation Portal							
SortingLine_Project							
Project							
Name:	SortingLine_Project	Creation time:	09/28/2026 22:37:00	Last change	10/05/2026 12:46:04	Author:	HoraEmbedded
Last modified by:	ENVY	Version:					
Comment:							
Operating system							
Name				Description			
Operating system				Microsoft Windows 11 Professionnel			
Version of the operating system				10.0.26300.0			
Operating system service pack							
Version of the Internet Explorer				11.1882.26100.0			
Computer name				DESKTOP-2HORA			
User name				DESKTOP-2HORA\ENVY			
Installation path of the TIA Portal				C:\Program Files\Siemens\Automation\Portal V18			
Components							
Name			Version		Release		
AWB V2 - Automation License Manager Plugin V2.0 (AWB_V2)			V2.0		V02.00.00.00_01.04.00.03		
AWB V2 - Software Management Plugin V2.0 (AWB_V2)			V2.0		V02.00.00.00_01.04.00.03		
AWB V2 - TIA Addin V2.0 (AWB_V2)			V2.0		V02.00.00.00_01.04.00.03		
AWB V2 - Central User Management Plugin V2.0 (AWB_V2)			V2.0		V02.00.00.00_01.04.00.03		
AWB V2 - Host V2.1 (AWB_V2)			V2.1		02.01.00.00_01.00.00.50		
S7-PLCSIM - S7-PLCSIM Setup V18.0 SP2 (PLCSIM_V18)			V18.0 + SP2		V18.00.02.00_09.13.00.01		
TIA Portal Project Server - TIA Portal Project Server Single SetupPackage V1.1 (ProjectServer)			V1.1		V01.01.00.00_00.00.01.52		
TIA Administrator - TIA Administrator V1.0 SP4 (TIAADMIN)			V1.0 + SP4		V01.00.04.00_01.18.00.04		
Totally Integrated Automation Portal V18 - TIA Portal Single SetupPackage V18.0 SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - HM All Editions Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - HM NoBasic Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Hardware Support Base Package 0 V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_35.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Multiuser Client Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Version Control Interface SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - STEP 7 Safety Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - STEP 7 Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Hardware Support Base Package 02 V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_35.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Hardware Support Base Package 03 V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_35.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Hardware Support Base Package 04 V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_35.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Support Base Package TO-01 V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_35.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Support Base Package TO-02 V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_35.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Hardware Support Base Package WCF-01 V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_35.01.00.01		
Siemens Totally Integrated Automation Portal V18 - TIACOMPCheck Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - TIA Portal Security Audit Log Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - TIA Portal Shim Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Simatic Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - WinCC Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - Openness SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
Siemens Totally Integrated Automation Portal V18 - WinCC Transfer Mandatory Single SetupPackage V18.0 + SP1 (TIAP18)			V18.0 + SP1		V18.00.01.00_42.01.00.01		
User Management Component - UserManagementComponentx64 V2.10 (UMC64)			V2.10		V02.10.00.00_00.00.00.38		
User Management Component - umtrayiconx64 V2.10 (UMC64)			V2.10		V02.10.00.00_00.00.00.38		
WinCC Runtime Advanced V17.0 - SIMATIC WinCC Runtime Advanced V17.0 (HMIRTM_V11)			V17.0 UPD5		V17.00.00.05_04.01.00.01		
WinCC Runtime Advanced V17.0 - HMIRTM Tagging Package 01 Single SetupPackage V17.0 UPD5 (HMIRTM_V11)			V17.0 UPD5		V17.00.00.05_04.01.00.01		
PLCSIM Advanced Single SetupPackage - PLCSIM Advanced Single SetupPackage V5.0 Upd2 (PLCSIMADV)			V5.0 + Upd2		V05.00.00.02_01.00.00.03		
SIMATIC S7-PCT - SIMATIC S7-PCT V3.5 SP3 (S7PCT)			V3.5 + SP3		V03.05.03.00_01.12.00.13		
WinCC Runtime Professional V18 - SIMATIC WinCC Runtime V18.0 (SCADA-RT_V11)			V18.0		V07.06.18.00_01.38.00.01		
WinCC Runtime Professional V18 - OPCUA_Client V1.1 + SP3 (SCADA-RT_V11)			V1.1 + SP3		V01.01.03.00_01.09.00.03		
WinCC Runtime Professional V18 - SCADA Simulation Single SetupPackage V18.0 + SP1 (SCADA-RT_V11)			V18.0 + SP1		V18.00.01.00_42.01.00.01		

Totally Integrated Automation Portal																																																																																												
<table><tr><th>Name</th><th>Version</th><th>Release</th></tr><tr><td>Siemens Totally Integrated Automation Portal V18 - Simatic Single Setup-Package 32 Bit V18.0 + SP1 (TIAP18)</td><td>V18.0 + SP1</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>Siemens Totally Integrated Automation Portal V18 - WinCC Single Setup-Package 32 Bit V18.0 + SP1 (TIAP18)</td><td>V18.0 + SP1</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>AddinRolloutService</td><td>18.0.1.0</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>SIMATIC HMI License Manager Panel Plugin (x64)</td><td>18.0.1.0</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>Automation Access Control Component x64</td><td>05.01</td><td>K05.01.02.00_00.00.00.02</td></tr><tr><td>SIMATIC WinCC Runtime Advanced Driver (x64)</td><td>18.0.1.0</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>ETWEventCollector</td><td>18.0.1.0</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>Installation Integrity Validator</td><td>1.12.18.0</td><td>V01.12.18.00_00.00.00.00</td></tr><tr><td>SIMATIC NCM FWL 64</td><td>5.6.0.3</td><td>K5.6.0.3_1.1.0.2</td></tr><tr><td>NCM GPRS 64</td><td>01.02.00.00</td><td>V1.2.0.0_2.1.0.1</td></tr><tr><td>SIMATIC PLCSIM 64</td><td>17.00.00</td><td>17.00.00.00_01.00.37.02</td></tr><tr><td>SIMATIC PLCSIM Advanced Driver64</td><td>5.0.0.2</td><td>V05.00.00.02_01.00.00.03</td></tr><tr><td>SIMATIC Device Drivers</td><td>9.3</td><td>09.03.04.00_01.01.00.37</td></tr><tr><td>TelemetryConnector</td><td>1.8.0.49</td><td>V01.08.00.49_01.00.00.00</td></tr><tr><td>Automation Access Control Component</td><td>05.01</td><td>K05.01.02.00_00.00.00.02</td></tr><tr><td>SIMATIC HMIProvider</td><td>7.0</td><td>K07.00.03.01_01.01.00.01</td></tr><tr><td>SIEMENS OPC</td><td>3.9</td><td>03.09.12.00_01.07.00.01</td></tr><tr><td>SIMATIC PLCSIM Advanced SimRT</td><td>5.0.0.2</td><td>V05.00.00.02_01.00.00.03</td></tr><tr><td>SIMATIC HMI ProSave</td><td>18.0.1.0</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>SIMATIC HMI Symbol Library</td><td>17.0.0.5</td><td>V17.00.00.05_04.01.00.01</td></tr><tr><td>SIMATIC HMI Touch Input</td><td>17.0.0.5</td><td>V17.00.00.05_04.01.00.01</td></tr><tr><td>SIMATIC Runtime Interfaces</td><td>2.1</td><td>K02.01.00.03_01.01.00.01</td></tr><tr><td>SIMATIC Device Drivers WoW</td><td>29.3</td><td>29.03.04.00_01.01.00.37</td></tr><tr><td>SIMATIC Event Database</td><td>5.6</td><td>05.06.02.03_02.01.00.01</td></tr><tr><td>SeCon</td><td>2.9</td><td>V02.09.00.00_01.03.00.01</td></tr><tr><td>SIMATIC Station Observer</td><td>K7.3.1.0</td><td>V07.03.01.00_01.01.00.14</td></tr><tr><td>SIMATIC SCS</td><td>V8.0.0.0</td><td>V08.00.00.00_01.09.00.10</td></tr><tr><td>SIMATIC WinCC Common Archiving</td><td>V8.0.0.0</td><td>V07.06.18.00_01.38.00.01</td></tr><tr><td>WinCC Runtime Advanced Simulator</td><td>17.0.0.0</td><td>V17.00.00.00_43.02.00.01</td></tr></table>			Name	Version	Release	Siemens Totally Integrated Automation Portal V18 - Simatic Single Setup-Package 32 Bit V18.0 + SP1 (TIAP18)	V18.0 + SP1	V18.00.01.00_42.01.00.01	Siemens Totally Integrated Automation Portal V18 - WinCC Single Setup-Package 32 Bit V18.0 + SP1 (TIAP18)	V18.0 + SP1	V18.00.01.00_42.01.00.01	AddinRolloutService	18.0.1.0	V18.00.01.00_42.01.00.01	SIMATIC HMI License Manager Panel Plugin (x64)	18.0.1.0	V18.00.01.00_42.01.00.01	Automation Access Control Component x64	05.01	K05.01.02.00_00.00.00.02	SIMATIC WinCC Runtime Advanced Driver (x64)	18.0.1.0	V18.00.01.00_42.01.00.01	ETWEventCollector	18.0.1.0	V18.00.01.00_42.01.00.01	Installation Integrity Validator	1.12.18.0	V01.12.18.00_00.00.00.00	SIMATIC NCM FWL 64	5.6.0.3	K5.6.0.3_1.1.0.2	NCM GPRS 64	01.02.00.00	V1.2.0.0_2.1.0.1	SIMATIC PLCSIM 64	17.00.00	17.00.00.00_01.00.37.02	SIMATIC PLCSIM Advanced Driver64	5.0.0.2	V05.00.00.02_01.00.00.03	SIMATIC Device Drivers	9.3	09.03.04.00_01.01.00.37	TelemetryConnector	1.8.0.49	V01.08.00.49_01.00.00.00	Automation Access Control Component	05.01	K05.01.02.00_00.00.00.02	SIMATIC HMIProvider	7.0	K07.00.03.01_01.01.00.01	SIEMENS OPC	3.9	03.09.12.00_01.07.00.01	SIMATIC PLCSIM Advanced SimRT	5.0.0.2	V05.00.00.02_01.00.00.03	SIMATIC HMI ProSave	18.0.1.0	V18.00.01.00_42.01.00.01	SIMATIC HMI Symbol Library	17.0.0.5	V17.00.00.05_04.01.00.01	SIMATIC HMI Touch Input	17.0.0.5	V17.00.00.05_04.01.00.01	SIMATIC Runtime Interfaces	2.1	K02.01.00.03_01.01.00.01	SIMATIC Device Drivers WoW	29.3	29.03.04.00_01.01.00.37	SIMATIC Event Database	5.6	05.06.02.03_02.01.00.01	SeCon	2.9	V02.09.00.00_01.03.00.01	SIMATIC Station Observer	K7.3.1.0	V07.03.01.00_01.01.00.14	SIMATIC SCS	V8.0.0.0	V08.00.00.00_01.09.00.10	SIMATIC WinCC Common Archiving	V8.0.0.0	V07.06.18.00_01.38.00.01	WinCC Runtime Advanced Simulator	17.0.0.0	V17.00.00.00_43.02.00.01
Name	Version	Release																																																																																										
Siemens Totally Integrated Automation Portal V18 - Simatic Single Setup-Package 32 Bit V18.0 + SP1 (TIAP18)	V18.0 + SP1	V18.00.01.00_42.01.00.01																																																																																										
Siemens Totally Integrated Automation Portal V18 - WinCC Single Setup-Package 32 Bit V18.0 + SP1 (TIAP18)	V18.0 + SP1	V18.00.01.00_42.01.00.01																																																																																										
AddinRolloutService	18.0.1.0	V18.00.01.00_42.01.00.01																																																																																										
SIMATIC HMI License Manager Panel Plugin (x64)	18.0.1.0	V18.00.01.00_42.01.00.01																																																																																										
Automation Access Control Component x64	05.01	K05.01.02.00_00.00.00.02																																																																																										
SIMATIC WinCC Runtime Advanced Driver (x64)	18.0.1.0	V18.00.01.00_42.01.00.01																																																																																										
ETWEventCollector	18.0.1.0	V18.00.01.00_42.01.00.01																																																																																										
Installation Integrity Validator	1.12.18.0	V01.12.18.00_00.00.00.00																																																																																										
SIMATIC NCM FWL 64	5.6.0.3	K5.6.0.3_1.1.0.2																																																																																										
NCM GPRS 64	01.02.00.00	V1.2.0.0_2.1.0.1																																																																																										
SIMATIC PLCSIM 64	17.00.00	17.00.00.00_01.00.37.02																																																																																										
SIMATIC PLCSIM Advanced Driver64	5.0.0.2	V05.00.00.02_01.00.00.03																																																																																										
SIMATIC Device Drivers	9.3	09.03.04.00_01.01.00.37																																																																																										
TelemetryConnector	1.8.0.49	V01.08.00.49_01.00.00.00																																																																																										
Automation Access Control Component	05.01	K05.01.02.00_00.00.00.02																																																																																										
SIMATIC HMIProvider	7.0	K07.00.03.01_01.01.00.01																																																																																										
SIEMENS OPC	3.9	03.09.12.00_01.07.00.01																																																																																										
SIMATIC PLCSIM Advanced SimRT	5.0.0.2	V05.00.00.02_01.00.00.03																																																																																										
SIMATIC HMI ProSave	18.0.1.0	V18.00.01.00_42.01.00.01																																																																																										
SIMATIC HMI Symbol Library	17.0.0.5	V17.00.00.05_04.01.00.01																																																																																										
SIMATIC HMI Touch Input	17.0.0.5	V17.00.00.05_04.01.00.01																																																																																										
SIMATIC Runtime Interfaces	2.1	K02.01.00.03_01.01.00.01																																																																																										
SIMATIC Device Drivers WoW	29.3	29.03.04.00_01.01.00.37																																																																																										
SIMATIC Event Database	5.6	05.06.02.03_02.01.00.01																																																																																										
SeCon	2.9	V02.09.00.00_01.03.00.01																																																																																										
SIMATIC Station Observer	K7.3.1.0	V07.03.01.00_01.01.00.14																																																																																										
SIMATIC SCS	V8.0.0.0	V08.00.00.00_01.09.00.10																																																																																										
SIMATIC WinCC Common Archiving	V8.0.0.0	V07.06.18.00_01.38.00.01																																																																																										
WinCC Runtime Advanced Simulator	17.0.0.0	V17.00.00.00_43.02.00.01																																																																																										
<table><tr><th colspan="3">Products</th></tr><tr><th>Name</th><th>Version</th><th>Release</th></tr><tr><td>TIA Administrator</td><td>V2.0</td><td>V02.00.00.00_01.04.00.03</td></tr><tr><td>S7-PLCSIM</td><td>V18 SP2</td><td>18.00.02.00_09.13.00.01</td></tr><tr><td>TIA Portal Project Server</td><td>V1.1</td><td>V01.01.00.00_00.00.01.52</td></tr><tr><td>SIMATIC STEP 7 Prof - STEP 7 Safety - WinCC Adv</td><td>V17.0</td><td>V17.00.00.00_43.02.00.01</td></tr><tr><td>SIMATIC STEP 7 Prof - STEP 7 Safety - WinCC Prof</td><td>V18.0</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>User Management Component</td><td>V2.10</td><td>V02.10.00.00_00.00.00.38</td></tr><tr><td>UMC Status Application</td><td>V2.10</td><td>V02.10.00.00_00.00.00.38</td></tr><tr><td>SIMATIC WinCC Runtime Advanced Simulation</td><td>V17.0 Upd5</td><td>V17.00.00.05_04.01.00.01</td></tr><tr><td>S7-PLCSIM Advanced</td><td>V5.0 Upd2</td><td>V05.00.00.02_01.00.00.03</td></tr><tr><td>S7-PCT</td><td>V3.5 SP3</td><td>V03.05.03.00_01.12.00.13</td></tr><tr><td>SIMATIC WinCC Runtime Professional Simulation</td><td>V18.0</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>Automation License Manager</td><td>V6.2 + SP5</td><td>06.02.05.00_00.00.03.23</td></tr><tr><td>S7-PLCSIM</td><td>V5.4 + SP8 + Upd2</td><td>V05.04.08.02_02.40.00.01</td></tr><tr><td>SIMATIC ProSave</td><td>V18.0</td><td>V18.00.01.00_42.01.00.01</td></tr><tr><td>S7-PCT</td><td>V3.5 SP3</td><td>K3.5.3.0_1.12.0.13</td></tr></table>			Products			Name	Version	Release	TIA Administrator	V2.0	V02.00.00.00_01.04.00.03	S7-PLCSIM	V18 SP2	18.00.02.00_09.13.00.01	TIA Portal Project Server	V1.1	V01.01.00.00_00.00.01.52	SIMATIC STEP 7 Prof - STEP 7 Safety - WinCC Adv	V17.0	V17.00.00.00_43.02.00.01	SIMATIC STEP 7 Prof - STEP 7 Safety - WinCC Prof	V18.0	V18.00.01.00_42.01.00.01	User Management Component	V2.10	V02.10.00.00_00.00.00.38	UMC Status Application	V2.10	V02.10.00.00_00.00.00.38	SIMATIC WinCC Runtime Advanced Simulation	V17.0 Upd5	V17.00.00.05_04.01.00.01	S7-PLCSIM Advanced	V5.0 Upd2	V05.00.00.02_01.00.00.03	S7-PCT	V3.5 SP3	V03.05.03.00_01.12.00.13	SIMATIC WinCC Runtime Professional Simulation	V18.0	V18.00.01.00_42.01.00.01	Automation License Manager	V6.2 + SP5	06.02.05.00_00.00.03.23	S7-PLCSIM	V5.4 + SP8 + Upd2	V05.04.08.02_02.40.00.01	SIMATIC ProSave	V18.0	V18.00.01.00_42.01.00.01	S7-PCT	V3.5 SP3	K3.5.3.0_1.12.0.13																																							
Products																																																																																												
Name	Version	Release																																																																																										
TIA Administrator	V2.0	V02.00.00.00_01.04.00.03																																																																																										
S7-PLCSIM	V18 SP2	18.00.02.00_09.13.00.01																																																																																										
TIA Portal Project Server	V1.1	V01.01.00.00_00.00.01.52																																																																																										
SIMATIC STEP 7 Prof - STEP 7 Safety - WinCC Adv	V17.0	V17.00.00.00_43.02.00.01																																																																																										
SIMATIC STEP 7 Prof - STEP 7 Safety - WinCC Prof	V18.0	V18.00.01.00_42.01.00.01																																																																																										
User Management Component	V2.10	V02.10.00.00_00.00.00.38																																																																																										
UMC Status Application	V2.10	V02.10.00.00_00.00.00.38																																																																																										
SIMATIC WinCC Runtime Advanced Simulation	V17.0 Upd5	V17.00.00.05_04.01.00.01																																																																																										
S7-PLCSIM Advanced	V5.0 Upd2	V05.00.00.02_01.00.00.03																																																																																										
S7-PCT	V3.5 SP3	V03.05.03.00_01.12.00.13																																																																																										
SIMATIC WinCC Runtime Professional Simulation	V18.0	V18.00.01.00_42.01.00.01																																																																																										
Automation License Manager	V6.2 + SP5	06.02.05.00_00.00.03.23																																																																																										
S7-PLCSIM	V5.4 + SP8 + Upd2	V05.04.08.02_02.40.00.01																																																																																										
SIMATIC ProSave	V18.0	V18.00.01.00_42.01.00.01																																																																																										
S7-PCT	V3.5 SP3	K3.5.3.0_1.12.0.13																																																																																										

Totally Integrated Automation Portal

SortingLine_Project

PLC_Sorting [CPU 1214C DC/DC/DC]

PLC_Sorting

General\Project information

Name	PLC_Sorting	Author	HoraEmbedded	Comment	
Slot	1	Rack	0		

General\Catalog information

Short designation	CPU 1214C DC/DC/DC	Description	Work memory 150 KB; 24VDC power supply with DI14 x 24VDC SINK/ SOURCE, DQ10 x 24VDC and AI2 on board; 6 high-speed counters and 4 pulse outputs on-board; signal board expands on-board I/O; up to 3 communication modules for serial communication; up to 8 signal modules for I/O expansion; PROFINET IO controller, I-device, transport protocol TCP/IP, secure Open User Communication, S7 communication, Web server, OPC UA: Server DA	Article number	6ES7 214-1AG40-0XB0
Firmware version	V4.6		False		

General\Identification & Maintenance

Plant designation		Location identifier		Installation date	2026-09-28 22:38:48.935
Additional information					

General\Checksums

Text lists	FA 70 E8 75 1D 5A 8E 29	Software	58 9D F6 15 2E 50 56 A8		
------------	-------------------------	----------	-------------------------	--	--

PROFINET interface [X1]\General

Name	PROFINET interface_1	Author	HoraEmbedded	Comment	
------	----------------------	--------	--------------	---------	--

PROFINET interface [X1]\General\Project information

Name	DI 14/DQ 10_1	Comment		Name	AI 2_1
Comment					

PROFINET interface [X1]\Ethernet addresses\Interface networked with

Subnet:	Not connected				
---------	---------------	--	--	--	--

PROFINET interface [X1]\Ethernet addresses\Internet protocol version 4 (IPv4)

IP configuration	Set IP address in the project	IP address:	192.168.0.1	Subnet mask:	255.255.255.0
Use router	False				

PROFINET interface [X1]\Ethernet addresses\PROFINET

PROFINET device name is set directly at the device	False	Generate PROFINET device name automatically	True	PROFINET device name:	plc_sorting
Converted name:	plcxbsorting9923	Device number:	0		

PROFINET interface [X1]\Time synchronization

Enable time synchronization via NTP server	Enable time synchronization via NTP server		IP addresses	Server 1	0.0.0.0
Server 2	0.0.0.0	Server 3	0.0.0.0	Server 4	0.0.0.0
Update interval	10sec			CPU synchronizes the modules of the device.	No synchronization

PROFINET interface [X1]\Digital inputs\Channel0

Channel address	I100.0	Input filters	6.4 millisec	Enable pulse catch	0
-----------------	--------	---------------	--------------	--------------------	---

PROFINET interface [X1]\Digital inputs\Channel0\

Enable rising edge detection	0	Prefix Event Rising Edge	49152	Event name:	0
Hardware interrupt:	0	Rising edge0	Rising edge0		

PROFINET interface [X1]\Digital inputs\Channel0\

Enable falling edge detection	0	Prefix Event Falling Edge	49280	Event name:	0
Hardware interrupt:	0	Falling edge0	Falling edge0		

PROFINET interface [X1]\Digital inputs\Channel1

Channel address	I100.1	Input filters	6.4 millisec	Enable pulse catch	0
-----------------	--------	---------------	--------------	--------------------	---

PROFINET interface [X1]\Digital inputs\Channel1\

Enable rising edge detection	0	Prefix Event Rising Edge	49153	Event name:	0
Hardware interrupt:	0	Rising edge1	Rising edge1		

PROFINET interface [X1]\Digital inputs\Channel1\

Enable falling edge detection	0	Prefix Event Falling Edge	49281	Event name:	0
Hardware interrupt:	0	Falling edge1	Falling edge1		

PROFINET interface [X1]\Digital inputs\Channel2

Channel address	I100.2	Input filters	6.4 millisec	Enable pulse catch	0
-----------------	--------	---------------	--------------	--------------------	---

PROFINET interface [X1]\Digital inputs\Channel2\

Enable rising edge detection	0	Prefix Event Rising Edge	49154	Event name:	0
Hardware interrupt:	0	Rising edge2	Rising edge2		

PROFINET interface [X1]\Digital inputs\Channel2\

Enable falling edge detection	0	Prefix Event Falling Edge	49282	Event name:	0
Hardware interrupt:	0	Falling edge2	Falling edge2		

PROFINET interface [X1]\Digital inputs\Channel3

Channel address	I100.3	Input filters	6.4 millisec	Enable pulse catch	0
-----------------	--------	---------------	--------------	--------------------	---

PROFINET interface [X1]\Digital inputs\Channel3\

Enable rising edge detection	0	Prefix Event Rising Edge	49155	Event name:	0
Hardware interrupt:	0	Rising edge3	Rising edge3		

Totally Integrated Automation Portal						
PROFINET interface [X1]\Digital inputs\Channel3\						
Enable falling edge detection	0	Prefix Event Falling Edge	49283	Event name:	0	
Hardware interrupt:	0	Falling edge3	Falling edge3			
PROFINET interface [X1]\Digital inputs\Channel4						
Channel address	I100.4	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel4\						
Enable rising edge detection	0	Prefix Event Rising Edge	49156	Event name:	0	
Hardware interrupt:	0	Rising edge4	Rising edge4			
PROFINET interface [X1]\Digital inputs\Channel4\						
Enable falling edge detection	0	Prefix Event Falling Edge	49284	Event name:	0	
Hardware interrupt:	0	Falling edge4	Falling edge4			
PROFINET interface [X1]\Digital inputs\Channel5						
Channel address	I100.5	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel5\						
Enable rising edge detection	0	Prefix Event Rising Edge	49157	Event name:	0	
Hardware interrupt:	0	Rising edge5	Rising edge5			
PROFINET interface [X1]\Digital inputs\Channel5\						
Enable falling edge detection	0	Prefix Event Falling Edge	49285	Event name:	0	
Hardware interrupt:	0	Falling edge5	Falling edge5			
PROFINET interface [X1]\Digital inputs\Channel6						
Channel address	I100.6	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel6\						
Enable rising edge detection	0	Prefix Event Rising Edge	49158	Event name:	0	
Hardware interrupt:	0	Rising edge6	Rising edge6			
PROFINET interface [X1]\Digital inputs\Channel6\						
Enable falling edge detection	0	Prefix Event Falling Edge	49286	Event name:	0	
Hardware interrupt:	0	Falling edge6	Falling edge6			
PROFINET interface [X1]\Digital inputs\Channel7						
Channel address	I100.7	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel7\						
Enable rising edge detection	0	Prefix Event Rising Edge	49159	Event name:	0	
Hardware interrupt:	0	Rising edge7	Rising edge7			
PROFINET interface [X1]\Digital inputs\Channel7\						
Enable falling edge detection	0	Prefix Event Falling Edge	49287	Event name:	0	
Hardware interrupt:	0	Falling edge7	Falling edge7			
PROFINET interface [X1]\Digital inputs\Channel8						
Channel address	I101.0	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel8\						
Enable rising edge detection	0	Prefix Event Rising Edge	49160	Event name:	0	
Hardware interrupt:	0	Rising edge8	Rising edge8			
PROFINET interface [X1]\Digital inputs\Channel8\						
Enable falling edge detection	0	Prefix Event Falling Edge	49288	Event name:	0	
Hardware interrupt:	0	Falling edge8	Falling edge8			
PROFINET interface [X1]\Digital inputs\Channel9						
Channel address	I101.1	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel9\						
Enable rising edge detection	0	Prefix Event Rising Edge	49161	Event name:	0	
Hardware interrupt:	0	Rising edge9	Rising edge9			
PROFINET interface [X1]\Digital inputs\Channel9\						
Enable falling edge detection	0	Prefix Event Falling Edge	49289	Event name:	0	
Hardware interrupt:	0	Falling edge9	Falling edge9			
PROFINET interface [X1]\Digital inputs\Channel10						
Channel address	I101.2	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel10\						
Enable rising edge detection	0	Prefix Event Rising Edge	49162	Event name:	0	
Hardware interrupt:	0	Rising edge10	Rising edge10			
PROFINET interface [X1]\Digital inputs\Channel10\						
Enable falling edge detection	0	Prefix Event Falling Edge	49290	Event name:	0	
Hardware interrupt:	0	Falling edge10	Falling edge10			
PROFINET interface [X1]\Digital inputs\Channel11						
Channel address	I101.3	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel11\						
Enable rising edge detection	0	Prefix Event Rising Edge	49163	Event name:	0	
Hardware interrupt:	0	Rising edge11	Rising edge11			
PROFINET interface [X1]\Digital inputs\Channel11\						
Enable falling edge detection	0	Prefix Event Falling Edge	49291	Event name:	0	
Hardware interrupt:	0	Falling edge11	Falling edge11			
PROFINET interface [X1]\Digital inputs\Channel12						
Channel address	I101.4	Input filters	6.4 millisec	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel13						
Channel address	I101.5	Input filters	6.4 millisec	Enable pulse catch	0	

Totally Integrated Automation Portal						
PROFINET interface [X1]\Analog inputs\Noise reduction						
Integration time	50 Hz (20 ms)					
PROFINET interface [X1]\Analog inputs\Channel0						
Channel address	IW64	Measurement type	Voltage	Voltage range	0..10 V	
Smoothing	Weak (4 cycles)			Enable overflow diagnostics	1	
PROFINET interface [X1]\Analog inputs\Channel1						
Channel address	IW66	Measurement type	Voltage	Voltage range	0..10 V	
Smoothing	Weak (4 cycles)			Enable overflow diagnostics	1	
PROFINET interface [X1]\Digital outputs						
Reaction to CPU STOP	Use substitute value					
PROFINET interface [X1]\Digital outputs\Channel0						
Channel address	Q0.0	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel1						
Channel address	Q0.1	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel2						
Channel address	Q0.2	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel3						
Channel address	Q0.3	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel4						
Channel address	Q0.4	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel5						
Channel address	Q0.5	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel6						
Channel address	Q0.6	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel7						
Channel address	Q0.7	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel8						
Channel address	Q1.0	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel9						
Channel address	Q1.1	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Operating mode						
IO controller	True	IO system		Device number	0	
IO device	False					
PROFINET interface [X1]\I/O addresses\Input addresses						
Start address	100.0	End address	101.7	Organization block	0	
Process image	0					
PROFINET interface [X1]\I/O addresses\Input addresses						
Start address	64	End address	67	Organization block	0	
Process image	0					
PROFINET interface [X1]\I/O addresses\Output addresses						
Start address	0.0	End address	1.7	Organization block	0	
Process image	0					
PROFINET interface [X1]\Advanced options\Interface options						
Support device replacement without exchangeable medium	True	Permit overwriting of device names of all assigned IO devices	False	Use IEC V2.2 LLDP mode	False	
Keep-Alive connection monitoring:	30s					
PROFINET interface [X1]\Advanced options\Real time settings\IO communication						
Send clock:	1.000ms					
PROFINET interface [X1]\Advanced options\Real time settings\Real time options						
Calculated bandwidth for cyclic IO data:	0.000ms	Calculated bandwidth for cyclic IO data:	0.000%			
PROFINET interface [X1]\Advanced options\Port [X1 P1]\General						
Name	Port_1	Author	ENVY	Comment		
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port interconnection\Local port:						
Local port:	PLC_Sorting\PROFINET interface_1 [X1]\Port_1 [X1 P1]	Medium:	Copper	Cable name:	---	
						

Totally Integrated Automation Portal						
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port interconnection\Partner port:						
	Monitoring of partner port is not possible	Partner port:	Any partner			
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port options\Activate						
Activate this port for use	True					
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port options\Connection						
Transmission rate / duplex:	Automatic	Monitor	False	Enable autonegotiation	True	
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port options\Boundaries						
End of detection of accessible devices	False	End of topology discovery	False	End of the sync domain	False	
PROFINET interface [X1]\Web server access						
Enable Web server for the IP address of this interface	False	The Web server must also be activated in the properties of the PLC.				
High speed counters (HSC)\HSC1\General\Enable						
Enable this high speed counter	0	Enable this high speed counter	0	Enable this high speed counter	0	
Enable this high speed counter	0	Enable this high speed counter	0	Enable this high speed counter	0	
High speed counters (HSC)\HSC1\General\Project information						
Name	HSC_1	Comment		Name	HSC_2	
Comment		Name	HSC_3	Comment		
Name	HSC_4	Comment		Name	HSC_5	
Comment		Name	HSC_6	Comment		
High speed counters (HSC)\HSC1\I/O addresses\Input addresses						
Start address	1000.0	End address	1003.7	Start address	1004.0	
End address	1007.7	Organization block	0	Start address	1008.0	
End address	1011.7	Organization block	0	Process image	0	
Start address	1012.0	End address	1015.7	Organization block	0	
Process image	0	Start address	1016.0	End address	1019.7	
Organization block	0	Process image	0	Start address	1020.0	
End address	1023.7	Organization block	0	Process image	0	
Organization block	0	Process image	0	Process image	0	
Pulse generators (PTO/PWM)\PTO1/PWM1\General\Enable						
Enable this pulse generator	0	Enable this pulse generator	0			
Pulse generators (PTO/PWM)\PTO1/PWM1\General\Project information						
Name	Pulse_1	Comment		Name	Pulse_2	
Comment						
Pulse generators (PTO/PWM)\PTO1/PWM1\I/O addresses\Output addresses						
Start address	1000.0	End address	1001.7	Start address	1002.0	
End address	1003.7	Organization block	0	Organization block	0	
Process image	0	Process image	0			
Startup						
Startup after POWER ON	Warm restart - mode before POWER OFF	Comparison preset to actual configuration	Startup CPU even if mismatch	Configuration time	60000ms	
OBs should be interruptible	1					
Cycle						
Cycle monitoring time [ms]	150ms			Enable minimum cycle time for cyclic OBs	0	
Minimum cycle time	1ms					
Communication load						
Cycle load due to communication [%]	20%					
System and clock memory\System memory bits						
Enable the use of system memory byte	0	Address of system memory byte (MBx)	1	First cycle		
Diagnostic status changed		Always 1 (high)		Always 0 (low)		
System and clock memory\Clock memory bits						
Enable the use of clock memory byte	0	Address of clock memory byte (MBx)	0	10 Hz clock		
5 Hz clock		2.5 Hz clock		2 Hz clock		
1.25 Hz clock		1 Hz clock		0.625 Hz clock		
0.5 Hz clock						
Web server\General						
Activate Web server on all modules of this device	False	Permit access only with HTTPS	True			
Web server\Automatic update						
Enable automatic update	True	Update interval	0s			
Web server\User management						
User name			User rights			
Everybody						
Web server\User-defined web pages						
Application name	HTML source path	Default HTML page	Files with dynamic content	Web DB number	Fragment DB number	
		index.htm	.htm;.html	333	334	
Web server\Overview of interfaces						
Device		Interface		Enabled web server access		
PLC_Sorting		PROFINET interface_1		False		

Totally Integrated Automation Portal											
Type	Addr. from	Addr. to	Module	PIP	Device name	Device number	Size	Master / IO system	Rack	Slot	
I	64	67	AI 2_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 2	
I	1000	1003	HSC_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 16	
I	1004	1007	HSC_2	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 17	
I	1008	1011	HSC_3	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 18	
I	1012	1015	HSC_4	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 19	
I	1016	1019	HSC_5	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 20	
I	1020	1023	HSC_6	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 21	
O	1000	1001	Pulse_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 32	
O	1002	1003	Pulse_2	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 33	
O	1004	1005	Pulse_3	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 34	
O	1006	1007	Pulse_4	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 35	
I	100	101	DI 14/DQ 10_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 1	
O	0	1	DI 14/DQ 10_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 1	


SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

Main [OB1]


Main Properties							
General							
Name	Main	Number	1	Type	OB	Language	LAD
Numbering	Automatic						
Information							
Title	Main Program Cycle Execution	Author		Comment	Main cyclic block of the S7-1200 PLC. This block coordinates the execution of the entire digital twin program at every PLC scan cycle. It handles the mode manager block to evaluate safety states, runs the main automatic sorting logic sequence, and executes the centralized output gating block to control the physical actuators of the Factory I/O scene.	Family	
Version	0.1	User-defined ID					

Name	Data type	Default value	Comment
▼ Input			
Initial_Call	Bool		Initial call of this OB
Remanence	Bool		=True, if remanent data are available
Temp			
Constant			

Network 1:

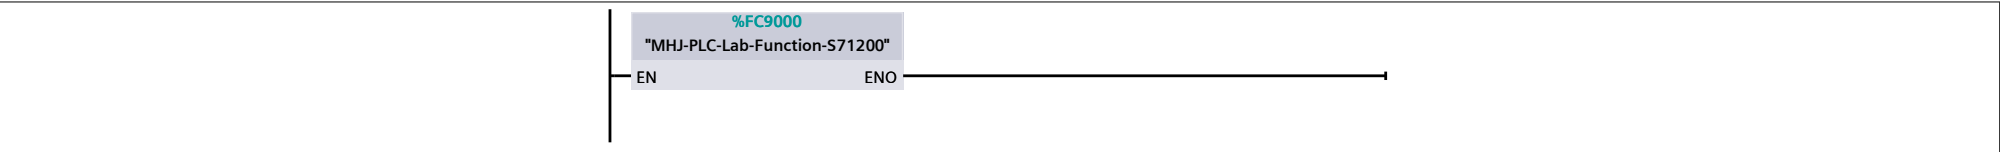


Network 2:

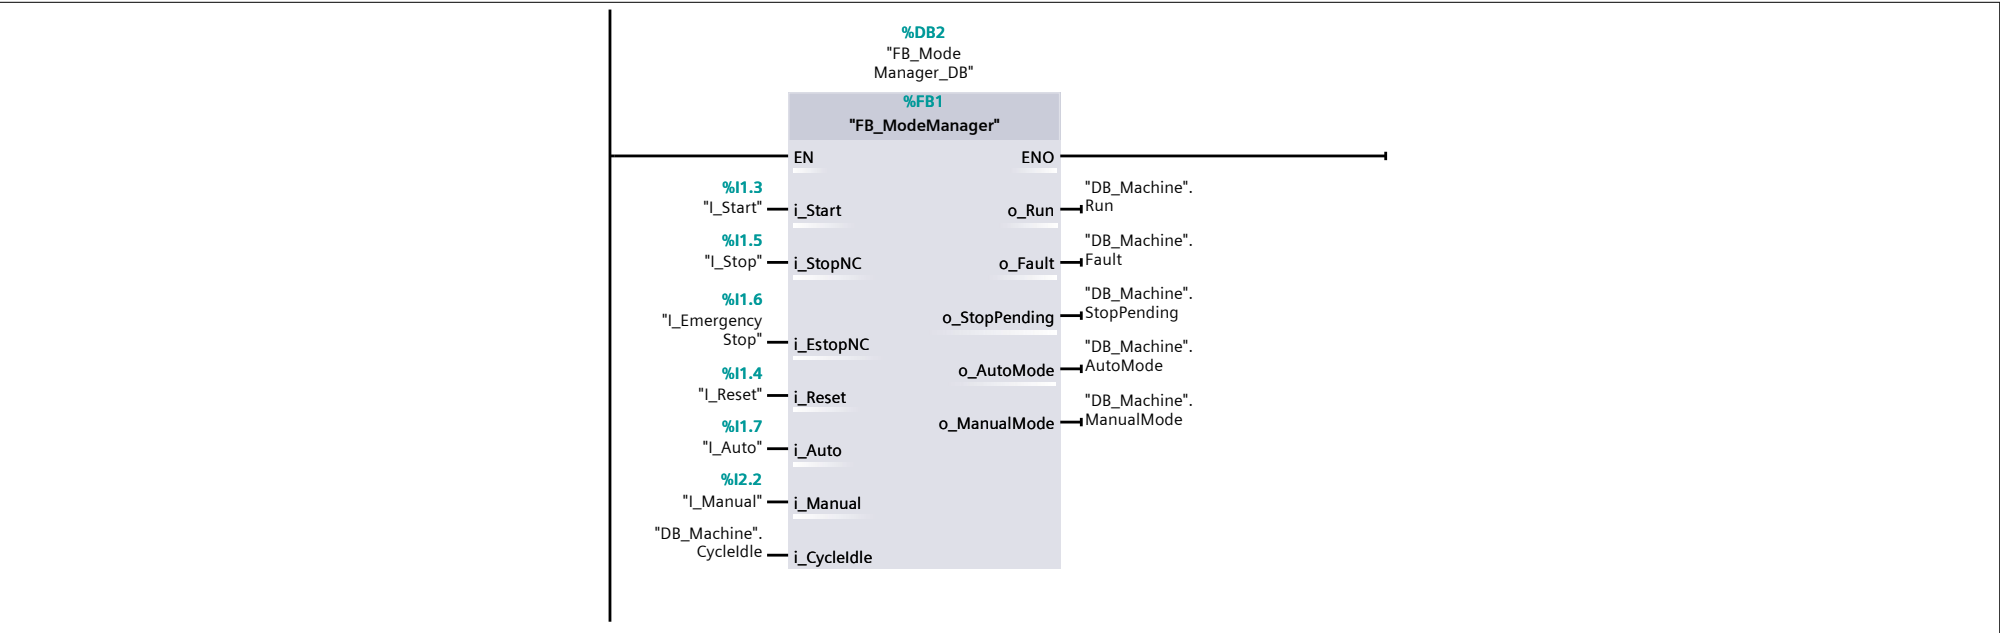


Network 3:




Network 4:

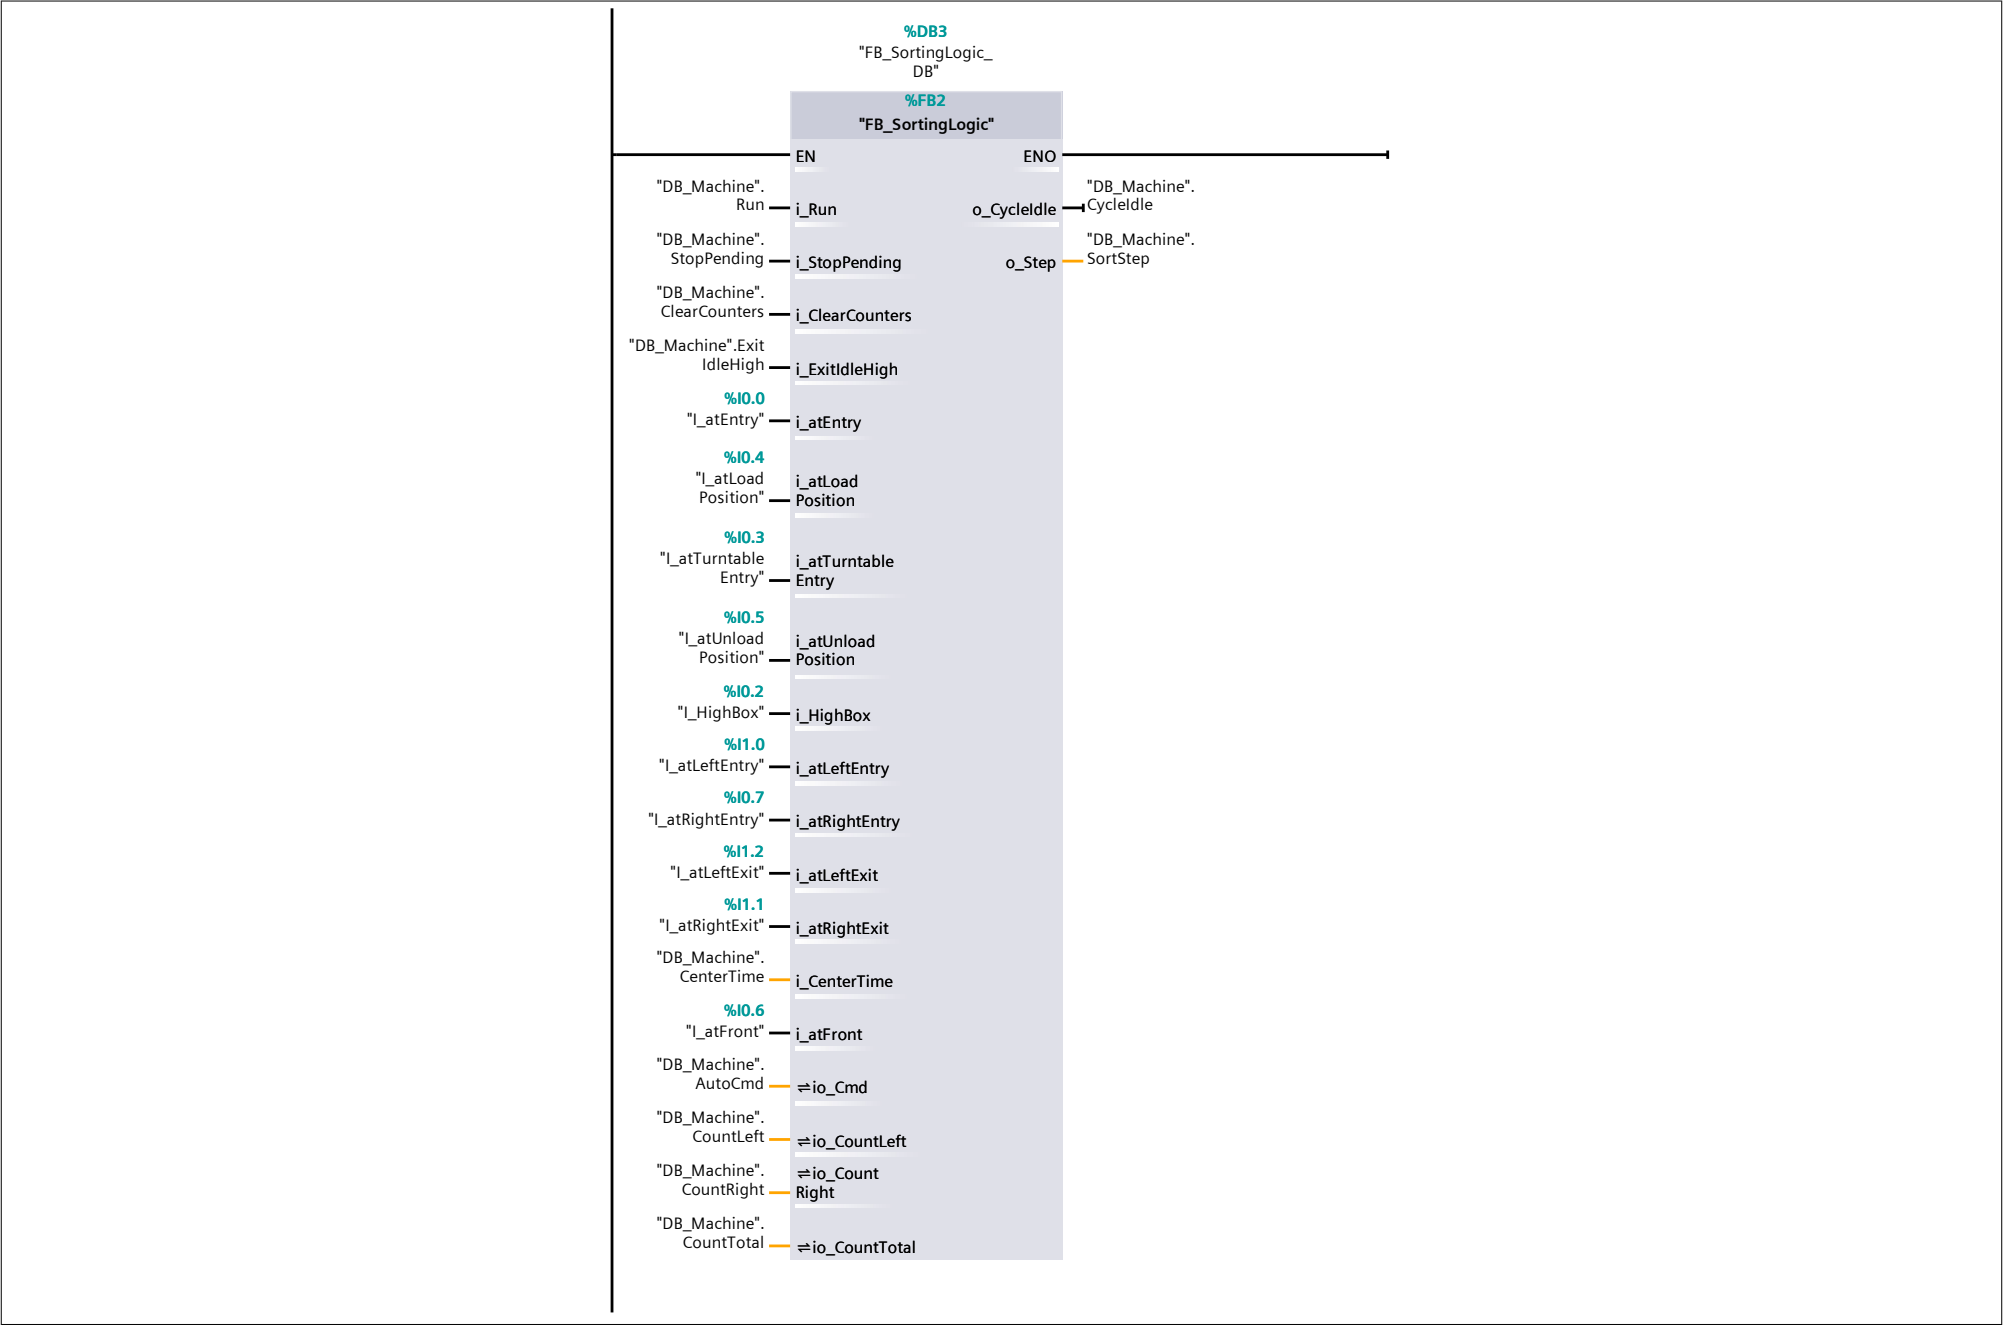

Network 5:

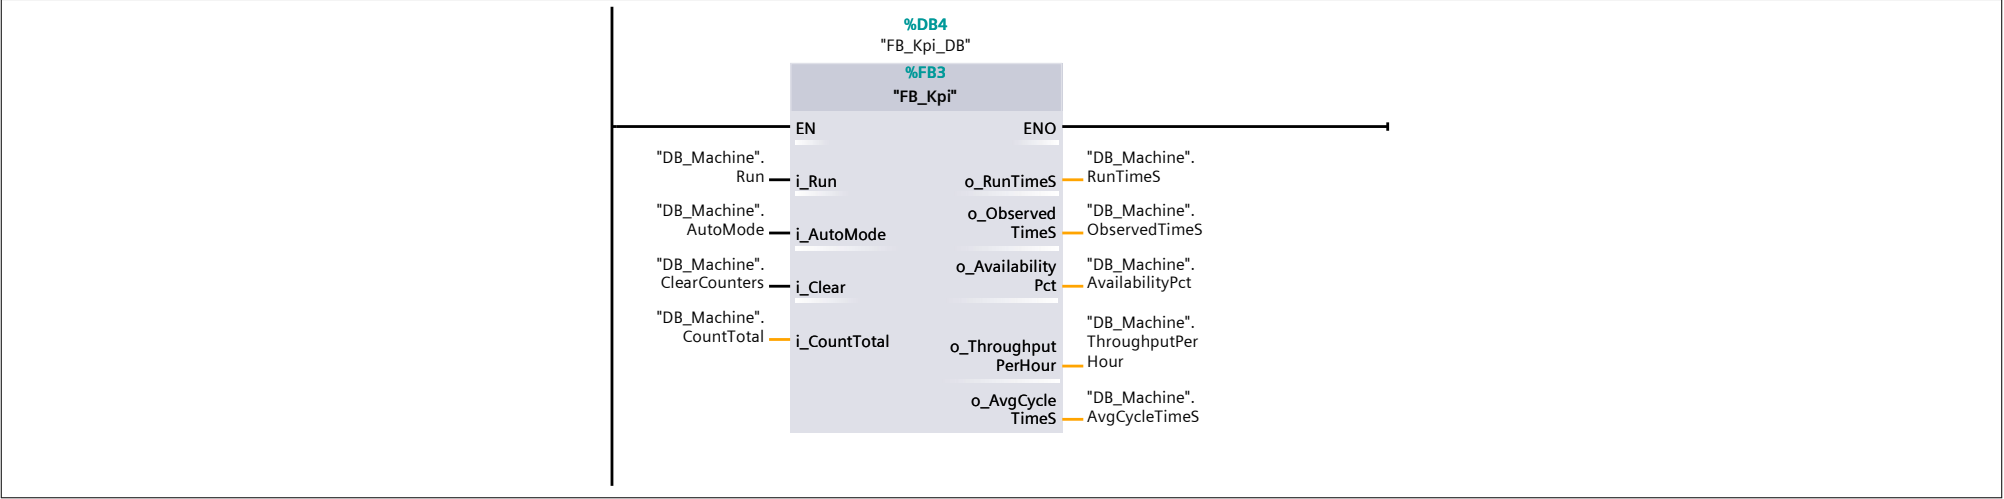

Network 6:

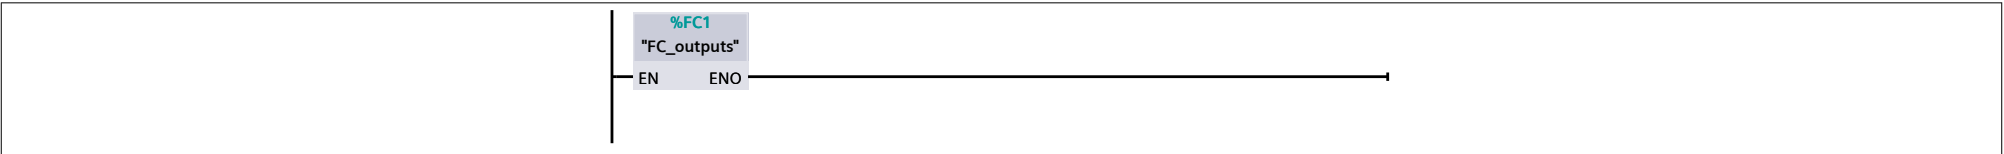

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

MHJ-PLC-Lab-Function-S71200 [FC9000]

MHJ-PLC-Lab-Function-S71200 Properties

General

Name	MHJ-PLC-Lab-Function-S71200	Number	9000	Type	FC	Language	SCL
Numbering	Manual						

Information

Title		Author	HoraEmbedded	Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Default value	Comment
Input			
Output			
InOut			
▼ Temp			
rdTimeReturn	Int		
▼ outputTime	DTL		
YEAR	UInt		
MONTH	USInt		
DAY	USInt		
WEEKDAY	USInt		
HOURL	USInt		
MINUTE	USInt		
SECOND	USInt		
NANOSECOND	UDInt		
SyncVal	Byte		
forVal	Int		
forVal_2	Int		
Value	Byte		
▼ Constant			
CompVal	Byte	16#34	
Value_01	Byte	16#11	
Value_01_DW	DWord	16#A165_D992	
Value_02_DW	DWord	16#58BE_4401	
▼ Return			
MHJ-PLC-Lab-Function-S71200	Void		

```
0001
0002 #Value:=PEEK(area := 16#82,
0003     dbNumber := 0,
0004     byteOffset := 511);
0005 #Value := #Value + 1;
0006
0007 POKE(area := 16#82,
0008     dbNumber := 0,
0009     byteOffset := 511,
0010     value := #Value);
0011
0012 POKE(area:=16#81,
0013     dbNumber:=0,
0014     byteOffset:=1016,
0015     value:=#Value_01_DW);
0016 POKE(area := 16#81,
0017     dbNumber := 0,
0018     byteOffset := 1020,
0019     value := #Value_02_DW);
0020
0021 POKE(area := 16#81,
0022     dbNumber := 0,
0023     byteOffset := 511,
0024     value := B#16#00);
0025
0026 FOR #forVal := 0 TO 120 DO
0027     FOR #forVal_2:=0 TO 10 DO
0028         #rdTimeReturn:=RD_SYS_T(#outputTime);
0029         #rdTimeReturn := WR_SYS_T(#outputTime);
0030         #rdTimeReturn := RD_SYS_T(#outputTime);
0031         #rdTimeReturn := WR_SYS_T(#outputTime);
0032     END_FOR;
0033     #SyncVal:= PEEK(area := 16#81,
0034         dbNumber := 0,
0035         byteOffset := 511);
0036     IF #SyncVal = #CompVal THEN
0037         GOTO M_1;
0038     END_IF;
0039 END_FOR;
0040 RETURN;
0041
0042 M_1:
0043 POKE(area := 16#81,
```

Totally Integrated Automation Portal																																										
0044 dbNumber := 0, 0045 byteOffset := 511, 0046 value := B#16#0); 0047 0048 0049																																										
<table><tr><th>Symbol</th><th>Address</th><th>Type</th><th>Comment</th></tr><tr><td>#CompVal</td><td>16#34</td><td>Byte</td><td></td></tr><tr><td>#forVal</td><td></td><td>Int</td><td></td></tr><tr><td>#forVal_2</td><td></td><td>Int</td><td></td></tr><tr><td>#outputTime</td><td></td><td>DTL</td><td></td></tr><tr><td>#rdTimeReturn</td><td></td><td>Int</td><td></td></tr><tr><td>#SyncVal</td><td></td><td>Byte</td><td></td></tr><tr><td>#Value</td><td></td><td>Byte</td><td></td></tr><tr><td>#Value_01_DW</td><td>16#A165_D992</td><td>DWord</td><td></td></tr><tr><td>#Value_02_DW</td><td>16#58BE_4401</td><td>DWord</td><td></td></tr></table>			Symbol	Address	Type	Comment	#CompVal	16#34	Byte		#forVal		Int		#forVal_2		Int		#outputTime		DTL		#rdTimeReturn		Int		#SyncVal		Byte		#Value		Byte		#Value_01_DW	16#A165_D992	DWord		#Value_02_DW	16#58BE_4401	DWord	
Symbol	Address	Type	Comment																																							
#CompVal	16#34	Byte																																								
#forVal		Int																																								
#forVal_2		Int																																								
#outputTime		DTL																																								
#rdTimeReturn		Int																																								
#SyncVal		Byte																																								
#Value		Byte																																								
#Value_01_DW	16#A165_D992	DWord																																								
#Value_02_DW	16#58BE_4401	DWord																																								

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

DB_Machine [DB1]

DB_Machine Properties

General

Name	DB_Machine	Number	1	Type	DB	Language	DB
Numbering	Automatic						

Information

Title	Global Machine Status and Shared Data Registers	Author	HoraEmbedded	Comment	Global Data Block (DB) serving as the main internal memory exchange registry for the system. Contains structured variables for system operating flags (Run, Fault, Modes), active part counters (Total, Left, Right), manual control parameters generated by the operator panel, and live engineering settings such as the box centering delay time variable.			Family	
Version	0.1	User-defined ID							

Name	Data type	Start value	Retain	Accessible from HMI/OPC UA/Web API	Writable from HMI/OPC UA/Web API	Visible in HMI engineering	Setpoint	Supervision	Comment
▼ Static									
Run	Bool	false	False	True	True	True	False		
Fault	Bool	false	False	True	True	True	False		
StopPending	Bool	false	False	True	True	True	False		
AutoMode	Bool	false	False	True	True	True	False		
ManualMode	Bool	false	False	True	True	True	False		
CycleIdle	Bool	false	False	True	True	True	False		
CountLeft	DInt	0	False	True	True	True	False		
CountRight	DInt	0	False	True	True	True	False		
CountTotal	DInt	0	False	True	True	True	False		
▼ AutoCmd	"UDT_ActuatorCmd"		False	True	True	True	False		
EntryConveyor	Bool	false	False	True	True	True	False		
FeederConveyor	Bool	false	False	True	True	True	False		
LeftConveyor	Bool	false	False	True	True	True	False		
RightConveyor	Bool	false	False	True	True	True	False		
Load	Bool	false	False	True	True	True	False		
Unload	Bool	false	False	True	True	True	False		
Turn	Bool	false	False	True	True	True	False		
Emit	Bool	false	False	True	True	True	False		
RemoverLeft	Bool	true	False	True	True	True	False		
RemoverRight	Bool	true	False	True	True	True	False		
▼ ManCmd	"UDT_ActuatorCmd"		False	True	True	True	False		
EntryConveyor	Bool	false	False	True	True	True	False		
FeederConveyor	Bool	false	False	True	True	True	False		
LeftConveyor	Bool	false	False	True	True	True	False		
RightConveyor	Bool	false	False	True	True	True	False		
Load	Bool	false	False	True	True	True	False		
Unload	Bool	false	False	True	True	True	False		
Turn	Bool	false	False	True	True	True	False		
Emit	Bool	false	False	True	True	True	False		
RemoverLeft	Bool	true	False	True	True	True	False		
RemoverRight	Bool	true	False	True	True	True	False		
SortStep	DInt	0	False	True	True	True	True		
ExitIdleHigh	Bool	false	False	True	True	True	False		
ClearCounters	Bool	false	False	True	True	True	False		
CenterTime	Time	T#2s	False	True	True	True	False		
RunTimeS	DInt	0	False	True	True	True	False		
ObservedTimeS	DInt	0	False	True	True	True	False		
AvailabilityPct	Real	0.0	False	True	True	True	False		
ThroughputPerHour	Real	0.0	False	True	True	True	False		
AvgCycleTimeS	Real	0.0	False	True	True	True	False		

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

FB_ModeManager [FB1]


FB_ModeManager Properties							
General							
Name	FB_ModeManager	Number	1	Type	FB	Language	LAD
Numbering	Automatic						
Information							
Title	Machine Modes and Safety Interlocking Manager	Author	HoraEmbedded	Comment	Monitors physical safety devices and panel inputs to manage operational states. Implements Normally Closed (NC) healthy monitoring for the Emergency Stop button, manages the manual safety fault latch (SR flip-flop), and handles the cycle stop requests (StopPending logic). It ensures a clean segregation between AutoMode and ManualMode to prevent overlapping operational commands.	Family	
Version	0.1	User-defined ID					

Name	Data type	Default value	Retain	Accessible from HMI/OPC UA/Web API	Writable from HMI/OPC UA/ Web API	Visible in HMI engineering	Setpoint	Supervision			Comment
▼ Input											
i_Start	Bool	false	Non-retain	True	True	True	False				Start pushbutton
i_StopNC	Bool	false	Non-retain	True	True	True	False				Stop pushbutton
i_EstopNC	Bool	false	Non-retain	True	True	True	False				Emergency stop
i_Reset	Bool	false	Non-retain	True	True	True	False				Reset pushbutton
i_Auto	Bool	false	Non-retain	True	True	True	False				Selector in Auto
i_Manual	Bool	false	Non-retain	True	True	True	False				Selector in Manual
i_CycleIdle	Bool	false	Non-retain	True	True	True	False				No box being processed
▼ Output											
o_Run	Bool	false	Non-retain	True	True	True	False				
o_Fault	Bool	false	Non-retain	True	True	True	False				
o_StopPending	Bool	false	Non-retain	True	True	True	False				
o_AutoMode	Bool	false	Non-retain	True	True	True	False				
o_ManualMode	Bool	false	Non-retain	True	True	True	False				
InOut											
▼ Static											
s_EdgeStart	Bool	false	Non-retain	True	True	True	False				Edge memory bits
s_EdgeReset	Bool	false	Non-retain	True	True	True	False				Edge memory bits
▼ Temp											
t_StartPulse	Bool										One scan pulses
t_ResetPulse	Bool										One scan pulses
Constant											


Network 1: Auto mode



Network 2: Manual mode

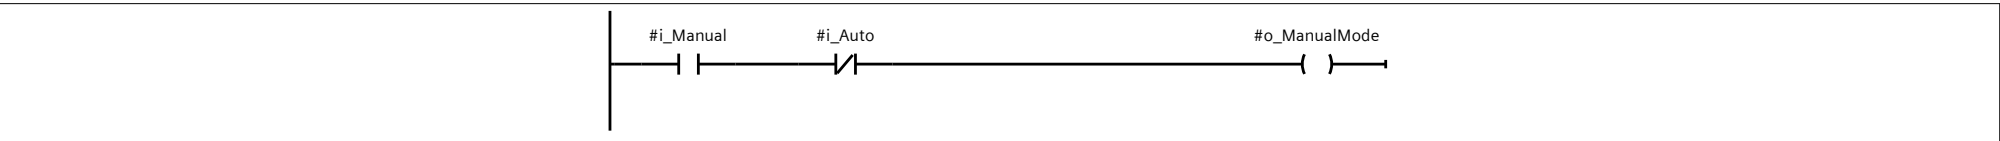


Network 3: Start pulse

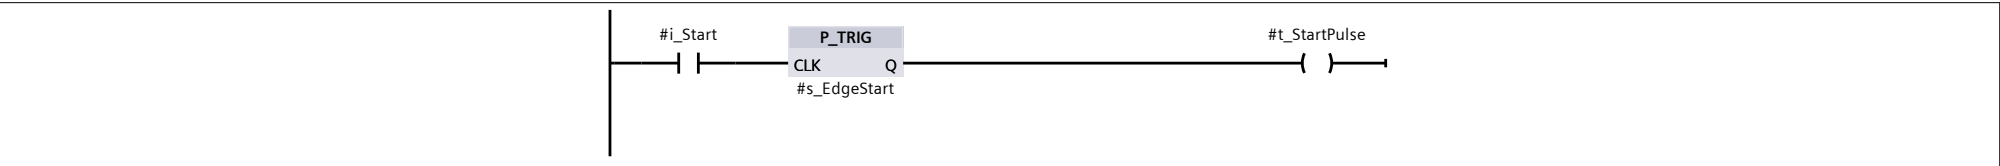


Network 4: Reset pulse




Network 5: Fault latch

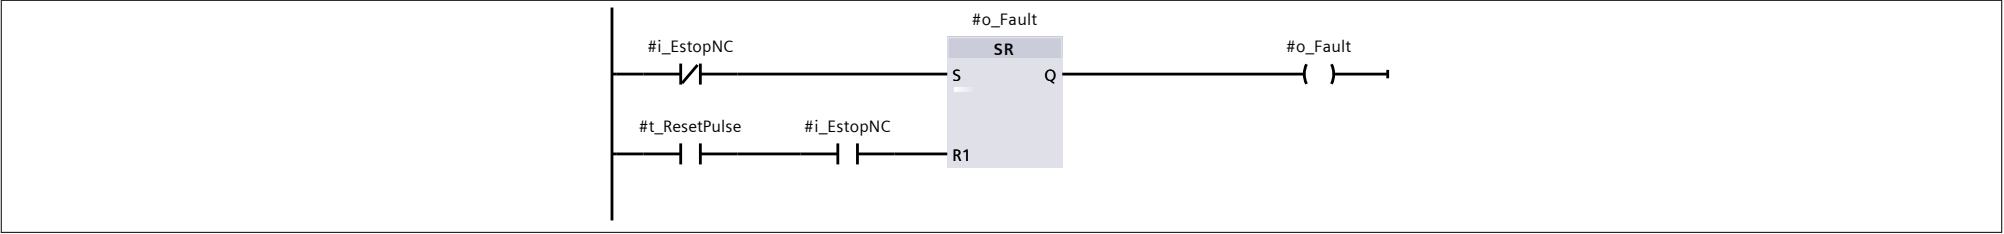

Network 6: Stop pending

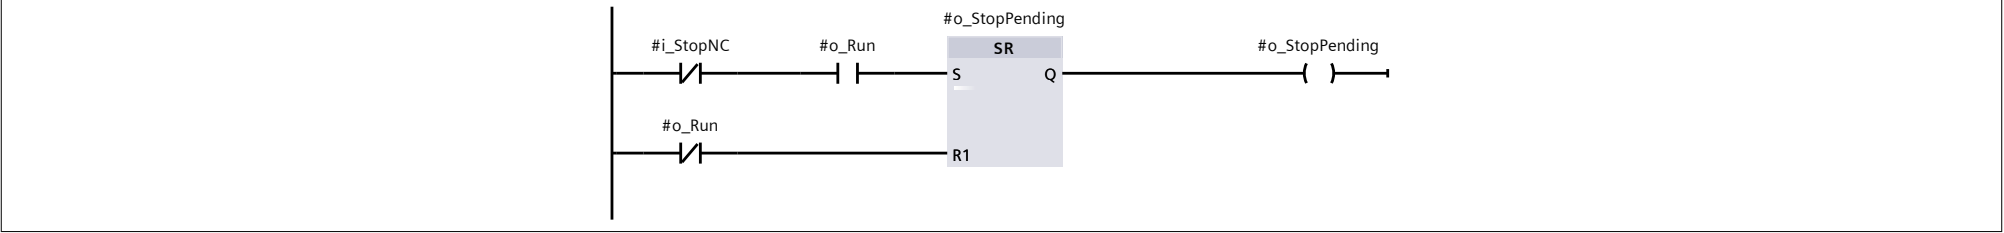

Network 7: Run latch

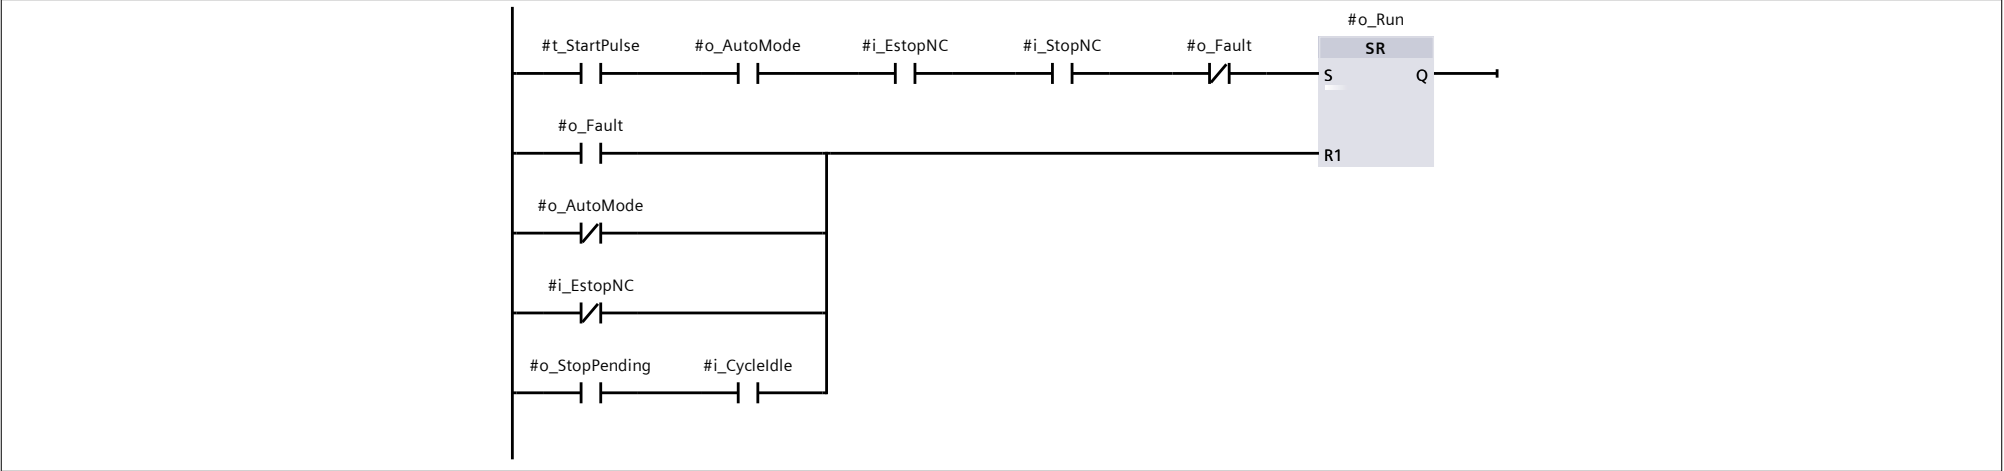

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

FB_SortingLogic [FB2]

FB_SortingLogic Properties

General

Name	FB_SortingLogic	Number	2	Type	FB	Language	LAD
Numbering	Automatic						


Information

Title	Pipelined Box Sorting Sequence (State Machine)	Author	HoraEmbedded	Comment	Implements the continuous automatic sorting sequence using a customized sequential state machine (Steps 0 to 5). Manages entry box generation, calculates sensor filtration via an independent centering timer block, tracks multiple parts in transit using dedicated software registers (In-Transit counters), and automatically routes boxes based on height measurements recorded by the light curtain.			Family	
Version	0.1	User-defined ID							


Name	Data type	Default value	Retain	Accessible from HMI/OPC UA/Web API	Writable from HMI/OPC UA/ Web API	Visible in HMI engineering	Setpoint	Supervision	Comment
▼ Input									
i_Run	Bool	false	Non-retain	True	True	True	False		
i_StopPending	Bool	false	Non-retain	True	True	True	False		
i_ClearCounters	Bool	false	Non-retain	True	True	True	False		
i_ExitIdleHigh	Bool	false	Non-retain	True	True	True	False		
i_atEntry	Bool	false	Non-retain	True	True	True	False		
i_atLoadPosition	Bool	false	Non-retain	True	True	True	False		
i_atTurntableEntry	Bool	false	Non-retain	True	True	True	False		
i_atUnloadPosition	Bool	false	Non-retain	True	True	True	False		
i_HighBox	Bool	false	Non-retain	True	True	True	False		
i_atLeftEntry	Bool	false	Non-retain	True	True	True	False		
i_atRightEntry	Bool	false	Non-retain	True	True	True	False		
i_atLeftExit	Bool	false	Non-retain	True	True	True	False		
i_atRightExit	Bool	false	Non-retain	True	True	True	False		
i_CenterTime	Time	T#0ms	Non-retain	True	True	True	False		
i_atFront	Bool	false	Non-retain	True	True	True	False		
▼ Output									
o_CycleIdle	Bool	false	Non-retain	True	True	True	False		
o_Step	DInt	0	Non-retain	True	True	True	False		
▼ InOut									
▼ io_Cmd	"UDT_ActuatorCmd"			False	False	False	False		
EntryConveyor	Bool			False	False	False	False		
FeederConveyor	Bool			False	False	False	False		
LeftConveyor	Bool			False	False	False	False		
RightConveyor	Bool			False	False	False	False		
Load	Bool			False	False	False	False		
Unload	Bool			False	False	False	False		
Turn	Bool			False	False	False	False		
Emit	Bool			False	False	False	False		
RemoverLeft	Bool			False	False	False	False		
RemoverRight	Bool			False	False	False	False		
io_CountLeft	DInt	0	Non-retain	True	True	True	False		
io_CountRight	DInt	0	Non-retain	True	True	True	False		
io_CountTotal	DInt	0	Non-retain	True	True	True	False		
▼ Static									
s_Step	DInt	0	Non-retain	True	True	True	False		
s_SeenHigh	Bool	false	Non-retain	True	True	True	False		
s_EdgeExitLeft	Bool	false	Non-retain	True	True	True	False		
s_EdgeExitRight	Bool	false	Non-retain	True	True	True	False		
▼ s_TonEmit	IEC_TIMER		Non-retain	True	True	True	False		
PT	Time	T#0ms	Non-retain	True	True	True	False		
ET	Time	T#0ms	Non-retain	True	False	True	False		
IN	Bool	false	Non-retain	True	True	True	False		
Q	Bool	false	Non-retain	True	False	True	False		
▼ s_TonCenter	IEC_TIMER		Non-retain	True	True	True	True		
PT	Time	T#0ms	Non-retain	True	True	True	False		

Name	Data type	Default value	Retain	Accessible from HMI/OPC UA/Web API	Writ-able from HMI/OPC UA/ Web API	Visible in HMI engi-neering	Setpoint	Supervi-sion	Comment
ET	Time	T#0ms	Non-retain	True	False	True	False		
IN	Bool	false	Non-retain	True	True	True	False		
Q	Bool	false	Non-retain	True	False	True	False		
s_atEntrySeen	Bool	false	Non-retain	True	True	True	True		
s_LeftInTransit	DInt	0	Non-retain	True	True	True	False		
s_RightInTransit	DInt	0	Non-retain	True	True	True	False		
s_EdgeLeftEntry	Bool	false	Non-retain	True	True	True	False		
s_EdgeRightEntry	Bool	false	Non-retain	True	True	True	False		
▼ Temp									
t_ExitLeftActive	Bool								
t_ExitRightActive	Bool								
t_ExitLeftPulse	Bool								
t_ExitRightPulse	Bool								
t_ChosenEntry	Bool								
t_LeftEntryPulse	Bool								
t_RightEntryPulse	Bool								
Constant									


Network 1: exit left active

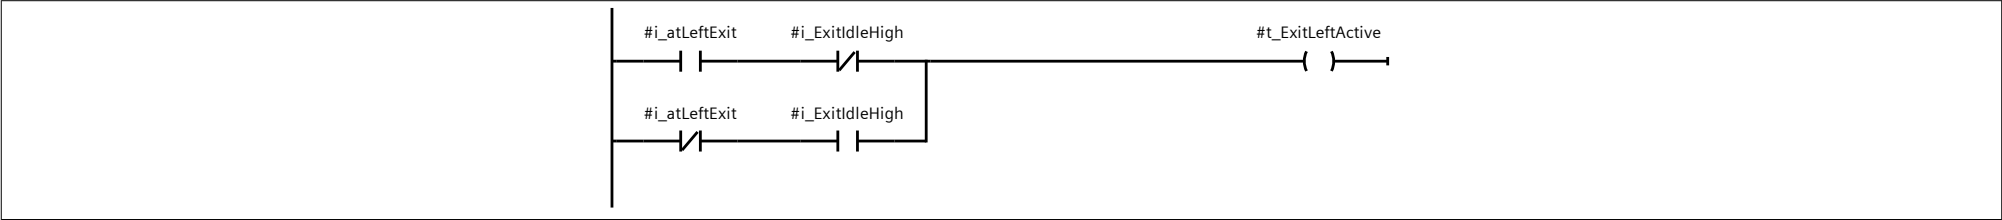

Network 2: exit right active

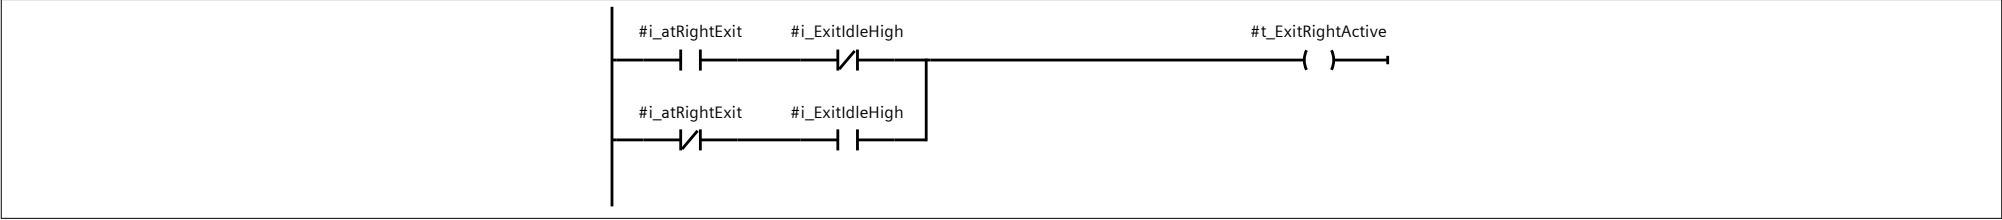

Network 3: exit left pulse

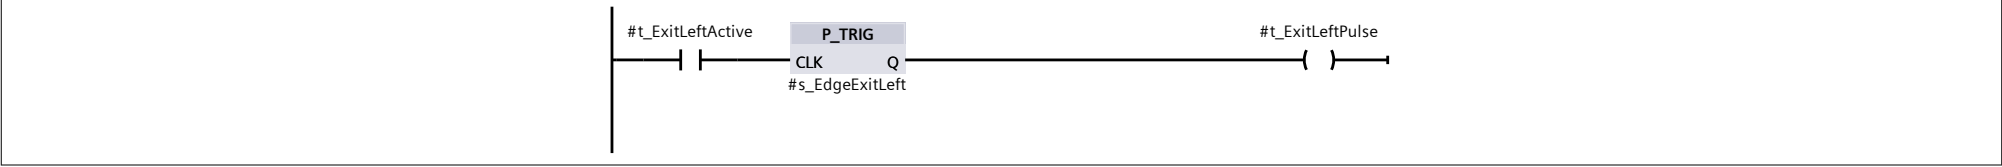


Network 4: exit right pulse




Network 5: Left entry pulse




Network 6: Right entry pulse

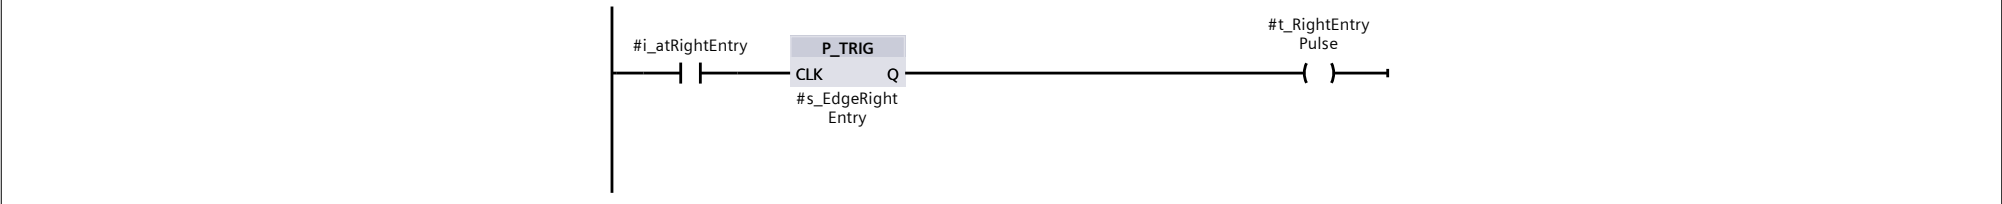


Network 7: chosen entry sensor

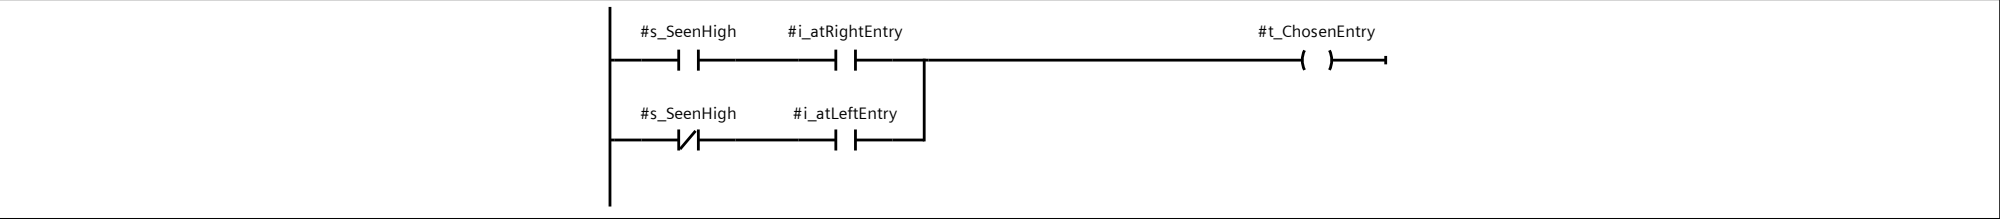


Network 8: height latch

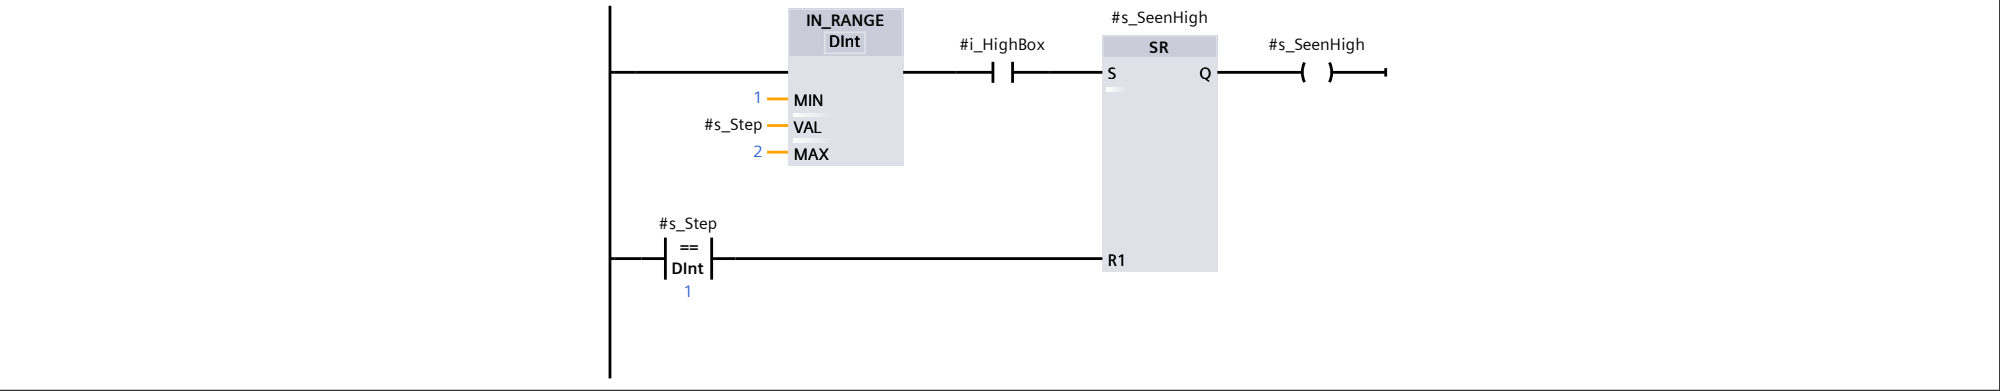


Network 9: Entry seen latch

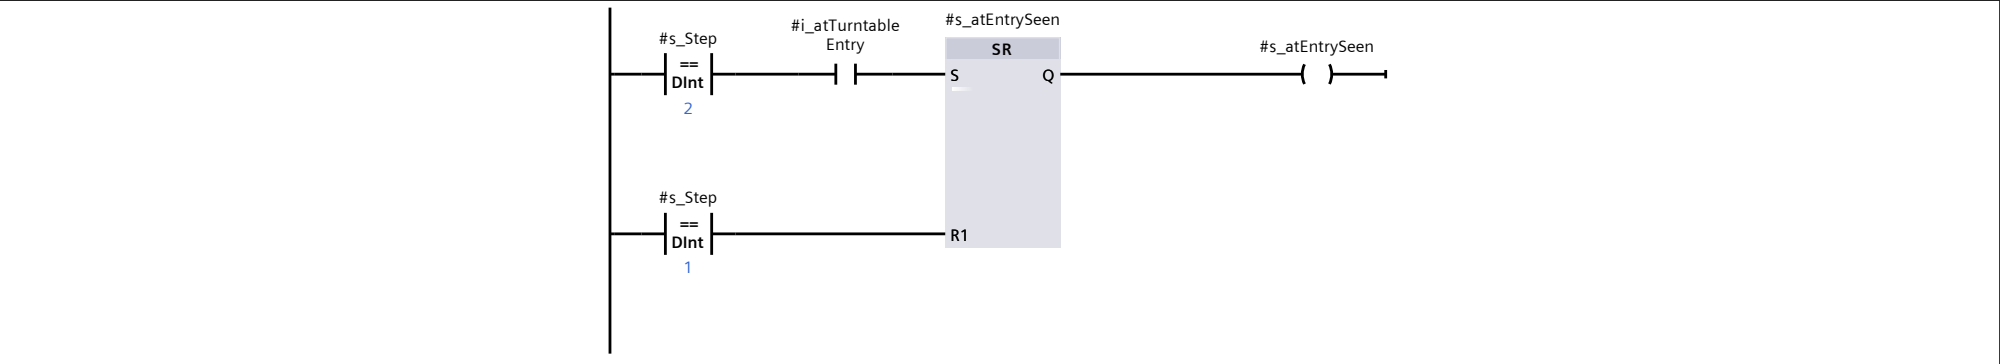


Network 10: Center timer

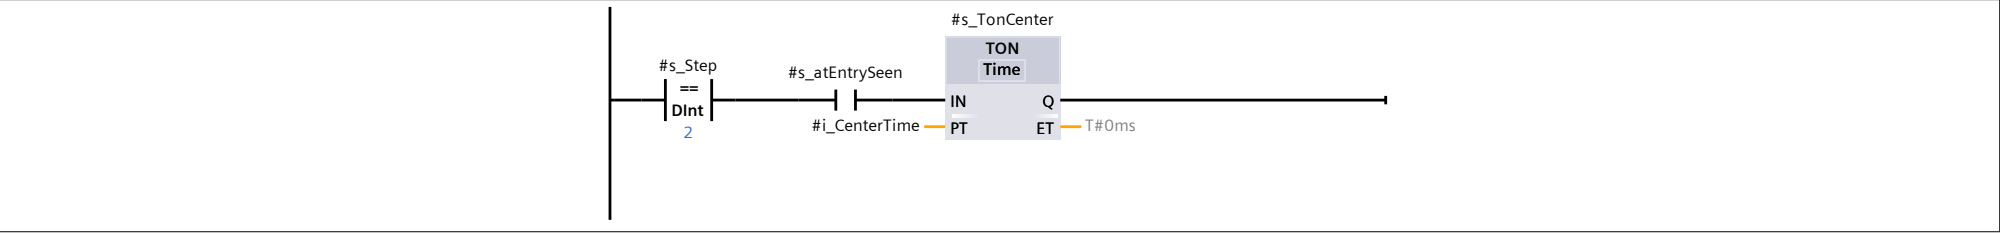


Network 11: T4 to 5 (#s_Step := 5)

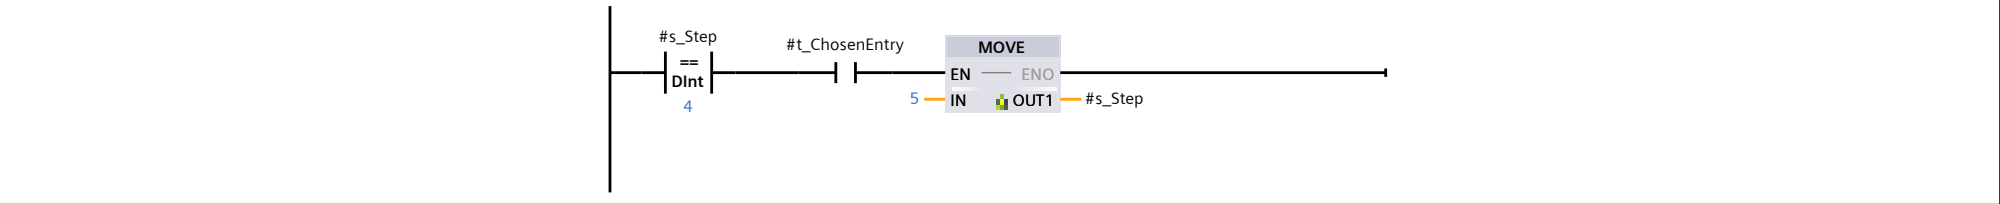


Network 12: T3 to 4 (#s_Step := 4)

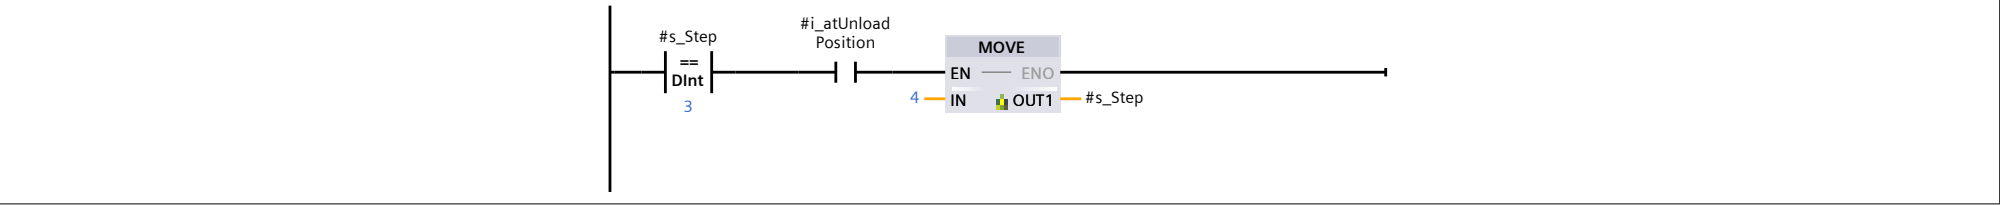


Network 13: T2 to 3 (#s_Step := 3)

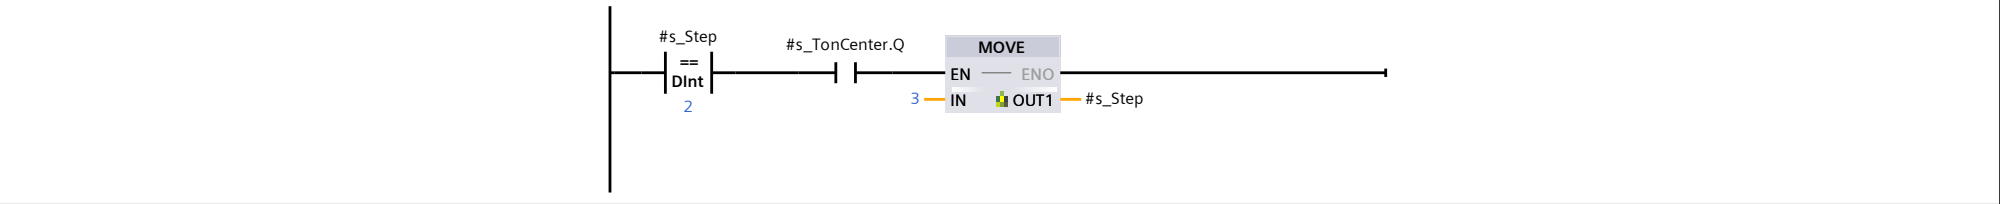


Network 14: T1 to 2 (#s_Step := 2)

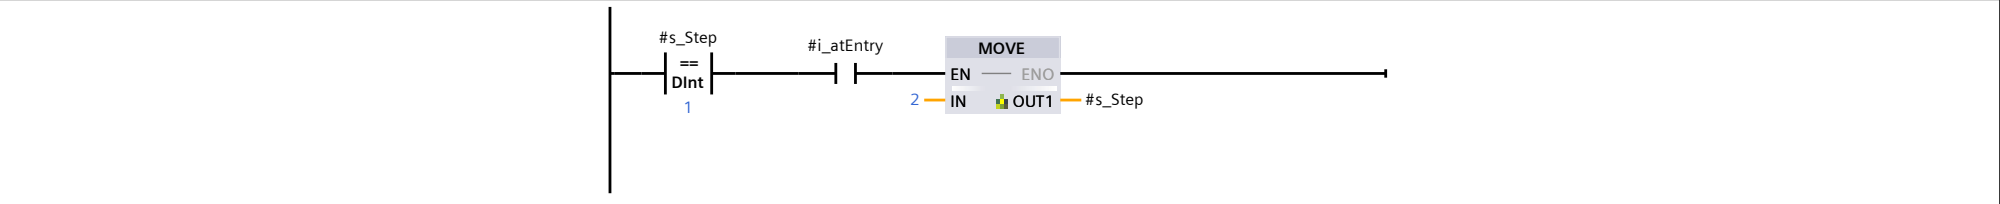


Network 15: T0 to 1 (#s_Step := 1)

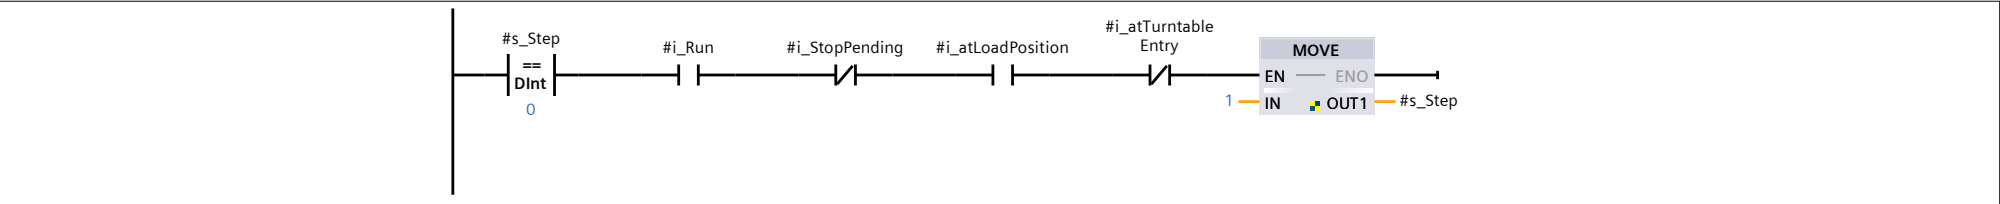


Network 16: Continuous cycle

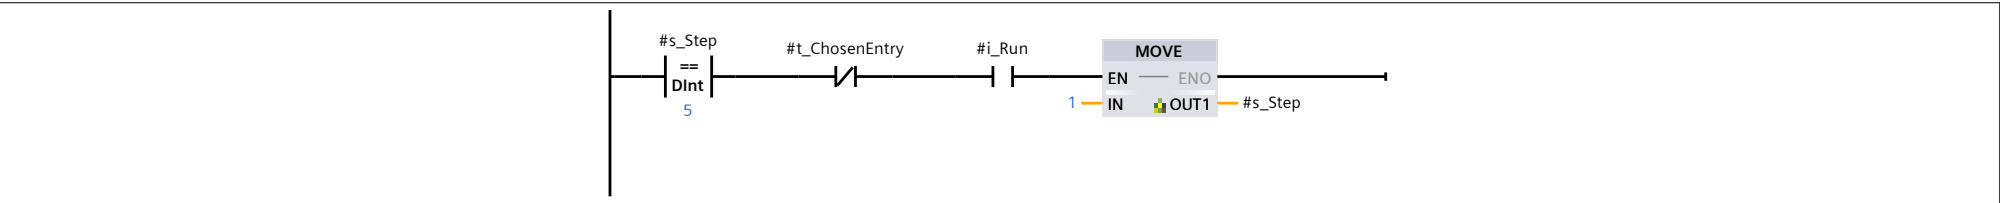


Network 17: Stop at end of cycle

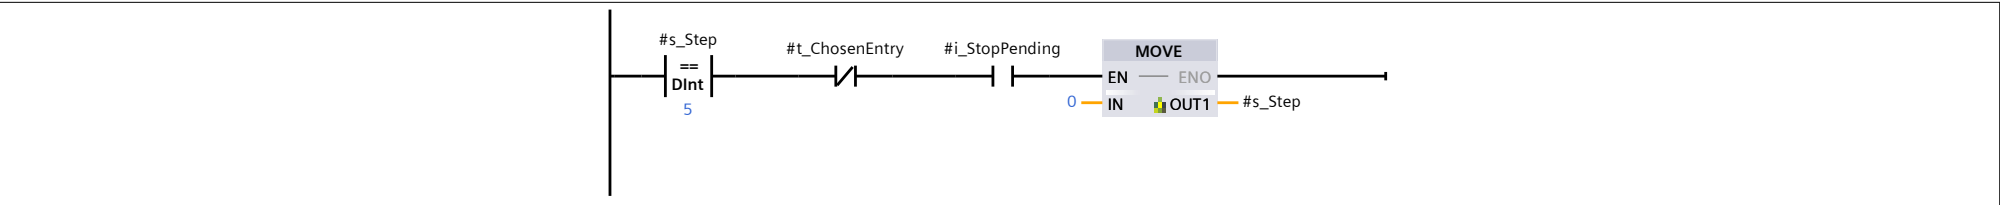


Network 18: Abort when not running

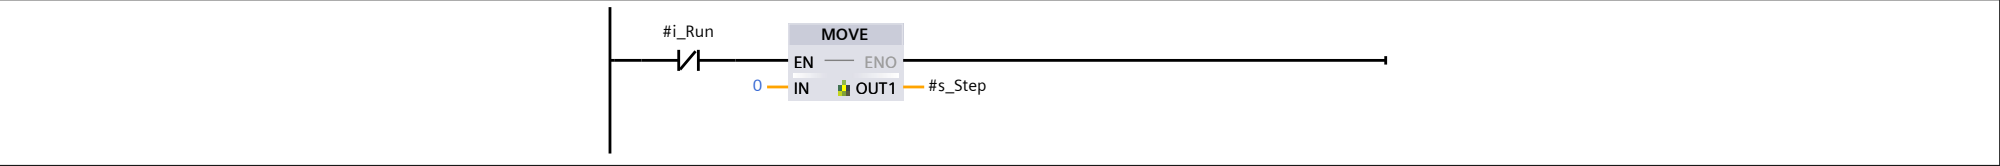


Network 19: Left in transit plus

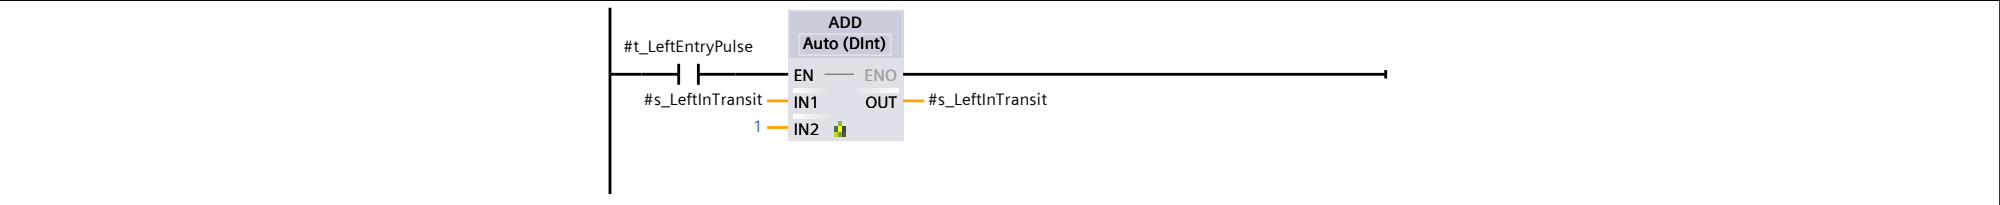


Network 20: Left in transit minus

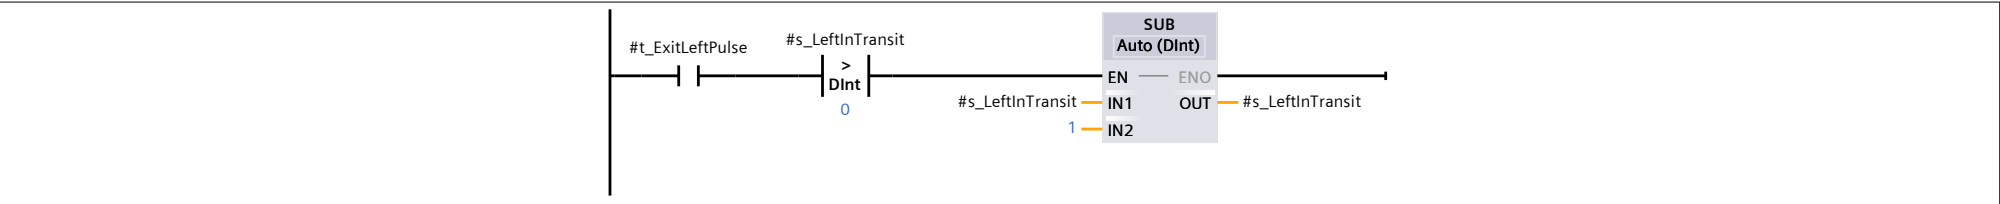


Network 21: Left in transit clear

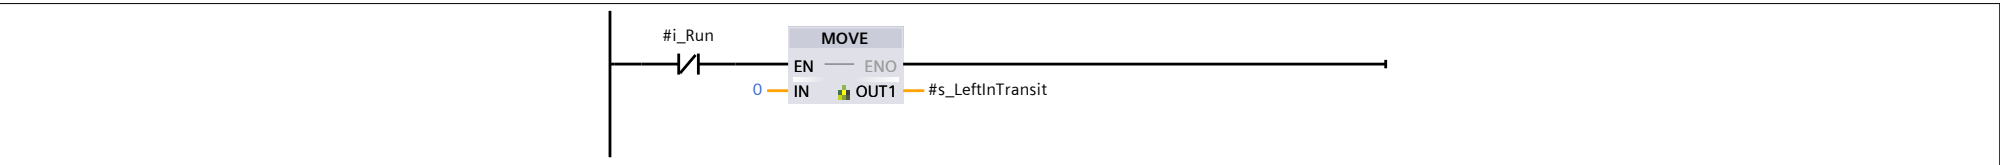


Network 22: Right in transit plus

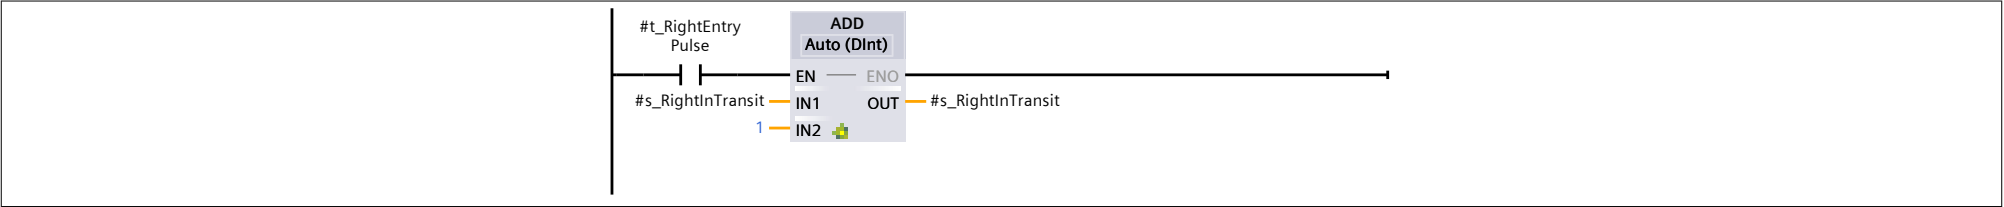

Network 23: Right in transit minus

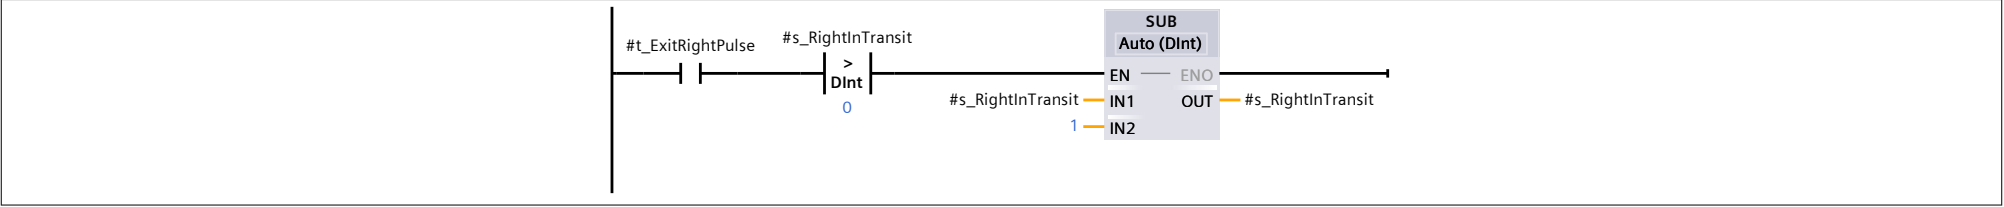


Network 24: Right in transit clear

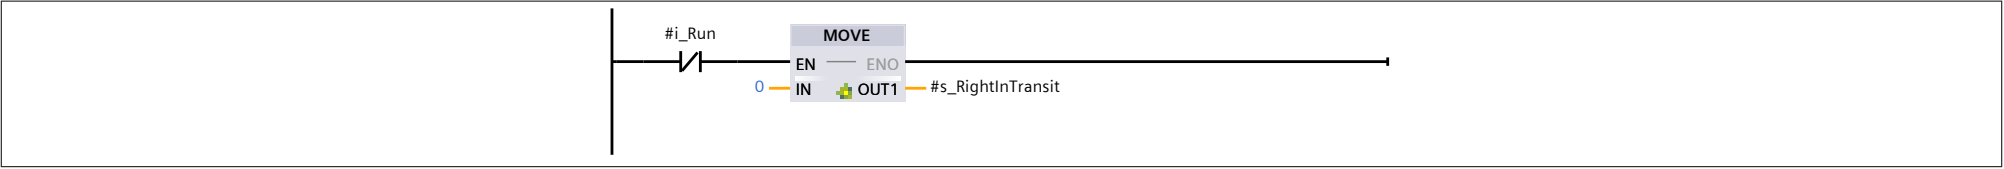


Network 25: Continuous cycle

Network 26: Stop at end of cycle


Network 27: Emit timer

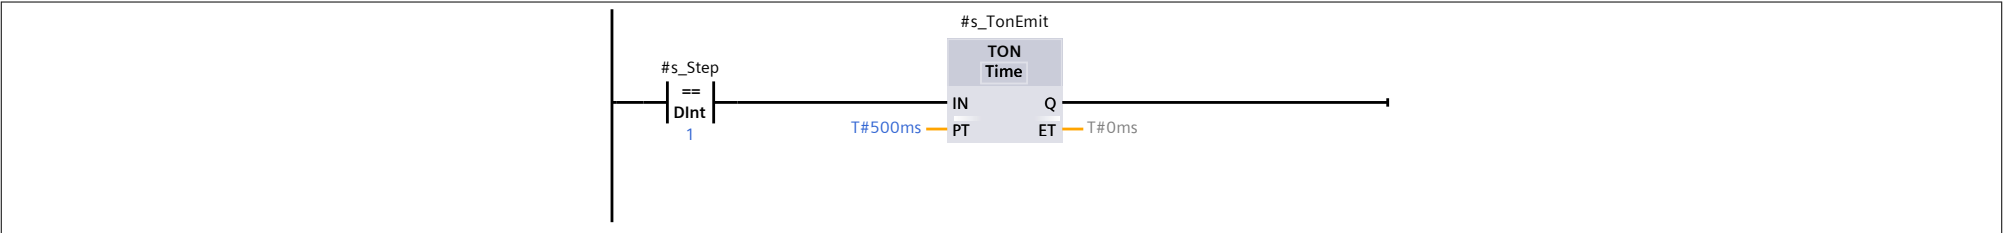


Network 28: Emit command

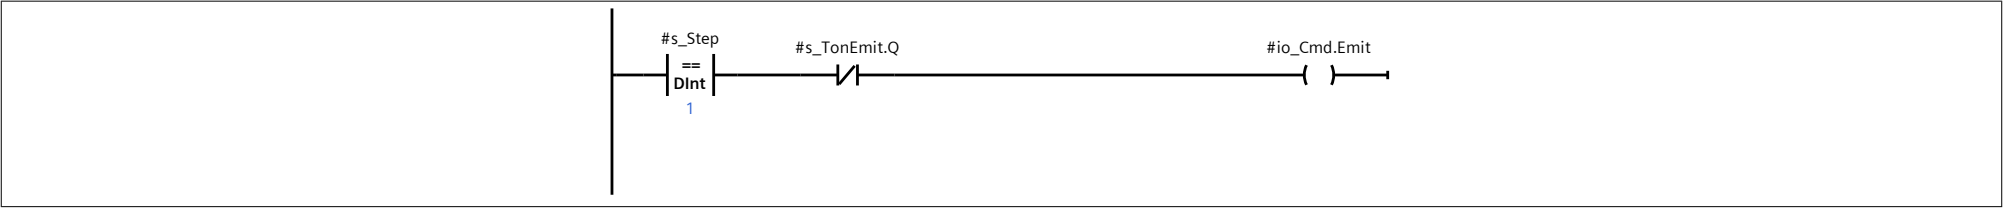


Network 29: Feeder and entry conveyors

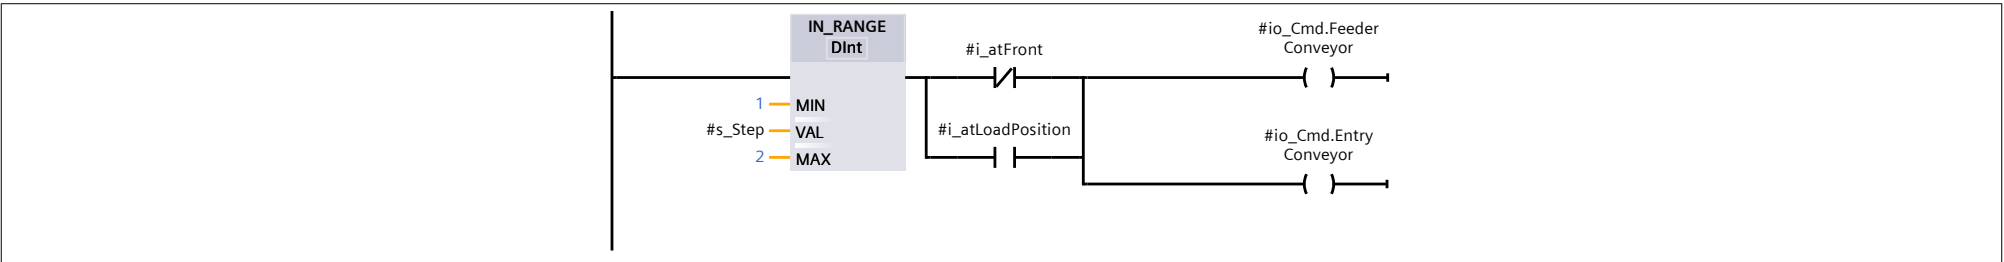

Network 30: Load command

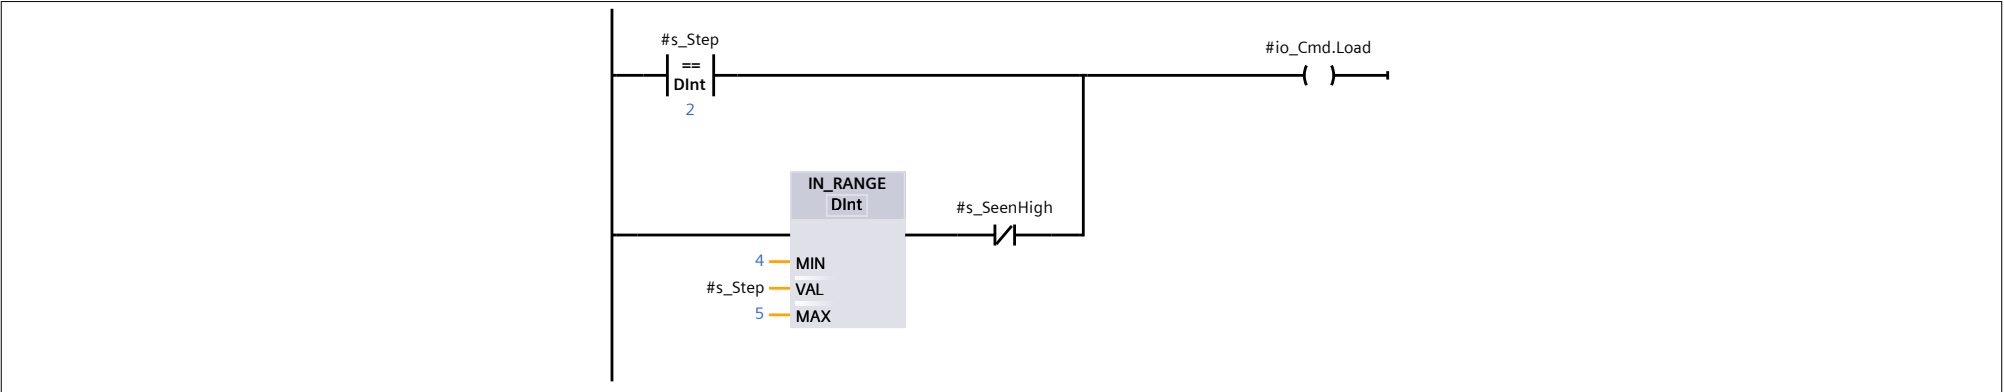


Network 31: Unload command

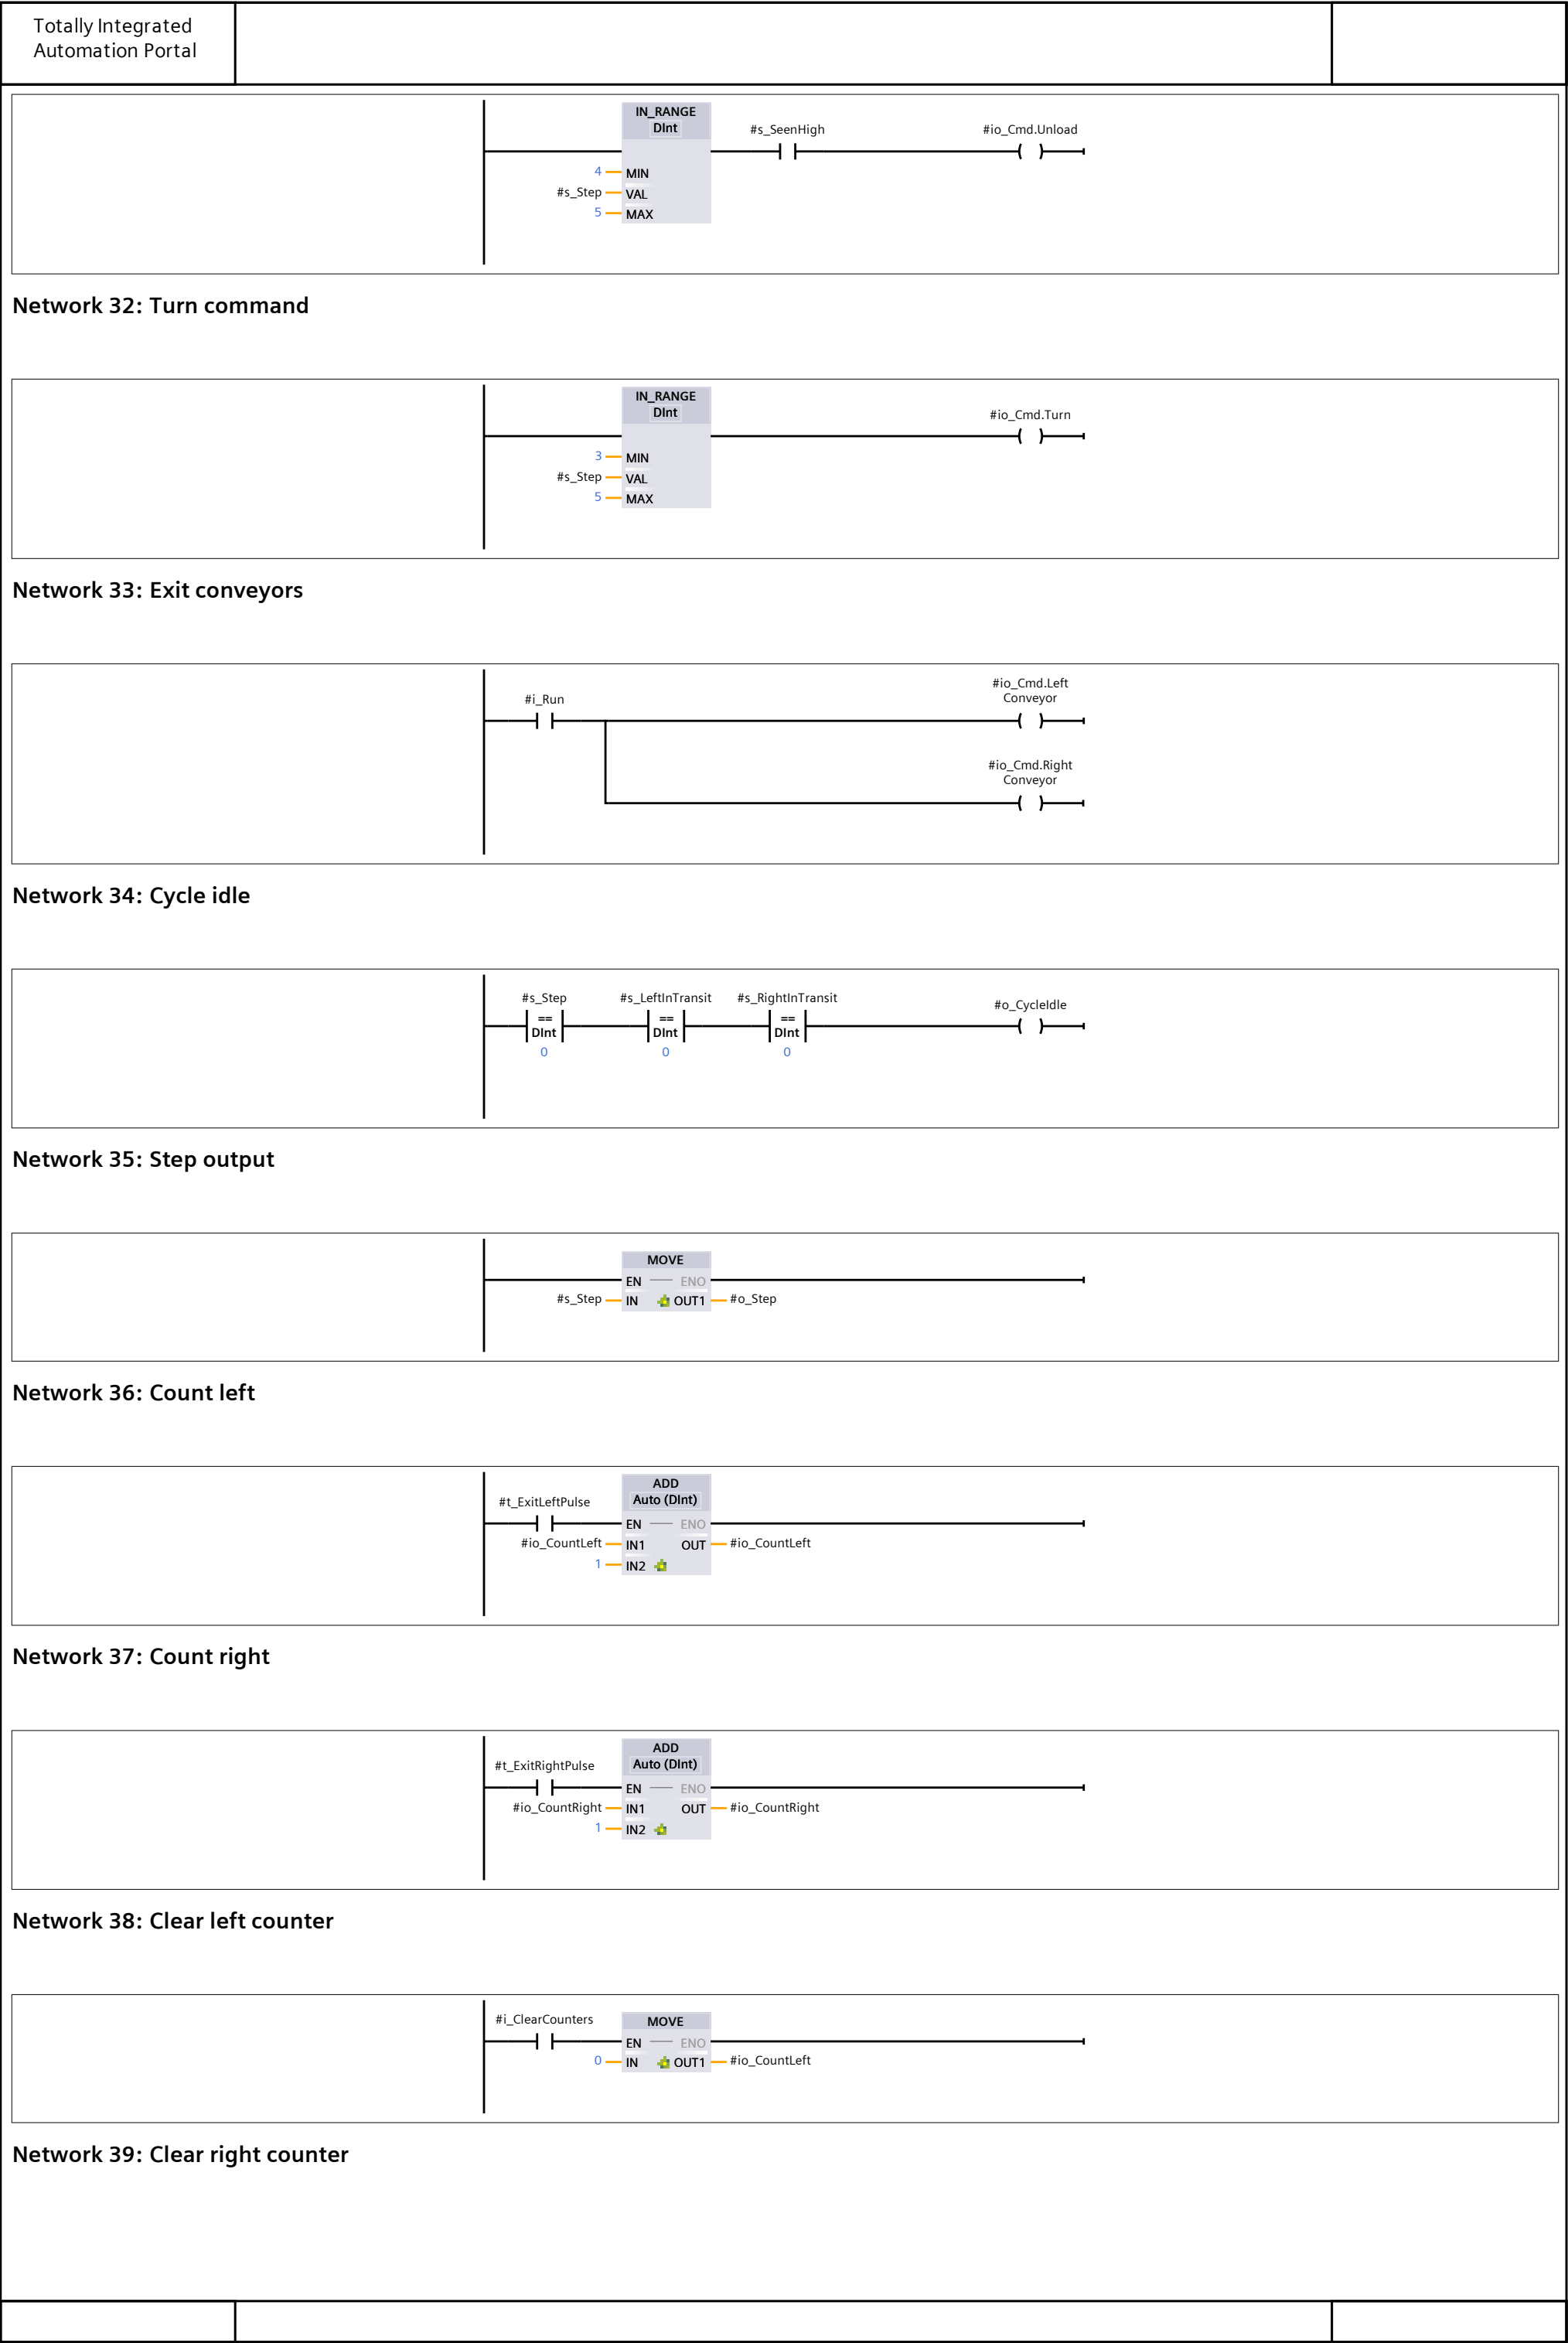



Network 40: Total count

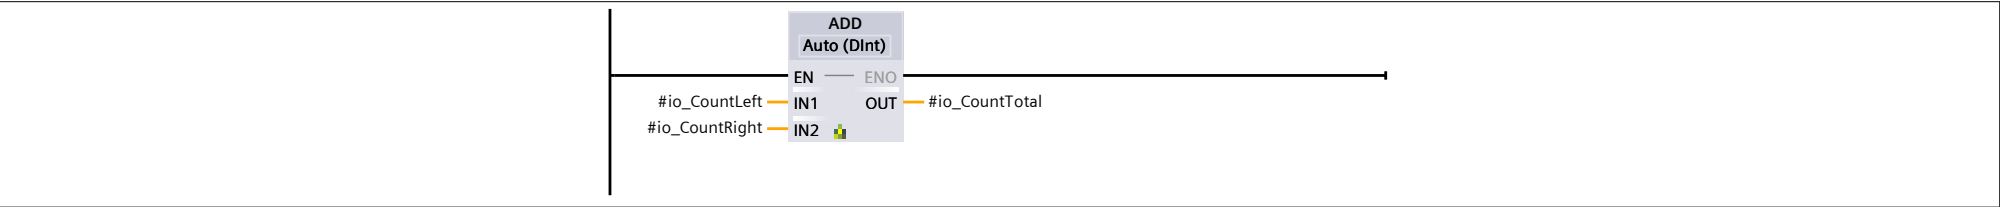

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

FC_outputs [FC1]


FC_outputs Properties							
General							
Name	FC_outputs	Number	1	Type	FC	Language	LAD
Numbering	Automatic						
Information							
Title	Centralized Output Gating and Hardware Interlocks	Author	HoraEmbedded	Comment	Serves as the single source of truth for all physical digital and analog outputs directed to the Factory I/O simulation panel. It gathers automatic commands generated by the state machine and manual commands from the watch table. It applies strict hardware safety interlocks (System Enable bit derived from the Emergency Stop state) before forcing any physical coil to prevent duplicate assignment conflicts.	Family	
Version	0.1	User-defined ID					

Name	Data type	Default value	Comment
Input			
Output			
InOut			
Temp			
t_Enable	Bool		
Constant			
Return			
FC_outputs	Void		


Network 1: Enable




Network 2: feeder conveyor config

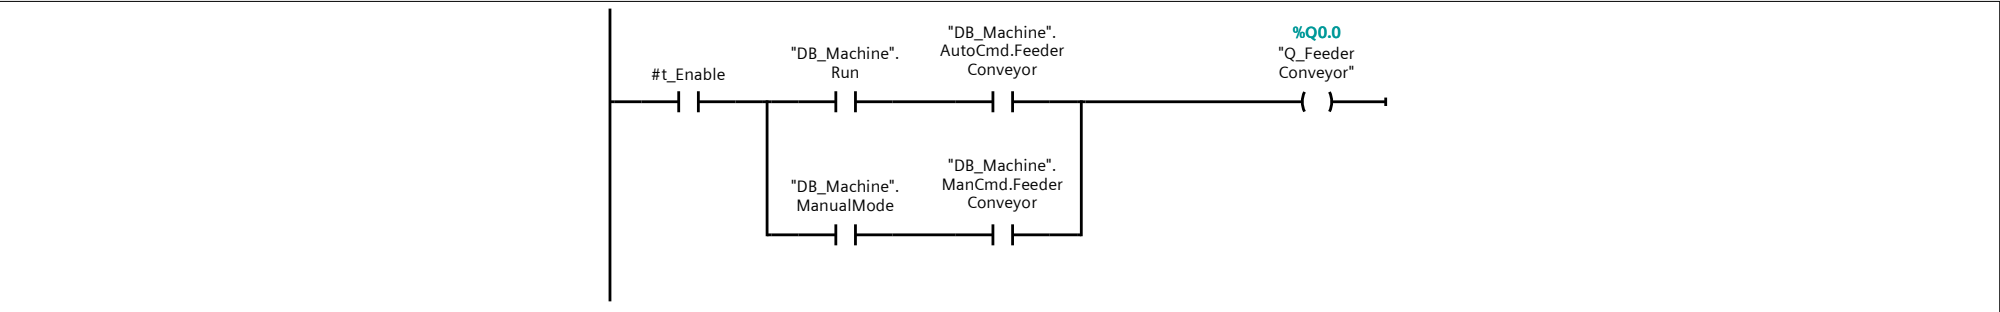


Network 3: entry conveyor config

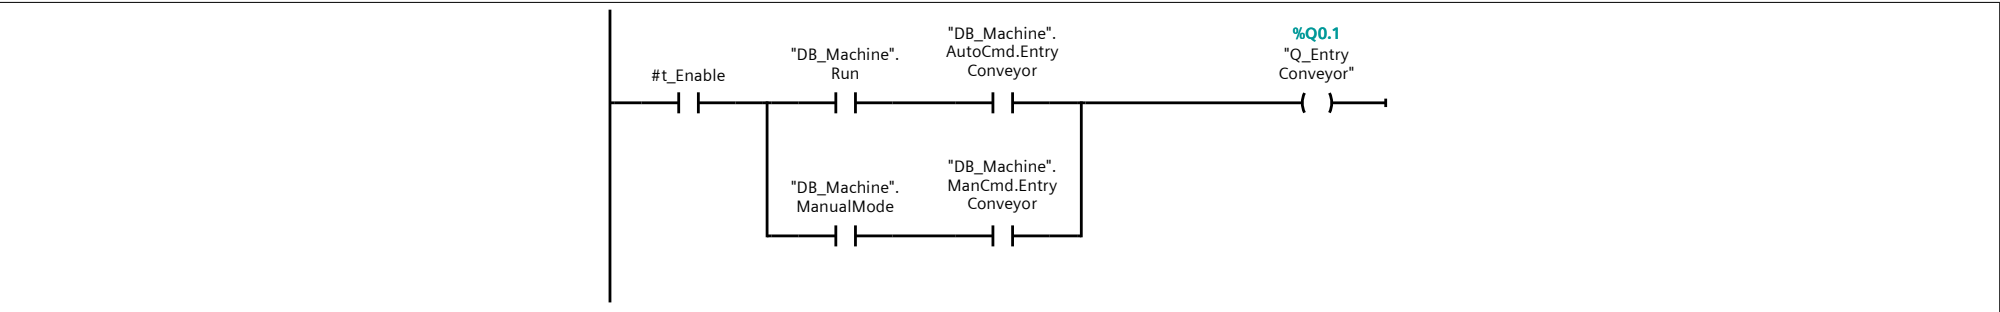


Network 4: Load config

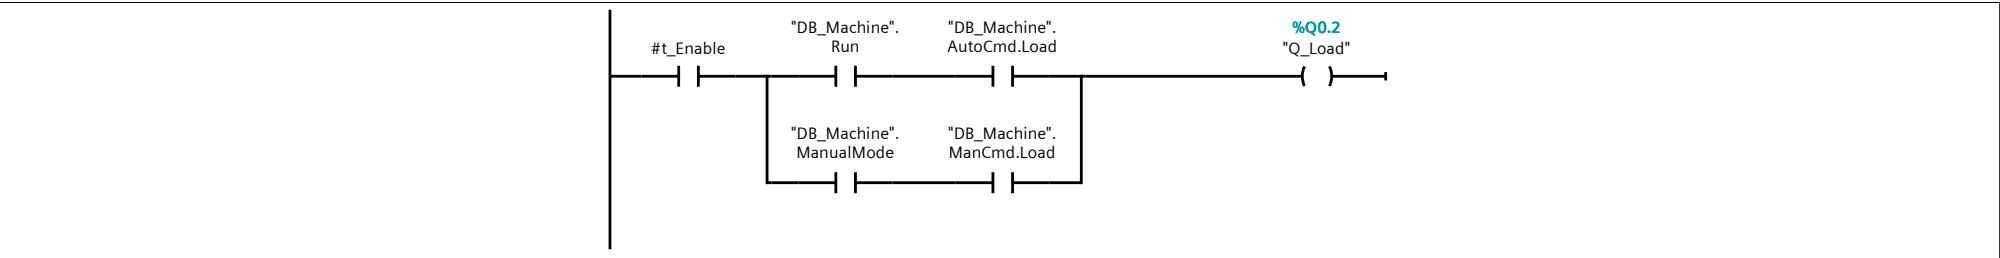


Network 5: Unload config

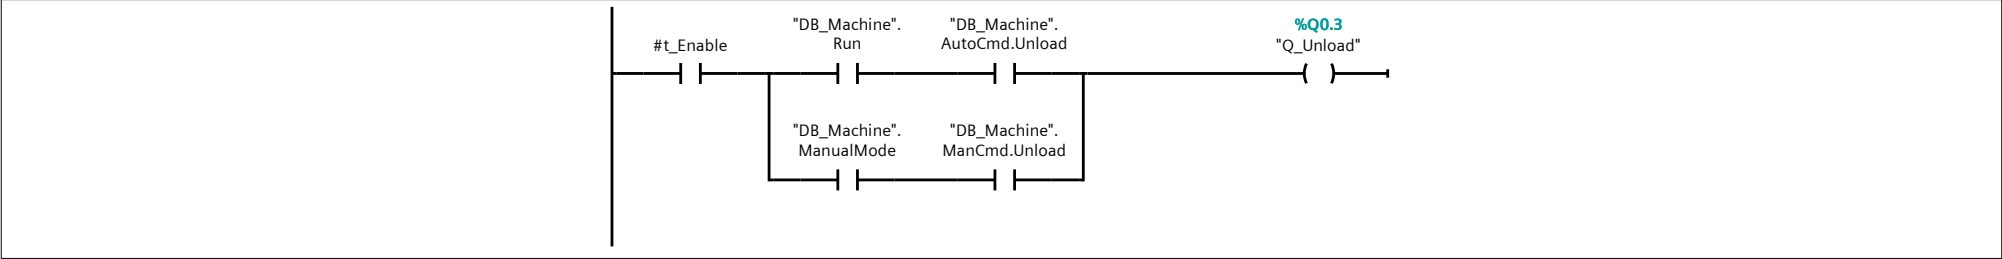


Network 6: Tunr config

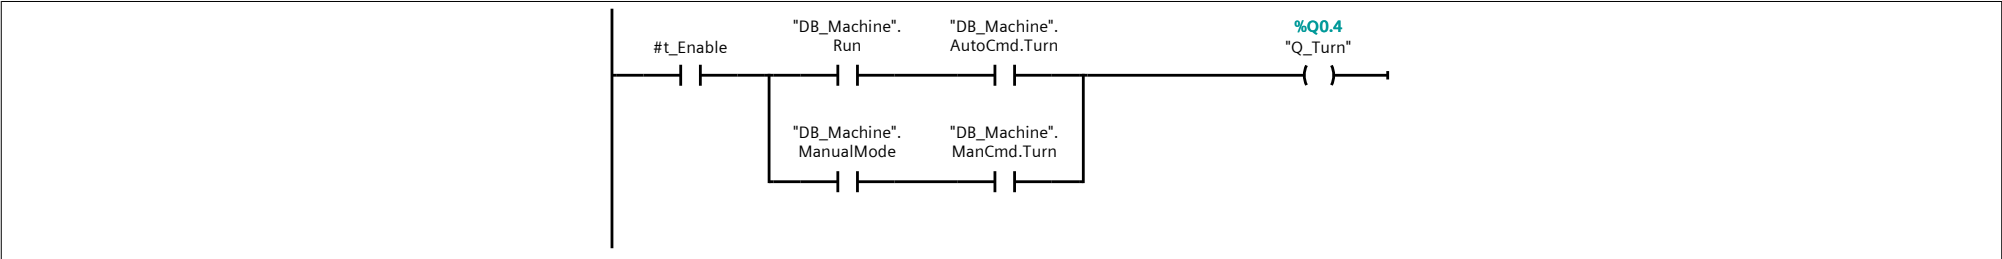


Network 7: Left conveyor config

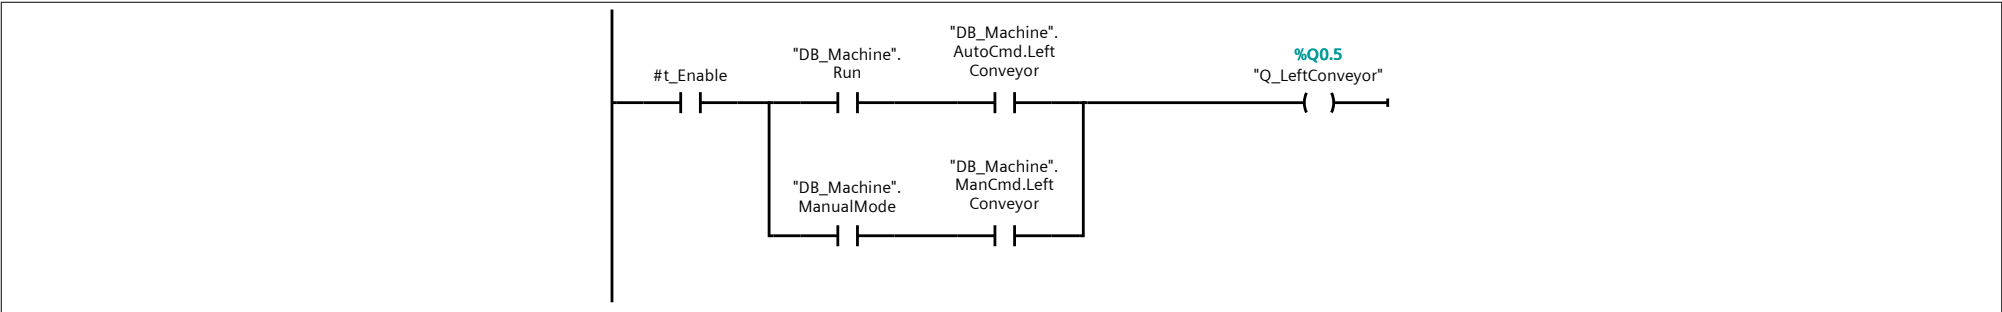


Network 8: Right conveyor config

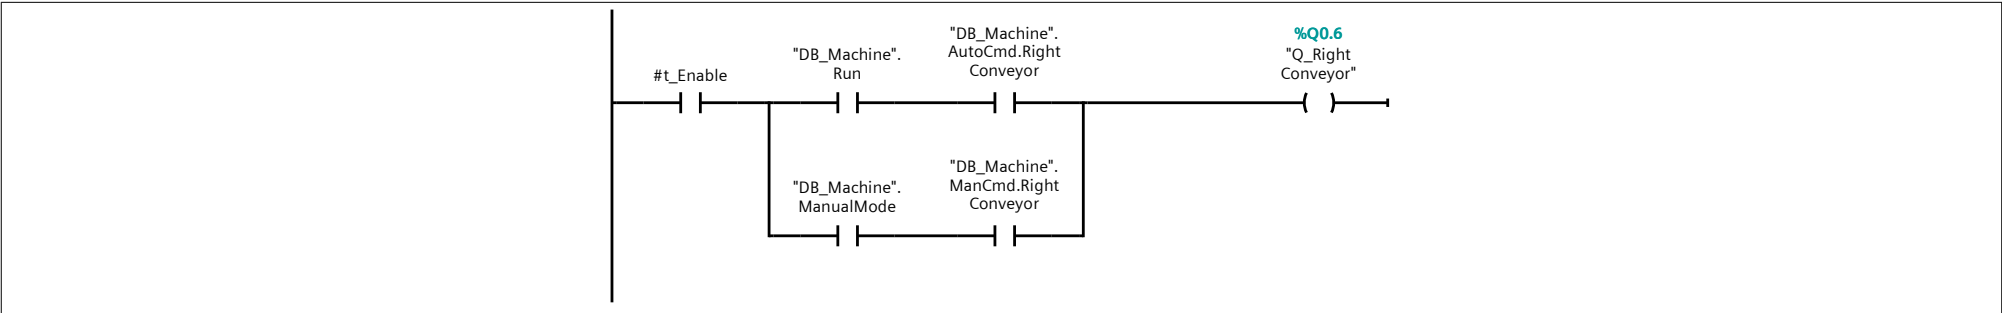

Network 9: Remover left config

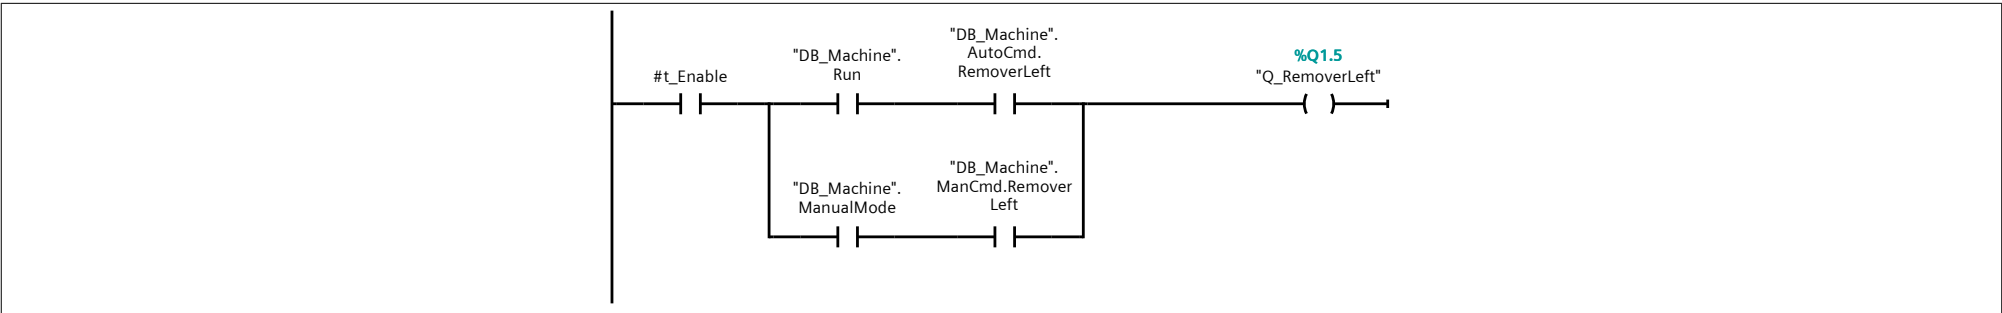

Network 10: Remover right config

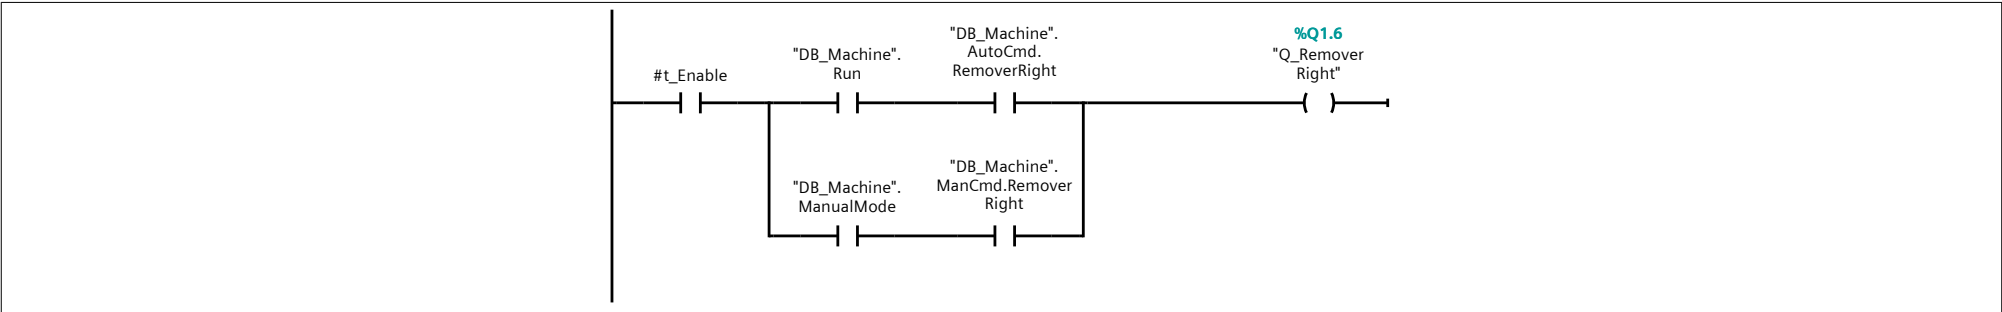

Network 11: Emitter config

Totally Integrated Automation Portal		
	#L_Enable "DB_Machine".Run "DB_Machine".AutoCmd.Emit "DB_Machine".ManualMode "DB_Machine".ManCmd.Emit %Q1.7 "Q_Emit"	
Network 12: Green indicator		
	"DB_Machine".Run %Q0.7 "Q_Green Indicator"	
Network 13: Start light		
	"DB_Machine".Run %Q1.2 "Q_StartLight"	
Network 14: Red indicator		
	"DB_Machine".Run %Q1.1 "Q_RedIndicator"	
Network 15: Stop light		
	"DB_Machine".Run %Q1.4 "Q_StopLight"	
Network 16: Yellow indicator		
	"DB_Machine".Fault "DB_Machine".ManualMode %Q1.0 "Q_Yellow Indicator"	
Network 17: Reset light		
	"DB_Machine".Fault %I1.6 "L_Emergency Stop" %Q1.3 "Q_ResetLight"	
Network 18: Counter display		
	MOVE EN ENO "DB_Machine".CountTotal IN OUT1 %QD30 "Q_Counter"	

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

FB_ModeManager_DB [DB2]

FB_ModeManager_DB Properties

General

Name	FB_ModeManager_DB	Number	2	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Start value	Retain	Accessible from HMI/OPC UA/Web API	Writ-able from HMI/ OPC UA/ Web API	Visible in HMI engi-neering	Setpoint	Supervi-sion	Comment
▼ Input									
i_Start	Bool	false	False	True	True	True	False		Start pushbutton
i_StopNC	Bool	false	False	True	True	True	False		Stop pushbutton
i_EstopNC	Bool	false	False	True	True	True	False		Emergency stop
i_Reset	Bool	false	False	True	True	True	False		Reset pushbutton
i_Auto	Bool	false	False	True	True	True	False		Selector in Auto
i_Manual	Bool	false	False	True	True	True	False		Selector in Manual
i_CycleIdle	Bool	false	False	True	True	True	False		No box being processed
▼ Output									
o_Run	Bool	false	False	True	True	True	False		
o_Fault	Bool	false	False	True	True	True	False		
o_StopPending	Bool	false	False	True	True	True	False		
o_AutoMode	Bool	false	False	True	True	True	False		
o_ManualMode	Bool	false	False	True	True	True	False		
InOut									
▼ Static									
s_EdgeStart	Bool	false	False	True	True	True	False		Edge memory bits
s_EdgeReset	Bool	false	False	True	True	True	False		Edge memory bits

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

FB_SortingLogic_DB [DB3]

FB_SortingLogic_DB Properties

General

Name	FB_SortingLogic_DB	Number	3	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Start value	Retain	Accessible from HMI/OPC UA/Web API	Writ-able from HMI/ OPC UA/ Web API	Visible in HMI engi-neering	Setpoint	Supervi-sion	Comment
▼ Input									
i_Run	Bool	false	False	True	True	True	False		
i_StopPending	Bool	false	False	True	True	True	False		
i_ClearCounters	Bool	false	False	True	True	True	False		
i_ExitIdleHigh	Bool	false	False	True	True	True	False		
i_atEntry	Bool	false	False	True	True	True	False		
i_atLoadPosition	Bool	false	False	True	True	True	False		
i_atTurntableEntry	Bool	false	False	True	True	True	False		
i_atUnloadPosition	Bool	false	False	True	True	True	False		
i_HighBox	Bool	false	False	True	True	True	False		
i_atLeftEntry	Bool	false	False	True	True	True	False		
i_atRightEntry	Bool	false	False	True	True	True	False		
i_atLeftExit	Bool	false	False	True	True	True	False		
i_atRightExit	Bool	false	False	True	True	True	False		
i_CenterTime	Time	T#0ms	False	True	True	True	False		
i_atFront	Bool	false	False	True	True	True	False		
▼ Output									
o_CycleIdle	Bool	false	False	True	True	True	False		
o_Step	DInt	0	False	True	True	True	False		
▼ InOut									
io_Cmd	"UDT_ActuatorCmd"		False	False	False	False	False		
io_CountLeft	DInt	0	False	True	True	True	False		
io_CountRight	DInt	0	False	True	True	True	False		
io_CountTotal	DInt	0	False	True	True	True	False		
▼ Static									
s_Step	DInt	0	False	True	True	True	False		
s_SeenHigh	Bool	false	False	True	True	True	False		
s_EdgeExitLeft	Bool	false	False	True	True	True	False		
s_EdgeExitRight	Bool	false	False	True	True	True	False		
▼ s_TonEmit	IEC_TIMER		False	True	True	True	False		
PT	Time	T#0ms	False	True	True	True	False		
ET	Time	T#0ms	False	True	False	True	False		
IN	Bool	false	False	True	True	True	False		
Q	Bool	false	False	True	False	True	False		
▼ s_TonCenter	IEC_TIMER		False	True	True	True	True		
PT	Time	T#0ms	False	True	True	True	False		
ET	Time	T#0ms	False	True	False	True	False		
IN	Bool	false	False	True	True	True	False		
Q	Bool	false	False	True	False	True	False		
s_atEntrySeen	Bool	false	False	True	True	True	True		
s_LeftInTransit	DInt	0	False	True	True	True	False		
s_RightInTransit	DInt	0	False	True	True	True	False		
s_EdgeLeftEntry	Bool	false	False	True	True	True	False		
s_EdgeRightEntry	Bool	false	False	True	True	True	False		

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

FB_Kpi [FB3]

FB_Kpi Properties

General

Name	FB_Kpi	Number	3	Type	FB	Language	SCL
Numbering	Automatic						

Information

Title		Author	HoraEmbedded	Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Default value	Retain	Accessible from HMI/OPC UA/Web API	Writ-able from HMI/OPC UA/ Web API	Visible in HMI engi-neering	Setpoint	Supervi-sion	Comment
▼ Input									
i_Run	Bool	false	Non-retain	True	True	True	False		
i_AutoMode	Bool	false	Non-retain	True	True	True	False		
i_Clear	Bool	false	Non-retain	True	True	True	False		
i_CountTotal	DInt	0	Non-retain	True	True	True	False		
▼ Output									
o_RunTimeS	DInt	0	Non-retain	True	True	True	False		
o_ObservedTimeS	DInt	0	Non-retain	True	True	True	False		
o_AvailabilityPct	Real	0.0	Non-retain	True	True	True	False		
o_ThroughputPerHour	Real	0.0	Non-retain	True	True	True	False		
o_AvgCycleTimeS	Real	0.0	Non-retain	True	True	True	False		
InOut									
▼ Static									
▼ s_TonSecond	TON_TIME		Non-retain	True	True	True	False		
PT	Time	T#0ms	Non-retain	True	True	True	False		
ET	Time	T#0ms	Non-retain	True	False	True	False		
IN	Bool	false	Non-retain	True	True	True	False		
Q	Bool	false	Non-retain	True	False	True	False		
Temp									
Constant									

```
0001 // Tick once per second: the timer restarts itself when it elapses
0002 // Tick once per second: the timer restarts itself when it elapses
0003 #s_TonSecond(IN := NOT #s_TonSecond.Q,
0004     PT := T#1S);
0005
0006
0007 // Time counters: observed time only counts in Auto mode
0008 IF #i_Clear THEN
0009     #o_RunTimeS := 0;
0010     #o_ObservedTimeS := 0;
0011 ELSIF #s_TonSecond.Q AND #i_AutoMode THEN
0012     #o_ObservedTimeS := #o_ObservedTimeS + 1;
0013     IF #i_Run THEN
0014         #o_RunTimeS := #o_RunTimeS + 1;
0015     END_IF;
0016 END_IF;
0017
0018 // Availability in percent
0019 IF #o_ObservedTimeS > 0 THEN
0020     #o_AvailabilityPct := 100.0 * DINT_TO_REAL(#o_RunTimeS) / DINT_TO_REAL(#o_ObservedTimeS);
0021 ELSE
0022     #o_AvailabilityPct := 0.0;
0023 END_IF;
0024
0025 // Throughput in boxes per hour of run time
0026 IF #o_RunTimeS > 0 THEN
0027     #o_ThroughputPerHour := 3600.0 * INT_TO_REAL(#i_CountTotal) / DINT_TO_REAL(#o_RunTimeS);
0028 ELSE
0029     #o_ThroughputPerHour := 0.0;
0030 END_IF;
0031
0032 // Average cycle time in seconds per box
0033 IF #i_CountTotal > 0 THEN
0034     #o_AvgCycleTimeS := DINT_TO_REAL(#o_RunTimeS) / INT_TO_REAL(#i_CountTotal);
0035 ELSE
0036     #o_AvgCycleTimeS := 0.0;
0037 END_IF;
```

Symbol	Address	Type	Comment
#i_AutoMode		Bool	
#i_Clear		Bool	
#i_CountTotal		DInt	
#i_Run		Bool	
#o_AvailabilityPct		Real	

Totally Integrated Automation Portal				
Symbol	Address	Type	Comment	
#o_AvgCycleTimeS		Real		
#o_ObservedTimeS		DInt		
#o_RunTimeS		DInt		
#o_ThroughputPerHour		Real		
#s_TonSecond		IEC_Timer		
#s_TonSecond.Q		Bool		

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks

FB_Kpi_DB [DB4]

FB_Kpi_DB Properties

General

Name	FB_Kpi_DB	Number	4	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Start value	Retain	Accessible from HMI/OPC UA/Web API	Writ-able from HMI/OPC UA/ Web API	Visible in HMI engi-neering	Setpoint	Supervi-sion	Comment
▼ Input									
i_Run	Bool	false	False	True	True	True	False		
i_AutoMode	Bool	false	False	True	True	True	False		
i_Clear	Bool	false	False	True	True	True	False		
i_CountTotal	DInt	0	False	True	True	True	False		
▼ Output									
o_RunTimeS	DInt	0	False	True	True	True	False		
o_ObservedTimeS	DInt	0	False	True	True	True	False		
o_AvailabilityPct	Real	0.0	False	True	True	True	False		
o_ThroughputPerHour	Real	0.0	False	True	True	True	False		
o_AvgCycleTimeS	Real	0.0	False	True	True	True	False		
InOut									
▼ Static									
▼ s_TonSecond	TON_TIME		False	True	True	True	False		
PT	Time	T#0ms	False	True	True	True	False		
ET	Time	T#0ms	False	True	False	True	False		
IN	Bool	false	False	True	True	True	False		
Q	Bool	false	False	True	False	True	False		

Totally Integrated Automation Portal		
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Program blocks / System blocks Program resources This folder is empty.		

Totally Integrated Automation Portal		
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] Technology objects This folder is empty.		

User constants

User constants			
Name	Data type	Value	Comment

--	--	--

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / PLC tags / Factory_IO_Inputs [18]

PLC tags

PLC tags												
	Name	Data type	Address	Retain	Accessi-ble from HMI/OPC UA/Web API	Writable from HMI/OPC UA/Web API	Visible in HMI engi-neering	Supervision				Comment
	I_atBack	Bool	%I2.1	False	True	True	True					Confirms a box has fully cleared the entry area.
	I_atEntry	Bool	%I0.0	False	True	True	True					Detects box emergence.
	I_atFront	Bool	%I0.6	False	True	True	True					Prevents part collisions.
	I_atLeftEntry	Bool	%I1.0	False	True	True	True					Confirms the box has successfully transitioned onto the Left exit convey-or.
	I_atLeftExit	Bool	%I1.2	False	True	True	True					Drops to FALSE when a box reaches the left remover.
	I_atLoadPosition	Bool	%I0.4	False	True	True	True					TRUE when turntable is at 0° (aligned with entry).
	I_atRightEntry	Bool	%I0.7	False	True	True	True					Confirms the box has successfully transitioned onto the Right exit con-veyor.
	I_atRightExit	Bool	%I1.1	False	True	True	True					Drops to FALSE when a box reaches the right remover.
	I_atTurntableEntry	Bool	%I0.3	False	True	True	True					Center reflective sensor inside the turntable. Used for precise stopping.
	I_atUnloadPosition	Bool	%I0.5	False	True	True	True					TRUE when turntable has completed its 90° clockwise rotation.
	I_Auto	Bool	%I1.7	False	True	True	True					Selector in Auto position.
	I_Manual	Bool	%I2.2	False	True	True	True					Selector in Manual position.
	I_EmergencyStop	Bool	%I1.6	False	True	True	True					TRUE when healthy, drops to FALSE when pressed.
	I_LowBox	Bool	%I0.1	False	True	True	True					Active (TRUE) for both low and high boxes.
	I_Reset	Bool	%I1.4	False	True	True	True					Clears safety fault latches.
	I_Start	Bool	%I1.3	False	True	True	True					Triggers the cycle run latch.
	I_Stop	Bool	%I1.5	False	True	True	True					TRUE at rest, drops to FALSE to re-request a cycle stop.
	I_HighBox	Bool	%I0.2	False	True	True	True					Active (TRUE) only alongside LowBox for high boxes.

User constants

User constants			
Name	Data type	Value	Comment

--	--	--

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / PLC tags / Factory_IO_Outputs [17]

PLC tags

PLC tags											
	Name	Data type	Address	Retain	Accessi-ble from HMI/OPC UA/Web API	Writable from HMI/OPC UA/Web API	Visible in HMI engi-neering	Supervision			Comment
	Q_Counter	DInt	%QD30	False	True	True	True				Digital totalizer display unit located on the operator panel.
	Q_EntryConveyor	Bool	%Q0.1	False	True	True	True				Drives the second section of the entry lane towards the turntable.
	Q_FeederConveyor	Bool	%Q0.0	False	True	True	True				Drives the first entry section right be-neath the box emitter.
	Q_GreenIndicator	Bool	%Q0.7	False	True	True	True				Constant green indicates system is running active cycles.
	Q_LeftConveyor	Bool	%Q0.5	False	True	True	True				Drives the left clearance exit lane.
	Q_Load	Bool	%Q0.2	False	True	True	True				Runs internal turntable rollers forward to pull a box inside.
	Q_RedIndicator	Bool	%Q1.1	False	True	True	True				Constant red indicates system is idle/ stopped.
	Q_ResetLight	Bool	%Q1.3	False	True	True	True				Active when safety is tripped and waiting for Reset.
	Q_RightConveyor	Bool	%Q0.6	False	True	True	True				Drives the right clearance exit lane.
	Q_StartLight	Bool	%Q1.2	False	True	True	True				Follows the Run state.
	Q_StopLight	Bool	%Q1.4	False	True	True	True				Active when cycle is offline.
	Q_Turn	Bool	%Q0.4	False	True	True	True				Swivels the turntable mechanism 90° clockwise.
	Q_Unload	Bool	%Q0.3	False	True	True	True				Runs internal turntable rollers back-ward to eject a box out to the left lane.
	Q_YellowIndicator	Bool	%Q1.0	False	True	True	True				Active on safety Fault or when system is in Manual mode.
	Q_RemoverLeft	Bool	%Q1.5	False	True	True	True				Instantly deletes boxes at the left exit limit.
	Q_RemoverRight	Bool	%Q1.6	False	True	True	True				Instantly deletes boxes at the right ex-it limit.
	Q_Emit	Bool	%Q1.7	False	True	True	True				Continuous TRUE spawns boxes se-quentially.

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / PLC tags / Factory_IO_Outputs [17]

User constants

User constants				
	Name	Data type	Value	Comment

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / PLC data types

UDT_ActuatorCmd

UDT_ActuatorCmd Properties							
General							
Name	UDT_ActuatorCmd	Number	1	Type	UDT	Language	
Numbering							
Information							
Title		Author		Comment		Family	
Version		User-defined ID					

Name	Data type	Default value	Accessible from HMI/OPC UA/Web API	Writ-able from HMI/ OPC UA/ Web API	Visible in HMI engi-neering	Setpoint	Supervi-sion			Comment
EntryConveyor	Bool	false	True	True	True	False				
FeederConveyor	Bool	false	True	True	True	False				
LeftConveyor	Bool	false	True	True	True	False				
RightConveyor	Bool	false	True	True	True	False				
Load	Bool	false	True	True	True	False				
Unload	Bool	false	True	True	True	False				
Turn	Bool	false	True	True	True	False				
Emit	Bool	false	True	True	True	False				
RemoverLeft	Bool	true	True	True	True	False				
RemoverRight	Bool	true	True	True	True	False				

Totally Integrated Automation Portal		
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / PLC data types System data types This folder is empty.		

Totally Integrated Automation Portal							
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Watch and force tables Force table <table><thead><tr><th>Name</th><th>Address</th><th>Display format</th><th>Force value</th><th>Comment</th></tr></thead><tbody></tbody></table>			Name	Address	Display format	Force value	Comment
Name	Address	Display format	Force value	Comment			

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Watch and force tables

WT_Demo

Name	Address	Display format	Modify value	Comment
"DB_Machine".AutoMode		Bool		
"DB_Machine".Run		Bool		
"DB_Machine".SortStep		DEC+/-		
"DB_Machine".CountLeft		DEC+/-		
"DB_Machine".CountRight		DEC+/-		
"DB_Machine".CountTotal		DEC+/-		
"DB_Machine".RunTimeS		DEC+/-		
"DB_Machine".ObservedTimeS		DEC+/-		
"DB_Machine".AvailabilityPct		Floating-point number		
"DB_Machine".ThroughputPerHour		Floating-point number		
"DB_Machine".AvgCycleTimeS		Floating-point number		

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Watch and force tables

WT_Manual

Name	Address	Display format	Modify value	Comment
"DB_Machine".ManCmd.FeederConvey-or		Bool		
"DB_Machine".ManCmd.EntryConveyor		Bool		
"DB_Machine".ManCmd.Load		Bool		
"DB_Machine".ManCmd.Unload		Bool		
"DB_Machine".ManCmd.Turn		Bool		
"DB_Machine".ManCmd.LeftConveyor		Bool		
"DB_Machine".ManCmd.RightConveyor		Bool		
"DB_Machine".ManCmd.Emit		Bool		
"DB_Machine".ManCmd.RemoverLeft		Bool		
"DB_Machine".ManCmd.RemoverRight		Bool		
"I_atEntry"	%I0.0	Bool		
"I_LowBox"	%I0.1	Bool		
"I_HighBox"	%I0.2	Bool		
"I_atFront"	%I0.6	Bool		
"I_atTurntableEntry"	%I0.3	Bool		
"I_atLoadPosition"	%I0.4	Bool		
"I_atUnloadPosition"	%I0.5	Bool		
"I_atLeftEntry"	%I1.0	Bool		
"I_atRightExit"	%I1.1	Bool		
"I_atBack"	%I2.1	Bool		
"DB_Machine".CountTotal		DEC+/-		
"Q_Counter"	%QD30	DEC+/-		

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Watch and force tables

WT_Mode

Name	Address	Display format	Modify value	Comment
"I_Start"	%I1.3	Bool		
"I_Stop"	%I1.5	Bool		
"I_EmergencyStop"	%I1.6	Bool		
"I_Reset"	%I1.4	Bool		
"I_Auto"	%I1.7	Bool		
"I_Manual"	%I2.2	Bool		
"DB_Machine".Run		Bool		
"DB_Machine".Fault		Bool		
"DB_Machine".StopPending		Bool		
"DB_Machine".AutoMode		Bool		
"DB_Machine".ManualMode		Bool		
"DB_Machine".CycleIdle		Bool		
"Q_YellowIndicator"	%Q1.0	Bool		
"Q_StartLight"	%Q1.2	Bool		
"Q_StopLight"	%Q1.4	Bool		
"Q_ResetLight"	%Q1.3	Bool		
"Q_GreenIndicator"	%Q0.7	Bool		
"Q_RedIndicator"	%Q1.1	Bool		

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Watch and force tables

WT_Sorting

Name	Address	Display format	Modify value	Comment
"Q_Emit"	%Q1.7	Bool		
"Q_FeederConveyor"	%Q0.0	Bool		
"Q_EntryConveyor"	%Q0.1	Bool		
"Q_Load"	%Q0.2	Bool		
"Q_Unload"	%Q0.3	Bool		
"Q_Turn"	%Q0.4	Bool		
"Q_LeftConveyor"	%Q0.5	Bool		
"Q_RightConveyor"	%Q0.6	Bool		
"I_atEntry"	%I0.0	Bool		
"I_atTurntableEntry"	%I0.3	Bool		
"I_atUnloadPosition"	%I0.5	Bool		
"I_atLoadPosition"	%I0.4	Bool		
"I_atLeftEntry"	%I1.0	Bool		
"I_atRightEntry"	%I0.7	Bool		
"I_atLeftExit"	%I1.2	Bool		
"I_atRightExit"	%I1.1	Bool		
"DB_Machine".Run		Bool		
"DB_Machine".SortStep		DEC+/-		
"DB_Machine".StopPending		Bool		
"DB_Machine".CycleIdle		Bool		
"DB_Machine".Fault		Bool		
"DB_Machine".CountTotal		DEC+/-		
"DB_Machine".ExitIdleHigh		Bool		
"FB_SortingLogic_DB".s_atEntrySeen		Bool		
"FB_SortingLogic_DB".s_TonCenter.ET		Time		
"FB_SortingLogic_DB".s_TonCenter.PT		Time		
"DB_Machine".CenterTime		Time		
"FB_SortingLogic_DB".s_SeenHigh		Bool		
"I_LowBox"	%I0.1	Bool		
"I_HighBox"	%I0.2	Bool		
"DB_Machine".CountRight		DEC+/-		
"DB_Machine".CountLeft		DEC+/-		

Totally Integrated Automation Portal		
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] Traces Name		

Totally Integrated Automation Portal		
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Traces Measurements This folder is empty.		

Totally Integrated Automation Portal		
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Traces Combined measurements Name		

Totally Integrated Automation Portal		
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / OPC UA communication Server interfaces This folder is empty.		

Totally Integrated Automation Portal		
SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] PLC alarm text lists This folder is empty.		

Totally Integrated Automation Portal

SortingLine_Project / PLC_Sorting [CPU 1214C DC/DC/DC] / Local modules

PLC_Sorting [CPU 1214C DC/DC/DC]

PLC_Sorting

General\Project information

Name	PLC_Sorting	Author	HoraEmbedded	Comment	
Slot	1	Rack	0		

General\Catalog information

Short designation	CPU 1214C DC/DC/DC	Description	Work memory 150 KB; 24VDC power supply with DI14 x 24VDC SINK/ SOURCE, DQ10 x 24VDC and AI2 on board; 6 high-speed counters and 4 pulse outputs on-board; signal board expands on-board I/O; up to 3 communication modules for serial communication; up to 8 signal modules for I/O expansion; PROFINET IO controller, I-device, transport protocol TCP/IP, secure Open User Communication, S7 communication, Web server, OPC UA: Server DA	Article number	6ES7 214-1AG40-0XB0
Firmware version	V4.6		False		

General\Identification & Maintenance

Plant designation		Location identifier		Installation date	2026-09-28 22:38:48.935
Additional information					

General\Checksums

Text lists	FA 70 E8 75 1D 5A 8E 29	Software	58 9D F6 15 2E 50 56 A8		
------------	-------------------------	----------	-------------------------	--	--

PROFINET interface [X1]\General

Name	PROFINET interface_1	Author	HoraEmbedded	Comment	
------	----------------------	--------	--------------	---------	--

PROFINET interface [X1]\General\Project information

Name	DI 14/DQ 10_1	Comment		Name	AI 2_1
Comment					

PROFINET interface [X1]\Ethernet addresses\Interface networked with

Subnet:	Not connected				
---------	---------------	--	--	--	--

PROFINET interface [X1]\Ethernet addresses\Internet protocol version 4 (IPv4)

IP configuration	Set IP address in the project	IP address:	192.168.0.1	Subnet mask:	255.255.255.0
Use router	False				

PROFINET interface [X1]\Ethernet addresses\PROFINET

PROFINET device name is set directly at the device	False	Generate PROFINET device name automatically	True	PROFINET device name:	plc_sorting
Converted name:	plcxbsorting9923	Device number:	0		

PROFINET interface [X1]\Time synchronization

Enable time synchronization via NTP server	Enable time synchronization via NTP server		IP addresses	Server 1	0.0.0.0
Server 2	0.0.0.0	Server 3	0.0.0.0	Server 4	0.0.0.0
Update interval	10sec			CPU synchronizes the modules of the device.	No synchronization

PROFINET interface [X1]\Digital inputs\Channel0

Channel address	I100.0	Input filters	6.4 millisec	Enable pulse catch	0
-----------------	--------	---------------	--------------	--------------------	---

PROFINET interface [X1]\Digital inputs\Channel0\

Enable rising edge detection	0	Prefix Event Rising Edge	49152	Event name:	0
Hardware interrupt:	0	Rising edge0	Rising edge0		

PROFINET interface [X1]\Digital inputs\Channel0\

Enable falling edge detection	0	Prefix Event Falling Edge	49280	Event name:	0
Hardware interrupt:	0	Falling edge0	Falling edge0		

PROFINET interface [X1]\Digital inputs\Channel1

Channel address	I100.1	Input filters	6.4 millisec	Enable pulse catch	0
-----------------	--------	---------------	--------------	--------------------	---

PROFINET interface [X1]\Digital inputs\Channel1\

Enable rising edge detection	0	Prefix Event Rising Edge	49153	Event name:	0
Hardware interrupt:	0	Rising edge1	Rising edge1		

PROFINET interface [X1]\Digital inputs\Channel1\

Enable falling edge detection	0	Prefix Event Falling Edge	49281	Event name:	0
Hardware interrupt:	0	Falling edge1	Falling edge1		

PROFINET interface [X1]\Digital inputs\Channel2

Channel address	I100.2	Input filters	6.4 millisec	Enable pulse catch	0
-----------------	--------	---------------	--------------	--------------------	---

PROFINET interface [X1]\Digital inputs\Channel2\

Enable rising edge detection	0	Prefix Event Rising Edge	49154	Event name:	0
Hardware interrupt:	0	Rising edge2	Rising edge2		

PROFINET interface [X1]\Digital inputs\Channel2\

Enable falling edge detection	0	Prefix Event Falling Edge	49282	Event name:	0
Hardware interrupt:	0	Falling edge2	Falling edge2		

PROFINET interface [X1]\Digital inputs\Channel3

Channel address	I100.3	Input filters	6.4 millisec	Enable pulse catch	0
-----------------	--------	---------------	--------------	--------------------	---

PROFINET interface [X1]\Digital inputs\Channel3\

Enable rising edge detection	0	Prefix Event Rising Edge	49155	Event name:	0
Hardware interrupt:	0	Rising edge3	Rising edge3		

Totally Integrated Automation Portal						
PROFINET interface [X1]\Digital inputs\Channel3\						
Enable falling edge detection	0	Prefix Event Falling Edge	49283	Event name:	0	
Hardware interrupt:	0	Falling edge3	Falling edge3			
PROFINET interface [X1]\Digital inputs\Channel4						
Channel address	I100.4	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel4\						
Enable rising edge detection	0	Prefix Event Rising Edge	49156	Event name:	0	
Hardware interrupt:	0	Rising edge4	Rising edge4			
PROFINET interface [X1]\Digital inputs\Channel4\						
Enable falling edge detection	0	Prefix Event Falling Edge	49284	Event name:	0	
Hardware interrupt:	0	Falling edge4	Falling edge4			
PROFINET interface [X1]\Digital inputs\Channel5						
Channel address	I100.5	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel5\						
Enable rising edge detection	0	Prefix Event Rising Edge	49157	Event name:	0	
Hardware interrupt:	0	Rising edge5	Rising edge5			
PROFINET interface [X1]\Digital inputs\Channel5\						
Enable falling edge detection	0	Prefix Event Falling Edge	49285	Event name:	0	
Hardware interrupt:	0	Falling edge5	Falling edge5			
PROFINET interface [X1]\Digital inputs\Channel6						
Channel address	I100.6	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel6\						
Enable rising edge detection	0	Prefix Event Rising Edge	49158	Event name:	0	
Hardware interrupt:	0	Rising edge6	Rising edge6			
PROFINET interface [X1]\Digital inputs\Channel6\						
Enable falling edge detection	0	Prefix Event Falling Edge	49286	Event name:	0	
Hardware interrupt:	0	Falling edge6	Falling edge6			
PROFINET interface [X1]\Digital inputs\Channel7						
Channel address	I100.7	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel7\						
Enable rising edge detection	0	Prefix Event Rising Edge	49159	Event name:	0	
Hardware interrupt:	0	Rising edge7	Rising edge7			
PROFINET interface [X1]\Digital inputs\Channel7\						
Enable falling edge detection	0	Prefix Event Falling Edge	49287	Event name:	0	
Hardware interrupt:	0	Falling edge7	Falling edge7			
PROFINET interface [X1]\Digital inputs\Channel8						
Channel address	I101.0	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel8\						
Enable rising edge detection	0	Prefix Event Rising Edge	49160	Event name:	0	
Hardware interrupt:	0	Rising edge8	Rising edge8			
PROFINET interface [X1]\Digital inputs\Channel8\						
Enable falling edge detection	0	Prefix Event Falling Edge	49288	Event name:	0	
Hardware interrupt:	0	Falling edge8	Falling edge8			
PROFINET interface [X1]\Digital inputs\Channel9						
Channel address	I101.1	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel9\						
Enable rising edge detection	0	Prefix Event Rising Edge	49161	Event name:	0	
Hardware interrupt:	0	Rising edge9	Rising edge9			
PROFINET interface [X1]\Digital inputs\Channel9\						
Enable falling edge detection	0	Prefix Event Falling Edge	49289	Event name:	0	
Hardware interrupt:	0	Falling edge9	Falling edge9			
PROFINET interface [X1]\Digital inputs\Channel10						
Channel address	I101.2	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel10\						
Enable rising edge detection	0	Prefix Event Rising Edge	49162	Event name:	0	
Hardware interrupt:	0	Rising edge10	Rising edge10			
PROFINET interface [X1]\Digital inputs\Channel10\						
Enable falling edge detection	0	Prefix Event Falling Edge	49290	Event name:	0	
Hardware interrupt:	0	Falling edge10	Falling edge10			
PROFINET interface [X1]\Digital inputs\Channel11						
Channel address	I101.3	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel11\						
Enable rising edge detection	0	Prefix Event Rising Edge	49163	Event name:	0	
Hardware interrupt:	0	Rising edge11	Rising edge11			
PROFINET interface [X1]\Digital inputs\Channel11\						
Enable falling edge detection	0	Prefix Event Falling Edge	49291	Event name:	0	
Hardware interrupt:	0	Falling edge11	Falling edge11			
PROFINET interface [X1]\Digital inputs\Channel12						
Channel address	I101.4	Input filters	6.4 millise	Enable pulse catch	0	
PROFINET interface [X1]\Digital inputs\Channel13						
Channel address	I101.5	Input filters	6.4 millise	Enable pulse catch	0	

Totally Integrated Automation Portal						
PROFINET interface [X1]\Analog inputs\Noise reduction						
Integration time	50 Hz (20 ms)					
PROFINET interface [X1]\Analog inputs\Channel0						
Channel address	IW64	Measurement type	Voltage	Voltage range	0..10 V	
Smoothing	Weak (4 cycles)			Enable overflow diagnostics	1	
PROFINET interface [X1]\Analog inputs\Channel1						
Channel address	IW66	Measurement type	Voltage	Voltage range	0..10 V	
Smoothing	Weak (4 cycles)			Enable overflow diagnostics	1	
PROFINET interface [X1]\Digital outputs						
Reaction to CPU STOP	Use substitute value					
PROFINET interface [X1]\Digital outputs\Channel0						
Channel address	Q0.0	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel1						
Channel address	Q0.1	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel2						
Channel address	Q0.2	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel3						
Channel address	Q0.3	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel4						
Channel address	Q0.4	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel5						
Channel address	Q0.5	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel6						
Channel address	Q0.6	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel7						
Channel address	Q0.7	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel8						
Channel address	Q1.0	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Digital outputs\Channel9						
Channel address	Q1.1	Substitute a value of 1 on a change from RUN to STOP.	0			
PROFINET interface [X1]\Operating mode						
IO controller	True	IO system		Device number	0	
IO device	False					
PROFINET interface [X1]\I/O addresses\Input addresses						
Start address	100.0	End address	101.7	Organization block	0	
Process image	0					
PROFINET interface [X1]\I/O addresses\Input addresses						
Start address	64	End address	67	Organization block	0	
Process image	0					
PROFINET interface [X1]\I/O addresses\Output addresses						
Start address	0.0	End address	1.7	Organization block	0	
Process image	0					
PROFINET interface [X1]\Advanced options\Interface options						
Support device replacement without exchangeable medium	True	Permit overwriting of device names of all assigned IO devices	False	Use IEC V2.2 LLDP mode	False	
Keep-Alive connection monitoring:	30s					
PROFINET interface [X1]\Advanced options\Real time settings\IO communication						
Send clock:	1.000ms					
PROFINET interface [X1]\Advanced options\Real time settings\Real time options						
Calculated bandwidth for cyclic IO data:	0.000ms	Calculated bandwidth for cyclic IO data:	0.000%			
PROFINET interface [X1]\Advanced options\Port [X1 P1]\General						
Name	Port_1	Author	ENVY	Comment		
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port interconnection\Local port:						
Local port:	PLC_Sorting\PROFINET interface_1 [X1]\Port_1 [X1 P1]	Medium:	Copper	Cable name:	---	
						

--	--	--

Totally Integrated Automation Portal						
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port interconnection\Partner port:						
	Monitoring of partner port is not possible	Partner port:	Any partner			
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port options\Activate						
Activate this port for use	True					
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port options\Connection						
Transmission rate / duplex:	Automatic	Monitor	False	Enable autonegotiation	True	
PROFINET interface [X1]\Advanced options\Port [X1 P1]\Port options\Boundaries						
End of detection of accessible devices	False	End of topology discovery	False	End of the sync domain	False	
PROFINET interface [X1]\Web server access						
Enable Web server for the IP address of this interface	False	The Web server must also be activated in the properties of the PLC.				
High speed counters (HSC)\HSC1\General\Enable						
Enable this high speed counter	0	Enable this high speed counter	0	Enable this high speed counter	0	
Enable this high speed counter	0	Enable this high speed counter	0	Enable this high speed counter	0	
High speed counters (HSC)\HSC1\General\Project information						
Name	HSC_1	Comment		Name	HSC_2	
Comment		Name	HSC_3	Comment		
Name	HSC_4	Comment		Name	HSC_5	
Comment		Name	HSC_6	Comment		
High speed counters (HSC)\HSC1\I/O addresses\Input addresses						
Start address	1000.0	End address	1003.7	Start address	1004.0	
End address	1007.7	Organization block	0	Start address	1008.0	
End address	1011.7	Organization block	0	Process image	0	
Start address	1012.0	End address	1015.7	Organization block	0	
Process image	0	Start address	1016.0	End address	1019.7	
Organization block	0	Process image	0	Start address	1020.0	
End address	1023.7	Organization block	0	Process image	0	
Organization block	0	Process image	0	Process image	0	
Pulse generators (PTO/PWM)\PTO1/PWM1\General\Enable						
Enable this pulse generator	0	Enable this pulse generator	0			
Pulse generators (PTO/PWM)\PTO1/PWM1\General\Project information						
Name	Pulse_1	Comment		Name	Pulse_2	
Comment						
Pulse generators (PTO/PWM)\PTO1/PWM1\I/O addresses\Output addresses						
Start address	1000.0	End address	1001.7	Start address	1002.0	
End address	1003.7	Organization block	0	Organization block	0	
Process image	0	Process image	0			
Startup						
Startup after POWER ON	Warm restart - mode before POWER OFF	Comparison preset to actual configuration	Startup CPU even if mismatch	Configuration time	60000ms	
OBs should be interruptible	1					
Cycle						
Cycle monitoring time [ms]	150ms			Enable minimum cycle time for cyclic OBs	0	
Minimum cycle time	1ms					
Communication load						
Cycle load due to communication [%]	20%					
System and clock memory\System memory bits						
Enable the use of system memory byte	0	Address of system memory byte (MBx)	1	First cycle		
Diagnostic status changed		Always 1 (high)		Always 0 (low)		
System and clock memory\Clock memory bits						
Enable the use of clock memory byte	0	Address of clock memory byte (MBx)	0	10 Hz clock		
5 Hz clock		2.5 Hz clock		2 Hz clock		
1.25 Hz clock		1 Hz clock		0.625 Hz clock		
0.5 Hz clock						
Web server\General						
Activate Web server on all modules of this device	False	Permit access only with HTTPS	True			
Web server\Automatic update						
Enable automatic update	True	Update interval	0s			
Web server\User management						
User name			User rights			
Everybody						
Web server\User-defined web pages						
Application name	HTML source path	Default HTML page	Files with dynamic content	Web DB number	Fragment DB number	
		index.htm	.htm;.html	333	334	
Web server\Overview of interfaces						
Device		Interface		Enabled web server access		
PLC_Sorting		PROFINET interface_1		False		

Totally Integrated Automation Portal						
User interface languages						
Assign project language			User interface languages			
English (United States)			German			
English (United States)			English			
English (United States)			French			
English (United States)			Spanish			
English (United States)			Italian			
English (United States)			Chinese (simplified)			
Time of day\Local time						
Time zone		(UTC +01:00) Berlin, Bern, Brussels, Rome, Stockholm, Vienna				
Time of day\Daylight saving time						
Activate daylight saving time		1		Difference between standard and daylight saving time		60min
Time of day\Daylight saving time\Start of daylight saving time						
Starting week of the month:		Last		Sunday		in March
at		1:00 a.m.				
Time of day\Daylight saving time\Start of standard time						
		Last		Sunday		in October
at		2:00 a.m.				
Protection & Security						
Level of protection		No protection				
Protection & Security\Connection mechanisms						
Permit access with PUT/GET communication from remote partner		True				
Protection & Security\Security event						
Summarize diagnostics in case of high message volume		True		Length of an interval		20 Unit seconds
Protection & Security\External load memory						
Disable copying from internal load memory to external load memory		False				
Advanced configuration\DnsParameterConfigurationMenu						
The Tree-Node DnsConfigurationMenu was not filled by some ACF						
Advanced configuration\Configuration control\Configuration control for central configuration						
Allow to reconfigure the device via the user program		0				
Advanced configuration\SNMP\SNMP configuration (Simple Network Management Protocol).						
Activate SNMP		False				
Configuration control\Configuration control for central configuration						
Allow to reconfigure the device via the user program		0				
Connection resources\						
	Station resources - Reserved - Maximum		Station resources - Reserved - Configured		Station resources - Dynamic - Configured	
Module resources - PLC_Sorting [CPU 1214C DC/DC/DC] - Configured						
Maximum number of resources:		34		34		68
		Maximum		Configured		Configured
PG communication:		4		-		-
HMI communication:		12		0		0
S7 communication:		8		0		0
Open user communication:		8		0		0
Web communication:		2		-		-
OPC UA client/server communication:		0		-		-
Other communication:		-		0		0
Total resources used:		0		0		0
Available resources:		34		34		68
Overview of addresses\Overview of addresses\Overview of addresses						
Inputs		True		Outputs		True
Slot		True		Address gaps		False

Totally Integrated Automation Portal											
Type	Addr. from	Addr. to	Module	PIP	Device name	Device number	Size	Master / IO system	Rack	Slot	
I	64	67	AI 2_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 2	
I	1000	1003	HSC_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 16	
I	1004	1007	HSC_2	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 17	
I	1008	1011	HSC_3	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 18	
I	1012	1015	HSC_4	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 19	
I	1016	1019	HSC_5	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 20	
I	1020	1023	HSC_6	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 21	
O	1000	1001	Pulse_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 32	
O	1002	1003	Pulse_2	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 33	
O	1004	1005	Pulse_3	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 34	
O	1006	1007	Pulse_4	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 35	
I	100	101	DI 14/DQ 10_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 1	
O	0	1	DI 14/DQ 10_1	Automatic update	PLC_Sorting [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 1	

Totally Integrated Automation Portal		
SortingLine_Project Ungrouped devices This folder is empty.		

Totally Integrated Automation Portal		
SortingLine_Project Security settings This folder is empty.		

Totally Integrated Automation Portal		
SortingLine_Project / Cross-device functions / Project traces Measurements This folder is empty.		

SortingLine_Project / Common data / Alarm classes

Alarm classes

Alarm classes				
Name	ID	Display name	Acknowledgment	Priority
Acknowledgement	33	A	True	0
No Acknowledgement	34	NA	False	0

Totally Integrated Automation Portal		
SortingLine_Project / Common data Logs This folder is empty.		

Totally Integrated Automation Portal		
--------------------------------------	--	--

SortingLine_Project / Languages & resources

Project languages

Languages

Reference language

English (United States)

Editing language

English (United States)

Other project languages

Empty

--	--	--

Totally Integrated Automation Portal																																																																																																																																									
SortingLine_Project / Languages & resources / Project texts Project texts <table><tr><th colspan="3">Project texts</th></tr><tr><th>English (United States)</th><th>Category</th><th>Reference</th></tr><tr><td>exit left active</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 1\Title</td></tr><tr><td>A</td><td>Alarm class text</td><td>SortingLine_Project\Acknowledgement\AlarmClassData_IDisplayNaming_DisplayName</td></tr><tr><td>A</td><td>Alarm class text</td><td>SortingLine_Project\Acknowledgement\ShortName</td></tr><tr><td>Abort when not running</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 18\Title</td></tr><tr><td>Active (TRUE) for both low and high boxes.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_LowBox\Comment</td></tr><tr><td>Active (TRUE) only alongside LowBox for high boxes.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_HighBox\Comment</td></tr><tr><td>Active on safety Fault or when system is in Manual mode.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_YellowIndicator\Comment</td></tr><tr><td>Active when cycle is offline.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_StopLight\Comment</td></tr><tr><td>Active when safety is tripped and waiting for Reset.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_ResetLight\Comment</td></tr><tr><td>Auto mode</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 1\Title</td></tr><tr><td>Center reflective sensor inside the turntable. Used for precise stopping.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-TurntableEntry\Comment</td></tr><tr><td>Center timer</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 10\Title</td></tr><tr><td>Centralized Output Gating and Hardware Interlocks</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Block title</td></tr><tr><td>chosen entry sensor</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 7\Title</td></tr><tr><td>Clear left counter</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 38\Title</td></tr><tr><td>Clear right counter</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 39\Title</td></tr><tr><td>Clears safety fault latches.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_Reset\Comment</td></tr><tr><td>Confirms a box has fully cleared the entry area.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-Back\Comment</td></tr><tr><td>Confirms the box has successfully transitioned onto the Left exit conveyor.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-LeftEntry\Comment</td></tr><tr><td>Confirms the box has successfully transitioned onto the Right exit conveyor.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-RightEntry\Comment</td></tr><tr><td>Constant green indicates system is running active cycles.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_GreenIndicator\Comment</td></tr><tr><td>Constant red indicates system is idle/stopped.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_RedIndicator\Comment</td></tr><tr><td>Continuous cycle</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 16\Title</td></tr><tr><td>Continuous cycle</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 25\Title</td></tr><tr><td>Continuous TRUE spawns boxes sequentially.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Emit\Comment</td></tr><tr><td>Count left</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 36\Title</td></tr><tr><td>Count right</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 37\Title</td></tr><tr><td>Counter display</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 18\Title</td></tr><tr><td>Cycle idle</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 34\Title</td></tr><tr><td>Detects box emergence.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_atEntry\Comment</td></tr><tr><td>Digital totalizer display unit located on the operator panel.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Counter\Comment</td></tr><tr><td>Drives the first entry section right beneath the box emitter.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_FeederConveyor\Comment</td></tr><tr><td>Drives the left clearance exit lane.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_LeftConveyor\Comment</td></tr><tr><td>Drives the right clearance exit lane.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_RightConveyor\Comment</td></tr><tr><td>Drives the second section of the entry lane towards the turntable.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_EntryConveyor\Comment</td></tr><tr><td>Drops to FALSE when a box reaches the left remover.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-LeftExit\Comment</td></tr><tr><td>Drops to FALSE when a box reaches the right remover.</td><td>Text category tag comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-RightExit\Comment</td></tr><tr><td>Edge memory bits</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\s_EdgeStart</td></tr><tr><td>Edge memory bits</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\s_EdgeReset</td></tr><tr><td>Emergency stop</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_EstopNC</td></tr><tr><td>Emit command</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 28\Title</td></tr><tr><td>Emit timer</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 27\Title</td></tr><tr><td>Emitter config</td><td>Block comment</td><td>SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 11\Title</td></tr></table>	Project texts			English (United States)	Category	Reference	exit left active	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 1\Title	A	Alarm class text	SortingLine_Project\Acknowledgement\AlarmClassData_IDisplayNaming_DisplayName	A	Alarm class text	SortingLine_Project\Acknowledgement\ShortName	Abort when not running	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 18\Title	Active (TRUE) for both low and high boxes.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_LowBox\Comment	Active (TRUE) only alongside LowBox for high boxes.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_HighBox\Comment	Active on safety Fault or when system is in Manual mode.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_YellowIndicator\Comment	Active when cycle is offline.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_StopLight\Comment	Active when safety is tripped and waiting for Reset.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_ResetLight\Comment	Auto mode	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 1\Title	Center reflective sensor inside the turntable. Used for precise stopping.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-TurntableEntry\Comment	Center timer	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 10\Title	Centralized Output Gating and Hardware Interlocks	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Block title	chosen entry sensor	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 7\Title	Clear left counter	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 38\Title	Clear right counter	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 39\Title	Clears safety fault latches.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_Reset\Comment	Confirms a box has fully cleared the entry area.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-Back\Comment	Confirms the box has successfully transitioned onto the Left exit conveyor.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-LeftEntry\Comment	Confirms the box has successfully transitioned onto the Right exit conveyor.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-RightEntry\Comment	Constant green indicates system is running active cycles.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_GreenIndicator\Comment	Constant red indicates system is idle/stopped.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_RedIndicator\Comment	Continuous cycle	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 16\Title	Continuous cycle	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 25\Title	Continuous TRUE spawns boxes sequentially.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Emit\Comment	Count left	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 36\Title	Count right	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 37\Title	Counter display	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 18\Title	Cycle idle	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 34\Title	Detects box emergence.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_atEntry\Comment	Digital totalizer display unit located on the operator panel.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Counter\Comment	Drives the first entry section right beneath the box emitter.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_FeederConveyor\Comment	Drives the left clearance exit lane.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_LeftConveyor\Comment	Drives the right clearance exit lane.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_RightConveyor\Comment	Drives the second section of the entry lane towards the turntable.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_EntryConveyor\Comment	Drops to FALSE when a box reaches the left remover.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-LeftExit\Comment	Drops to FALSE when a box reaches the right remover.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-RightExit\Comment	Edge memory bits	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\s_EdgeStart	Edge memory bits	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\s_EdgeReset	Emergency stop	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_EstopNC	Emit command	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 28\Title	Emit timer	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 27\Title	Emitter config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 11\Title		
Project texts																																																																																																																																									
English (United States)	Category	Reference																																																																																																																																							
exit left active	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 1\Title																																																																																																																																							
A	Alarm class text	SortingLine_Project\Acknowledgement\AlarmClassData_IDisplayNaming_DisplayName																																																																																																																																							
A	Alarm class text	SortingLine_Project\Acknowledgement\ShortName																																																																																																																																							
Abort when not running	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 18\Title																																																																																																																																							
Active (TRUE) for both low and high boxes.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_LowBox\Comment																																																																																																																																							
Active (TRUE) only alongside LowBox for high boxes.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_HighBox\Comment																																																																																																																																							
Active on safety Fault or when system is in Manual mode.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_YellowIndicator\Comment																																																																																																																																							
Active when cycle is offline.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_StopLight\Comment																																																																																																																																							
Active when safety is tripped and waiting for Reset.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_ResetLight\Comment																																																																																																																																							
Auto mode	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 1\Title																																																																																																																																							
Center reflective sensor inside the turntable. Used for precise stopping.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-TurntableEntry\Comment																																																																																																																																							
Center timer	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 10\Title																																																																																																																																							
Centralized Output Gating and Hardware Interlocks	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Block title																																																																																																																																							
chosen entry sensor	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 7\Title																																																																																																																																							
Clear left counter	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 38\Title																																																																																																																																							
Clear right counter	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 39\Title																																																																																																																																							
Clears safety fault latches.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_Reset\Comment																																																																																																																																							
Confirms a box has fully cleared the entry area.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-Back\Comment																																																																																																																																							
Confirms the box has successfully transitioned onto the Left exit conveyor.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-LeftEntry\Comment																																																																																																																																							
Confirms the box has successfully transitioned onto the Right exit conveyor.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-RightEntry\Comment																																																																																																																																							
Constant green indicates system is running active cycles.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_GreenIndicator\Comment																																																																																																																																							
Constant red indicates system is idle/stopped.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_RedIndicator\Comment																																																																																																																																							
Continuous cycle	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 16\Title																																																																																																																																							
Continuous cycle	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 25\Title																																																																																																																																							
Continuous TRUE spawns boxes sequentially.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Emit\Comment																																																																																																																																							
Count left	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 36\Title																																																																																																																																							
Count right	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 37\Title																																																																																																																																							
Counter display	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 18\Title																																																																																																																																							
Cycle idle	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 34\Title																																																																																																																																							
Detects box emergence.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_atEntry\Comment																																																																																																																																							
Digital totalizer display unit located on the operator panel.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Counter\Comment																																																																																																																																							
Drives the first entry section right beneath the box emitter.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_FeederConveyor\Comment																																																																																																																																							
Drives the left clearance exit lane.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_LeftConveyor\Comment																																																																																																																																							
Drives the right clearance exit lane.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_RightConveyor\Comment																																																																																																																																							
Drives the second section of the entry lane towards the turntable.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_EntryConveyor\Comment																																																																																																																																							
Drops to FALSE when a box reaches the left remover.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-LeftExit\Comment																																																																																																																																							
Drops to FALSE when a box reaches the right remover.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-RightExit\Comment																																																																																																																																							
Edge memory bits	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\s_EdgeStart																																																																																																																																							
Edge memory bits	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\s_EdgeReset																																																																																																																																							
Emergency stop	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_EstopNC																																																																																																																																							
Emit command	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 28\Title																																																																																																																																							
Emit timer	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 27\Title																																																																																																																																							
Emitter config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 11\Title																																																																																																																																							

Totally Integrated Automation Portal		
English (United States)	Category	Reference
Enable	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 1\Title
entry conveyor config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 3\Title
Entry seen latch	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 9\Title
Exit conveyors	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 33\Title
exit left pulse	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 3\Title
exit right active	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 2\Title
exit right pulse	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 4\Title
Fault latch	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 5\Title
Feeder and entry conveyors	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 29\Title
feeder conveyor config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 2\Title
Follows the Run state.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_StartLight\Comment
Global Data Block (DB) serving as the main internal memory exchange registry for the system. Contains structured variables for system operating flags (Run, Fault, Modes), active part counters (Total, Left, Right), manual control parameters generated by the operator panel, and live engineering settings such as the box centering delay time variable.	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\DB_Machine [DB1]\Data block comment
Global Machine Status and Shared Data Registers	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\DB_Machine [DB1]\Data block title
Green indicator	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 12\Title
height latch	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 8\Title
Implements the continuous automatic sorting sequence using a customized sequential state machine (Steps 0 to 5). Manages entry box generation, calculates sensor filtration via an independent centering timer block, tracks multiple parts in transit using dedicated software registers (In-Transit counters), and automatically routes boxes based on height measurements recorded by the light curtain.	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Block comment
Instantly deletes boxes at the left exit limit.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_RemoverLeft\Comment
Instantly deletes boxes at the right exit limit.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_RemoverRight\Comment
Left conveyor config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 7\Title
Left entry pulse	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 5\Title
Left in transit clear	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 21\Title
Left in transit minus	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 20\Title
Left in transit plus	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 19\Title
Load command	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 30\Title
Load config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 4\Title
Machine Modes and Safety Interlocking Manager	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Block title
Main cyclic block of the S7-1200 PLC. This block coordinates the execution of the entire digital twin program at every PLC scan cycle. It handles the mode manager block to evaluate safety states, runs the main automatic sorting logic sequence, and executes the centralized output gating block to control the physical actuators of the Factory I/O scene.	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\Main [OB1]\Block comment
Main Program Cycle Execution	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\Main [OB1]\Block title
Manual mode	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 2\Title
Monitors physical safety devices and panel inputs to manage operational states. Implements Normally Closed (NC) healthy monitoring for the Emergency Stop button, manages the manual safety fault latch (SR flip-flop), and handles the cycle stop requests (StopPending logic). It ensures a clean segregation between AutoMode and ManualMode to prevent overlapping operational commands.	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Block comment
NA	Alarm class text	SortingLine_Project\No Acknowledgement\AlarmClassData_IDisplayNaming_DisplayName
NA	Alarm class text	SortingLine_Project\No Acknowledgement\ShortName
No box being processed	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_CycleIdle
One scan pulses	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\t_StartPulse

Totally Integrated Automation Portal		
English (United States)	Category	Reference
One scan pulses	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\t_ResetPulse
Pipelined Box Sorting Sequence (State Machine)	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Block title
Prevents part collisions.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_atFront\Comment
Red indicator	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 14\Title
Remover left config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 9\Title
Remover right config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 10\Title
Reset light	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 17\Title
Reset pulse	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 4\Title
Reset pushbutton	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_Reset
Right conveyor config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 8\Title
Right entry pulse	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 6\Title
Right in transit clear	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 24\Title
Right in transit minus	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 23\Title
Right in transit plus	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 22\Title
Run latch	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 7\Title
Runs internal turntable rollers backward to eject a box out to the left lane.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Unload\Comment
Runs internal turntable rollers forward to pull a box inside.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Load\Comment
Selector in Auto	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_Auto
Selector in Auto position.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_Auto\Comment
Selector in Manual	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_Manual
Selector in Manual position.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_Manual\Comment
Serves as the single source of truth for all physical digital and analog outputs directed to the Factory I/O simulation panel. It gathers automatic commands generated by the state machine and manual commands from the watch table. It applies strict hardware safety interlocks (System Enable bit derived from the Emergency Stop state) before forcing any physical coil to prevent duplicate assignment conflicts.	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Block comment
Start light	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 13\Title
Start pulse	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 3\Title
Start pushbutton	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_Start
Step output	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 35\Title
Stop at end of cycle	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 17\Title
Stop at end of cycle	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 26\Title
Stop light	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 15\Title
Stop pending	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\Network 6\Title
Stop pushbutton	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_ModeManager [FB1]\i_StopNC
Swivels the turntable mechanism 90° clockwise.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Outputs [17]\Q_Turn\Comment
T0 to 1 (#s_Step := 1)	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 15\Title
T1 to 2 (#s_Step := 2)	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 14\Title
T2 to 3 (#s_Step := 3)	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 13\Title
T3 to 4 (#s_Step := 4)	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 12\Title
T4 to 5 (#s_Step := 5)	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 11\Title
Total count	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 40\Title
Triggers the cycle run latch.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_Start\Comment
TRUE at rest, drops to FALSE to request a cycle stop.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_Stop\Comment
TRUE when healthy, drops to FALSE when pressed.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_EmergencyStop\Comment

Totally Integrated Automation Portal		
English (United States)	Category	Reference
TRUE when turntable has completed its 90° clockwise rotation.	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_atUnloadPosition\Comment
TRUE when turntable is at 0° (aligned with entry).	Text category tag comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\PLC tags\Factory_IO_Inputs [18]\I_at-LoadPosition\Comment
Tunr config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 6\Title
Turn command	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 32\Title
Unload command	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FB_SortingLogic [FB2]\Network 31\Title
Unload config	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 5\Title
Yellow indicator	Block comment	SortingLine_Project\PLC_Sorting [CPU 1214C DC/DC/DC]\Program blocks\FC_outputs [FC1]\Network 16\Title