



How a detector pixel becomes a ground position, and what the deployed correction does to it

(a) pixel $\rightarrow$ ray $\rightarrow$ contact plane $\rightarrow$ bearing correction
(arrow drawn large; true magnitudes in (b))

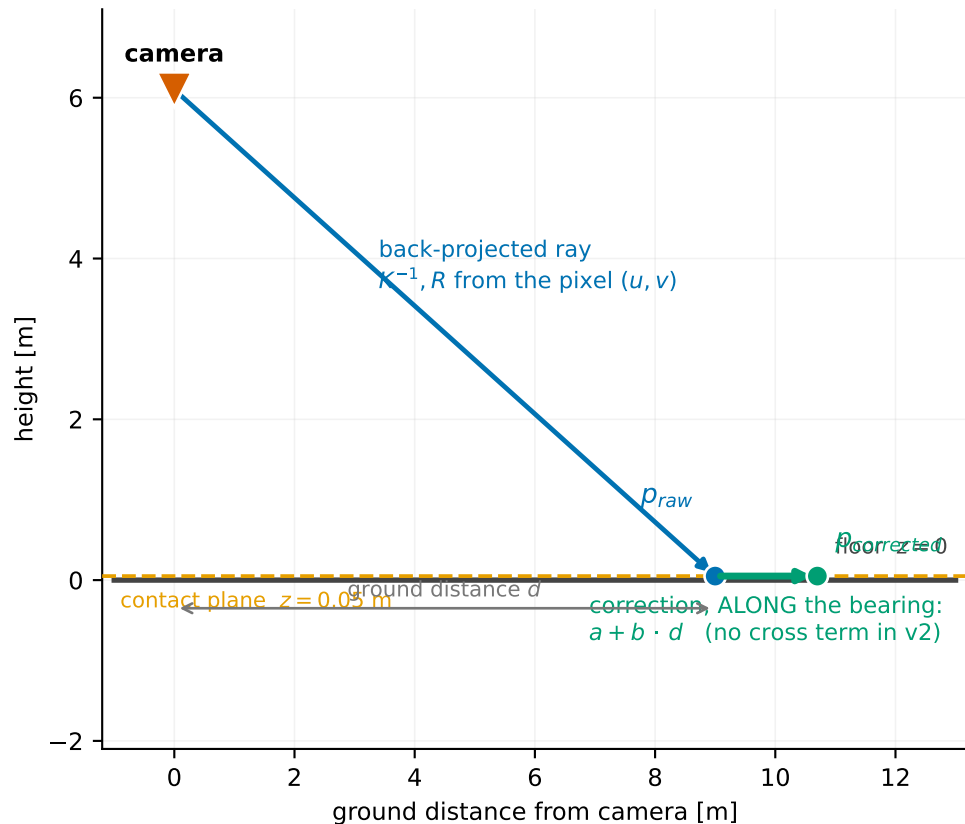

(b) the deployed correction $a + b \cdot d$

thick = the band it was FITTED on · thin arrow = the range actually observed · dotted = extrapolation

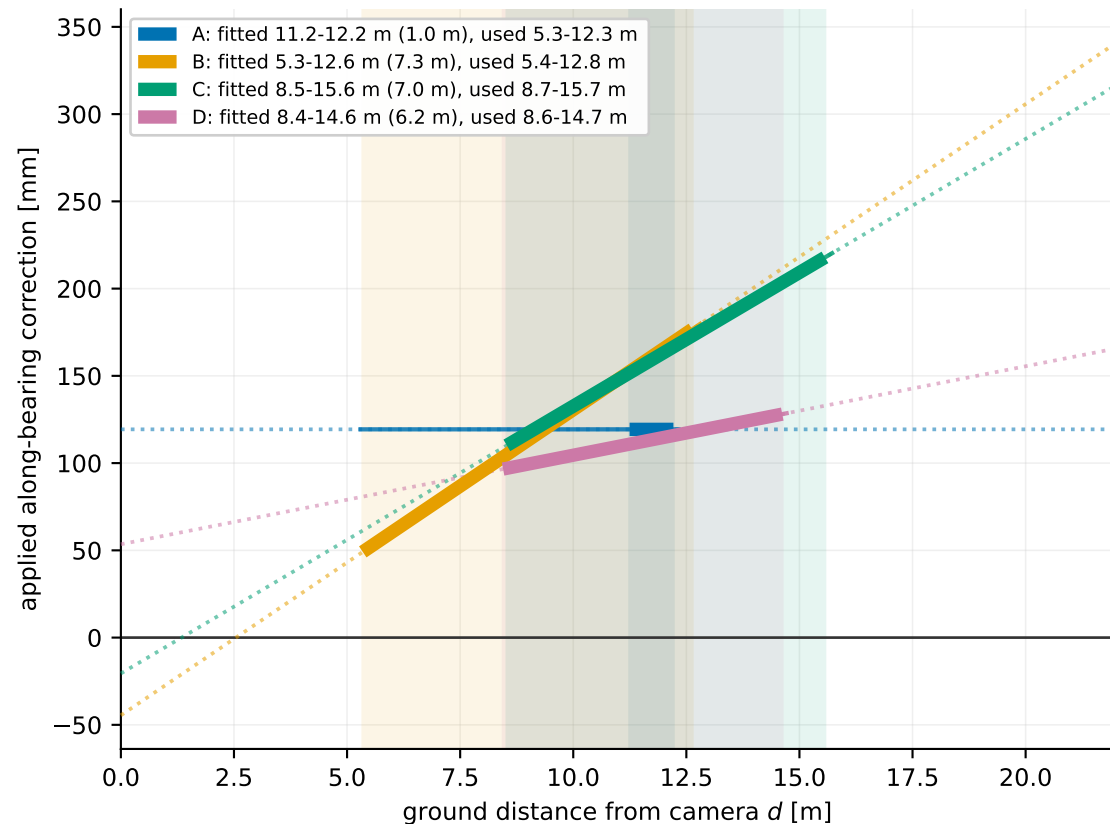

The correction is commissioning-time and is never refit during deployment. It is purely along-bearing in v2: positive moves the estimate away from the camera, and no cross-bearing term exists, so this function cannot correct a sideways error. Camera A was fitted across 0.97 m of range with its slope forced to zero, so it applies one constant offset at every distance. Ground truth fitted these constants at commissioning and scores them here; it is never an input to the function itself.