

Sunburn device: the whole program

every block of the program that runs on the wrist, explained in plain English · printed 2026-09-15

The Sunburn device is a wearable built on a BBC micro:bit, a small computer with 25 lights and two buttons. It measures the sun's UV with a sensor, checks the online UV index for where you are through a phone, and then flashes, beeps or taps your arm until you put sunscreen on. Two hours later it reminds you to reapply. The program that does all this is built from 78 coloured blocks. Every one of them is on these sheets, with a note saying what it does.

Each picture is one block of the program, exactly as it looks in the MakeCode editor where the program is built by snapping coloured pieces together. A block is read from top to bottom. Under each picture: the block's name, what kind of block it is, what it does, which other blocks use it (Used by) and which blocks it calls on (Uses). This sheet is the whole program at a glance: nine numbered sections. Sections 1 and 2 are the plan the device follows; sections 3 to 9 are the parts that plan calls on.



- 1

Start here: settings · 1 block · sheet 2
This block runs first, the moment the device is switched on. It holds every setting: which UV sensor is fitted, how the sound and the tapping arm are wired, the UV levels that count as low, moderate, very high and extreme, and how long each wait is. Then it starts everything up. To change how the device behaves, this is the only place to look.
- 2

The flowchart · 20 blocks · sheet 2
The plan the device follows all day, taken straight from the Sunburn Flowchart. Every box and every question on the flowchart is one block here, with the same name, in the same order: read the UV sensor, check the reading makes sense, ask the phone for the online UV index, decide how strong the sun is, then react. The forever block keeps the plan running round and round.
- 4

Alerts · 4 blocks · sheet 3
The ways the device gets your attention: flashing and beeping, tapping your arm with the small motor, and going to sleep when nobody answers. Each one keeps going until you press A or its time limit runs out. No answer for a long time means the device is probably not being worn, so it sleeps until a button is pressed.
- 5

Screen and lights · 8 blocks · sheet 4
What you see. The 5 by 5 grid of lights shows the UV number, a happy face or a warning, and messages one word at a time. If a small screen is fitted, it shows the number large, the level, the message and the countdowns.
- 7

Talking to the phone · 12 blocks · sheet 4
How the wearable and the phone app talk over Bluetooth. The phone sends the online UV index for where you are; the wearable sends back what it is doing every two seconds and reports each event, such as sunscreen applied. The same messages also go down the USB cable, so everything can be tested on a laptop. Every message ends with a checksum, so a message damaged on the way is thrown away instead of being misread. The app can also switch on show mode, where the wearable performs the whole flowchart by itself.
- 8


Helpers · 12 blocks · sheet 5
Small jobs the other blocks share: the maths for each type of sensor, turning minutes into the milliseconds the program counts in, sorting numbers, tidying up numbers, times and text, and the checksum that goes on the end of every message.

- 3

Buttons · 3 blocks · sheet 3
The micro:bit has two buttons. A means done: sunscreen is on, or I am going inside. B wakes the device up. Pressing both together turns it off, or on again.
- 6

Sound and the tapping arm · 5 blocks · sheet 4
The beeps, and the small motor (a servo) whose arm taps your wrist when the sun is extreme.
- 9

The optional screen · 13 blocks · sheet 6
Only used if a small screen is added to the wearable. These blocks draw letters and numbers on it dot by dot. The device works exactly the same without a screen.

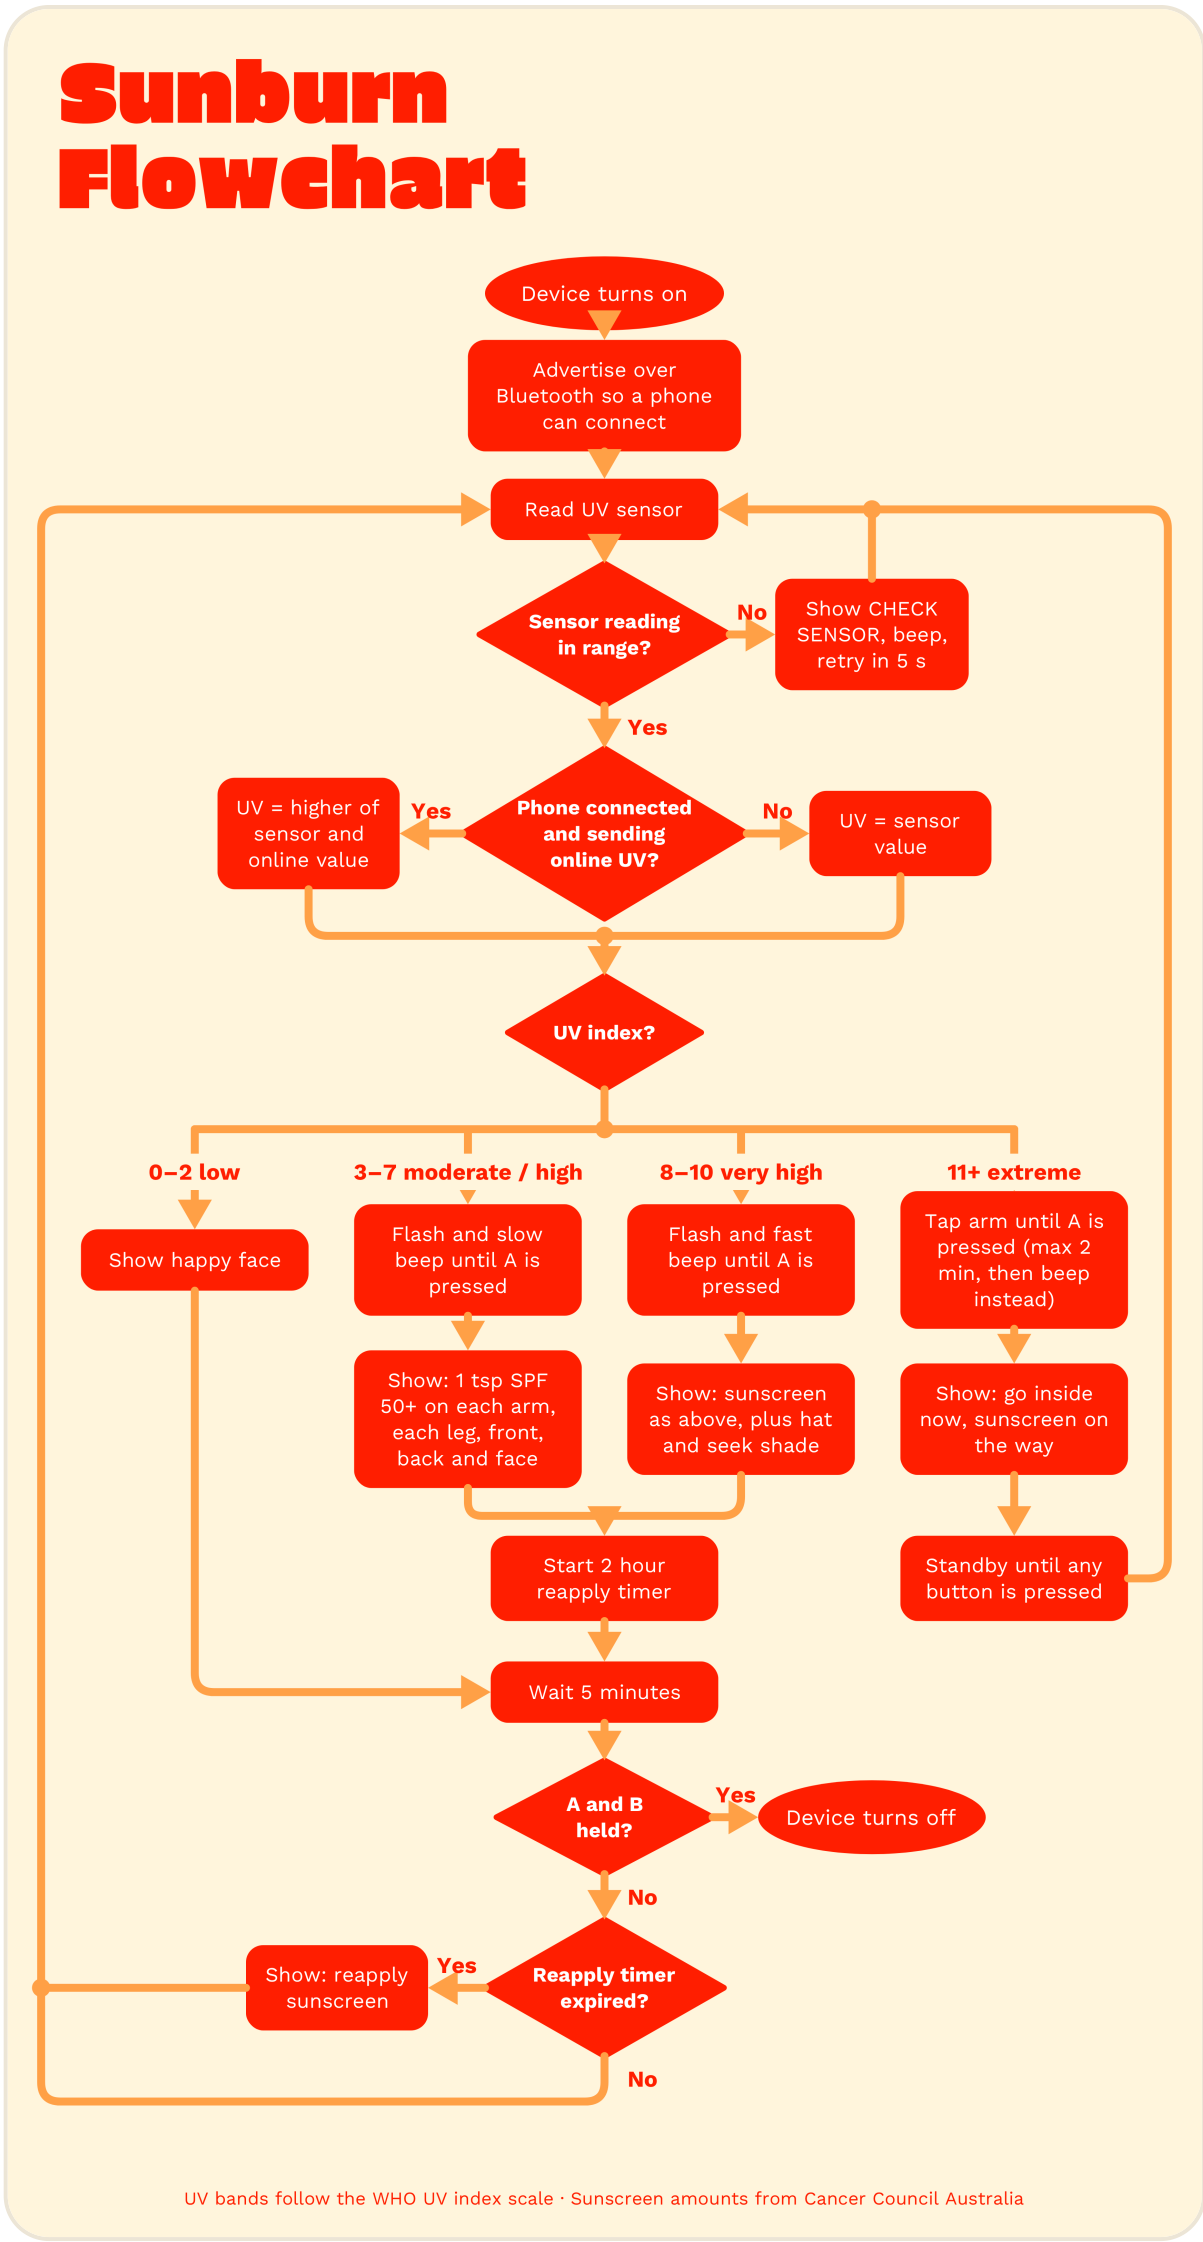

The Sunburn Flowchart the device follows. Every box on it is a block in section 2 with the same name.

- Variables: remember a value

Text
- Functions: a step with a name

Arrays: lists
- Basic: the lights, pauses

Music: beeps
- Input: buttons and time

Pins: sensor, motor, screen
- Loops: repeat

Bluetooth: the phone
- Logic: if, compare

Serial: the USB cable
- Maths

Control: timing

Reading the other sheets

Every picture is one block from the editor at 60% of its size on screen. Under it: the block's name, what kind of block it is, what it does, which blocks use it (Used by) and which blocks it calls on (Uses).

UV index How strong the sun's burning rays are, from 0 (none) to 11 and above (extreme). Protection is needed from 3 upwards, even on cool or cloudy days.

micro:bit The small computer the program runs on. It has a 5 by 5 grid of lights, buttons A and B, and sockets called pins (P0, P1, P2) that other parts plug into.

Block One instruction of the program. Blocks snap together and run in order from top to bottom. A block with a name at the top (function) is a step that other blocks can call on.

Sensor The part that measures UV. It gives a voltage, which the program turns into a UV index number.

Servo A small motor with an arm. Here it taps the wearer's wrist when the sun is extreme.

Bluetooth and USB The two ways the wearable talks to a phone or a laptop. The phone app sends the online UV index; the wearable sends back what it is doing.

OLED An optional small screen. Without one, the grid of lights does the job.

ms and Hz ms are milliseconds, thousandths of a second. Hz sets how high a beep sounds.

Demo timings Much shorter waits (seconds instead of minutes and hours) so the whole day can be shown in a few minutes at a demo.

Names in the blocks Words like uvSampleCount are the program's own names for its settings and memory. Read them as English: uv sample count is how many readings to take.

1

Start here: settings

1 block

This block runs first, the moment the device is switched on. It holds every setting: which UV sensor is fitted, how the sound and the tapping arm are wired, the UV levels that count as low, moderate, very high and extreme, and how long each wait is. Then it starts everything up. To change how the device behaves, this is the only place to look.

```
on start
  set uvSensorType to 1
  set uvSampleCount to 15
  set soundOutput to 1
  set soundVolume to 180
  set servoType to 1
  set servoRestAngle to 90
  set servoTapAngle to 30
  set oledMode to 1
  set oledType to 1
  set oledAddress to 60
  set uvLowMax to 2
  set uvHighMax to 7
  set uvVeryHighMax to 10
  set waitMinutes to 5
  set reapplyHours to 2
  set tapMaxMinutes to 2
  set alertGiveUpMinutes to 10
  set onlineUvMaxAgeMinutes to 30
  set sensorRetrySeconds to 5
  set usbSpeed to 1
  set firmwareVersion to '3.3'
  call applySensorPreset
  call applyTimings
  call setupSound
  call setupOled
  call setupUsbLink
  call advertiseOverBluetooth
  if button B is pressed or button A is pressed then
    set demoMode to true
    call applyTimings
  if button A is pressed then
    set showMode to true
  call deviceTurnsOn
```

on start Runs once, when the device is switched on

The first thing that runs when the device is switched on. All the settings are listed here, then the start-up steps: work out the sensor maths, set the timings, get the sound, the screen, the USB link and Bluetooth ready, and show that the device is on. Holding B while switching on uses the fast demo timings; holding A starts show mode, where the device performs the whole flowchart by itself.

Uses: deviceTurnsOn, setupSound, setupUsbLink, advertiseOverBluetooth, applySensorPreset, applyTimings, setupOled

2

The flowchart

20 blocks

The plan the device follows all day, taken straight from the Sunburn Flowchart. Every box and every question on the flowchart is one block here, with the same name, in the same order: read the UV sensor, check the reading makes sense, ask the phone for the online UV index, decide how strong the sun is, then react. The forever block keeps the plan running round and round.

```
forever
  if deviceOn then
    call runFlowchart
  else
    pause (ms) 500
```

forever Runs again and again, all day

Runs the flowchart once, then goes straight back to the top and runs it again, all day long.

Uses: runFlowchart

```
function runFlowchart
  call readUvSensor
  if call sensorReadingInRange then
    call chooseUvValue
    call showUvReading
    set currentBand to call uvBand currentUv
    set wentToStandby to false
    if currentBand == 'Low' then
      call showHappyFace
    else if currentBand == 'modhigh' then
      call moderateOrHighUv
    else if currentBand == 'vhigh' then
      call veryHighUv
    else
      call extremeUv
    if deviceOn and not wentToStandby then
      call wait5Minutes
      if deviceOn and call reapplyTimerExpired then
        call showReapplySunscreen
      else
        call showCheckSensor
```

runFlowchart A step of the program

The whole flowchart from top to bottom. Read the sensor. If the reading makes sense, pick the UV value, show it, decide the level and react: a happy face, or an alert until A is pressed. Then wait 5 minutes and check whether it is time for more sunscreen. If the reading does not make sense, show CHECK SENSOR instead. Pressing A and B together at any moment turns the device off and stops every wait.

Used by: forever **Uses:** readUvSensor, sensorReadingInRange, showCheckSensor, chooseUvValue, uvBand, showHappyFace, moderateOrHighUv, veryHighUv, extremeUv, wait5Minutes, reapplyTimerExpired, showReapplySunscreen, showUvReading

```
function uvBand uv
  set rounded to round uv
  set band to 'extreme'
  if rounded <= uvLowMax then
    set band to 'Low'
  else if rounded <= uvHighMax then
    set band to 'modhigh'
  else if rounded <= uvVeryHighMax then
    set band to 'vhigh'
  return band
```

uvBand Works out a piece of text - needs: uv

Turns a UV index into one of the four levels on the flowchart: low (0 to 2), moderate or high (3 to 7), very high (8 to 10) or extreme (11 and above).

Used by: runFlowchart, sendStatus

```
function showHappyFace
  set stateName to 'safe'
  show icon
  call oledShowMessage 'Low UV. No sunscreen needed'
```

showHappyFace A step of the program

UV 0 to 2: shows a happy face. No sunscreen needed right now.

Used by: runFlowchart **Uses:** oledShowMessage

```
function readUvSensor
  set stateName to 'reading'
  repeat uvSampleCount times
    do
      samples add value analog read pin analog pin P1 to end
      pause (ms) 2
  call sortNumbers samples
  set sensorRaw to samples get value at floor uvSampleCount / 2
  set sensorNoise to samples get value at uvSampleCount - 1 samples get value at 0
  set sensorVolts to sensorRaw * 3.3 / 1023
  set sensorUv to sensorVolts - uvZeroVolts / uvVoltsPerIndex
  if showMode then
    set sensorUv to call showUvNext
    set sensorRaw to 400
    set sensorNoise to 0
  call debugLog join 'raw' sensorRaw 'noise' sensorNoise
```

readUvSensor A step of the program

Reads the UV sensor plugged into pin P1. It takes 15 quick readings and uses the middle one, so a single odd reading cannot set off a false alarm. Then it turns the sensor's voltage into a UV index number. In show mode the reading is replaced by a pretend value that climbs through every band.

Used by: runFlowchart, handleCommand, calibrateToKnownUv **Uses:** sortNumbers, showUvNext, debugLog

```
function phoneSendingOnlineUv
  set age to running time (ms) - onlineUvTime
  set maxAge to onlineUvMaxAgeMinutes * 60000
  return onlineUvTime > 0 and age < maxAge
```

phoneSendingOnlineUv A yes-or-no question the program asks

Asks: has the phone app sent an online UV index in the last 30 minutes?

Used by: chooseUvValue, showUvReading, sendStatus

```
function chooseUvValue
  set currentUv to max of 0 and sensorUv
  if call phoneSendingOnlineUv then
    set currentUv to max of currentUv and onlineUv
```

chooseUvValue A step of the program

Picks the UV number the device will act on: the higher of the sensor's reading and the phone's online value, or just the sensor's reading when the phone is not sending.

Used by: runFlowchart **Uses:** phoneSendingOnlineUv

```
function sunscreenApplied level
  show icon
  set protectionLevel to 'level'
  change sunscreenCount by 1
  call sendEvent 'sunscreen'
  call start2HourReapplyTimer
```

sunscreenApplied A step of the program - needs: level

A was pressed after a sunscreen alert: remembers which advice was given, counts one more application, tells the app, and starts the timer.

Used by: moderateOrHighUv, veryHighUv **Uses:** start2HourReapplyTimer, sendEvent

```
function sensorReadingInRange
  set inRange to true
  if sensorRaw >= 1020 then
    set inRange to false
  if sensorNoise > 200 then
    set inRange to false
  if sensorUv < -1.5 or sensorUv > 20 then
    set inRange to false
  if inRange then
    set sensorErrorReported to false
  return inRange
```

sensorReadingInRange A yes-or-no question the program asks

Asks: is this reading believable? The answer is no if the sensor is missing or shorted, if the readings jump about (a loose wire), or if the number could not be real.

Used by: runFlowchart

```
function showCheckSensor
  set stateName to 'error'
  if not sensorErrorReported then
    call sendLine 'e=error;msg=CHECK SENSOR'
    set sensorErrorReported to true
    set sensorErrorCount to 0
  show icon
  if remainder of sensorErrorCount / 12 == 0 then
    call showMessage 'CHECK SENSOR'
    call beep 440 200
    call beep 440 200
  call oledFooter join pin call formatNumber sensorVolts 'V'
  change sensorErrorCount by 1
  set ackPressed to false
  set anyButtonPressed to false
  set retryTime to running time (ms) + sensorRetrySeconds * 1000
  while deviceOn and not anyButtonPressed and running time (ms) < retryTime
    do
      pause (ms) 200
  if ackPressed then
    set ackPressed to false
    call showMessage join 'P1' call formatNumber sensorVolts 'V'
```

showCheckSensor A step of the program

When the reading is not believable: shows a cross, and the first time scrolls CHECK SENSOR and beeps twice, then again about once a minute while the fault lasts. It tells the app once, and tries again every 5 seconds. While it waits, A shows the pin voltage on the lights and B retries at once. A faulty sensor is never treated as safe.

Used by: runFlowchart **Uses:** showMessage, oledFooter, beep, sendLine, formatNumber

2 The flowchart (continued)

20 blocks


The plan the device follows all day, taken straight from the Sunburn Flowchart. Every box and every question on the flowchart is one block here, with the same name, in the same order: read the UV sensor, check the reading makes sense, ask the phone for the online UV index, decide how strong the sun is, then react. The forever block keeps the plan running round and round.



moderateOrHighUv A step of the program
UV 3 to 7: flashes and beeps slowly until A is pressed, then shows how much sunscreen to put on and starts the 2 hour timer. If sunscreen is already on, it just shows a tick and the time left. If nobody presses A within 10 minutes, the device assumes it is not being worn and goes to sleep.
Used by: runFlowchart · **Uses:** sunscreenApplied, alreadyProtected, flashAndBeepUntilA, standbyUntilButton, showMessage




reapplyTimerExpired A yes-or-no question the program asks
Asks: have the 2 hours since the last sunscreen passed?
Used by: runFlowchart, wait5Minutes

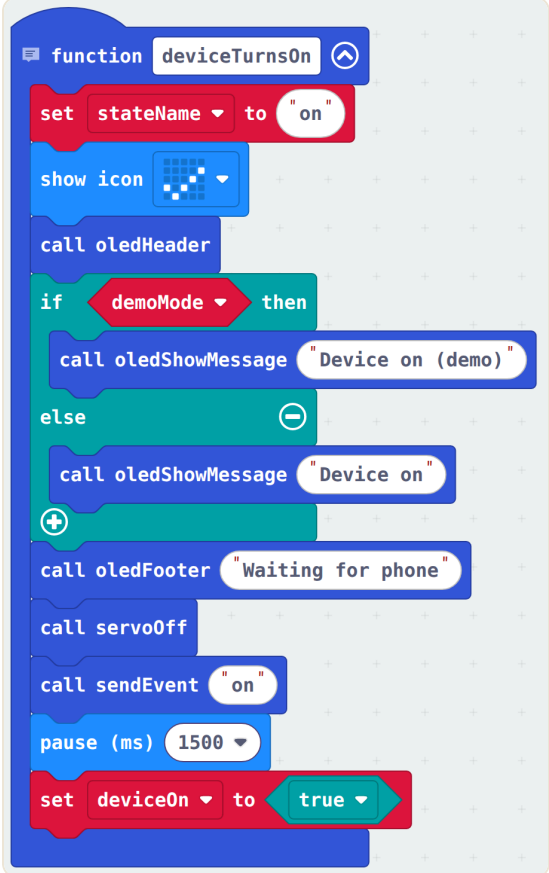


deviceTurnsOn A step of the program
Switching on: shows a tick, says Device on on the screen, tells the app, and marks the device as on.
Used by: on button A+B pressed, handleCommand, on start · **Uses:** oledHeader, oledShowMessage, oledFooter, servoOff, sendEvent




veryHighUv A step of the program
UV 8 to 10: flashes and beeps quickly until A is pressed, then shows the sunscreen advice plus hat and shade, and starts the 2 hour timer. It alerts again if the wearer so far only had the moderate advice.
Used by: runFlowchart · **Uses:** sunscreenApplied, alreadyProtected, flashAndBeepUntilA, standbyUntilButton, showMessage

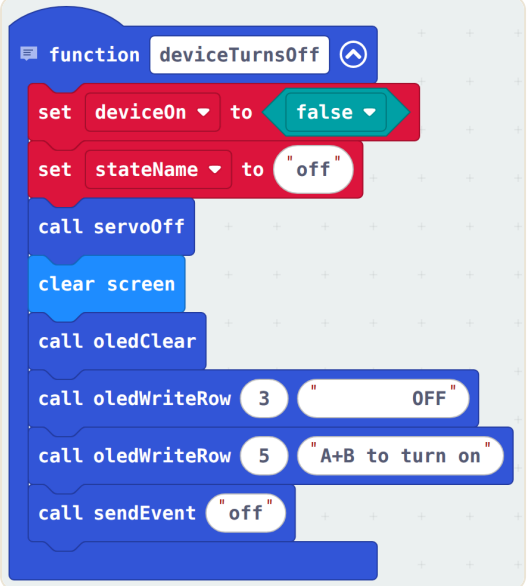


deviceTurnsOff A step of the program
Switching off: everything stops and the screen shows OFF. Bluetooth stays on so the app can switch it back on.
Used by: on button A+B pressed, handleCommand · **Uses:** servoOff, sendEvent, oledClear, oledWriteRow

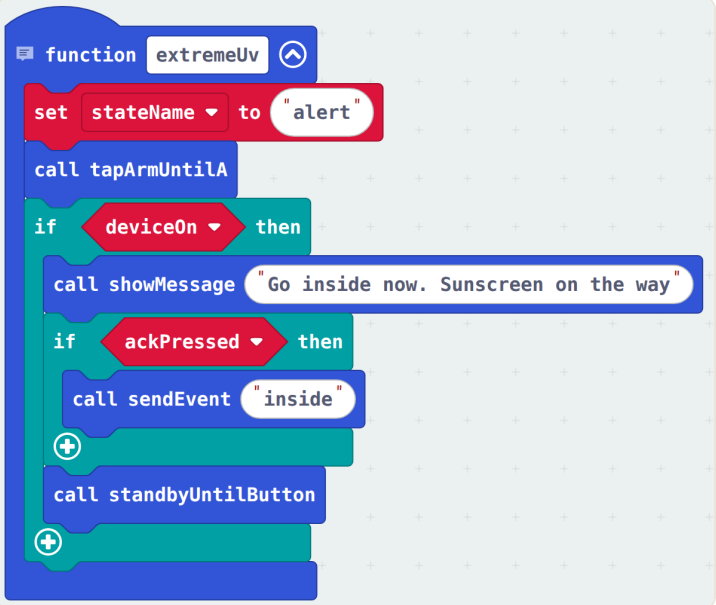


extremeUv A step of the program
UV 11 or more: taps the arm until A is pressed (after 2 minutes it beeps instead), shows Go inside now, then sleeps until a button is pressed.
Used by: runFlowchart · **Uses:** tapArmUntilA, standbyUntilButton, showMessage, sendEvent

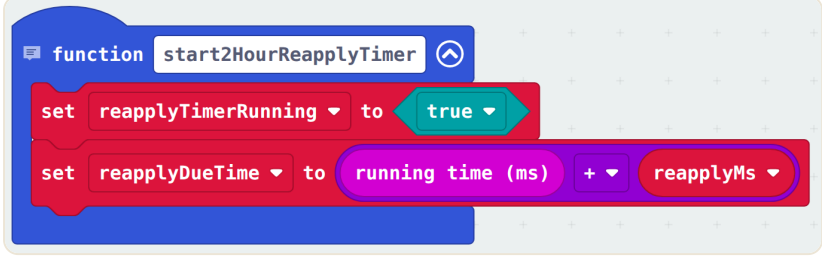


start2HourReapplyTimer A step of the program
Starts the 2 hour countdown to the next sunscreen.
Used by: sunscreenApplied

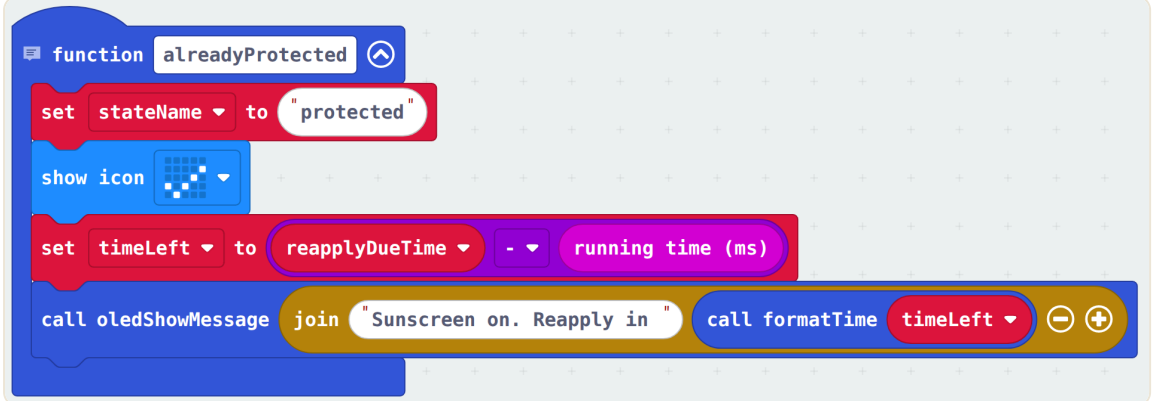

alreadyProtected A step of the program
Sunscreen is already on, so there is no alert: just a tick and the time until it needs reapplying.
Used by: moderateOrHighUv, veryHighUv · **Uses:** oledShowMessage, formatTime

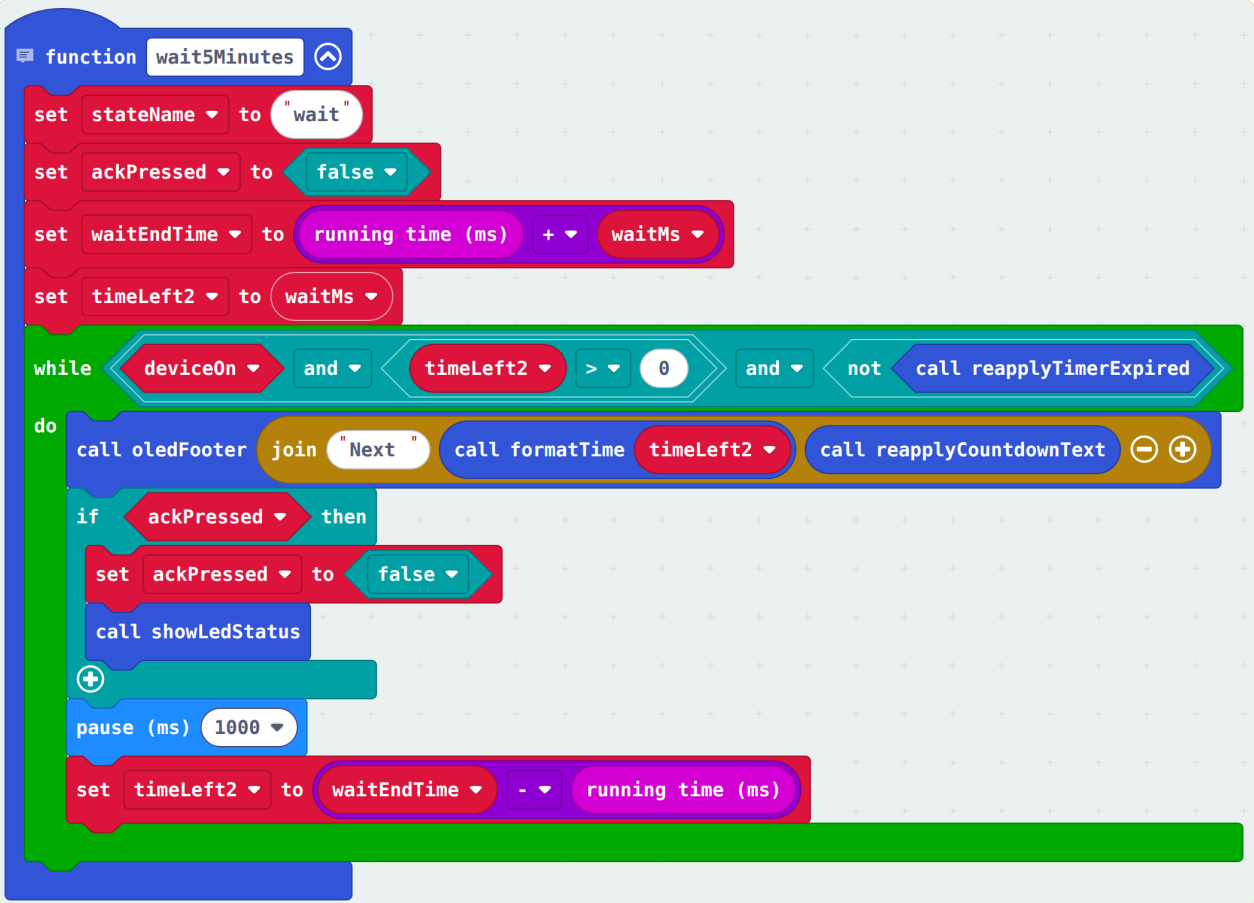

wait5Minutes A step of the program
Waits 5 minutes before the next check. The wait ends early if the device is turned off or the sunscreen timer runs out. Pressing A during the wait shows the UV number and the countdown.
Used by: runFlowchart · **Uses:** reapplyTimerExpired, showLedStatus, oledFooter, formatTime, reapplyCountdownText

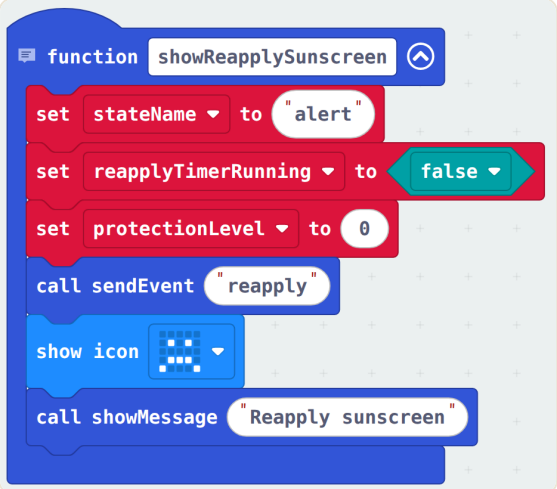


showReapplySunscreen A step of the program
Shows Reapply sunscreen and clears the timer, so the next trip round the flowchart alerts again if the sun is still strong.
Used by: runFlowchart · **Uses:** showMessage, sendEvent


3 Buttons

3 blocks


The micro:bit has two buttons. A means done: sunscreen is on, or I am going inside. B wakes the device up. Pressing both together turns it off, or on again.

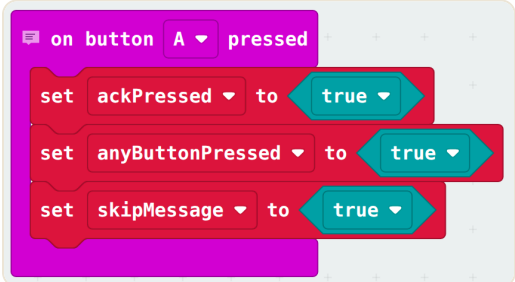

on button A pressed Runs each time button A is pressed
Pressing A means done: sunscreen is on, or I am going inside. It also wakes the device, skips a long message, and during a wait shows the UV number and the countdown.

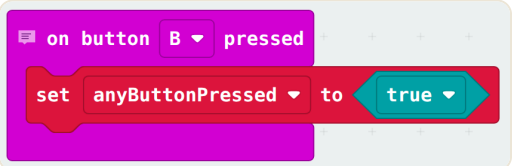

on button B pressed Runs each time button B is pressed
Pressing B wakes the device from sleep. Holding B while switching on gives the fast demo timings.

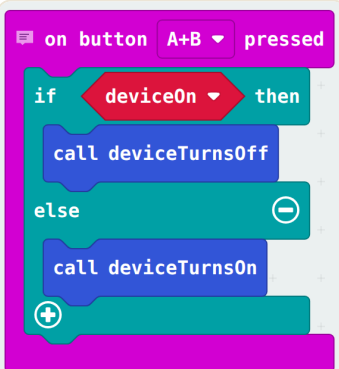


on button A+B pressed Runs when A and B are pressed together
Pressing A and B together turns the device off, or on again.
Uses: deviceTurnsOn, deviceTurnsOff

4 Alerts

4 blocks

The ways the device gets your attention: flashing and beeping, tapping your arm with the small motor, and going to sleep when nobody answers. Each one keeps going until you press A or its time limit runs out. No answer for a long time means the device is probably not being worn, so it sleeps until a button is pressed.

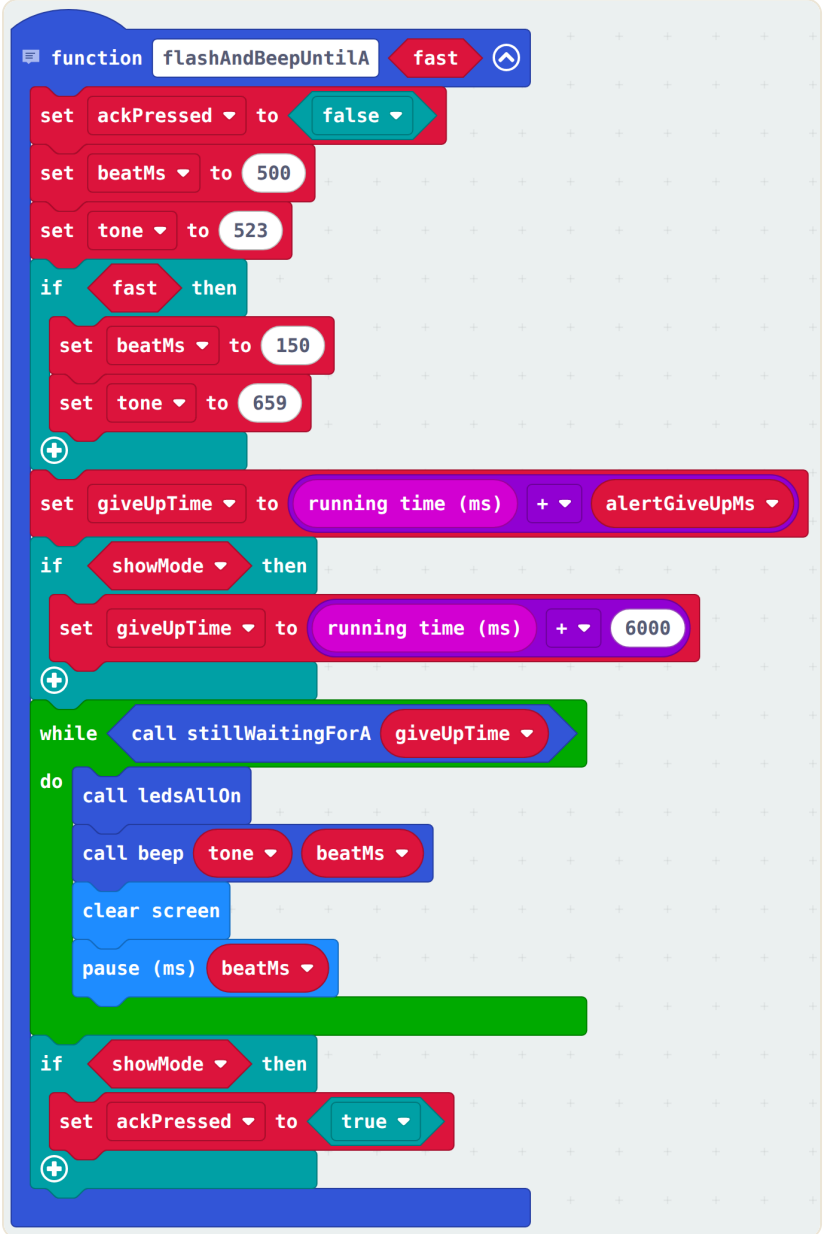


flashAndBeepUntilA A step of the program · needs: fast
Flashes all 25 lights and beeps until A is pressed or the app says done. The fast setting is the quicker, higher beep for very high UV. It gives up after 10 minutes so a device left on a table does not beep all day. In show mode it presses A itself after 6 seconds.
Used by: moderateOrHighUv, veryHighUv, tapArmUntilA · **Uses:** stillWaitingForA, ledsAllOn, beep



stillWaitingForA A yes-or-no question the program asks · needs: untilTime
Asks: should the alert carry on? Yes while A has not been pressed, the device is still on, and the time limit has not been reached.
Used by: flashAndBeepUntilA, tapArmUntilA



tapArmUntilA A step of the program
Taps the wearer's arm with the motor until A is pressed. After 2 minutes it beeps instead, so a device that is not being worn does not run the motor flat. In show mode it presses A itself after 6 seconds.
Used by: extremeUv · **Uses:** flashAndBeepUntilA, stillWaitingForA, servoOff, servoTapOnce

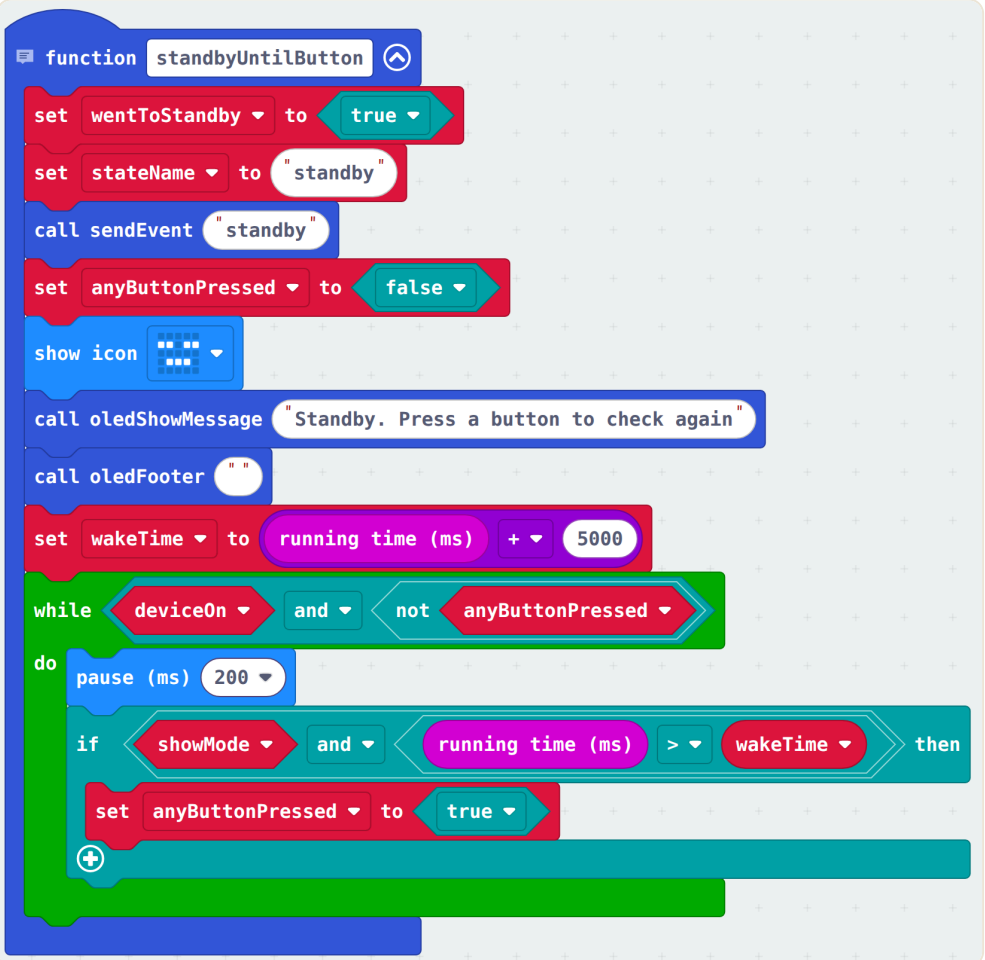


standbyUntilButton A step of the program
Sleep: waits for any button, or done from the app. Pressing A and B together still turns the device off. Afterwards it goes straight back to reading the sensor. In show mode it wakes by itself after 5 seconds.
Used by: moderateOrHighUv, veryHighUv, extremeUv · **Uses:** oledShowMessage, oledFooter, sendEvent


5 Screen and lights

8 blocks

What you see. The 5 by 5 grid of lights shows the UV number, a happy face or a warning, and messages one word at a time. If a small screen is fitted, it shows the number large, the level, the message and the countdowns.

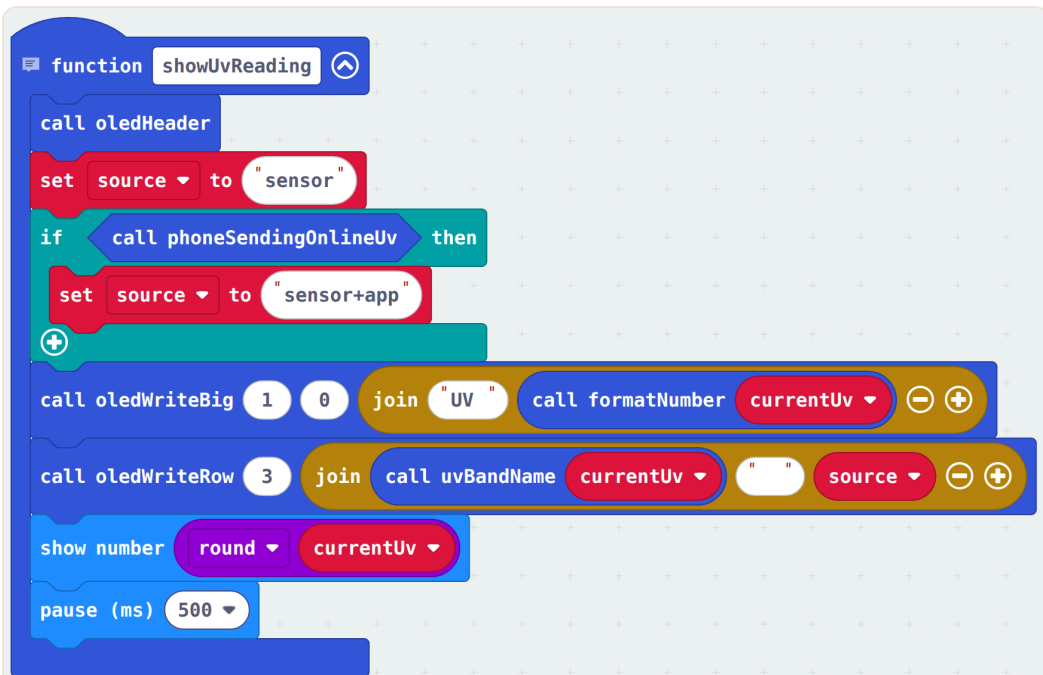


showUvReading A step of the program
Shows the UV number: rounded on the grid of lights, and exact, with the level and where it came from, on the screen.
Used by: runFlowchart · **Uses:** phoneSendingOnlineUv, uvBandName, oledHeader, formatNumber, oledWriteRow, oledWriteBig

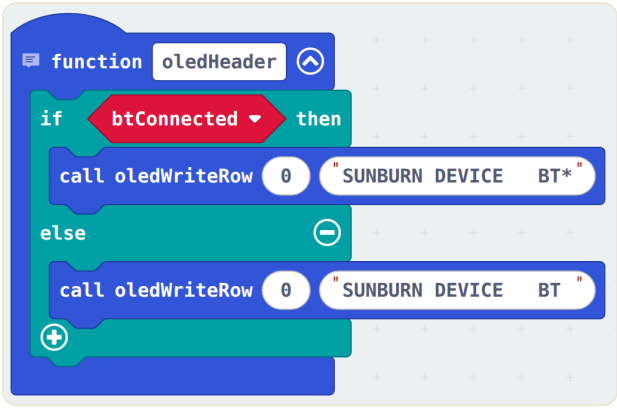


oledHeader A step of the program
The top line of the screen: the title, and a star while a phone is connected.
Used by: deviceTurnsOn, showUvReading, on bluetooth connected, on bluetooth disconnected, handleCommand · **Uses:** oledWriteRow




uvBandName Works out a piece of text · needs: uv
The words for the screen: LOW, MODERATE, HIGH, VERY HIGH or EXTREME.
Used by: showUvReading

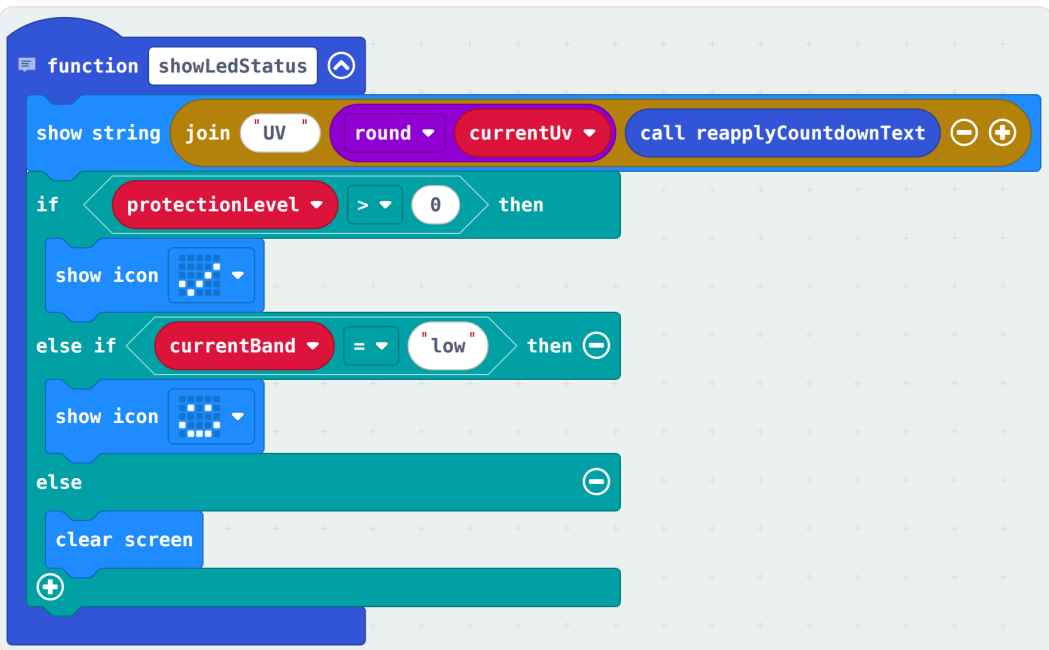

showLedStatus A step of the program
When A is pressed during a wait: the UV number and the time until reapply scroll across the lights, then the usual icon comes back.
Used by: wait5Minutes · **Uses:** reapplyCountdownText

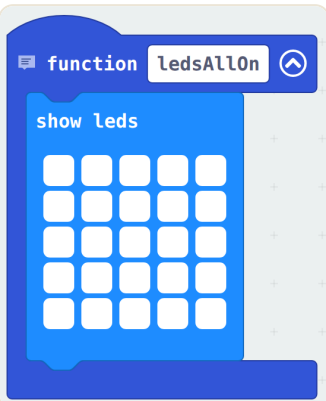

ledsAllOn A step of the program
Turns all 25 lights on: the flash of an alert.
Used by: flashAndBeepUntilA

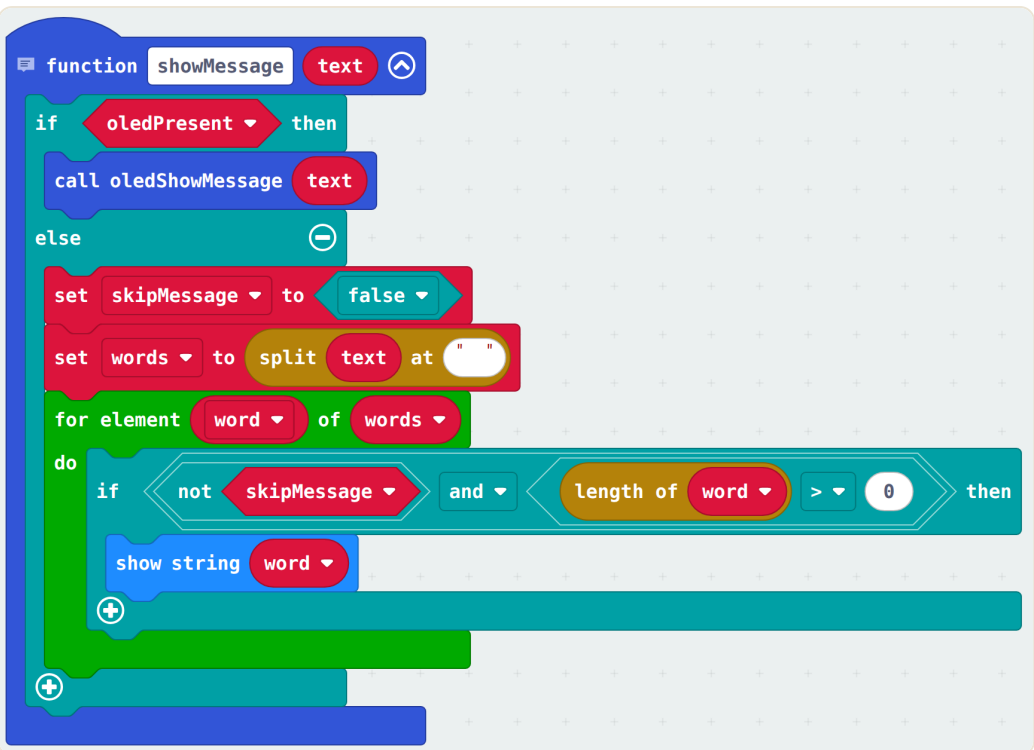

showMessage A step of the program · needs: text
Shows a message: on the screen if there is one, otherwise scrolled across the lights one word at a time. Pressing A skips the rest.
Used by: showCheckSensor, moderateOrHighUv, veryHighUv, extremeUv, showReapplySunscreen · **Uses:** oledShowMessage



oledShowMessage A step of the program · needs: text
The middle of the screen: a message, split over three lines of 21 letters.
Used by: showHappyFace, alreadyProtected, deviceTurnsOn, standbyUntilButton, showMessage · **Uses:** oledWriteRow




oledFooter A step of the program · needs: text
The bottom line of the screen: the countdowns.
Used by: showCheckSensor, wait5Minutes, deviceTurnsOn, standbyUntilButton · **Uses:** oledWriteRow


6 Sound and the tapping arm

5 blocks

The beeps, and the small motor (a servo) whose arm taps your wrist when the sun is extreme.

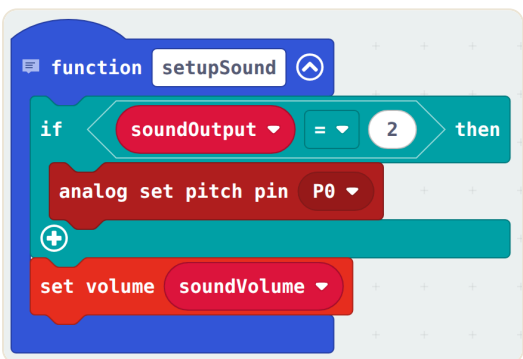


setupSound A step of the program
Gets the sound ready: the micro:bit's built-in speaker, or a buzzer on pin P0, at the volume from the settings.
Used by: on start

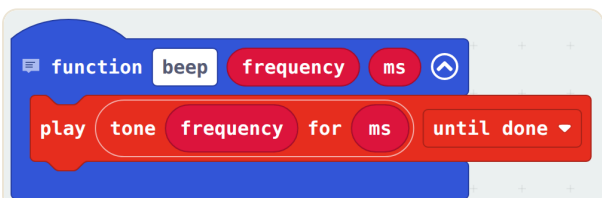


beep A step of the program · needs: frequency, ms
One beep. It needs how high the beep should sound (the frequency) and how long it lasts (in milliseconds).
Used by: showCheckSensor, flashAndBeepUntilA



servoAngle A step of the program · needs: angle
Turns the motor's arm to an angle. The motor's signal wire is on pin P2.
Used by: servoOff, servoTapOnce

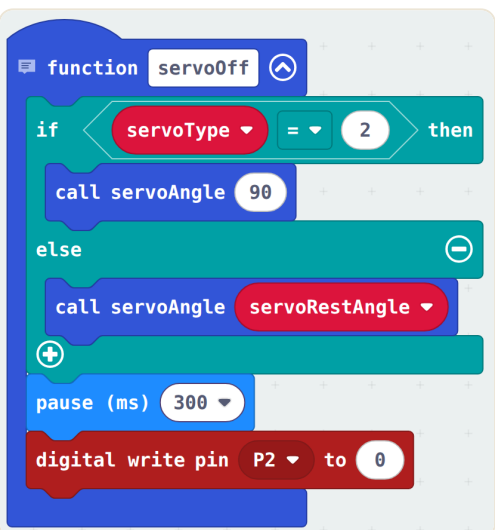

servoOff A step of the program
Moves the arm back to rest, then stops sending it signals so it is silent and uses no power.
Used by: deviceTurnsOn, deviceTurnsOff, tapArmUntilA · **Uses:** servoAngle

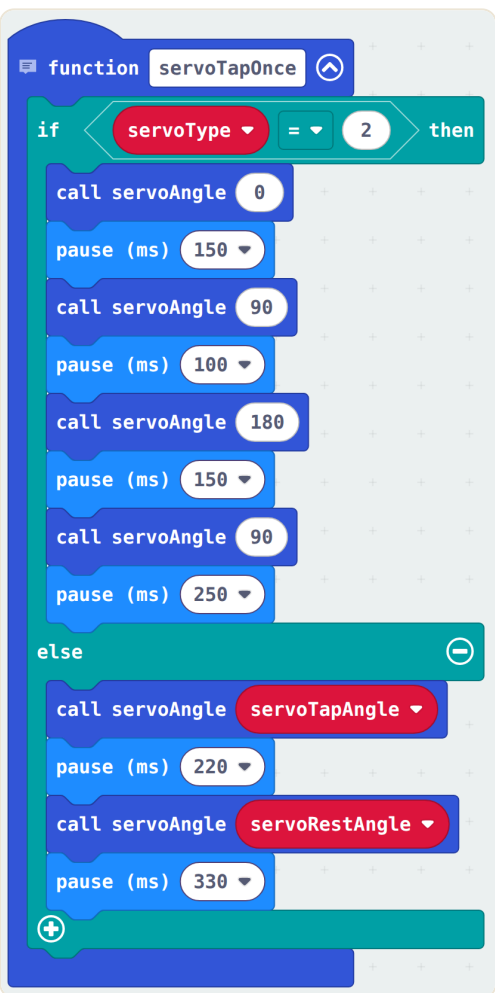


servoTapOnce A step of the program
One tap of the arm, about half a second long.
Used by: tapArmUntilA · **Uses:** servoAngle

7 Talking to the phone

12 blocks


How the wearable and the phone app talk over Bluetooth. The phone sends the online UV index for where you are; the wearable sends back what it is doing every two seconds and reports each event, such as sunscreen applied. The same messages also go down the USB cable, so everything can be tested on a laptop. Every message ends with a checksum, so a message damaged on the way is thrown away instead of being misread. The app can also switch on show mode, where the wearable performs the whole flowchart by itself.

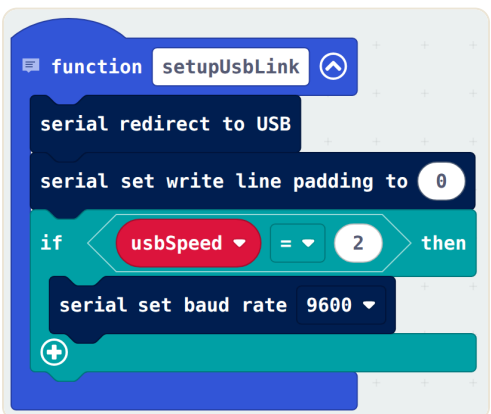


setupUsbLink A step of the program
Gets the USB link to a laptop ready: the same messages as Bluetooth go down the cable, without padding spaces, and at the slow speed if the settings ask for it.
Used by: on start




advertiseOverBluetooth A step of the program
Makes the wearable visible over Bluetooth so a phone can connect.
Used by: on start

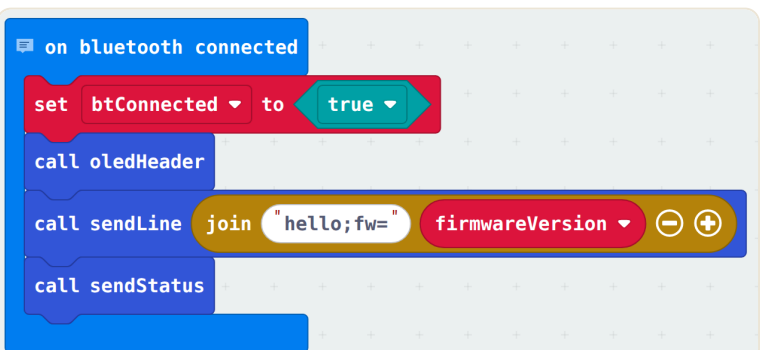


on bluetooth connected Runs when a phone connects
A phone has connected: say hello and send it the current status straight away.
Uses: oledHeader, sendLine, sendStatus

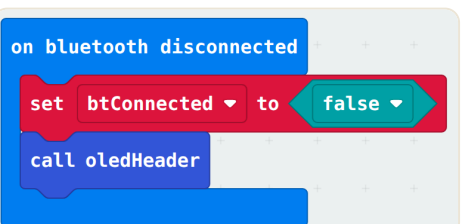


on bluetooth disconnected
Runs when the phone goes away
The phone has gone: remember that, and update the screen.
Uses: oledHeader

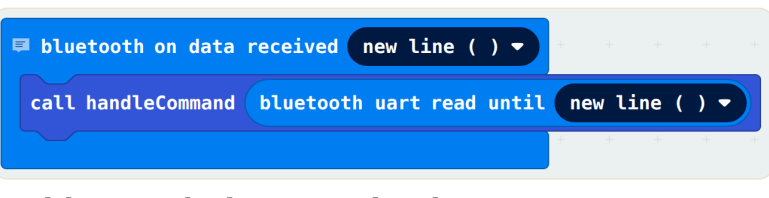


on bluetooth data received Runs when a line of text arrives from the phone
A line of text arrived from the phone: pass it to the block that reads commands.
Uses: handleCommand

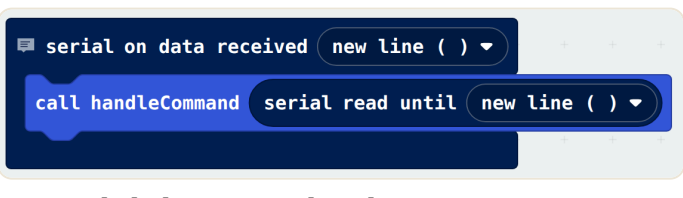

on serial data received Runs when a line of text arrives over the USB cable
A line of text arrived over the USB cable: pass it to the block that reads commands.
Uses: handleCommand

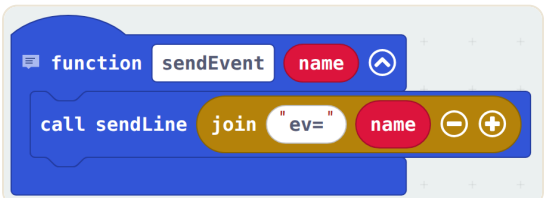


sendEvent A step of the program · needs: name
Tells the app something happened: sunscreen applied, a reminder, went inside, sleep, a sensor problem, on or off.
Used by: extremeUv, sunscreenApplied, showReapplySunscreen, deviceTurnsOn, deviceTurnsOff, standbyUntilButton · **Uses:** sendLine

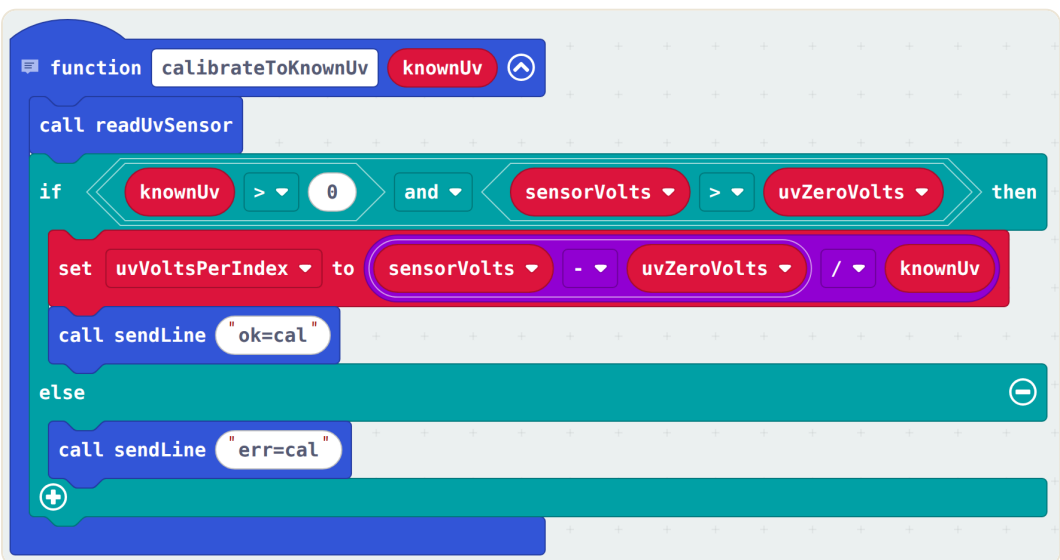

calibrateToKnownUv A step of the program · needs: knownUv
Corrects the sensor's scale. With the sensor in the sun, the app sends today's real UV index and the wearable adjusts its maths so it reads the same.
Used by: handleCommand · **Uses:** readUvSensor, sendLine



every 2000 ms Runs every 2 seconds in the background
Every 2 seconds, send the app a status line.
Uses: sendStatus

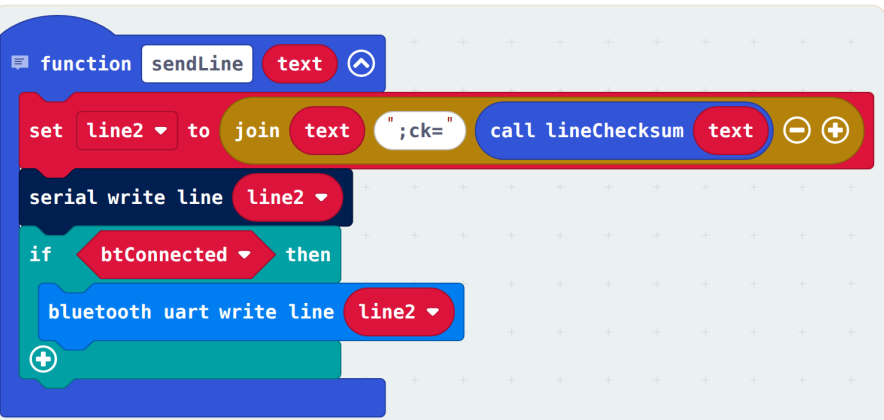

sendLine A step of the program · needs: text
Sends one message, with its checksum on the end, down the USB cable and to the phone when one is connected.
Used by: showCheckSensor, on bluetooth connected, sendEvent, sendStatus, handleCommand, calibrateToKnownUv · **Uses:** lineChecksum

7 Talking to the phone (continued)

12 blocks

How the wearable and the phone app talk over Bluetooth. The phone sends the online UV index for where you are; the wearable sends back what it is doing every two seconds and reports each event, such as sunscreen applied. The same messages also go down the USB cable, so everything can be tested on a laptop. Every message ends with a checksum, so a message damaged on the way is thrown away instead of being misread. The app can also switch on show mode, where the wearable performs the whole flowchart by itself.

```
function sendStatus
  set reapplySeconds to -1
  if reapplyTimerRunning then
    set msLeft to reapplyDueTime - running time (ms)
    set reapplySeconds to max of 0 and floor msLeft / 1000
  set onlineText to -1
  if call phoneSendingOnlineUv then
    set onlineText to call formatNumber onlineUv
  set status to join st= stateName
  set status to join status uv= call formatNumber currentUv
  set status to join status sen= call formatNumber max of 0 and sensorUv
  set status to join status on= onlineText
  set status to join status band= call uvBand currentUv
  set status to join status spf= reapplySeconds
  set status to join status spf= sunscreenCount
  set status to join status fve= firmwareVersion
  if showMode then
    set status to join status demo=2
  else if demoMode then
    set status to join status demo=1
  else
    set status to join status demo=0
  set status to join status pv= call formatNumber sensorVolts
  call sendLine status
```

sendStatus A step of the program
Builds the status line the app shows: what the device is doing, the UV values, the level, the seconds until sunscreen is due, how many applications so far, the program version, whether demo timings or show mode are on, and the voltage on the sensor pin.
Used by: on bluetooth connected, every 2000 ms, handleCommand · **Uses:** phoneSendingOnlineUv, uvBand, sendLine, formatNumber

```
function handleCommand command
  set parts to split call cleanText command at =
  set key to parts get value at 0
  if length of array parts > 1 then
    set value to parts get value at 1
  call debugLog join cmd key value
  if key = uv then
    set newUv to parse to number value
    if newUv >= 0 and newUv <= 20 then
      set onlineUv to newUv
      set onlineUvTime to running time (ms)
      call sendLine ok=uv
    else
      call sendLine err=uv
  else if key = ack then
    set ackPressed to true
    set anyButtonPressed to true
    call sendLine ok=ack
  else if key = zero then
    call readUvSensor
    set uvZeroVolts to sensorVolts
    call sendLine join ok=zero;v= call formatNumber uvZeroVolts
  else if key = cal then
    call calibrateToKnownUv parse to number value
  else if key = demo then
    set demoMode to value < 0
    set showMode to value = 2
    call applyTimings
    call sendLine ok=demo
  else if key = screen then
    if value = 1 then
      set oledMode to 2
    call setupOled
    if oledPresent then
      call oledHeader
      call sendLine ok=screen
    else
      call sendLine err=screen
  else if key = power then
    if value = 0 and deviceOn then
      call deviceTurnsOff
    else if value = 1 and not deviceOn then
      call deviceTurnsOn
  else if key = debug then
    set debugMode to value = 1
    call sendLine ok=debug
  else if key = vol then
    set soundVolume to parse to number value
    set volume soundVolume
    call sendLine ok=vol
```

handleCommand A step of the program · needs: command
Reads a command from the app or a laptop and acts on it: a new online UV value, done, calibrate the sensor, demo timings or show mode on or off, switch off or on, extra detail on or off, the beep volume, look for the screen again, ping, or send the status now.
Used by: on bluetooth data received, on serial data received · **Uses:** readUvSensor, deviceTurnsOn, deviceTurnsOff, oledHeader, sendLine, sendStatus, calibrateToKnownUv, applyTimings, formatNumber, cleanText, debugLog, setupOled

8 Helpers

12 blocks

Small jobs the other blocks share: the maths for each type of sensor, turning minutes into the milliseconds the program counts in, sorting numbers, tidying up numbers, times and text, and the checksum that goes on the end of every message.

```
function applySensorPreset
  set uvZeroVolts to 0
  set uvVoltsPerIndex to 0.1
  if uvSensorType = 2 then
    set uvZeroVolts to 1
    set uvVoltsPerIndex to 0.12
  if uvSensorType = 3 then
    set uvVoltsPerIndex to 0.22
```

applySensorPreset A step of the program
The maths for each type of UV sensor: which voltage means zero, and how many volts make one point of UV index.
Used by: on start

```
function applyTimings
  if demoMode then
    set waitMs to 10000
    set reapplyMs to 60000
    set alertGiveUpMs to 20000
    set tapMaxMs to 15000
  else
    set waitMs to waitMinutes * 60000
    set reapplyMs to reapplyHours * 3600000
    set alertGiveUpMs to alertGiveUpMinutes * 60000
    set tapMaxMs to tapMaxMinutes * 60000
```

applyTimings A step of the program
Turns the minutes and hours from the settings into the milliseconds the program counts in. Demo timings are much shorter, so the whole flowchart can be shown in a few minutes.
Used by: handleCommand, on start

```
function sortNumbers list
  for sortIndex from 0 to length of array list - 1
  do
    set movingValue to list get value at sortIndex + 1
    set slot to sortIndex
    while slot >= 0 and list get value at slot > movingValue
    do
      list set value at slot + 1 to list get value at slot
      set slot to slot - 1
    list set value at slot + 1 to movingValue
```

sortNumbers A step of the program · needs: list
Puts a list of numbers in order from smallest to largest. It is used to find the middle sensor reading.
Used by: readUvSensor

```
function formatNumber n
  set rounded3 to round n * 10 / 10
  set wholePart to floor absolute of rounded3
  set tenthPart to round absolute of rounded3 - wholePart * 10
  if rounded3 < 0 then
    set sign to -
  return join sign wholePart . tenthPart
```

formatNumber Works out a piece of text · needs: n
Writes a number with one decimal place: 7.25 becomes 7.3.
Used by: showCheckSensor, showUvReading, sendStatus, handleCommand


```
function isBlank code
  return code = 32 or code = 13 or code = 10
```

isBlank A yes-or-no question the program asks · needs: code
Asks: is this character a space or the end of a line?
Used by: cleanText


8 Helpers (continued)

12 blocks


Small jobs the other blocks share: the maths for each type of sensor, turning minutes into the milliseconds the program counts in, sorting numbers, tidying up numbers, times and text, and the checksum that goes on the end of every message.

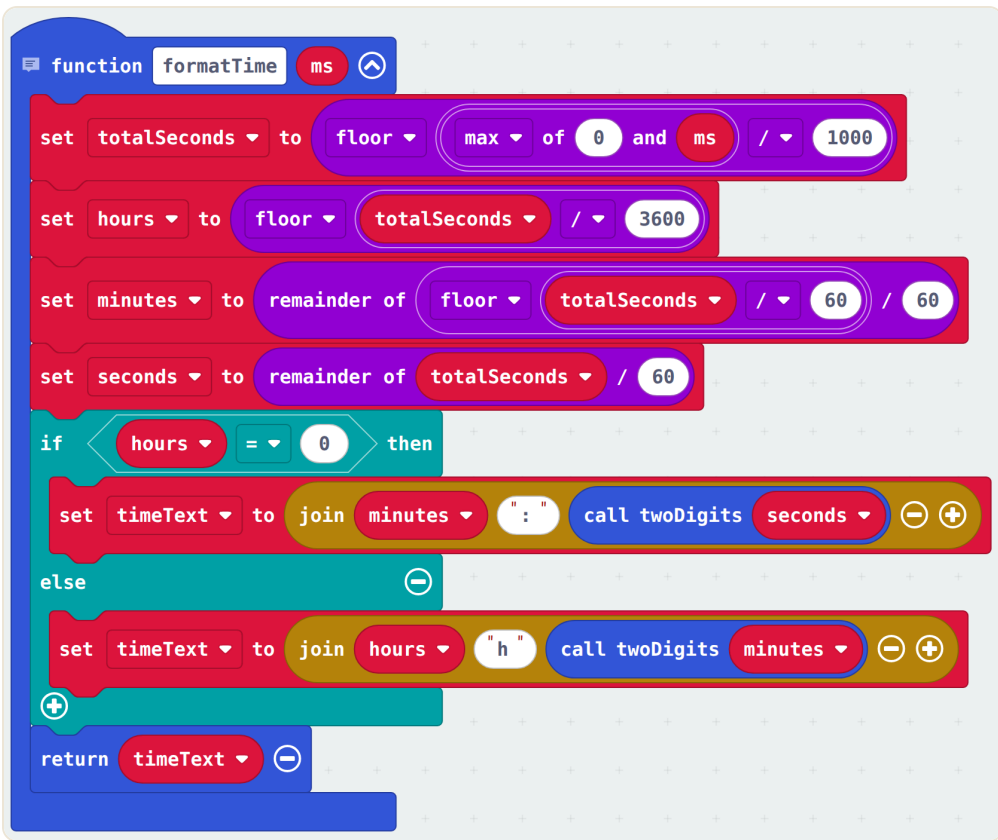


formatTime Works out a piece of text · needs: ms
Writes a time the way a clock would: 1:30, or 2h00.
Used by: alreadyProtected, wait5Minutes, reapplyCountdownText · **Uses:** twoDigits

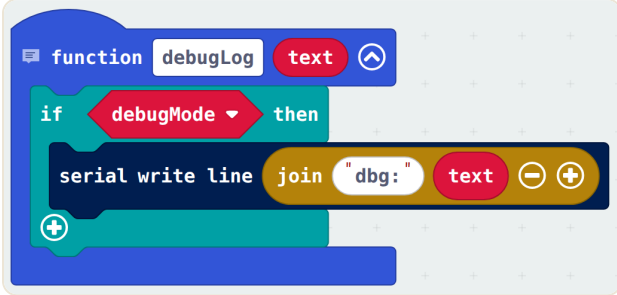


debugLog A step of the program · needs: text
Extra detail lines for a laptop, sent only after the command debug=1.
Used by: readUvSensor, handleCommand

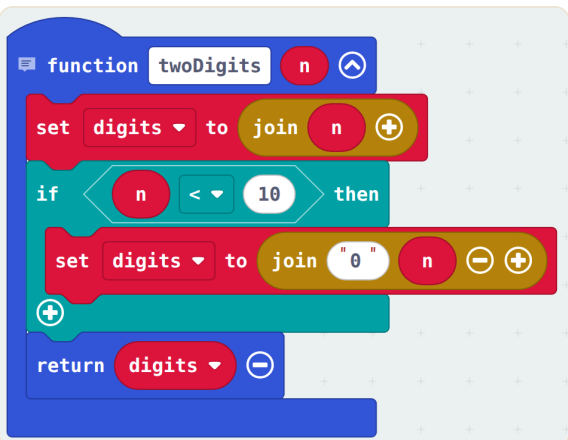


twoDigits Works out a piece of text · needs: n
Adds a leading zero: 7 becomes 07.
Used by: formatTime

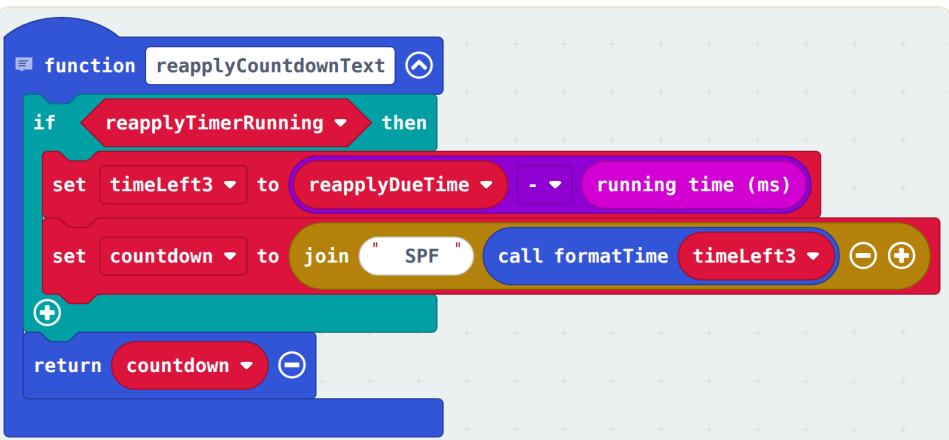


reapplyCountdownText Works out a piece of text
The short SPf 1h23 text for the bottom of the screen while the sunscreen timer is running.
Used by: wait5Minutes, showLedStatus · **Uses:** formatTime

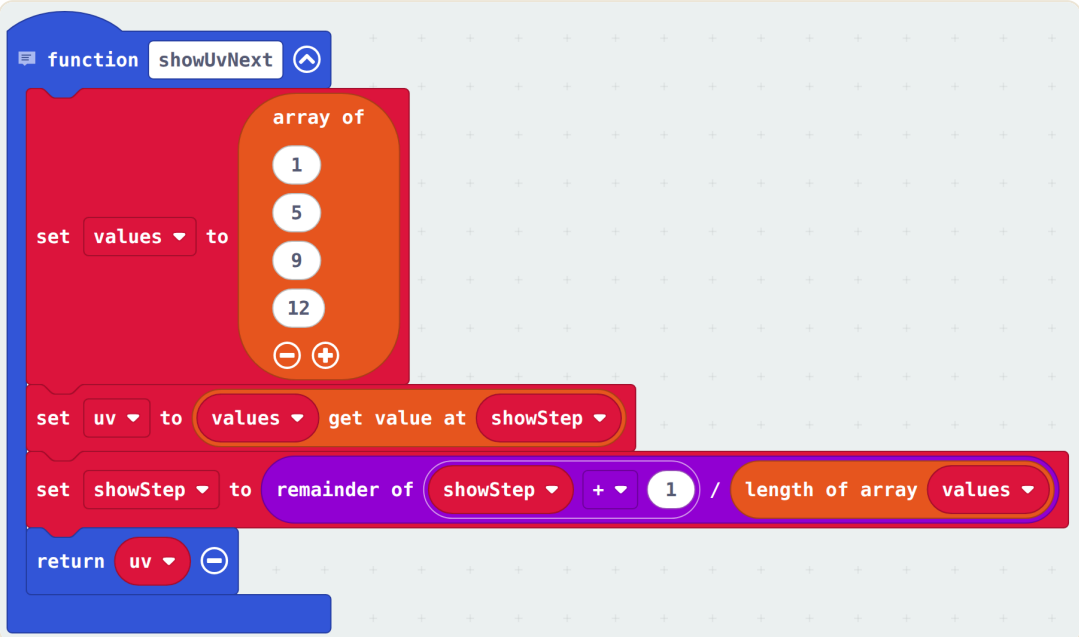

showUvNext Works out a number
Show mode's pretend UV values: 1, 5, 9 and 12 in turn, one per trip round the flowchart, so the device walks through low, moderate, very high and extreme without any sun.
Used by: readUvSensor

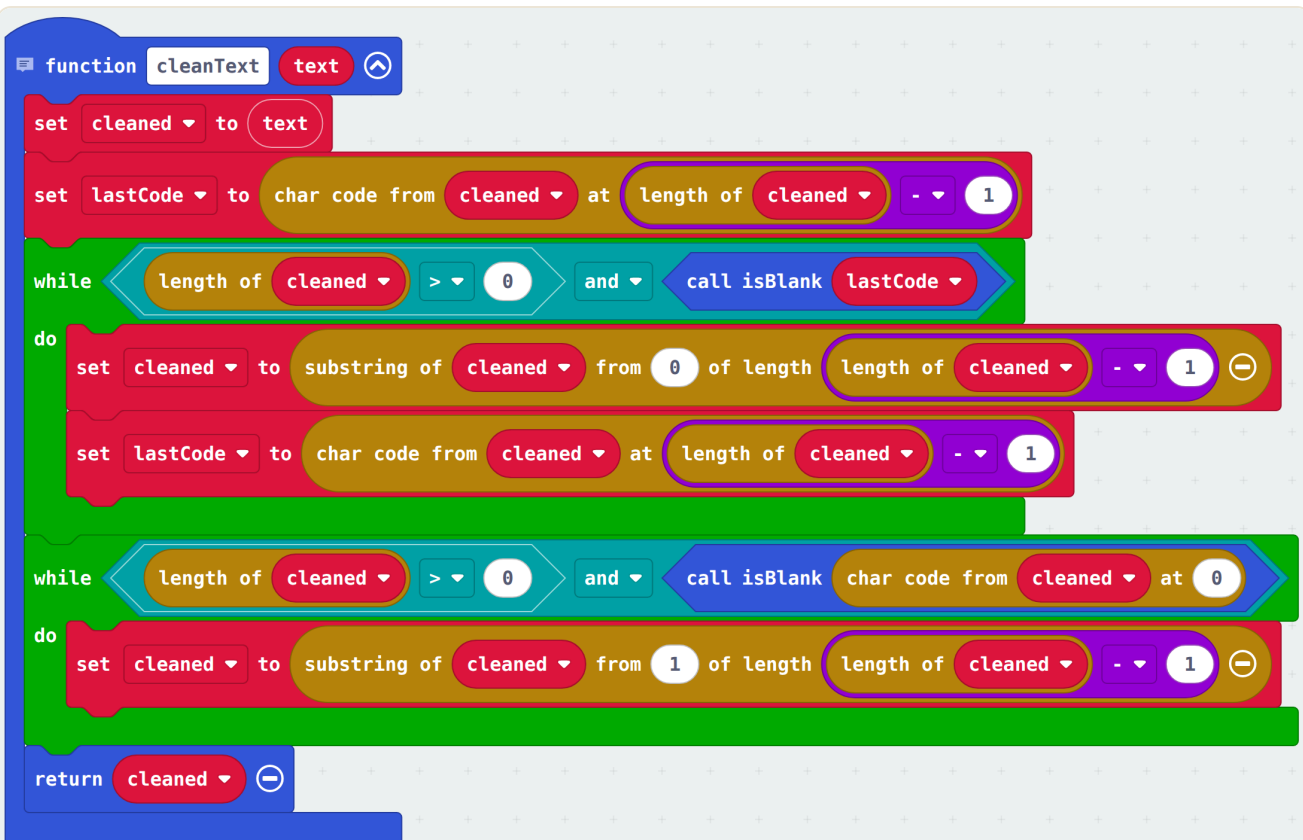

cleanText Works out a piece of text · needs: text
Removes stray spaces and line endings from a command before it is read.
Used by: handleCommand · **Uses:** isBlank

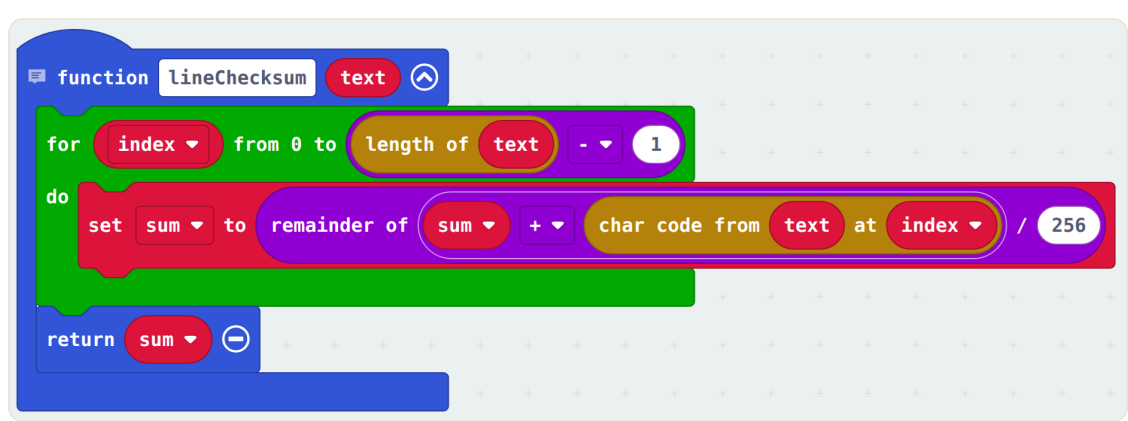


lineChecksum Works out a number · needs: text
Adds up the character codes of a message (0 to 255). It goes on the end of every message, so the app can tell when a message was damaged on the way and ignore it.
Used by: sendLine

9 The optional screen

13 blocks


Only used if a small screen is added to the wearable. These blocks draw letters and numbers on it dot by dot. The device works exactly the same without a screen.

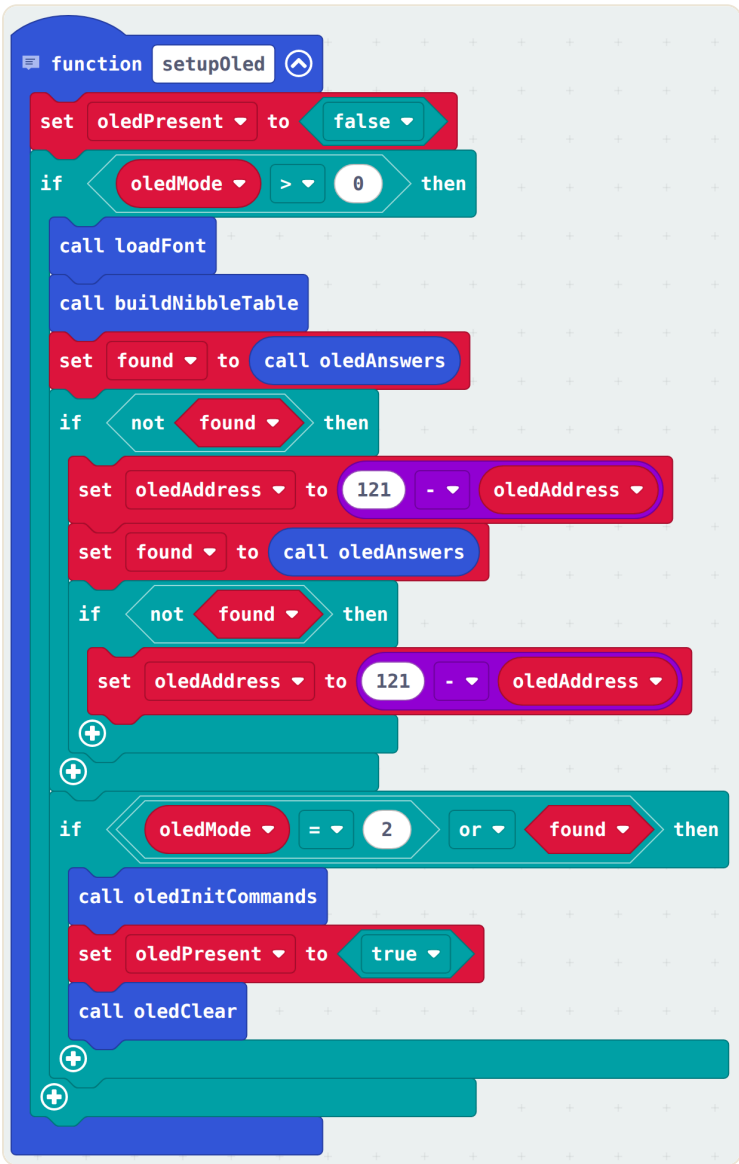


setupOled A step of the program
Looks for a screen at the usual address and then at the other one, and gets it ready. If there is no screen, everything else works the same.
Used by: handleCommand, on start · **Uses:** oledAnswers, oledInitCommands, loadFont, buildNibbleTable, oledClear




oledCommand A step of the program · needs: command
Sends the screen one instruction.
Used by: oledAnswers, oledInitCommands, oledSetPosition

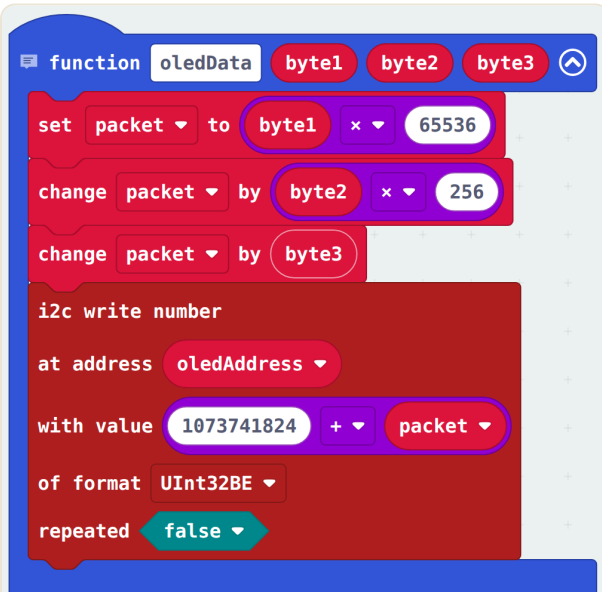


oledData A step of the program · needs: byte1, byte2, byte3
Sends the screen three columns of dots.
Used by: oledClear, oledWriteText, oledWriteBig

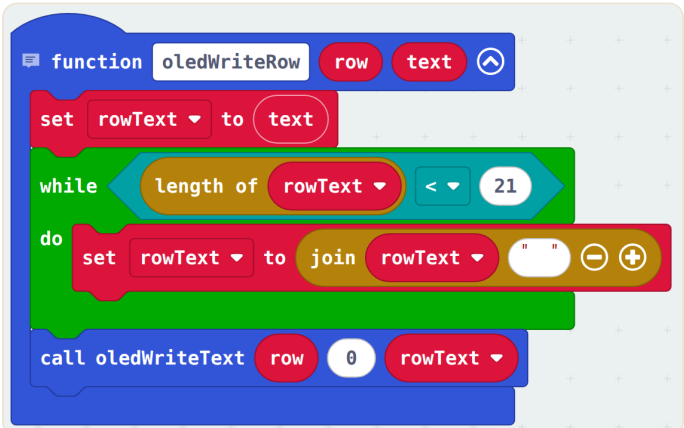


oledWriteRow A step of the program · needs: row, text
Writes a whole row, filling the rest with spaces so old text is wiped.
Used by: deviceTurnsOff, showUvReading, oledHeader, oledShowMessage, oledFooter · **Uses:** oledWriteText

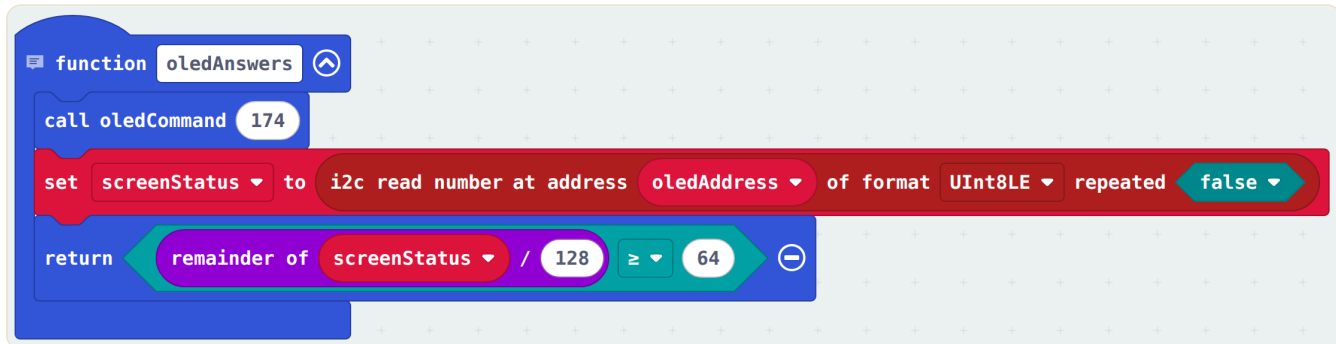


oledAnswers A yes-or-no question the program asks
Asks whether a screen is there: after the display-off instruction a real screen answers with a status byte the program recognises; an empty address answers with nothing.
Used by: setupOled · **Uses:** oledCommand

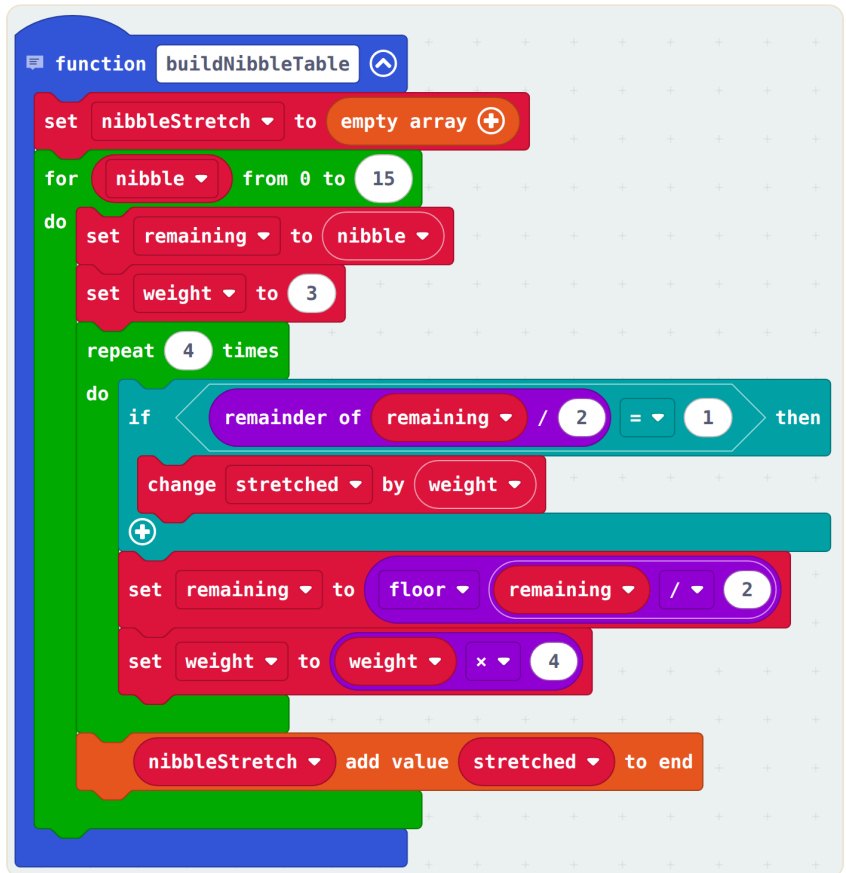


buildNibbleTable A step of the program
A lookup table for double-size letters: every dot is doubled sideways.
Used by: setupOled

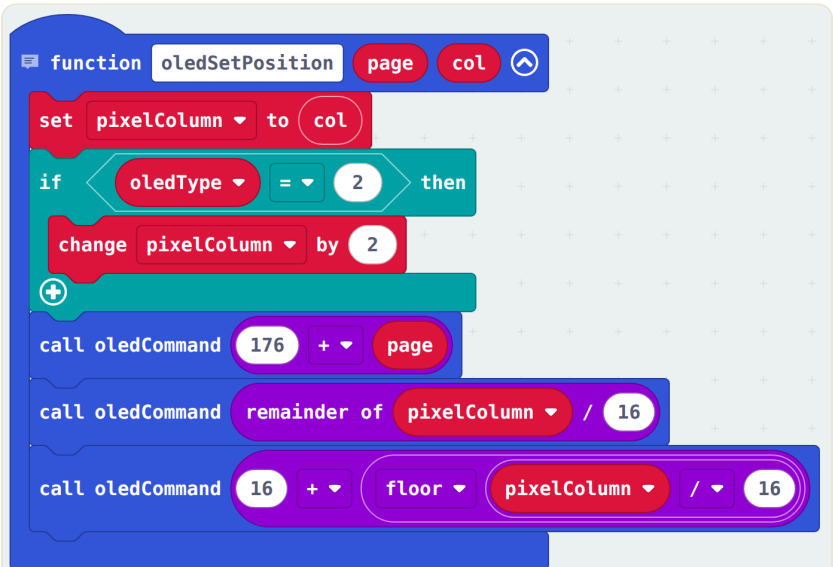


oledSetPosition A step of the program · needs: page, col
Moves to a place on the screen: a row from 0 to 7 and a column from 0 to 127.
Used by: oledClear, oledWriteText, oledWriteBig · **Uses:** oledCommand

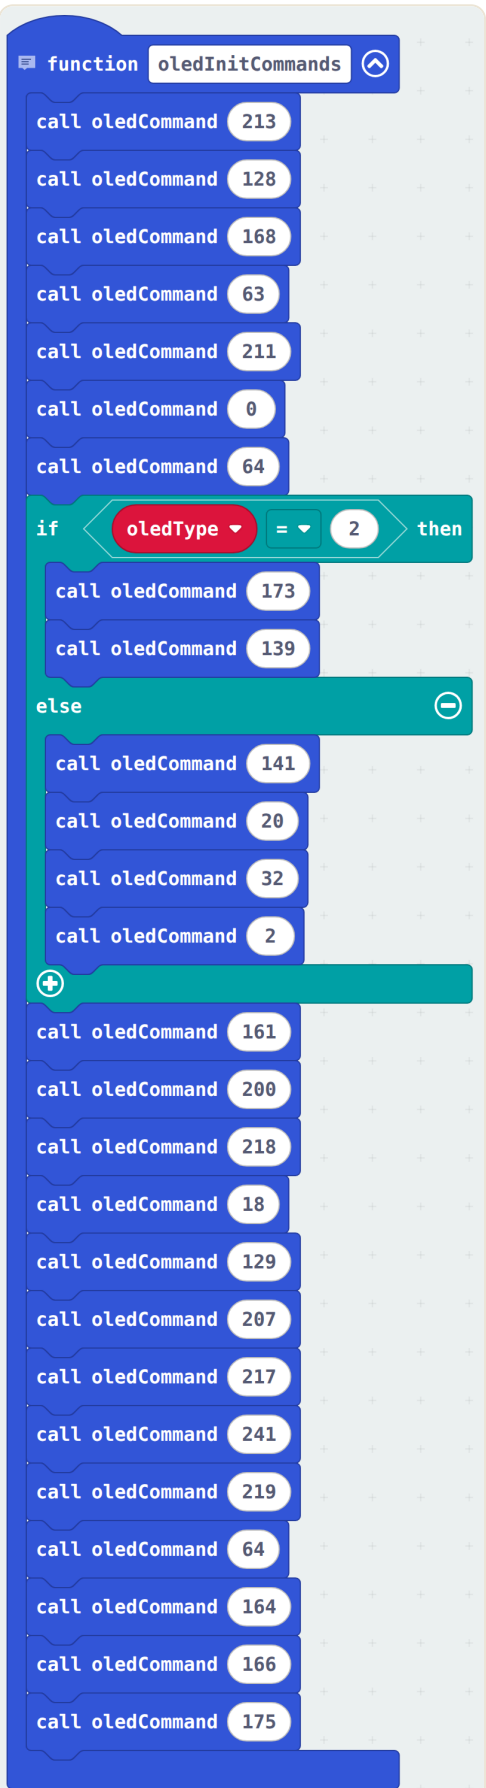


oledInitCommands A step of the program
The standard list of instructions that wakes up a 128 by 64 dot screen.
Used by: setupOled · **Uses:** oledCommand

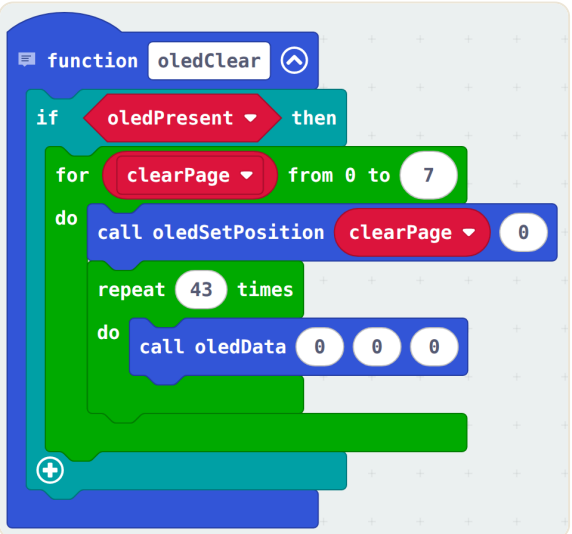


oledClear A step of the program
Blanks the whole screen.
Used by: deviceTurnsOff, setupOled · **Uses:** oledData, oledSetPosition

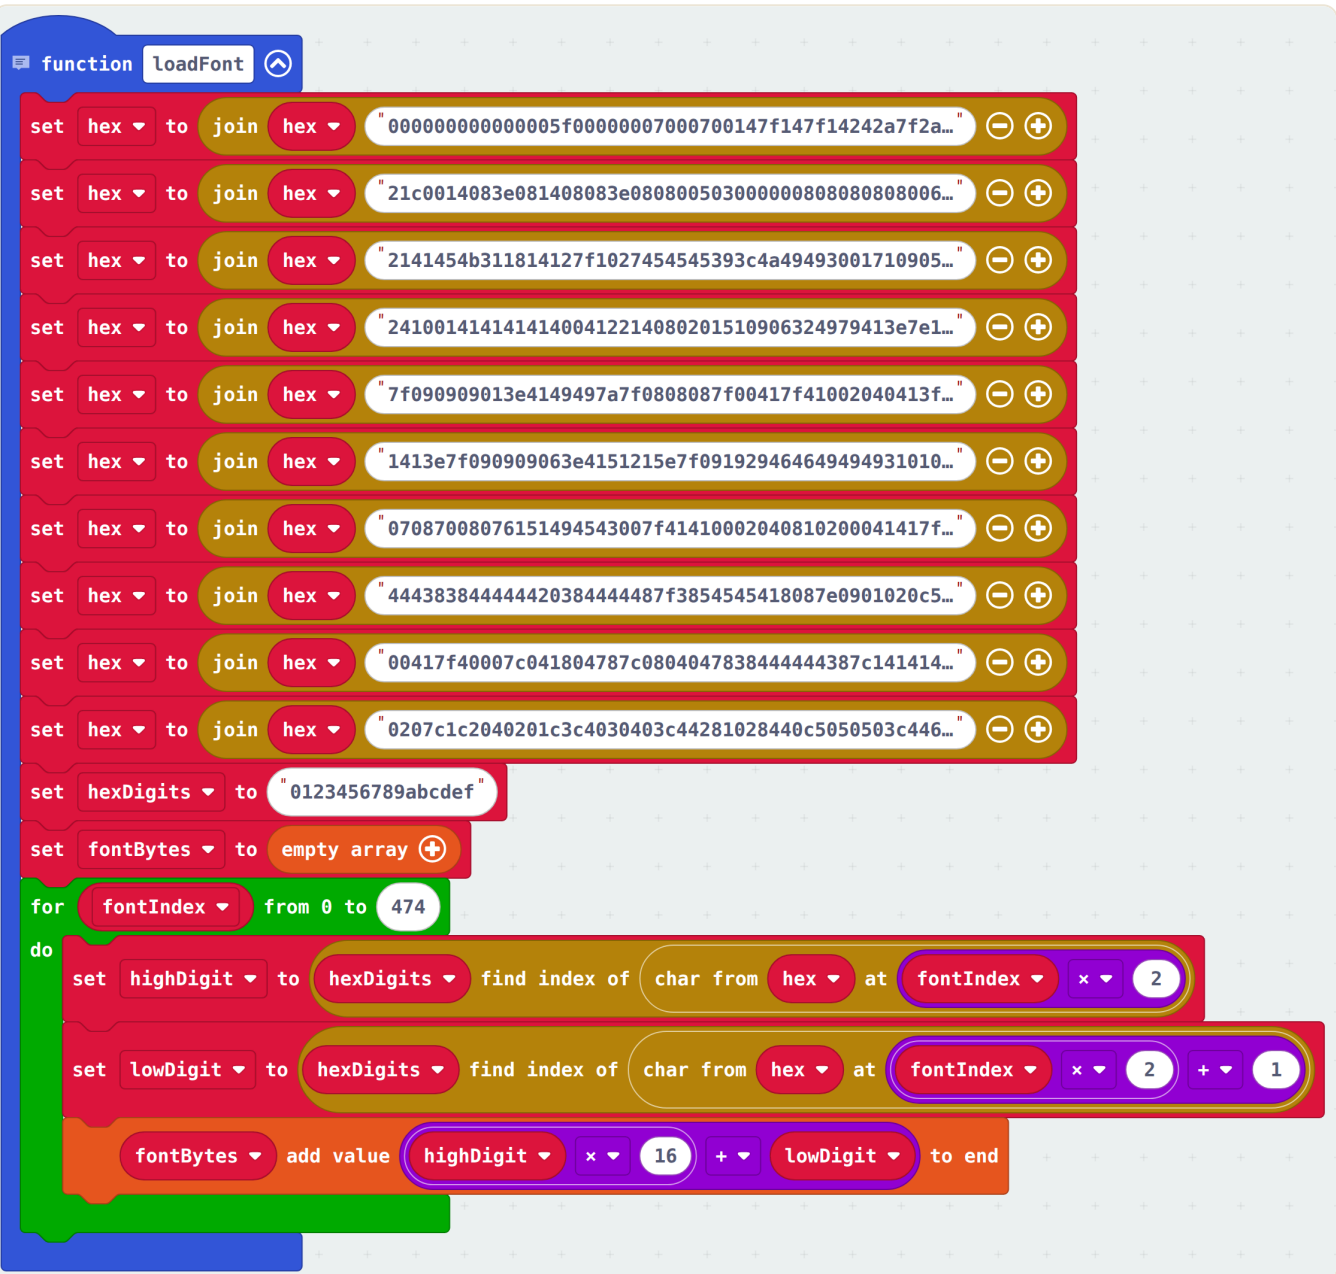

loadFont A step of the program
The shape of every letter, number and symbol, 5 dots wide by 7 tall, stored as text and unpacked when the device starts.
Used by: setupOled

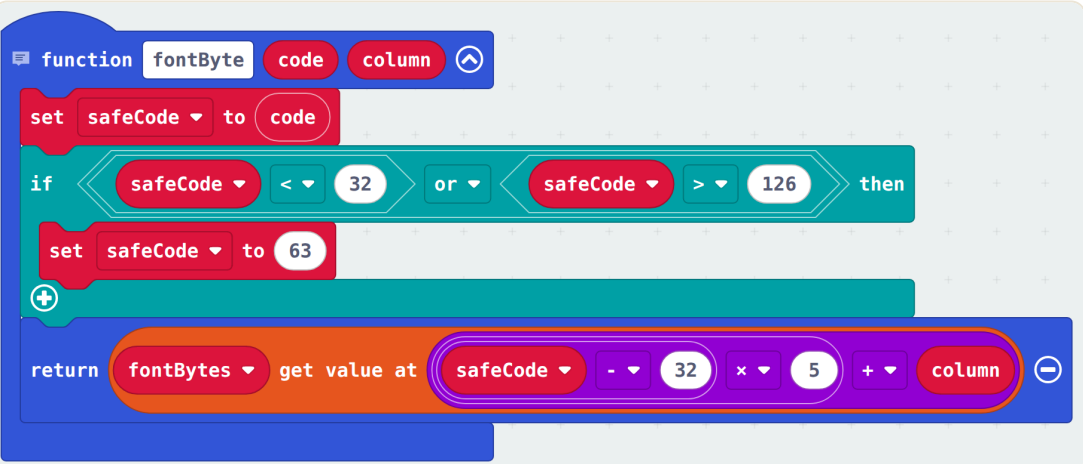

fontByte Works out a number · needs: code, column
One column of dots, out of five, of one character.
Used by: oledWriteText, oledWriteBig

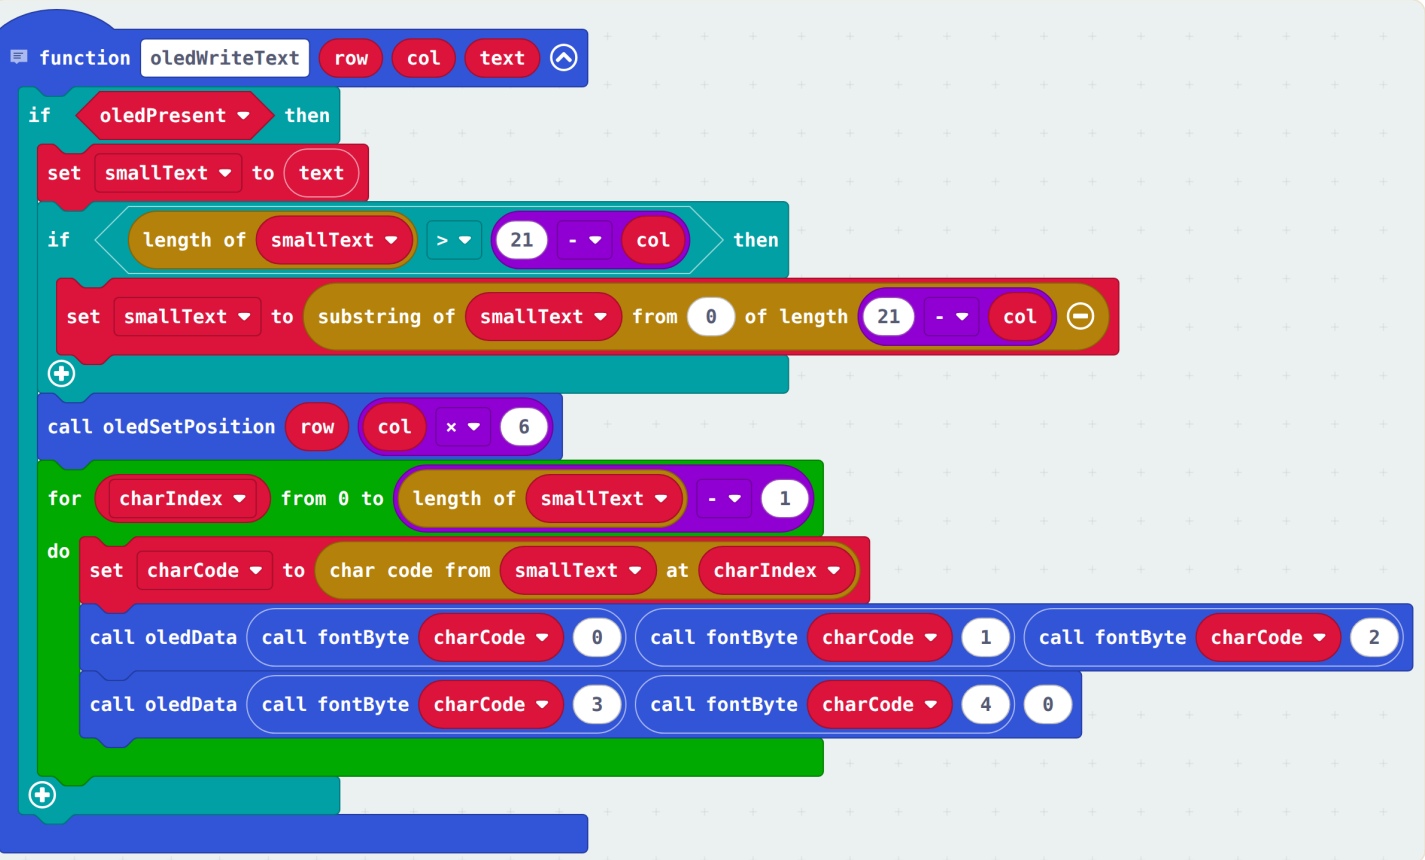

oledWriteText A step of the program · needs: row, col, text
Writes small text: up to 21 characters on each of 8 rows.
Used by: oledWriteRow · **Uses:** fontByte, oledData, oledSetPosition

```
function oledWriteBig row col text
if oledPresent then
  set bigText to text
  if length of bigText > 10 then
    set bigText to substring of bigText from 0 of length 10
  for half from 0 to 1
  do
    call oledSetPosition row + half col x 6
    for bigCharIndex from 0 to length of bigText - 1
    do
      set bigCharCode to char code from bigText at bigCharIndex
      for columnIndex from 0 to 5
      do
        if columnIndex < 5 then
          set glyphColumn to call fontByte bigCharCode columnIndex
          if half = 0 then
            stretchedColumns add value nibbleStretch get value at remainder of glyphColumn / 16 to end
          else
            stretchedColumns add value nibbleStretch get value at floor glyphColumn / 16 to end
          if half = 0 then
            call oledData stretchedColumns get value at 0 stretchedColumns get value at 0 stretchedColumns get value at 1
            call oledData stretchedColumns get value at 1 stretchedColumns get value at 2 stretchedColumns get value at 2
            call oledData stretchedColumns get value at 3 stretchedColumns get value at 3 stretchedColumns get value at 4
            call oledData stretchedColumns get value at 4 stretchedColumns get value at 5 stretchedColumns get value at 5
```

oledWriteBig A step of the program - needs: row, col, text
Writes double-size text, two rows tall and up to 10 characters. It is used for the big UV number.
Used by: showUvReading · Uses: fontByte, oledData, oledSetPosition