# **BELKIN: WI-FI DEFAULT PASSWORD**

By Numlock

#### Belkin.XXXX

WMAC 94:44:52:XX:XX

F7D1301 F7D3302 F7D3402 F7D4301 F7D7301 MODELLI

PASSWORD 8 caratteri esadecimale maiuscolo

Ordine:

WLAN MAC \_\_:\_:62:38:51:74

Conversione:

0123456789ABCDEF

024613578ACE9BDF

ES.



7285D5E9 12345678 0123456789ABCDEF WLAN MAC : :62:38:51:74 94:44:52:89:D7:E5 7285D5E9 024613578ACE9BDF 7483B3DA

## Belkin XXXXXX

08:86:3B:XX:XX:XX WMAC

MODELLI F5D7234-4

PASSWORD 8 caratteri esadecimale maiuscolo


Ordine:

WLAN MAC : :62:38:51:74

Conversione:

0123456789ABCDEF 024613578ACE9BDF

ES.

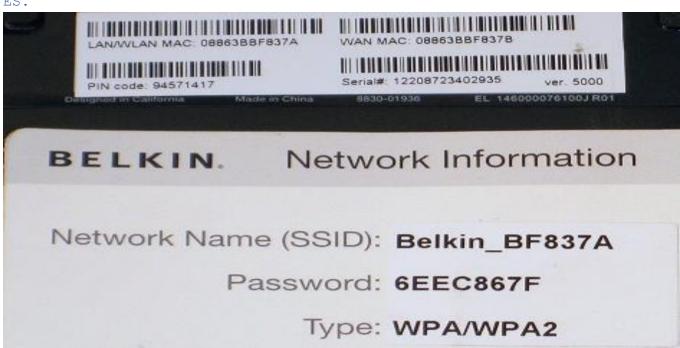

WLAN MAC : :62:38:51:74 0123456789ABCDEF 12345678 3BBA837F 3BBA837F 08:86:3B:BF:83:7A 024613578ACE9BDF 6EEC867F

#### belkin.xxx

WMAC 08:86:3B:XX:XX:XX EC:1A:59:XX:XX

MODELLI F9J1101 F9J1102 F9J1105 F9K1001 F9K1002 F9K1003 F9K1004 F9K1105

PASSWORD 8 caratteri esadecimale minuscolo

Ordine:

MAC : :62:38:51:74 dove MAC = WLAN MAC +1

Conversione:

0123456789ABCDEF

944626378ace9bdf

ES.



Casi particolari:

MAC : :62:38:51:74 dove MAC = WLAN MAC +2

MAC : : 2:38:5\*:74 dove MAC = WLAN MAC +1 \* = 1 = 6

### belkin.xxxx

WMAC 94:44:52:XX:XX

MODELLI F7D2301 F7D4402 F7D5301 F7D8301 PASSWORD 8 caratteri esadecimale minuscolo

Ordine:

Conversione:

0123456789ABCDEF 944626378ace9bdf

ES.

