

# Optimal Control of SOEC's and sensitivity towards degradation

**Analysis of the impact of degradation on the optimal control of SOEC's, using finite volume method and sensitivity analysis**

## Author:

Oliver Mohr (s214703)

s214703@dtu.dk

olmo@dynelectro.com

## Supervisors:

**DTU Energy:** Henrik Lund Frandsen (henlf@dtu.dk)  
Rafael Nogueira Nakashima (rafnn@dtu.dk)

**DTU Compute:** Tobias Kasper Skovborg Ritschel (tobk@dtu.dk)

**Dynelectro:** Thomas Erik Lyck Smitshuysen (thomas@dynelectro.dk)



# Contents

|          |                                                             |           |
|----------|-------------------------------------------------------------|-----------|
| <b>1</b> | <b>Abstract</b>                                             | <b>1</b>  |
| <b>2</b> | <b>Introduction</b>                                         | <b>3</b>  |
| 2.1      | A Simple Example of Control Freedom . . . . .               | 3         |
| <b>3</b> | <b>Nomenclature and Assumptions</b>                         | <b>5</b>  |
| 3.1      | List of Assumptions . . . . .                               | 5         |
| 3.1.1    | Geometry, flow, and thermodynamics . . . . .                | 5         |
| 3.1.2    | Electrochemistry and degradation . . . . .                  | 5         |
| 3.1.3    | Quasi-steady coupling and numerical solution . . . . .      | 5         |
| 3.1.4    | Economic boundary conditions (scenario-dependent) . . . . . | 6         |
| 3.2      | List of Symbols . . . . .                                   | 6         |
| <b>4</b> | <b>Physical Modelling</b>                                   | <b>11</b> |
| 4.1      | Modelling SOEC . . . . .                                    | 11        |
| 4.1.1    | Introduction . . . . .                                      | 11        |
| 4.1.2    | Basics of SOEC . . . . .                                    | 11        |
| 4.1.3    | Energy Balance . . . . .                                    | 17        |
| 4.2      | Modelling degradation . . . . .                             | 19        |
| 4.2.1    | Introduction . . . . .                                      | 19        |
| 4.2.2    | Nickel migration . . . . .                                  | 20        |
| 4.2.3    | Interconnect Oxidation . . . . .                            | 21        |
| 4.2.4    | Nickel Agglomeration . . . . .                              | 21        |
| <b>5</b> | <b>Optimal Control and Solution Method</b>                  | <b>23</b> |
| 5.1      | Optimal Control Problem . . . . .                           | 23        |
| 5.1.1    | Introduction . . . . .                                      | 23        |
| 5.1.2    | Revenue . . . . .                                           | 24        |
| 5.1.3    | Salvation . . . . .                                         | 24        |
| 5.1.4    | H <sub>2</sub> storage and delivery agreement . . . . .     | 25        |
| 5.2      | Building the numerical solver . . . . .                     | 27        |
| 5.2.1    | Introduction . . . . .                                      | 27        |
| 5.2.2    | Finite volume method (FVM) . . . . .                        | 27        |
| 5.2.3    | FVM model validation and Grid independence . . . . .        | 29        |

|           |                                                 |           |
|-----------|-------------------------------------------------|-----------|
| 5.2.4     | Implicit Euler method (ODE solver)              | 30        |
| 5.2.5     | Validation of the ODE solver                    | 31        |
| 5.2.6     | Solving the Optimal Control Problem             | 32        |
| <b>6</b>  | <b>Results and Findings</b>                     | <b>35</b> |
| 6.1       | Introduction                                    | 35        |
| 6.2       | Baseline optimization result                    | 35        |
| 6.2.1     | Allowing more control freedom                   | 36        |
| 6.3       | Constant delivery rate                          | 37        |
| 6.3.1     | Freedom on all controls                         | 38        |
| 6.4       | 24 hour, varying power price                    | 39        |
| <b>7</b>  | <b>Discussion and Conclusion</b>                | <b>41</b> |
| 7.1       | Introduction                                    | 41        |
| 7.2       | Interpretation of control freedom               | 41        |
| 7.2.1     | Baseline without delivery obligations           | 41        |
| 7.2.2     | Effect of a fixed delivery contract             | 41        |
| 7.2.3     | Diurnal electricity prices                      | 41        |
| 7.3       | Physical model limitations                      | 41        |
| 7.3.1     | Notes                                           | 41        |
| 7.4       | Economic and boundary-condition limitations     | 42        |
| 7.4.1     | Notes                                           | 42        |
| 7.5       | Solver and numerical limitations                | 42        |
| 7.5.1     | Notes                                           | 42        |
| 7.6       | Alternative objective formulations              | 43        |
| 7.6.1     | Notes                                           | 43        |
| 7.6.2     | Weighted revenue–degradation form               | 43        |
| 7.6.3     | Objectives in the literature                    | 44        |
| 7.6.4     | Implications for the results presented          | 44        |
| 7.7       | Use of generative AI tools                      | 44        |
| 7.7.1     | Notes                                           | 45        |
| 7.7.2     | Verification and limitations                    | 45        |
| 7.8       | Conclusions and outlook                         | 45        |
| 7.8.1     | Conclusions                                     | 45        |
| 7.8.2     | Future Work                                     | 46        |
|           | <b>Appendix</b>                                 | <b>46</b> |
| <b>A1</b> | <b>Deriving PDE's for molecule balances</b>     | <b>49</b> |
| A1.1      | Unit computation test only for H <sub>2</sub> O | 50        |
| <b>A2</b> | <b>Deriving PDE's for energy balances</b>       | <b>51</b> |
| A2.1      | Getting source term                             | 51        |
| A2.2      | Getting the steady state equation:              | 52        |

|                                                                    |            |
|--------------------------------------------------------------------|------------|
| <b>A3 Computing Specific Finite Volume Equations</b>               | <b>53</b>  |
| A3.1 Equations for moles . . . . .                                 | 53         |
| A3.2 Equations for heat . . . . .                                  | 54         |
| A3.2.1 Steady state . . . . .                                      | 54         |
| A3.2.2 Time derivative . . . . .                                   | 54         |
| <b>A4 Relavant Gradients for numerical solvers</b>                 | <b>57</b>  |
| A4.1 Molar balance . . . . .                                       | 57         |
| A4.1.1 Nernst Equation . . . . .                                   | 57         |
| A4.1.2 Activation overpotential . . . . .                          | 57         |
| A4.2 Degredation . . . . .                                         | 58         |
| A4.2.1 Ohmic degradation . . . . .                                 | 58         |
| A4.3 Temperature equations . . . . .                               | 58         |
| A4.3.1 Specific heat . . . . .                                     | 59         |
| A4.3.2 Thermaneutral voltage . . . . .                             | 59         |
| <b>A5 NLP Gradients</b>                                            | <b>61</b>  |
| A5.1 Discrete chain rule for the stage model . . . . .             | 61         |
| A5.2 Gradient with respect to cell voltage: $\nabla_u^i$ . . . . . | 62         |
| A5.3 Gradient with respect to degradation: $\nabla_d^i$ . . . . .  | 62         |
| A5.4 Sensitivity of the spatial FVM discretization . . . . .       | 62         |
| A5.5 Sensitivity of the ODE system. . . . .                        | 63         |
| <b>A6 Gradient verification plots</b>                              | <b>67</b>  |
| A6.1 Complete current plot set . . . . .                           | 67         |
| <b>Literature</b>                                                  | <b>103</b> |



# 1 Abstract

The abstract is given below. A reference [15]

**Home pc setup ready**





## 2 Introduction

This project aims to do the following:

**The thesis studies the sensitivity of the optimal control for a solid oxide electrolysis cell (SOEC) over its lifetime, with the goal of minimizing degradation to prolong lifetime.**

Starting by defining the optimal control problem. In loose terms, the objective maximizes revenue while penalizing degradation. A rough formulation is:

$$\max_u \left\{ \alpha(t) \int_0^T \text{revenue} \, dt - (1 - \alpha(t)) \text{degradation} \right\} \quad (2.1)$$

The weighting function  $\alpha(t)$  balances the importance of production versus degradation, and can be directly linked to real market prices. The details of how the overall optimization problem is formulated are provided later; at this stage, this serves as a broad overview. The core focus is to examine the optimal control  $u^*(t)$  (the set of control choices that maximize the objective) and to see what happens as we give the controller more freedom, and lesser fixation. Before diving into the technical setup, the basic idea of giving more freedom will be demonstrated using a simple example.

### 2.1 A Simple Example of Control Freedom

Consider a simple example: a water gun at a fixed spot that shoots with constant muzzle speed  $v_0$ . The only thing we can control is the angle  $\alpha$ . The angle sets how far the water goes; the maximum range is at  $45^\circ$ , so restrict  $\alpha$  to  $[0^\circ, 45^\circ]$  and call the range at  $45^\circ$  simply  $L_{\max}$  [20].

The setup is illustrated below:



## 3 Nomenclature and Assumptions

### 3.1 List of Assumptions

#### 3.1.1 Geometry, flow, and thermodynamics

1. **Constant channel area.** The cross-sectional area  $A_{\text{int}}$  is uniform along the channel.
2. **One-dimensional flow.** Properties vary only in the axial direction  $z$ ; width  $w$  and height  $d$  enter as geometric scalars.
3. **Ideal gas.** Gas mixtures obey the ideal-gas law.
4. **Negligible concentration overpotential.** Mass-transport limitations at the electrodes are not resolved; molar fractions on each electrode side are taken as uniform (Equation 4.8).
5. **Negligible heat conduction.** The conductive term  $\nabla \cdot (\lambda_T \nabla T)$  is dropped in the energy balance (Equation 4.16).
6. **Constant pressure.**  $\partial_t p \approx 0$  and  $h \approx c_p T$  in the enthalpy formulation.
7. **Prescribed inlet flows.** Fuel and air volumetric flow rates are inputs, not optimized.

#### 3.1.2 Electrochemistry and degradation

8. **Butler–Volmer kinetics.** Anodic and fuel-side (cathode) activation overpotentials follow Equation 4.12 with parameters from [14].
9. **Two dynamic ohmic degradation mechanisms.** Nickel migration and interconnect oxidation evolve via Table 4.2; other ageing paths are not modelled dynamically.
10. **Nickel agglomeration at steady state.** Because agglomeration develops on a short timescale relative to the optimization horizon, the cathode multiplier  $\lambda_c$  is fixed at  $\approx 0.55$  [5] rather than solved as an additional state.
11. **Spatially resolved degradation.** Slow states are stored per FVM cell ( $\mathbf{d}_{\text{Ni-mi},i}, \mathbf{s}_{\text{IC-ox},i} \in \mathbb{R}^{N_{\text{cell}}}$ ); interconnect oxidation is advanced in squared-thickness form (Equation 5.18).

#### 3.1.3 Quasi-steady coupling and numerical solution

12. **Quasi-steady cell physics.** At each time step the FVM steady-state problem (molar fractions and temperature along  $z$ ) is solved for the current controls and degradation state before the slow ODEs are updated.
13. **Piecewise-constant controls.**  $U$  and  $T_{\text{in}}$  are constant on each of the  $N_t$  control intervals (Section 5.2.6).

14. **Implicit Euler in time.** Degradation states are advanced with the implicit Euler scheme on a uniform grid (Equation 5.16).
15. **Recoverable outlet enthalpy.** Auxiliary heating power  $P_{\text{heat}}$  credits recovery of outlet sensible heat toward the inlet stream, minus a fixed loss  $T_{\text{loss}}$  (Equation 5.2).

### 3.1.4 Economic boundary conditions (scenario-dependent)

16. **Finite rolling horizon.** The objective maximizes revenue and salvation over a chosen horizon  $T$ , not the full stochastic stack lifetime (Figure 5.1).
17. **Tank scenarios (when active).** Buffer storage is unlimited; contractual delivery  $\dot{n}_{\text{H}_2, \text{agreement}}$  is constant; shortfalls are covered by inventory or spot purchase at  $\kappa_{\text{buy}} c_{\text{H}_2}$  (Section 5.1.4).

## 3.2 List of Symbols

| Symbol                                    | Unit               | Description                                  |
|-------------------------------------------|--------------------|----------------------------------------------|
| <i>Geometry, discretization, and time</i> |                    |                                              |
| $A_{\text{cell}}$                         | $\text{m}^2$       | Active electrode area                        |
| $A_{\text{int}}$                          | $\text{m}^2$       | Flow-channel cross-sectional area            |
| $d$                                       | $\text{m}$         | Cell thickness (channel height)              |
| $L$                                       | $\text{m}$         | Channel length                               |
| $w$                                       | $\text{m}$         | Channel width                                |
| $z$                                       | $\text{m}$         | Axial coordinate along the channel           |
| $N$                                       | —                  | Number of axial channel segments             |
| $N_{\text{cell}}$                         | —                  | Number of FVM control volumes along $z$      |
| $N_t$                                     | —                  | Number of control / time segments in the NLP |
| $\Delta z$                                | $\text{m}$         | FVM mesh spacing                             |
| $z_k$                                     | $\text{m}$         | Centre of FVM cell $k$                       |
| $\Omega_k, V_k$                           | $\text{m}^3$       | FVM cell $k$ and its volume                  |
| $t$                                       | $\text{s}$         | Time                                         |
| $T$                                       | $\text{s}$ or days | Optimization horizon                         |
| $\Delta t_k$                              | $\text{s}$         | Duration of control interval $k$             |

Table 3.1: Roman symbols (1/5): geometry and discretization.

| Symbol                                   | Unit                                                                         | Description                                                  |
|------------------------------------------|------------------------------------------------------------------------------|--------------------------------------------------------------|
| <i>Species, flow, and thermodynamics</i> |                                                                              |                                                              |
| $\mathcal{S}$                            | —                                                                            | Gas species $\{\text{H}_2\text{O}, \text{H}_2, \text{O}_2\}$ |
| $\mathcal{S}_\zeta$                      | —                                                                            | Species on side $\zeta \in \{a, f\}$ (anode / fuel)          |
| $\mathcal{M}$                            | —                                                                            | Species index set for mass fractions $y_k$                   |
| $c_i, \mu_i$                             | $\text{mol}/\text{m}^3$                                                      | Molar concentration; $\mu_i$ along channel (state)           |
| $x_i, y_k$                               | —                                                                            | Molar / mass fraction of species $i$ or $k$                  |
| $N_i, N_{c,i}$                           | $\text{mol}/(\text{m}^2 \cdot \text{s})$                                     | Molar flux; electrochemical source flux                      |
| $\dot{n}_i, \dot{V}_\zeta$               | $\text{mol}/\text{s}, \text{m}^3/\text{s}$                                   | Molar flow rate; volumetric flow on side $\zeta$             |
| $v_{\text{fuel}}, v_{\text{air}}$        | $\text{m}/\text{s}$                                                          | Gas velocity on fuel / air side                              |
| $p_i, P$                                 | $\text{Pa}$                                                                  | Partial / total pressure                                     |
| $p_{\text{ref}}, p_{\text{air}}$         | $\text{Pa}$                                                                  | Reference and air-side pressures                             |
| $\rho$                                   | $\text{kg}/\text{m}^3$                                                       | Gas density                                                  |
| $c_{p,i}, c_p, C_p$                      | $\text{J}/(\text{mol} \cdot \text{K}), \text{J}/(\text{K} \cdot \text{m}^3)$ | Species, mixture, and volumetric heat capacity               |
| $h_i(T), \Delta h$                       | $\text{J}/\text{mol}$                                                        | Species enthalpy; reaction enthalpy change                   |
| $Q_T$                                    | $\text{W}/\text{m}^3$                                                        | Volumetric heat source                                       |

Table 3.2: Roman symbols (2/5): species, flow, and thermodynamics.

| Symbol                                                       | Unit                               | Description                                     |
|--------------------------------------------------------------|------------------------------------|-------------------------------------------------|
| <i>Electrochemistry</i>                                      |                                    |                                                 |
| $F$                                                          | C/mol                              | Faraday constant                                |
| $n_e$                                                        | —                                  | Electrons per reaction ( $n_e = 2$ )            |
| $\nu_i$                                                      | —                                  | Stoichiometric coefficient of species $i$       |
| $i$                                                          | A/m <sup>2</sup>                   | Current density                                 |
| $I, I_{\text{cell}}$                                         | A                                  | Total cell current                              |
| $U$                                                          | V                                  | Applied cell voltage (control)                  |
| $U_{\text{th}}$                                              | V                                  | Thermal (reversible) cell voltage               |
| $\eta_{\text{cell}}$                                         | V                                  | Cell overpotential ( $\eta_{\text{cell}} = U$ ) |
| $\eta_{\text{nernst}}, \eta_{\text{act}}, \eta_{\text{ohm}}$ | V                                  | Nernst, activation, and ohmic overpotentials    |
| $\eta_{\text{act}}^{\zeta}$                                  | V                                  | Activation overpotential on side $\zeta$        |
| $i_0^{\zeta}$                                                | A/m <sup>2</sup>                   | Exchange current density on side $\zeta$        |
| $R_{\text{deg}}, R_{\text{ohm}}$                             | $\Omega \cdot \text{m}^2$          | Degradation and total ohmic resistance          |
| $R_{\text{contact}}$                                         | $\Omega \cdot \text{m}^2$          | Contact resistance                              |
| $B_{\text{ohm}}$                                             | $\Omega \cdot \text{m}^2/\text{K}$ | Base factor in intrinsic ohmic term             |
| $E_{\text{act}}^{\text{ohm}}$                                | J/mol                              | Activation energy in intrinsic ohmic term       |
| $\Delta G$                                                   | J/mol                              | Gibbs free energy change                        |

Table 3.3: Roman symbols (3/5): electrochemistry.

| Symbol                                                                                    | Unit                      | Description                                           |
|-------------------------------------------------------------------------------------------|---------------------------|-------------------------------------------------------|
| <i>Degradation</i>                                                                        |                           |                                                       |
| $\mathcal{D}$                                                                             | —                         | Set of slow degradation mechanisms                    |
| $\mathcal{D}_{\text{ohm}}$                                                                | —                         | Subset in $R_{\text{ohm}}$ (Ni-mi, IC-ox)             |
| $\mathbf{d}, d_i$                                                                         | —                         | Degradation state vector and component $i$            |
| $h_{\text{Ni-mi}}, h_{\text{IC-ox}}$                                                      | m                         | Ni-migration gap; interconnect oxide thickness        |
| $s_{\text{IC-ox}}$                                                                        | m <sup>2</sup>            | Squared IC-oxide thickness (ODE state)                |
| $d_{i,\text{critical}}$                                                                   | m                         | End-of-life limit for mechanism $i$                   |
| $R_{\text{Ni-mi}}, R_{\text{IC-ox}}$                                                      | $\Omega \cdot \text{m}^2$ | Ohmic contributions from Ni-mi and IC-ox              |
| $\sigma_{\text{elec}}, \sigma_{\text{elec},0}$                                            | S/m                       | Electrode conductivity and pre-factor                 |
| $\sigma_{\text{IC-ox}}$                                                                   | S/m                       | Oxide-layer conductivity                              |
| $E_{a,\text{elec}}, E_{a,\text{ox}}, E_{\text{el}}$                                       | J/mol                     | Activation energies (electrode, IC ox., IC cond.)     |
| $c_1, \dots, c_4$                                                                         | various                   | Fitted Ni-mi growth-rate coefficients                 |
| $k_{\text{mg}}, k_{\text{ox}}$                                                            | various                   | IC-oxidation rate and conductivity prefactors         |
| $\varepsilon, \tau$                                                                       | —                         | Electrode porosity and tortuosity                     |
| <i>Optimal control and economics</i>                                                      |                           |                                                       |
| $\mathbf{u}(t), \mathcal{U}$                                                              | —                         | Control vector ( $U, T_{\text{in}}$ ); admissible set |
| $T_{\text{in}}, T_{\text{out}}, T_{\text{loss}}$                                          | K                         | Inlet (control), outlet, and thermal recovery loss    |
| $R(\mathbf{u}, \mathbf{d}), R_{\text{tank}}$                                              | EUR/s                     | Revenue rate; contract rate with tank                 |
| $P_{\text{cell}}, P_{\text{heat}}$                                                        | W                         | Stack power; auxiliary sensible heating               |
| $\varphi, \Psi(\mathbf{d}), \Psi_{\text{tank}}$                                           | EUR                       | Integrated revenue; salvation; tank liquidation       |
| $c_{\text{H}_2}, c_P, c_{P,k}$                                                            | EUR/kg, EUR/kWh           | Hydrogen and power prices                             |
| $\bar{c}_P, a$                                                                            | —                         | Mean diurnal power price and relative swing           |
| $c_{\text{cell}}$                                                                         | EUR/m <sup>2</sup>        | Cell capital cost in $\Psi$                           |
| $\alpha(t), \alpha_{\Psi}$                                                                | —                         | Schematic weight; salvation exponent                  |
| $\kappa_{\text{buy}}, \kappa_{\text{sell}}$                                               | —                         | Spot-purchase penalty; liquidation multiplier         |
| $m_{\text{tank}}, n_{\text{purchase},k}$                                                  | mol, kg                   | Tank inventory; shortfall purchase                    |
| $\dot{n}_{\text{H}_2,\text{agreement}}, \dot{n}_{\text{prod}}, \dot{n}_{\text{purchase}}$ | mol/s                     | Delivery, production, and purchase rates              |
| $\Delta \dot{n}_{\text{H}_2}$                                                             | mol/s                     | Net H <sub>2</sub> production in $R$                  |
| <i>PDE / FVM notation</i>                                                                 |                           |                                                       |
| $u, Q_u, F_u$                                                                             | various                   | Generic FVM field; source and flux terms              |
| $m_k$                                                                                     | kg                        | Gas mass in FVM volume $k$                            |

Table 3.4: Roman symbols (4/5): degradation, optimal control, and numerics.

| Symbol                 | Unit             | Description                                                                                                           |
|------------------------|------------------|-----------------------------------------------------------------------------------------------------------------------|
| $R$                    | J/(mol·K)        | Universal gas constant                                                                                                |
| $\alpha_\zeta$         | —                | Butler–Volmer symmetry factor; $\alpha_a = 0.65$ , $\alpha_f = 0.59$ [Leonide2009]                                    |
| $\gamma_\zeta$         | A/m <sup>2</sup> | Exchange-current pre-factor; $\gamma_a = 1.515 \times 10^8$ , $\gamma_f = 7.666 \times 10^5$                          |
| $E_{\text{act}}^\zeta$ | J/mol            | Electrode activation energy; $E_{\text{act}}^a = 1.40 \times 10^5$ , $E_{\text{act}}^f = 1.05 \times 10^5$            |
| $m_i$                  | —                | Species exponent in $i_0^\zeta$ ; $m_{\text{H}_2\text{O}} = 0.33$ , $m_{\text{H}_2} = -0.1$ , $m_{\text{O}_2} = 0.22$ |
| $\lambda_a, \lambda_c$ | —                | Exchange-current multipliers ( $\lambda_a = 1$ ; $\lambda_c \approx 0.55$ )                                           |
| $\lambda_T$            | W/(m·K)          | Thermal conductivity (neglected)                                                                                      |
| $\Omega$               | m                | Spatial domain                                                                                                        |
| $x_0$                  | —                | Reference molar-fraction scale ( $p_{\text{ref}}/p_{\text{air}}$ )                                                    |

Table 3.5: Greek symbols (5/5). Parameter values follow Table 4.1 and Table 4.2 unless stated otherwise.



## 4 Physical Modelling

### 4.1 Modelling SOEC

#### 4.1.1 Introduction

In this chapter the aspects of solid oxide electrolysis cell's (SEOC's) will be introduced. Briefly visiting different scales of operation, before a more detailed description of how the mole flow is modelled, rounding it up with the energy balance that determines the behavior of temperature flow.

The basics are presented so that readers with a background in applied mathematics can follow the system. Derivations throughout the chapter therefore assume familiarity with standard intermediate steps; lengthier or less routine derivations are given in the main text or in an appendix. Readers who wish to proceed directly to the governing equations will find them summarized in Table 4.1.

The three different scales of SOEC discussed in this paper are defined as follows. The first and smallest scale is the unit cell, where the focus is only on the dynamics occurring within a single SOEC cell. We will spend the majority of the Thesis on this scale.

Next is the stack. At this level, multiple unit cells are stacked together, which naturally introduces more complexity to the system. Figure 4.1 is a quick visualization of the different scales.

Finally, the largest scale considered is at facility scale. At this level, multiple SOEC stacks are connected together; the facility operates much like an electrical circuit, with each stack behaving as its own component with distinct characteristics. However as stated, we will be focusing on the cell scale. And might be relating this to the operation of other scales.

To draw a parallel with the earlier water gun example: in this chapter, we begin constructing the “water gun” of our model, step by step, laying out its fundamental mechanics and underlying principles.

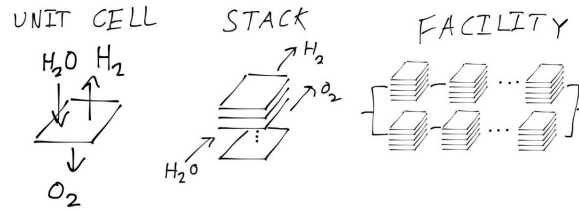


Figure 4.1: A sketch of the scales: the three different scales mentioned in this paper from smallest (left) to largest (right)

#### 4.1.2 Basics of SOEC

The “water gun” also known as the unit cell, can in simple terms be described by Figure 4.2, here it is visible what happens at the small scales.

The unit cell is composed of three main components: the **cathode**, the **electrolyte**, and the **anode**. At the cathode, water molecules are split into dihydrogen ( $H_2$ ) and oxide ions ( $O^{--}$ ). This process is only possible due to the presence of electrons provided by an external electric current: these electrons participate directly in the reaction at the cathode, facilitating the reduction of water.

The newly-formed oxide ions then migrate through the solid **electrolyte**, propelled by the electric field generated by the applied voltage, highlighting the central role of electrons and electrical energy in driving the overall process. Once the oxide ions reach the **anode**, they release their excess electrons and recombine to form dioxygen ( $O_2$ ). The electrons that are released here travel through the external circuit, closing the electrical loop.

Summing up, the operation of the SOEC is fundamentally tied to the movement of electrons, both in the chemical reactions at the electrodes and in sustaining the ionic and electronic currents through the device. This is captured in the overall reaction,  $2H_2O + 4e^- \rightarrow 2H_2 + 2O^{--} \rightarrow 2H_2 + O_2 + 4e^-$ , where the electrons facilitate water splitting at the cathode and are recovered at the anode. For modeling purposes, and since the focus will generally not be on the internal mechanisms, the model simplifies to the absolute global equation (eq. 4.1).



To clarify some terminology. The upper side of the unit cell—where water is supplied and dihydrogen ( $H_2$ ) is produced—is called the **fuel side**. This is because water acts as the “fuel” for the process, supplying the reactant that gets split. The lower side—where dioxygen ( $O_2$ ) is released—is called the **air side**, since atmospheric air is usually introduced here as the inlet. These terms, “fuel side” and “air side,” are commonly used throughout SOEC literature to describe the two compartments of the cell.

#### 4.1.2.1 The chemical flow in a unit cell

The equation in 4.1 treats the reaction as strictly one-way, but in reality, some produced hydrogen and oxygen can recombine to form water again, especially as the system approaches equilibrium based on its electrical state. This reverse reaction is rare at the start but becomes more significant near equilibrium. Yielding equation 4.2.

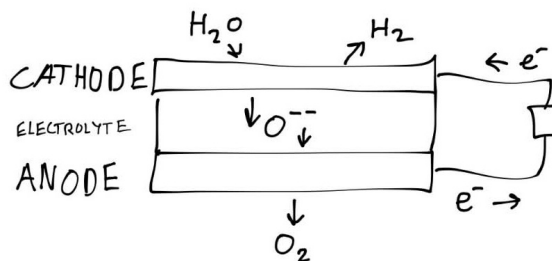


Figure 4.2: A sketch of a unit cell: the basic principles of an SOEC cell are illustrated. The cathode pulls apart the hydrogen and oxygen in the water. The oxygen is transferred through the electrolyte, then formed to dioxygen in the anode, all due to an applied current.

Here,  $p_l$  stands for the transition probability that two hydrogen and one oxygen molecule will combine and turn back into water (going from right state  $\rightarrow$  left state), while  $p_r$  is the probability for splitting water into hydrogen and oxygen (left state  $\rightarrow$  right state).

From these probabilities, the production rate of  $\text{H}_2\text{O}$  at every point in the cell can be determined (assuming concentrations and probabilities are known everywhere). The difference between how much  $\text{H}_2\text{O}$  is produced versus how much is consumed is taken. Keeping in mind that this is calculated per unit volume of the cell, it has the unit  $\frac{\text{mol}}{\text{s} \cdot \text{m}^3}$ :

$$R_{\text{H}_2\text{O}} = p_r c_{\text{H}_2\text{O}}^2 - p_l c_{\text{H}_2}^2 c_{\text{O}_2}$$

Where  $c_x$  is the concentration  $\left(\frac{\text{mol}}{\text{s} \cdot \text{m}^3}\right)$  of molecule  $x$

To obtain the production rate for the whole cell (the global rate), this quantity is integrated over the thickness (height) of the cell. Which gives the total rate  $N_{c,\text{H}_2\text{O}}$  (later this will be treated as a local source, but for now it is kept global):

$$N_{c,\text{H}_2\text{O}} = \int_0^d R_{\text{H}_2\text{O}}$$

This gives the average production rate per area of the cell, which is a useful parameter to work with. But realistically, calculating this from scratch could get a bit complicated. Thankfully, Faraday already did the heavy lifting here. By Faraday's law [18], the rate per cell area can be written as in equation 4.3:

$$N_{c,\text{H}_2\text{O}} = \frac{i}{2F} \quad (4.3)$$

Where  $i$  is the current,  $F$  is Faraday's constant, and the 2 comes from the number of electrons involved in the chemical equation.

For now, equation 4.3 is kept as it is, since the formulation is still at the global level; hence the current in the equation is the global current. Later, when making all this local, the current must be computed using the Nernst equation. More about that later. First, a form that describes the system locally is introduced.

#### 4.1.2.2 Behavior through a channel over the cell

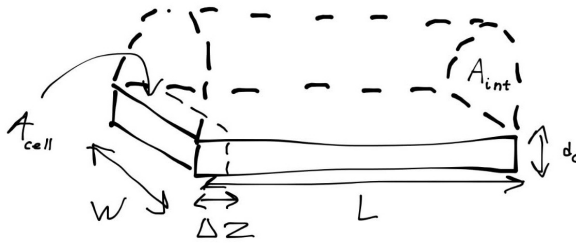


Figure 4.3: Schematic illustration of channel discretization for modeling local behavior along the fuel side of a SOEC. The channel is divided into  $N$  segments of length  $\Delta z$ , showing the flow of steam over the cathode.

To describe the system locally, figure 4.3 is used. The fuel side is modeled as a channel (the upper section in the figure), where the steam ( $\text{H}_2\text{O}$ ) flows over the cathode. The width of the channel is  $w$  and the length is  $L$ , with the channel extending from the inlet at  $z = 0$  to the outlet at  $z = L$  (where  $L$  is the length of the cell). The gas flows through a constant cross-sectional area  $A_{int}$ .

For any control volume within this channel, mass conservation dictates that the accumulation of water over time equals the flow in plus the production of the cell reaction minus the flow out. Following the formulation by Primdahl and Mogensen [15] for a continuously stirred tank reactor (CSTR), the

mass balance for the water molar fraction  $x_{\text{H}_2\text{O}}$  is:

$$\frac{PV}{RT} \frac{\partial x_{\text{H}_2\text{O}}}{\partial t} = A_{int} N_{in, \text{H}_2\text{O}} - A_{int} N_{out, \text{H}_2\text{O}} + A_{cell} N_{c, \text{H}_2\text{O}} \quad (4.4)$$

Where  $V$  is the volume of the gas in the reactor,  $N_i$  is the molar flux for species  $i$ , and  $A_{cell}$  is the active electrode area.

To obtain the local behavior along the channel, discretization along the channel length is required, meaning the length is split into sections. This is also illustrated in figure 4.3. Hence  $z_i - z_{i-1} = \Delta z$  for all  $i = 1, \dots, N$ , with  $z_0 = 0$  and  $z_N = L$ , giving a sequence:

$$z_0 < z_1 < \dots < z_N$$

Each section  $z \in (z_{i-1}, z_i)$  can then be viewed as its own cell, where the inlet flow at  $z_{i-1}$  is the outlet flow of the previous interval. Letting  $\Delta z \rightarrow 0$  and inserting the definition of  $N_{c, \text{H}_2\text{O}}$  (equation 4.3), and the PDE in equation 4.5 pops right out. (Appendix A1)

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{w}{A_{int}} N_{c, \text{H}_2\text{O}} - \frac{\partial N_{\text{H}_2\text{O}}}{\partial z} \quad (4.5)$$

Where  $N_{\text{H}_2\text{O}} = v_{fuel} \mu_{\text{H}_2\text{O}}$  and  $N_{c, \text{H}_2\text{O}} = \nu_{\text{H}_2\text{O}} \frac{i}{n_e F}$ , with  $n_e$  the number of electrons in the reaction being 2.


By similar computations for  $\text{H}_2$  and  $\text{O}_2$  the following equations will appear:

$$\frac{\partial \mu_{\text{H}_2}}{\partial t} = \frac{w}{A_{int}} N_{c, \text{H}_2} - \frac{\partial N_{\text{H}_2}}{\partial z} \quad (4.6)$$

$$\frac{\partial \mu_{O_2}}{\partial t} = \frac{w}{A_{int}} N_{c,O_2} - \frac{\partial N_{O_2}}{\partial z} \quad (4.7)$$

Where  $N_{H_2} = v_{fuel} \mu_{H_2}$  and  $N_{O_2} = v_{air} \mu_{O_2}$ , with  $\nu_i$  the stoichiometric coefficient for species  $i$ ,  $\mu_i$  the molar concentration of species  $i$ , and  $v_{fuel/air}$  the corresponding velocity. And  $N_{c,i} = \nu_i \frac{i}{n_e F}$ .

From the chemical equation of the reaction:



The stoichiometric coefficients are determined as  $\nu_{H_2O} = -\nu_{H_2} = -2\nu_{O_2} = 1$ .

This equation describes the local evolution of the species concentration. As noted earlier, the current  $i$  is no longer a global current. To determine it, the Nernst equation and more is required; this will be explained shortly.

#### 4.1.2.3 Introducing the overpotentials

From the equation stated in 4.5 only the current density  $i$  remains to be determined. The control variable is the voltage  $U$ , which equals the overpotential of the whole cell ( $\eta_{cell}$ ) or cell voltage.

The cell voltage can be written as the sum of all overpotentials over the cell as in equation 4.8. Concentration overpotentials that appear when accounting for diffusion are neglected here, and the concentration is assumed to be the same everywhere on each side of the cell. (Section 3.1)

$$\eta_{cell} = \eta_{nernst} + \eta_{act} + \eta_{ohm} \quad (4.8)$$

$$\eta_{nernst} = \frac{\Delta G}{n_e F} + \frac{RT}{n_e F} \log \left( \frac{x_{H_2} \sqrt{x_{O_2}}}{x_{H_2O} \sqrt{x_0}} \right), \quad (4.9)$$

Where  $x_0 = p_{ref}/p_{air} \approx 1$ ,  $\Delta G$  is Gibbs free energy approximated by the polynomial  $\Delta G = -0.0031 T^2 - 49.119 T + 244778$ . [5]

$$\eta_{ohm} = i R_{deg} \quad (4.10)$$

Where  $R_{deg}$  is the resistance induce from degradation mechanisms.

$$\eta_{act} = \eta_{act}^a + \eta_{act}^c \quad (4.11)$$

Where  $\eta_{nernst}$  is the Nernst overpotential, representing the voltage generated by the electrochemical reaction, and  $\eta_{act}$  is the activation overpotential, which accounts for the energy barrier that must be overcome for the reaction to proceed,  $\eta_{ohm}$  is the Ohmic resistance, which accounts for resistance that is active due to degradative mechanisms. [5]

The Ohmic overpotential is essentially Ohm's law with some resistance; but it is in this resistance we get the degradation, or in terms of the water gun problem, we find where Thomas is standing within the ohmic resistance. The Nernst overpotential describes the willingness of the reaction to proceed. When there is a lot of  $\text{H}_2\text{O}$  and very little  $\text{H}_2$  and  $\text{O}_2$ , the Nernst overpotential is large in absolute value but negative. This drives the reaction away from the high concentration in  $\text{H}_2\text{O}$  and closer to equilibrium. Away from the Gibbs term and the other overpotentials, the *equilibrium* occurs where the fraction is 1. The Nernst overpotential can therefore be viewed as the *force* that pulls the concentrations towards equilibrium.

The activation overpotential is probably the most difficult part to compute. The governing equations are listed first; their meaning is explained afterwards.

The overpotentials for the anode and cathode arise by solving Equation 4.12, also known as the Butler-Volmer equation.

$$i = i_0^\zeta \left( \exp \left[ \alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] - \exp \left[ -(1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right), \quad \zeta \in \{a, f\}. \quad (4.12)$$

Where  $\alpha_\zeta$  is the symmetry factor for the corresponding side, and  $i_0^\zeta$  is the exchange current for the respective side, with  $\alpha_a = 0.65$  and  $\alpha_c = 0.59$ . [14]

The exchange current is computed as in Equation 4.13.

$$i_0^\zeta = \lambda_\zeta \gamma_\zeta \exp \left[ -\frac{E_{act}^\zeta}{RT} \right] \prod_{i \in \text{Species}_\zeta} \left( \frac{x_i}{x_0} \right)^{m_i}, \quad \zeta \in \{a, f\}. \quad (4.13)$$

Where  $\text{Species}_a = \{\text{O}_2\}$  and  $\text{Species}_c = \{\text{H}_2\text{O}, \text{H}_2\}$ .  $\lambda_a = 1$  (in principle it does not appear in the equation) and  $\lambda_c$  is also determined by degradation mechanisms, discussed later.  $\gamma_\zeta$  is the pre-exponential factor for the respective side with values  $\gamma_a = 1.515 \cdot 10^8$  and  $\gamma_f = 7.666 \cdot 10^5$ .  $E_{act}^\zeta$  is the activation energy, with  $E_{act}^a = 1.40 \cdot 10^5$  and  $E_{act}^f = 1.05 \cdot 10^5$ . And  $m_{\text{H}_2\text{O}} = 0.33$ ,  $m_{\text{H}_2} = -0.1$  and  $m_{\text{O}_2} = 0.22$ . [14]

This describes the electrical energy required to overcome the energy barrier for the reaction. Somewhat similar to how water does not necessarily freeze at  $0^\circ\text{C}$ . There is some discussion in the field about whether the Butler-Volmer equations are adequate for this phenomenon; but for this project the Butler-Volmer model is taken as a sufficient approximation.

#### 4.1.2.4 Computing the current $i$

With the overpotentials introduced, it is clear that some of them depend on the current  $i$ , which is the missing piece in 4.3 needed to complete the coupled differential equations 4.5, 4.6 and 4.7.

The current is obtained by solving Equation 4.8, with  $\eta_{cell} = U$ , and  $i$  defined as in Equation 4.14

$$i = \underset{i}{\text{Solve}} [U - \eta_{nernst} = \eta_{ohm}(i) + \eta_{act}(i)] \quad (4.14)$$

Using various simplifications this equation can be solved in different ways; for now it is solved numerically, using a root solver from the python library Scipy [19].

With the equations for mole transport in place, the temperature behavior is treated next, before all equations are summarized in a table.

### 4.1.3 Energy Balance

To derive the energy balances, the derivation starts at the thermal energy equation given by Equation 4.15 [12]. A number of simplifications are then applied to obtain Equation 4.16.

$$\rho \frac{\partial h}{\partial t} = \frac{\partial p}{\partial t} + \nabla \cdot (\lambda_T \nabla T) - \sum_{i \in \mathcal{S}} \nabla \cdot (h_i N_i) + Q_T \quad (4.15)$$

where  $\rho$  is density,  $h$  specific enthalpy,  $\lambda_T$  thermal conductivity,  $h_k$  and  $N_k$  the specific enthalpy and flux of species  $k$ , and  $Q_T$  the volumetric heat source (e.g. electrochemical heating).

Starting with Equation 4.15, essentially stating how much energy a volume accumulates, in enthalpy per unit volume (left-hand side). Is equal to the compression (The change in pressure) plus the energy added by heat conduction (Second order differential term in temperature) and the transportation of enthalpy by species ( $H_2O$ ,  $H_2$ ,  $O_2$ ), and lastly adding the reaction heat  $\Phi$ .

The first simplifications is to neglect the energy accumulation due to heat conduction ( $\nabla \cdot (\lambda \nabla T) = 0$ ). Also assuming constant pressure,  $h \approx c_p T$  and  $\partial_t p = 0$ , which yields:

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} v_i \frac{\partial T \mu_i}{\partial z} c_{p,i} + Q_T \quad (4.16)$$

Where  $c_p = \sum_{e \in \mathcal{M}} c_{p,k} y_k$ , with  $y_k$  being the mass fractions (Not the molar fraction), for further information look at Appendix A2

It remains to define the source term, which follows from the power expression in Equation 4.17. Power is the energy per unit time, hence the energy added to the system.

$$Q_T = \frac{i w}{A_{int}} U \quad (4.17)$$

#### 4.1.3.1 At steady state

At steady state the expression for the molar progression can be used to simplify the equations further, yielding Equation 4.18.

$$0 = i \frac{w}{A_{int}} (U - U_{th}) - C_p \frac{\partial T}{\partial z} \quad (4.18)$$

Where  $U_{th} = \frac{\Delta h}{n_e F}$  with  $\Delta h = h_{H_2O} - h_{H_2} - \frac{h_{O_2}}{2}$ , (Appendix A2).

With the energy balance, or temperature differential equation, in place, the cell model is complete. The following section takes a deep dive into “Thomas’s position” and “how he moves” also known as the degradation mechanisms.



| Description             | Equation                                                                                                                                          | Ref.               |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| Faraday's law           | $N_{c,i} = \nu_i \frac{i}{2F}$                                                                                                                    | Equation 4.3       |
| Molar concentration DEs | $\frac{\partial \mu_i}{\partial t} = \frac{w}{A_{int}} N_{c,i} - \frac{\partial N_i}{\partial z}$                                                 | Eqs. 4.5, 4.6, 4.7 |
| Cell voltage            | $\eta_{cell} = \eta_{nernst} + \eta_{ohm} + \eta_{act}^a + \eta_{act}^c$                                                                          | Equation 4.8       |
| Ohmic overpotential     | $\eta_{ohm} = i R_{deg}$                                                                                                                          | Equation 4.10      |
| Nernst overpotential    | $\eta_{nernst} = \frac{\Delta G}{n_e F} + \frac{RT}{n_e F} \log \left( \frac{x_{H_2} \sqrt{x_{O_2}}}{x_{H_2O} \sqrt{x_0}} \right)$                | Equation 4.9       |
| Butler–Volmer           | $i = i_0^{a/f} \left( \exp[\alpha_{a/f} \frac{n_e F}{RT} \eta_{act}^{a/f}] - \exp[-(1 - \alpha_{a/f}) \frac{n_e F}{RT} \eta_{act}^{a/f}] \right)$ | Equation 4.12      |
| Exchange current        | $i_0^{a/f} = \lambda_{a/f} \gamma_{a/f} T \exp \left[ -\frac{E_{act}^{a/f}}{RT} \right] \prod_{i \in \mathcal{S}_{a/f}} (x_i/x_0)^{m_i}$          | Equation 4.13      |
| Gibbs free energy       | $\Delta G \approx -0.0031T^2 - 49.119T + 244778$                                                                                                  |                    |
| Energy balance          | $\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} v_i \frac{\partial T \mu_i}{\partial z} c_{p,i} + \frac{i w}{A_{int}} U$     | Eqs. 4.16, 4.17    |

Table 4.1: Overview of model equations (Here without degradation which is in Section 4.2.1).

## 4.2 Modelling degradation

### 4.2.1 Introduction

This section examines the two components  $R_{ohm}$  that appears in Equation 4.10 and  $\lambda_c$  which appears in Equation 4.13. The latter is more complicated, so the Ohmic resistance is treated first. Below a equation is set up, which describes how the degradation plays a role on the ohmic resistance.

$$R_{ohm} = \frac{T}{B_{ohm}} \exp \left\{ \frac{E_{act}^{ohm}}{RT} \right\} + R_{contact} + \sum_{d \in \mathcal{D}_{ohm}} R_d$$

Here, the first two terms are time-invariant and depend only on the present conditions of the cell. In contrast, the degradation terms, represented by the summation, evolve and increase as the cell ages. The first degradation mechanism considered is the resistance arising from nickel migration.

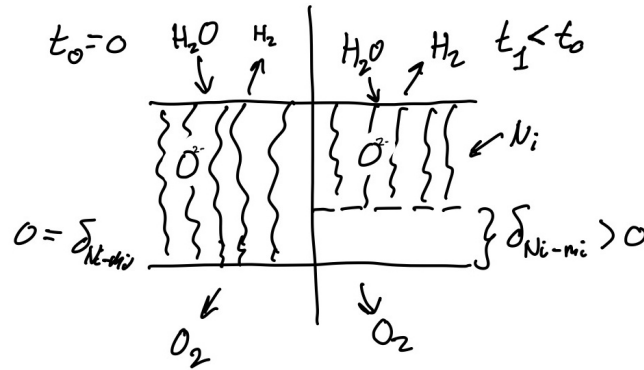


Figure 4.4: For a cell without degradation (Left), nickel migration has not occurred and  $d_{\text{Ni-mi}} = 0$  at the layer between the nickel-filled electrode and the electrolyte. Over time the nickel-filled part of the electrode creeps away from the electrolyte (Right), giving rise to resistance induced by the raw electrode on the traveling species.

### 4.2.2 Nickel migration

Nickel migration is a simple phenomenon to understand. Essentially the electrode is saturated with nickel, but as time goes by the saturated part of the cell will shrink, hence we will have a gap in the electrode where there are no nickel. Since the nickel plays a huge part in transporting the oxygen ions fast and smoothly, the absence of nickel will induce an added travel resistance for the ions. Now the resistance can be represented by Equation 4.19.

$$R_{\text{Ni-mi}} = \frac{h_{\text{Ni-mi}}}{\left(\frac{\epsilon}{\tau} \sigma_{\text{elec}}\right)} \quad (4.19)$$

Where  $d_{\text{Ni-mi}}$  is the thickness of nickel absence layer, which develops over time,  $\sigma_{\text{elec}}$  is the electrode conductivity,  $\epsilon$  is the zirconia fraction and  $\tau$  is the tortuosity of the zirconia fraction [5]

The sketch in Figure 4.4 illustrates how the nickel migration develops over time, and the impact it has.

The conductivity of the electrode is given by Equation 4.20. This conductivity is in reality the reduction in conductivity due to the creep of the nickel part of the electrode.

$$\sigma_{\text{elec}} = \frac{\sigma_{\text{elec},0}}{T} \exp\left(-\frac{E_{a,\text{elec}}}{RT}\right) \quad (4.20)$$

Javid Beyrami et al. [5] describe the development of nickel migration by the following differential equation, where  $c_1$  and  $c_2$  are negative and  $c_3$  and  $c_4$  are positive. For high values of current and temperature, migration increases; if either  $T$  or  $i$  is too small or too large, migration also increases.

$$\frac{\partial h_{\text{Ni-mi}}}{\partial t} = c_1 T + c_2 i + c_3 iT + c_0$$

Where  $c_k$  is fitted to experimental data.

### 4.2.3 Interconnect Oxidation

Another important degradation mechanism to consider is interconnect oxidation. This process also contributes to the overall ohmic resistance, and is relatively straightforward to understand: it occurs when the metallic interconnect undergoes oxidation, in other words, when the metal effectively “rusts.”

The resistance resulting from interconnect oxidation is in structure much like that of nickel migration. Specifically, it is determined by the thickness of the oxidized layer divided by its (reduced) electrical conductivity, as shown in Equation 4.21 [5], [13], [6].

$$R_{\text{IC-ox}} = \frac{h_{\text{IC-ox}}}{\sigma_{\text{IC-ox}}} \quad (4.21)$$

Where the oxidized interconnect conductivity is given as a function of temperature in Equation 4.22.

$$\sigma_{\text{IC-ox}} = \frac{k_{\text{ox}}}{T} \exp \left\{ -\frac{E_{\text{el}}}{RT} \right\} \quad (4.22)$$

Beyrami et al. [5] describe the growth of the oxide layer by the following rate law.

$$\frac{dh_{\text{IC-ox}}^2}{dt} = k_{\text{mg}} \exp \left\{ -\frac{E_{a,\text{ox}}}{RT} \right\} \quad (4.23)$$

The squared-thickness form in Equation 4.23 reflects parabolic oxidation kinetics: layer growth follows a square-root-of-time law, and the rate depends on local temperature alone through the Arrhenius term. Unlike nickel migration, interconnect oxidation is therefore not sensitive to current density. As  $h_{\text{IC-ox}}$  increases, the contribution  $R_{\text{IC-ox}}$  in Equation 4.21 rises and adds to the degradation summation in the total ohmic resistance. The constants  $k_{\text{mg}}$  and  $E_{a,\text{ox}}$  are fitted to experimental data [5], [6]. Together with nickel migration, this completes the ohmic degradation terms; the remaining mechanism acts on the cathode exchange current and is discussed next.

### 4.2.4 Nickel Agglomeration

A further degradation mechanism affecting the cathode exchange current is nickel agglomeration. Unlike the ohmic contributions discussed above, it is typically modelled not as a resistance but as a multiplier on  $\lambda_c$ , the normalized triple phase boundary [5]. Whether the underlying process is nickel migration or another phenomenon remains debated, and the mechanistic details are therefore not pursued here. Because agglomeration develops on a relatively short timescale,  $\lambda_c$  is assumed to have reached its asymptotic value of approximately 0.55 [5].

| Description                       | Equation                                                                                                                                                                  | Ref.                 |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| Total ohmic resistance            | $R_{\text{ohm}} = \frac{T}{B_{\text{ohm}}} \exp \left\{ \frac{E_{\text{act}}^{\text{ohm}}}{RT} \right\} + R_{\text{contact}} + \sum_{k \in \mathcal{D}_{\text{ohm}}} R_k$ |                      |
| Nickel-migration resistance       | $R_{\text{Ni-mi}} = \frac{d_{\text{Ni-mi}}}{\left( \frac{\varepsilon}{\tau} \sigma_{\text{elec}} \right)}$                                                                | Equation 4.19        |
| Electrode conductivity            | $\sigma_{\text{elec}} = \frac{\sigma_{\text{elec},0}}{T} \exp \left( -\frac{E_{a,\text{elec}}}{RT} \right)$                                                               | Equation 4.20        |
| Nickel thickness rate             | $\frac{\partial d_{\text{Ni-mi}}}{\partial t} = c_1 T + c_2 i + c_3 iT + c_4$                                                                                             |                      |
| Interconnect oxidation resistance | $R_{\text{IC-ox}} = \frac{d_{\text{IC-ox}}}{\sigma_{\text{IC-ox}}}$                                                                                                       | Equation 4.21        |
| IC oxide conductivity             | $\sigma_{\text{IC-ox}} = \frac{k_{\text{ox}}}{T} \exp \left\{ -\frac{E_{\text{el}}}{RT} \right\}$                                                                         | Equation 4.22        |
| IC oxidation rate                 | $\frac{dd_{\text{IC-ox}}^2}{dt} = k_{\text{mg}} \exp \left\{ -\frac{E_{a,\text{ox}}}{RT} \right\}$                                                                        | Equation 4.23        |
| Normalized triple phase boundary  | $\lambda_c = 0.55$                                                                                                                                                        | [@BEYRAMI2024100653] |

Table 4.2: Overview of degradation mechanisms (ohmic contributions and slow-state dynamics). The base cell equations are summarized in Table 4.1.

# 5 Optimal Control and Solution Method

## 5.1 Optimal Control Problem

### 5.1.1 Introduction

With the cell model in place, and a nice degradation setup. Operation can be simulated for any admissible inlet conditions and cell voltage (within a reasonable range). What remains is to specify an economic objective and formulate the corresponding optimal control problem. Once again, related to the water gun problem, in this chapter, the objective of “hitting Thomas” is formulated.

Following discussions with Dynelectro and DTU Energy, and a review of how the objective is set in most literature [10],[4],[7], the general structure adopted is to maximize running revenue (hydrogen production while minimizing production cost) and to minimize degradation.

$$\begin{aligned} \max_{\mathbf{u} \in \mathcal{U}} \quad & \int_0^T R \, dt + \Psi \\ \text{s.t.} \quad & \frac{\partial n_i}{\partial t} \text{ satisfies Table 4.1,} \quad \text{for } i \in \mathcal{S} \\ & \frac{\partial d_i}{\partial t} \text{ satisfies Section 4.2.1,} \quad \text{for } i \in \mathcal{D} \end{aligned} \tag{5.1}$$

Here  $\mathbf{u}(t)$  collects the control inputs, that is the applied voltage  $U(t)$  and the inlet temperature  $T_{\text{in}}(t)$  that can be chosen as functions of time, and  $\mathbf{d}$  collects the degradation state variables;

$$\mathbf{d} = [d_i(t)]_{i \in \mathcal{D}}.$$

Looking at Equation 5.1, the integrand  $R(\mathbf{u}, \mathbf{d})$  is the **revenue rate**; maximizing its time integral corresponds to maximizing operating income over  $[0, T]$ . The term  $\Psi(\mathbf{d})$  is the **salvation** contribution: a scalar that rewards the optimizer for how much useful life remains in the cell at the end of the horizon.

It is worth noting that minimizing degradation is in its core, a part of minimizing production cost: when a cell degrades the resistance rises, leading to higher power for the same hydrogen output, and in the worst case degradation leads to a malfunctioning cell, requiring replacement of the cell or, at facility scale, a stack. It should also be noted that using terminal degradation is a modeling choice; using the running degradation rate inside the integral would have been equally valid and may be simpler to implement.

### 5.1.2 Revenue

The revenue rate is taken in the explicit form shown in Equation 5.2.

$$\begin{aligned} R(\mathbf{u}, \mathbf{d}) &= c_{\text{H}_2} \Delta \dot{n}_{\text{H}_2} - c_P P \\ \Delta \frac{\partial n_{\text{H}_2}}{\partial t} &= A_{\text{int}} N_{\text{out}, \text{H}_2} - \frac{\partial n_{\text{in}, \text{H}_2}}{\partial t} \\ P &= P_{\text{cell}} + P_{\text{heat}} \end{aligned} \quad (5.2)$$

Here  $\frac{\partial n_{\text{in}, \text{H}_2}}{\partial t}$  is specified as an input (part of  $\mathbf{u}$ ),  $P$  is the total electrical power,  $P_{\text{cell}}$  the power supplied to the stack, and  $P_{\text{heat}}$  the auxiliary sensible heating power.

Thus,  $R$  is the value of net hydrogen production (outlet minus inlet, in appropriate units) minus the cost of power. All quantities in Equation 5.2 follow from the cell model summarized in Table 4.1.

From the model data the power of the cell is computed by  $P_{\text{cell}} = I_{\text{cell}} U$  with:

$$I_{\text{cell}} \approx \frac{A_{\text{cell}}}{N_{\text{cell}}} \sum_{k=1}^{N_{\text{cell}}} i_k.$$

The heating power is the **sensible** auxiliary preheat duty: for each stream, the enthalpy difference between the **inlet** composition at the target inlet temperature  $T_{\text{in}}$  and the same composition at the recovered outlet temperature  $T_{\text{out}} - T_{\text{loss}}$ . Composition enthalpy of the electrochemical conversion is excluded from  $P_{\text{heat}}$  and is accounted for via  $P_{\text{cell}}$ . Positive  $P_{\text{heat}}$  means external preheat is required ( $T_{\text{in}} > T_{\text{out}} - T_{\text{loss}}$ ); negative values are recovery credits.

$$P_{\text{heat}} = \sum_{\zeta \in \{a, f\}} \dot{V}_{\zeta} A_{\text{int}} \left( \sum_{i \in \mathcal{S}_{\zeta}} \mu_{i, \text{in}} h_i(T_{\text{in}}) - \sum_{i \in \mathcal{S}_{\zeta}} \mu_{i, \text{in}} h_i(T_{\text{out}} - T_{\text{loss}}) \right) \quad (5.3)$$

Where outlet thermal energy is assumed recoverable toward the inlet stream with an absolute loss  $T_{\text{loss}}$ , and  $\mu_{i, \text{in}}$  denotes inlet molar concentrations.

With that the running revenue or integrand is settled, hence we can look at the salvation.

### 5.1.3 Salvation

After operating up to time  $T$ , the running profit captures cash flow from hydrogen sales net of power cost. A salvation term is included, with the objective in mind, that the cell shouldn't be overused leading to, a cell which cannot gain its own cost in revenue. The idea is to measure, in a simple aggregate way, how close the cell is to end-of-life limits across degradation mechanisms that can cause failure.

Equal weight is assigned to each index in  $\mathcal{D}$ , leading to

$$\Psi = \frac{c_{\text{cell}}}{|\mathcal{D}|} \sum_{i \in \mathcal{D}} \left( 1 - \frac{d_i}{d_{i, \text{critical}}} \right)^{\alpha_{\Psi}} \quad (5.4)$$

Here  $c_{cell}$  scales the reward to the capital cost of the cell, and  $\mathcal{D}$  is the set of degradation. Initially  $\alpha_\Psi = 1$

For each  $i$ , the factor  $\max\{0, 1 - d_i/d_{i,critical}\}$  is the unused fraction of the margin to the critical level at stop time  $T$ . Averaging over  $\mathcal{D}_{fail}$  and scaling by  $c_{cell}$  yields a terminal value that increases when the cell stops farther from those limits.

### 5.1.3.1 Extra note on Salvation

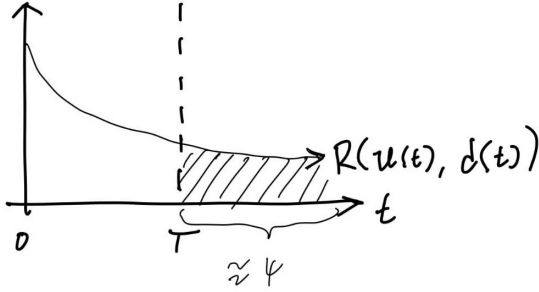


Figure 5.1: CAPTION

The ideal aim would be to extract the most value from a cell over its lifetime, which would correspond to optimizing the integral in Equation 5.1 with  $\Psi = 0$  and  $T$  a conditioned variable equal to the lifetime. That horizon is not practical, since degradation and prices cannot be predicted that far ahead. Instead, the objective optimizes value over a short future horizon while retaining potential revenue. This is illustrated in Figure 5.1.

The objective is essentially the area under the revenue-rate curve. The formulation used here approximates maximization of that area over the full

lifetime, but only up to the finite horizon  $T$ .

### 5.1.4 H<sub>2</sub> storage and delivery agreement

In addition to the *simple* revenue model. A more realistic model is also proposed. This model builds on the exact same equations and principles as previous, with the additional part of adding a storage tank and a constant delivery range. This is done to simulate a contract, where it has been agreed to deliver “x” amount of hydrogen for a given period. In reality this is only delivered once in a while, but as a simplification this model assumes that we have a continues delivery instead ( $\dot{n}_{H_2,agreement}$ ). If the delivery is not met, a penalty term is activated. This could be viewed as a fine within the agreement. Doing all of this, gives the new revenue model stated in Equation 5.5.

$$R_{\text{tank}} = c_{H_2} \dot{n}_{H_2,agreement} - c_P P - \kappa_{\text{buy}} c_{H_2} \dot{n}_{\text{purchase}}. \quad (5.5)$$

Additionally, a model for the storage tank is needed. Here we use a simple model, where the content rate is what is produced minus the agreement rate. And if the tank is empty, we will need to make up for this using the purchase or penalty term  $\dot{n}_{\text{purchase}}$ . Giving us the two equations 5.7 and 5.6.

$$\Delta \dot{n} = \dot{n}_{\text{prod}} - \dot{n}_{H_2,agreement}$$

$$\dot{n}_{\text{tank}} = \max(0, \Delta \dot{n}) \quad (5.6)$$

$$\dot{n}_{\text{purchase}} = \max(0, -\Delta \dot{n}). \quad (5.7)$$

At the end time the tank might end up nonempty. The question is what to do with this? In the for the generated results, one of two things is done. Either the terminal storage amount is sold on a free market. Giving us the additional salvation term in Equation 5.8.

$$\Psi_{\text{tank}} = \kappa_{\text{sell}} c_{\text{H}_2} m_{\text{tank}}(T), \quad (5.8)$$

Assuming that the end storage have to compete with *black* hydrogen,  $\kappa_{\text{sell}}$  takes the value of around  $\frac{1}{8}$ . Another option to treat the end tank storage, is to set a constraint. Here a cyclic / symmetric constraint would seem obvious for some cases. And for the case used latter it is exactly what is done. Hence, we have the addition constraint as stated in Equation 5.9.

$$m_{\text{tank}}(0) = m_{\text{tank}}(T) \quad (5.9)$$

Now essentially this gives an infinite amount of solutions since. If a solution is found where  $m_{\text{tank}}(0) = m_0 = m_{\text{tank}}(T)$ . Then  $m_{\text{tank}}(0) = m_0 + a = m_{\text{tank}}(T)$ , where  $a$  is a positive scalar, is also a solution. Now to avoid this, it is simple just to look for a solution where the tank content for the whole time domain is the lowest. The way this is done is simply by adding a penalty term:

$$- \min_t m_{\text{tank}}(t).$$

Or more simply stated, if a solution is found, where the tank content never hits zero. Simply subtract the point in time where the content is lowest. Then the desired solution is found.

#### 5.1.4.1 Full objective (tank mode)

When tank mode is active, the optimizer solves

$$\max_u \int_0^T R_{\text{tank}} dt + \Psi(\mathbf{d}(T)) + \Psi_{\text{tank}}(m_{\text{tank}}(T)) \quad (5.10)$$

or

$$\begin{aligned} \max_u \int_0^T R_{\text{tank}} dt + \Psi(\mathbf{d}(T)) - \min_t m_{\text{tank}}(t) \\ \text{s.t. } m_{\text{tank}}(0) = m_{\text{tank}}(T) \end{aligned} \quad (5.11)$$

instead of Equation 5.1 with Equation 5.2. Fixed delivery revenue decouples cash flow from instantaneous production: the optimizer minimizes power cost and spot purchases while building inventory when production is favourable, subject to the usual salvation trade-off on degradation.



## 5.2 Building the numerical solver

### 5.2.1 Introduction

This chapter presents the construction of numerical tools required to determine the optimal control  $\mathbf{u}^*(t)$  for the system. Unlike simple textbook examples, where a Wikipedia lookup was sufficient, the problem considered here is more complex and necessitates a structured, step-by-step methodology. The central question addressed is: What tools and methods are needed to solve the optimal control problem outlined in Section 5.1.1?

The overall strategy is as follows:

1. **Steady-state cell equations:**

As the focus is on long-term behavior, it is assumed that the dynamics described by the differential equations in Table 4.1 occur much faster than the overall optimization timescale, treating them as instant. This allows for replacement with a set of steady-state equations, which are simpler to solve. The Finite Volume Method (FVM) is used to solve these equations numerically.

2. **Degradation dynamics:**

With the steady-state cell solver established, its outputs serve as algebraic inputs to the degradation model (Table 4.2). This model captures the system's degradation over time through differential equations, which are solved numerically using the implicit Euler method.

3. **Objective and optimal control:**

The optimal control objective (Table 5.1) is addressed by discretizing the control input with the single shooting method. In this approach, both the revenue and degradation equations are integrated forward in time as a system of differential equations.

Structuring the problem in these three parts (steady-state solution, degradation modeling, and control optimization) enables a systematic approach to the full optimal control challenge.

### 5.2.2 Finite volume method (FVM)

With the descriptive equations in place (Table 4.1, Section 4.2.1, and Section 5.1.1), a numerical solution method is required. All equations can be written in the general form

$$\frac{\partial u}{\partial t} = Q_u - \frac{\partial F_u}{\partial z} \quad (5.12)$$

where  $Q_u$  denotes the source term and  $F_u$  the flow term; both can be computed directly from the state. For now only the steady-state solution is of interest, which simplifies the problem considerably and yields the following *boundary value problem*:

$$0 = Q_u + \frac{\partial F_u}{\partial z}$$

The *finite volume method* is used to solve this steady-state BVP [9].

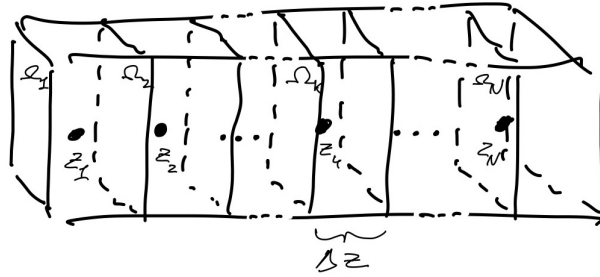


Figure 5.2: A sketch of the finite volume method. A large volume, corresponding to the air and gas channel, is split into smaller volumes. The greater volume is divided into  $N$  volumes, each represented by the midpoint, yielding a 1D system instead of 3D. Integration over the densities in each small volume gives the mass in that volume. The figure also introduces  $z_k$  (midpoint),  $\Omega_k$  (small volume), and  $\Delta z$  (length of the volume).

As shown in Figure 5.2, the domain is split into smaller subdomains coupled by flux from one volume into the next. Integration of the density  $u$  over a small volume  $\Omega_k$  of volume  $V_k$  proceeds as follows.

$$\int_{\Omega_k} \frac{\partial u}{\partial t} = \int_{\Omega_k} Q_u dV - \int_{\Omega_k} \frac{\partial F_u}{\partial z} dV$$

The source term is approximated by a rectangle (midpoint rule):  $\int_{\Omega_k} Q_u \approx Q_u(z_k) A_{int} \Delta z$ . For the flux term, the fundamental theorem of calculus is used to evaluate the antiderivative in the  $z$ -direction, with the assumption that the concentration is constant perpendicular to  $z$ , giving:

$$\int_{\Omega_k} \frac{\partial F_u}{\partial z} dV = A_{int} F_u \Big|_{\partial \Omega_k} = A_{int} \left( F_u(z_{k+\frac{1}{2}}) - F_u(z_{k-\frac{1}{2}}) \right)$$

The boundary values  $F_u(z_{k-\frac{1}{2}})$  are approximated by the value in the previous cell, consistent with the flow direction of the system (in cell  $k$  there is no information from cell  $k+1$ , but there is from cell  $k-1$ ). The integral is therefore approximated as:

$$\int_{\Omega_k} \frac{\partial F_u}{\partial z} \approx \left( F_u(z_k) - F_u(z_{k-1}) \right) A_{int}$$

Combining the source and flux approximations gives the discrete equation Equation 5.13.

$$\frac{\partial}{\partial t} \int_{\Omega_k} u dV = Q_u(z_k) A_{int} \Delta z - \left( F_u(z_k) - F_u(z_{k-1}) \right) A_{int} \quad (5.13)$$

or at steady state:

$$0 = Q_u(z_k) A_{int} \Delta z - \left( F_u(z_k) - F_u(z_{k-1}) \right) A_{int}$$

### 5.2.2.1 Applying boundary conditions

The problem has two boundary conditions. The first is a Dirichlet condition at the inlet, imposed by defining the first flux as:

$$F_u(z_{-1}) = F_u(z_{inlet})$$

For the Neumann condition at the outlet, no change is made to the equations, since the upstream flux in the FVM makes it possible to neglect a Neumann boundary term at the end.

### 5.2.2.2 FVM on specific equations

Applying the FVM to the governing equations yields the following discretization; see Appendix A3 for derivations.

$$|\Omega_k| \frac{\partial \mu_i}{\partial t}(z_k) \approx w N_{c,i} \Delta z - A_{int} (N_i(z_k) - N_i(z_{k-1})), \quad (5.14)$$

And

$$m_k c_p \frac{\partial T}{\partial t}(z_k) \approx Q_T A_{int} \Delta z - A_{int} \sum_{i \in \mathcal{S}} v_i c_{p,i} \left( T(z_k) \mu_i(z_k) - T(z_{k-1}) \mu_i(z_{k-1}) \right) \quad (5.15)$$

## 5.2.3 FVM model validation and Grid independence

### 5.2.3.1 IV-curve validation

After implementing all the equations given in Table 4.1, the model was validated against an IV-curve from experimental data [17]. The error is below  $10^{-2}$  except at quite high voltage/current, where the error is larger. Figure 5.3 compares the model with the data.

This level of agreement is sufficient for the intended operating range, as very high voltages are not relevant for typical operation. The main variable of interest is the change in moles across the cell, which exhibits similar trends; at high voltage or current, the error in molar change decreases further, since the molar fractions approach their extrema (0 or 1), making relative errors negligible.

### 5.2.3.2 Grid independence

Grid refinement was used to assess how much the states change when the mesh is refined, and thereby to estimate the resolution required for reliable simulations later. The steady-state solver was run while doubling the number of grid points each time. Figure 5.4 indicates that if a relative error target of approximately  $10^{-3}$  was the target. The amount of volumes needed would be around 200. But for this thesis, the amount of volumes will be 50, meaning that a relative error of around  $10^{-2}$  will have to suffice.

But nonetheless the Steady-state equations can be solved to a rather fine precision. Leading to the next step: Solving the ODE's using the outputs of the output of the FVM.

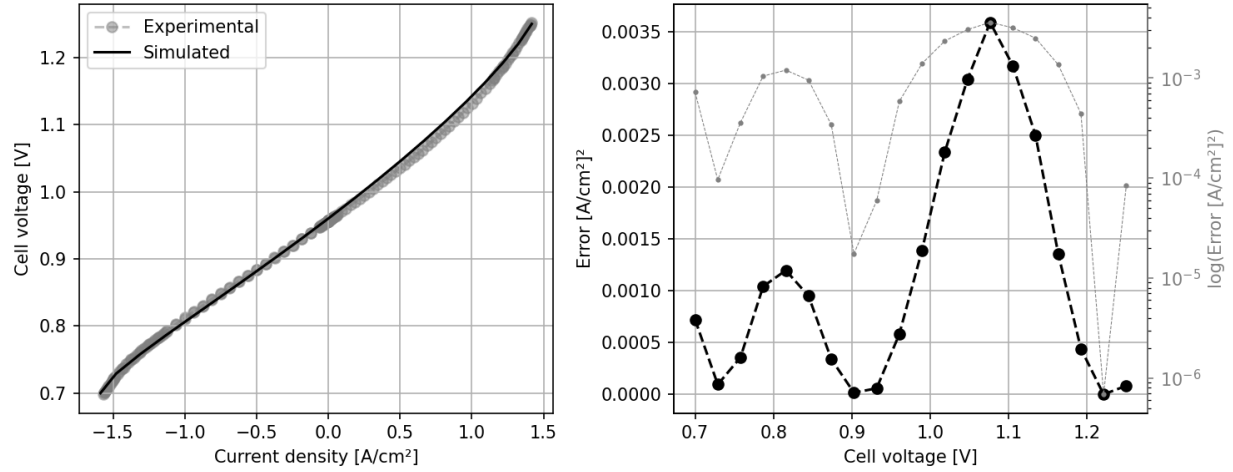


Figure 5.3: Model validation by comparing to an IV-curve from experimental data. The simulated current–voltage curve is compared to the experimental curve on the left. On the right, the error in current is shown as a function of voltage, on both logarithmic and linear scales. The experimental data is from [14], Fig. 2.

### 5.2.4 Implicit Euler method (ODE solver)

As stated in the introduction to this chapter, the FVM gives the algebraic outputs needed to solve the differential equations that define degradation (Table 4.2). Those ODEs are advanced with the implicit Euler method on a uniform time grid [11].

#### 5.2.4.1 General form

Take the ODE:  $\dot{\mathbf{x}} = \mathbf{f}(t, \mathbf{x})$ . Discretize time on  $t \in [0, T]$  into  $N_t$  steps with  $\mathbf{x}_i = \mathbf{x}(t_i)$ ,  $t_i = t_{i-1} + \Delta t_i$ ,  $t_0 = 0$ , and  $t_{N_t} = T$ . Given an initial state  $\mathbf{x}_0$ , the implicit Euler update is

$$\mathbf{x}_i = \mathbf{x}_{i-1} + \Delta t_i \mathbf{f}(t_i, \mathbf{x}_i), \quad i = 1, \dots, N_t. \quad (5.16)$$

Because  $\mathbf{x}_i$  appears on both sides, Equation 5.16 is a fixed-point equation at each step. Damped fixed-point iteration is therefore a natural solver. The update is also Markovian: step  $i$  depends only on  $\mathbf{x}_{i-1}$  and the control on  $[t_{i-1}, t_i)$ , so the integration can proceed one time step at a time.

#### 5.2.4.2 Specific ODE setup

For this thesis the vector field  $\mathbf{f}$  is expensive: evaluating  $\dot{\mathbf{d}}$  requires converged FVM fields (temperature and current density along the stack), which themselves depend on the degradation state. The degradation state advanced at each control interval is

$$\mathbf{d}_i = \begin{bmatrix} \mathbf{d}_{\text{Ni-mi},i} \\ \mathbf{s}_{\text{IC-ox},i} \end{bmatrix}, \quad (5.17)$$

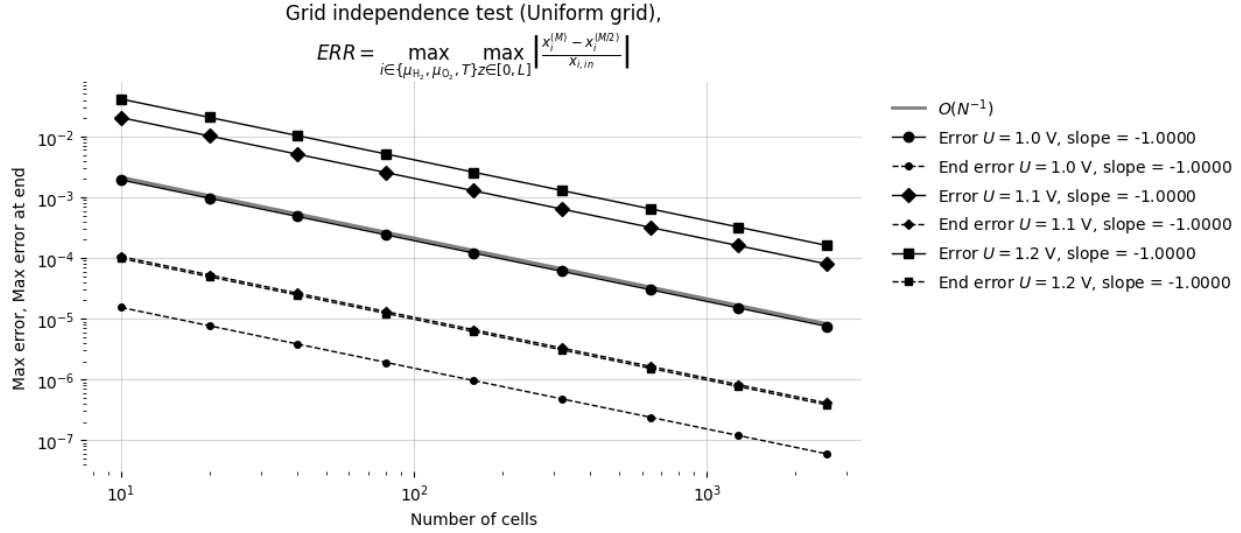


Figure 5.4: Grid Independence test

where  $\mathbf{d}_{\text{Ni-mi},i}, \mathbf{s}_{\text{IC-ox},i} \in \mathbb{R}^{N_{\text{cell}}}$  collect the per-cell slow states at time  $t_i$ , with  $\mathbf{s}_{\text{IC-ox},i} = \mathbf{d}_{\text{IC-ox},i}^2$ . Nickel migration stores layer thickness  $d_{\text{Ni-mi}}$  directly; interconnect oxidation stores squared oxide thickness  $s_{\text{IC-ox}} = d_{\text{IC-ox}}^2$ , consistent with Equation 4.23 and  $R_{\text{IC-ox}} = d_{\text{IC-ox}}/\sigma_{\text{IC-ox}}$  with  $d_{\text{IC-ox}} = \sqrt{s_{\text{IC-ox}}}$ .

With piecewise-constant controls  $\mathbf{u}_i$  on  $[t_{i-1}, t_i)$ , implicit Euler gives

$$\begin{aligned} \mathbf{d}_{\text{Ni-mi},i} &= \mathbf{d}_{\text{Ni-mi},i-1} + \Delta t_i \dot{\mathbf{d}}_{\text{Ni-mi}}(\mathbf{d}_i, \mathbf{u}_i), \\ \mathbf{s}_{\text{IC-ox},i} &= \mathbf{s}_{\text{IC-ox},i-1} + \Delta t_i \dot{\mathbf{s}}_{\text{IC-ox}}(\mathbf{d}_i, \mathbf{u}_i), \end{aligned} \quad i = 1, \dots, N_t, \quad (5.18)$$

where  $\mathbf{d}_i$  stacks all per-cell degradation components at time  $t_i$ . The rates follow Table 4.2:  $\dot{d}_{\text{Ni-mi},k} = c_1 T_k + c_2 i_k + c_3 T_k i_k + c_4$  depends on local temperature  $T_k$  and current density  $i_k$ , while  $\dot{s}_{\text{IC-ox},k} = k_{\text{mg}} \exp\{-E_{\alpha, \text{ox}}/(RT_k)\}$  depends on  $T_k$  only.


Those FVM outputs are not explicit inputs to the ODE; they are obtained by running the steady-state FVM solver with control  $\mathbf{u}_i$  and degradation state  $\mathbf{d}_i$ . Because  $\mathbf{d}_i$  appears inside that solve, each time step is a coupled fixed-point problem: guess  $\mathbf{d}_i$ , run FVM, evaluate the rates in Equation 5.18, update  $\mathbf{d}_i$ , and iterate until convergence. Giving us the heavy computation of solving the steady state for each fixed-point iteration, leading to a large computational time.

In general, the problem can be viewed on a two-dimensional grid: each spatial row (FVM cell) must be resolved repeatedly within a time step before advancing to the next column (time index).

### 5.2.5 Validation of the ODE solver

With the steady-state FVM validated in the previous section, the next step is to check that the coupled degradation integrator in Equation 5.18 reproduces expected long-term behaviour.

The reference case follows the potentiostatic traces reported by Beyrami et al. [5] (Fig. 8): fixed cell voltage  $U = 1.285$  V, inlet temperature  $T_{\text{in}} = 750$  °C, and fuel composition 10 %  $\text{H}_2$  / 90 %  $\text{H}_2\text{O}$ . At each time

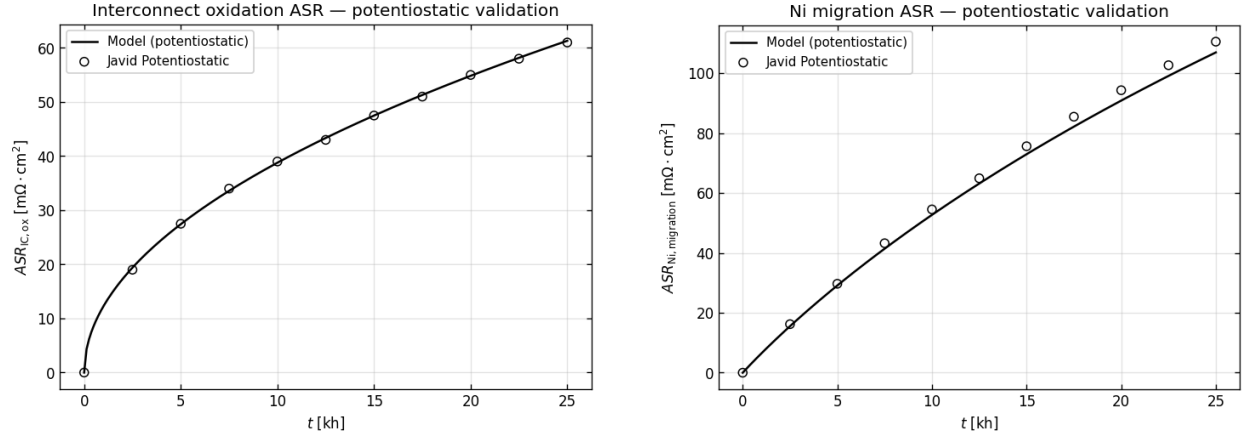

(a) Interconnect oxidation. At  $t = 25$  kh: model  $61.3 \text{ m}\Omega \cdot \text{cm}^2$ , reference  $61.0 \text{ m}\Omega \cdot \text{cm}^2$ . RMSE =  $0.26 \text{ m}\Omega \cdot \text{cm}^2$ .

(b) Nickel migration. At  $t = 25$  kh: model  $106.9 \text{ m}\Omega \cdot \text{cm}^2$ , reference  $110.5 \text{ m}\Omega \cdot \text{cm}^2$ . RMSE =  $2.45 \text{ m}\Omega \cdot \text{cm}^2$ .

Figure 5.5: Potentiostatic validation of ASR for (a) interconnect oxidation and (b) nickel migration. Black line: implicit-Euler simulation. Open markers: digitized reference data from [2].

knot the FVM steady-state problem is solved, the degradation rates from Table 4.2 are evaluated, and the states are updated with implicit Euler (Equation 5.16) until  $t = 25$  kh. This produces a history of how the degradation mechanisms develop over time. From these quantities, the area-specific resistances (ASR) can be computed and compared with the traces from Beyrami et al. in Figure 5.5.

The interconnect-oxidation agreement is very good over the full 25 kh horizon. Nickel migration follows the same trend but sits slightly below the reference curve. Given the digitization uncertainty and the simplified inlet specification relative to the original study, this level of agreement is considered sufficient for the degradation model to be used in the optimal-control setup in Section 5.2.6.

### 5.2.6 Solving the Optimal Control Problem

The optimal control problem (Equation 5.1) is solved using a nonlinear programming (NLP) solver. The problem is set up for single shooting so that an NLP solver can find the optimum. The control function  $\mathbf{u}$  is taken to be piecewise constant (as would also be the case in real applications).

$$\mathbf{u}^{(k)}(t) = \begin{cases} \mathbf{u}_i^{(k)} & t \in [t_i, t_{i+1}) \end{cases}$$

The problem is split into  $N_t$  subproblems, each with constant control input. From Equation 5.1 the objective  $\varphi$  can be rewritten as:

$$\begin{aligned} \varphi &= \int_0^T R(\mathbf{u}, \mathbf{d}) \, dt + \Psi(\mathbf{d}) \\ \Rightarrow \dot{\varphi} &= R(\mathbf{u}, \mathbf{d}) \end{aligned} \quad (5.19)$$

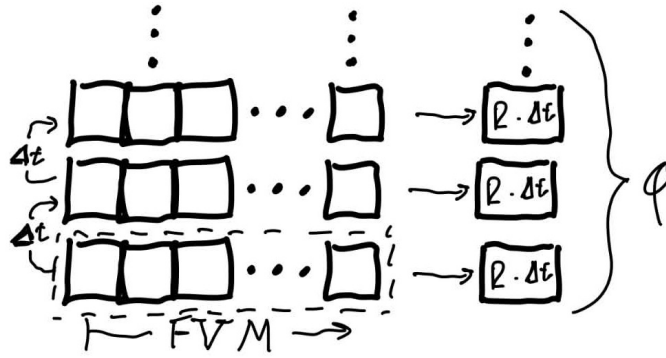


Figure 5.6: CAPTION

Thus  $\varphi$  is obtained by solving the auxiliary differential equation with initial condition  $\varphi(0) = 0$  (numerical integration), concurrently with the state equations, and adding  $\Psi(\mathbf{d})$  at the final time when the degradation at  $t = T$  is known.

For the constraints in Equation 5.1, which are equality constraints, they are used directly to compute degradation and molar flows, leaving only  $\mathbf{u}$  as a decision variable for the optimizer. The NLP solver also requires the gradient  $\nabla_{\mathbf{u}}\varphi$ ; adjoint gradient methods are used [16], [8]. Further details are in Appendix A5; here it suffices that  $\nabla_{\mathbf{u}}\varphi$  is available.

### 5.2.6.1 The full setup

The discretized problem solved is:

$$\begin{aligned}
 & \max_{\mathbf{u}} \quad \varphi_N + \Psi(\mathbf{d}_N) \\
 \text{s.t.} \quad & \varphi_{i+1} = \varphi_i + \dot{\varphi}(\mathbf{u}_{i+1}, \mathbf{d}_{i+1}) \cdot \Delta t_i \quad \text{for } i = 1 \dots N-1 \\
 & \mathbf{d}_{i+1} = \mathbf{d}_i + \dot{\mathbf{d}}(\mathbf{u}_{i+1}, \mathbf{d}_{i+1}) \cdot \Delta t_i \quad \text{for } i = 1 \dots N-1 \\
 & \varphi_1 = 0, \\
 & \mathbf{d}_1 = \mathbf{o}.
 \end{aligned} \tag{5.20}$$

as a single shooting problem, with  $\mathbf{d}$  computed from the constraint equations. A convex programming algorithm is used to find the optimal  $u$ ; the problem is generally convex. For this project the trust-constr method from SciPy is used [19], a trust-region method that employs the computed gradient of  $\varphi$ .

| Description                | Equation                                                                                                                                                                       | Ref.         |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| General objective function | $\int_0^T R, dt + \Psi$                                                                                                                                                        | Equation 5.1 |
| Revenue                    | $R = c_{H_2} \Delta \dot{n}_{H_2} - c_P P$                                                                                                                                     | Equation 5.2 |
| Salvation                  | $\Psi = \frac{c_{cell}}{ \mathcal{D} } \sum_{i \in \mathcal{D}} \left(1 - \frac{d_i}{d_{i,critical}}\right)^{\alpha_\Psi}$                                                     | Equation 5.4 |
| Tank balance               | $m_{k+1} = \max(0, m_k + \dot{n}_{prod} \Delta t - \dot{n}_{agreement} \Delta t)$                                                                                              | Equation 5.6 |
| Contract revenue           | $R_{tank} = c_{H_2} \dot{n}_{agreement} - c_P P - \kappa_{buy} c_{H_2} \dot{n}_{purchase}$                                                                                     | Equation 5.5 |
| Terminal liquidation       | $\Psi_{tank} = \kappa_{sell} c_{H_2} m_{tank}(T)$                                                                                                                              | ??           |
| Cell Power                 | $P_{cell} = I_{cell} U$                                                                                                                                                        |              |
| Heating Power              | $P_{heat} = \sum_{\zeta \in \{a,f\}} \dot{n}_\zeta \left( \sum_{i \in \mathcal{S}_\zeta} x_i h_i(T_{in}) - \sum_{i \in \mathcal{S}_\zeta} x_i h_i(T_{out} - T_{loss}) \right)$ |              |

Table 5.1: Overview of the optimal control formulation (objective, revenue, terminal penalty, and power bookkeeping). The underlying cell equations are summarized in Table 4.1; degradation is treated in Section 4.2.1. Optional tank economics are in Section 5.1.4.



## 6 Results and Findings

### 6.1 Introduction

With the full machinery in place, it was time to put it to work. The preceding chapters set up the model, the objective, and the solver; what was still missing before any results could be discussed was a single list of the **numerical settings** actually used in the optimization runs. Those defaults are collected here. Later sections vary individual knobs; this section is the common baseline they all share unless stated otherwise.

The objective itself is unchanged from Equation 5.1: maximize integrated revenue plus terminal salvation over a finite horizon. The prices and break levels are the concrete numbers plugged into that formulation. Unless stated otherwise, the runs use the settings in Table 6.1. Literature values for stack geometry and flows [17], end-of-life limits [3], cell cost [4], and energy prices [1] are indicated in the reference column; entries marked *Chosen* are project defaults.

Several entries in Table 6.1 are marked as chosen rather than taken from the literature. The voltage and inlet-temperature bounds keep the optimizer within a range of physically plausible operating conditions for the stack model. The number of FVM cells  $N_{\text{cell}}$  and the control segments  $N_t$  were set by the computational budget of the project: finer discretizations were possible in principle, but the selected values keep each forward solve and outer iteration within tractable run times on the available hardware.

The 200-day horizon is chosen for the same practical reason. It is long enough that a change in the optimal control profile can show up within the optimization window, without extending  $T$  so far that run times and degradation forecasts dominate the workflow.

The parameter  $\alpha_\Psi$  in Equation 5.4 controls the sharpness of the terminal penalty as the cell approaches its end-of-life degradation threshold. A value of  $\alpha_\Psi = 0.5$  is chosen here, making the penalty function relatively gentle when the stack is healthy, but causing it to increase steeply as degradation nears its critical limit. This ensures the optimizer is sensitive to imminent failure while still allowing for some degradation earlier in the lifetime.

### 6.2 Baseline optimization result

As announced in Section 6.1, the first result is a baseline in which both controls are held constant over the full horizon: a single cell voltage  $U$  and a single inlet temperature  $T_{\text{in}}$ , broadcast to all  $N_t = 5$  segments. This is the most restricted operating mode considered ( $U$  and  $T_{\text{in}}$  each collapse to one scalar decision variable), analogous to fixing both aim and pump pressure in the water-gun example from Section 2.1.

| Setting                                       | Baseline value     | Unit               | Reference                         |
|-----------------------------------------------|--------------------|--------------------|-----------------------------------|
| Horizon $T$                                   | 200                | days               | Chosen                            |
| Control segments $N_t$                        | 5                  | —                  | Chosen                            |
| $U$ bounds                                    | [0.8, 1.5]         | V                  | Chosen                            |
| $T_{\text{in}}$ bounds                        | [700, 900]         | °C                 | Chosen                            |
| FVM cells $N_{\text{cell}}$                   | 20                 | —                  | Chosen                            |
| Fuel / air flows                              | 24 / 50            | NL/h               | [14]                              |
| Initial $h_{\text{Ni-mi}} / h_{\text{IC-ox}}$ | 0.75 / 1.5         | $\mu\text{m}$      | Values after 200 hours simulation |
| Break $h_{\text{Ni-mi}} / h_{\text{IC-ox}}$   | 5 / 10             | $\mu\text{m}$      | [18]                              |
| $c_{\text{H}_2}$                              | 7.44               | EUR/kg             | [19]                              |
| $c_P$                                         | 0.079              | EUR/kWh            | [19]                              |
| $c_{\text{cell}}$                             | 1000               | EUR/m <sup>2</sup> | [14], [1]                         |
| $\alpha_\Psi$                                 | 0.5                | —                  | Chosen                            |
| Optimization solver                           | SLSQP/Trust-Constr | —                  | —                                 |

Table 6.1: Baseline numerical settings for the optimization results in this chapter (unless a subsection states otherwise).

All other settings follow Table 6.1. The NLP returns

$$U^* \approx 1.29 \text{ V}, \quad T_{\text{in}}^* \approx 758 \text{ °C (1031 K)}.$$

Figure 6.2 shows the replayed trajectory at these controls. Nickel-migration thickness grows from  $0.75 \mu\text{m}$  to about  $3.7 \mu\text{m}$ ; interconnect oxidation from  $1.5 \mu\text{m}$  to about  $3.1 \mu\text{m}$ . Running revenue accumulates over the 200-day window while degradation approaches the break limits enforced in the solver.

The accumulated revenue is 18.985 EUR and the terminal salvation term is 1.452 EUR, meaning the cell has lost 0.548 EUR of salvage value over the horizon. Due to the initial conditions, 0.089 EUR had already been lost at  $t = 0$ , leaving a loss within the control domain of 0.459 EUR and a net economy of 18.526 EUR from a  $20 \text{ cm}^2$  cell over 200 days of operation.

The optimal voltage lies near the thermoneutral point, where electrolytic efficiency is highest. At this operating condition, heat generation and losses balance, so the temperature profile along the cell remains nearly uniform. Both nickel-migration and interconnect-oxidation rates depend on local temperature; with a flat temperature field, these rates are therefore similar at every spatial location. Degradation accumulates evenly along the cell rather than being concentrated in a local hot spot that would accelerate failure at one point.

### 6.2.1 Allowing more control freedom

The natural next step is to let the optimizer choose inlet temperature and voltage freely in each control interval. In this case, however, the outcome is unremarkable: even with full temporal freedom, the best operating mode remains potentiostatic-isothermal operation. This baseline does not impose a required hydrogen delivery rate. As reported in the literature, this mode is among the most efficient ways to operate the cell, and potentiostatic control is gentler than galvanostatic operation. The result therefore serves as a sanity check for the full model and confirms qualitatively expected behavior. Before exploring further variants, the setup

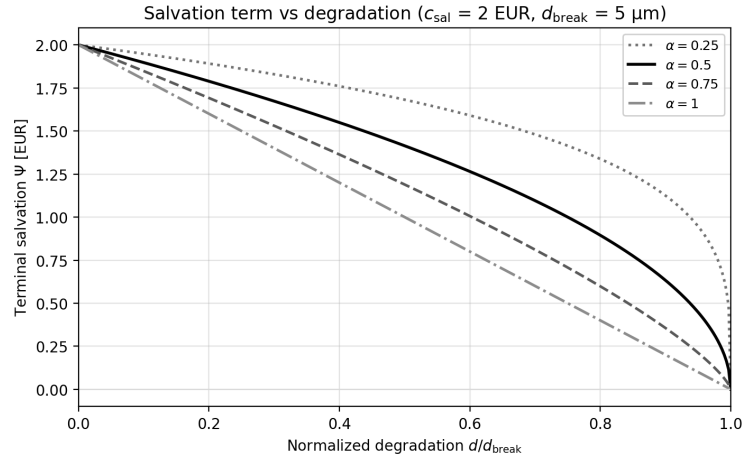


Figure 6.1: WRITE

| Setting                                                       | Value         | Unit | Reference |
|---------------------------------------------------------------|---------------|------|-----------|
| Contractual delivery $\dot{n}_{\text{H}_2, \text{agreement}}$ | 8.25          | NL/h | Chosen    |
| Initial tank inventory $m_{\text{tank}, 0}$                   | 0             | kg   | Chosen    |
| Spot purchase penalty $\kappa_{\text{buy}}$                   | 1.5           | —    | Chosen    |
| Terminal liquidation credit $\kappa_{\text{sell}}$            | $\frac{1}{8}$ | —    | Chosen    |
| Updated Variables                                             | Value         | Unit | Reference |
| Control segments $N_t$                                        | 20            | —    | Chosen    |

Table 6.2: Tank and delivery-agreement settings for the constant-delivery results (in addition to Table 6.1). Updating  $N_t$  to be finer to allow for better galvanostatic controll

is extended to a production setting with a fixed contractual delivery rate, as described in Section 5.1.4.

## 6.3 Constant delivery rate

The next result uses the storage-tank implementation from Section 5.1.4 with a fixed contractual delivery rate. All other settings follow Table 6.1; the additional tank parameters are listed in Table 6.2.

Meaning that we have a contract that we need to deliver what would average to 7.5 normal liters an hour for one cell. Which would be equivalent to a productional setup of two stacks each having about 150 cells each. These two stack should then produce 5kg of hydrogen combined each day to live up to the customer agreement. Then  $\kappa_{\text{buy}}$ , means that if we don't live up to the agreement with the customer. Means that a producer is fined by 50% of the hydrogen price for the hydrogen not delivered. And lastly  $\kappa_{\text{sell}}$ , means that if the hydrogen storage tank have additional hydrogen left in the tank at the end of the period, this is assumed to be sellable to 12.5% of the agreement price on an open marked, assuming that it has to compete with "black" hydrogen.

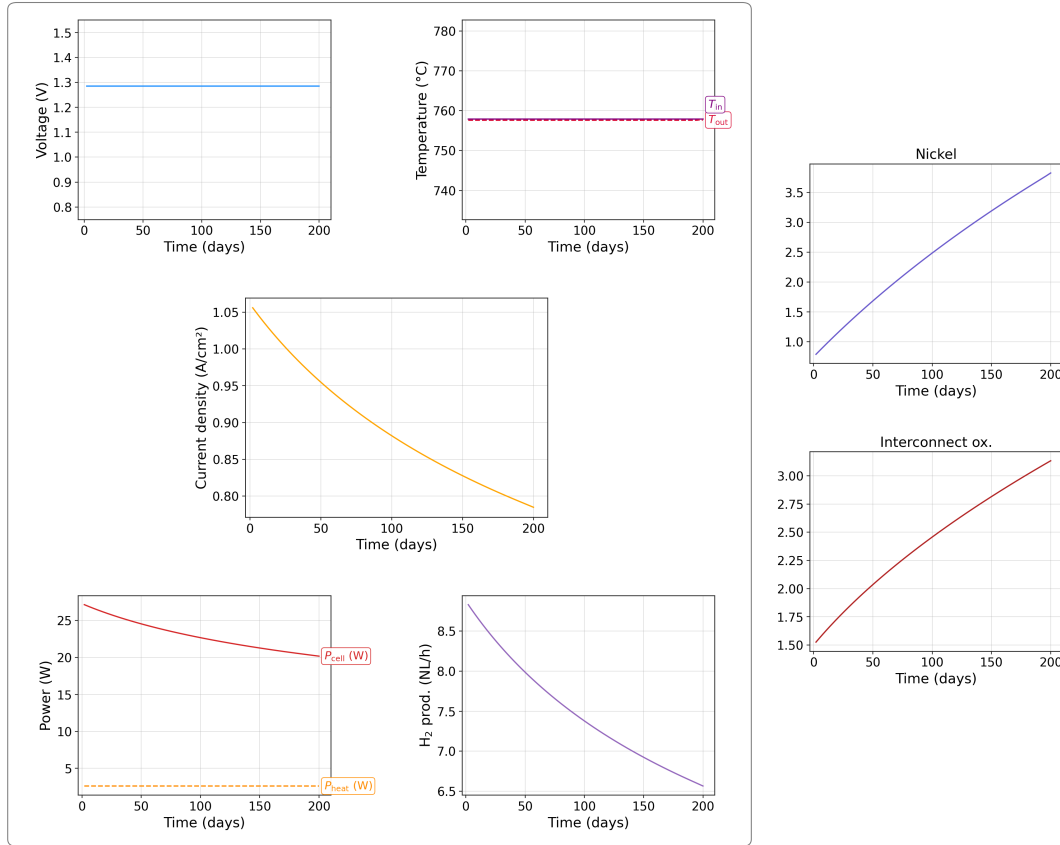


Figure 6.2: Baseline potentiostatic–isothermal optimization: constant  $U$  and  $T_{in}$  over 200 days, with segment-resolved degradation and economics.

### 6.3.1 Freedom on all controls

Now for the most interesting case we look at what happens if we let both voltage and temperature vary through time. Here we end up having that we keep at the optimal control conditions found in Section 6.2. But then we end up two local minima, that have the same objective value, if we take the numerical precision into account. One where once we hit the agreement rate we start tuning the temperature to hit galvanotactic operation. Once the optimizer hit a point where it is possible to switch back to isothermal and potentiostatic operation and the tank will have enough content to make up for the difference between production rate and agreement rate. Once it hit this point it will prefer this to save the cell rather than sell on the free market, this operation mode can be seen in Figure 6.3.

The other option is to run at isothermal and potentiostatic until the tank runs dry, and the switch to galvanotactic operation mode for the rest of the operation window, and can be seen in Figure 6.4.

We must assume that these two minima are the two extreme points on a continuum of minima. Although the modes along this continuum are equivalent with regard to the implemented objective function, one is clearly more favorable than the other, since in production it would be much nicer to run with a spare reserve; hence the best practical solution is the first. Another benefit is that we continuously control both temperature and current, whereas in the second control option we have a large jump in both when the tank runs dry.

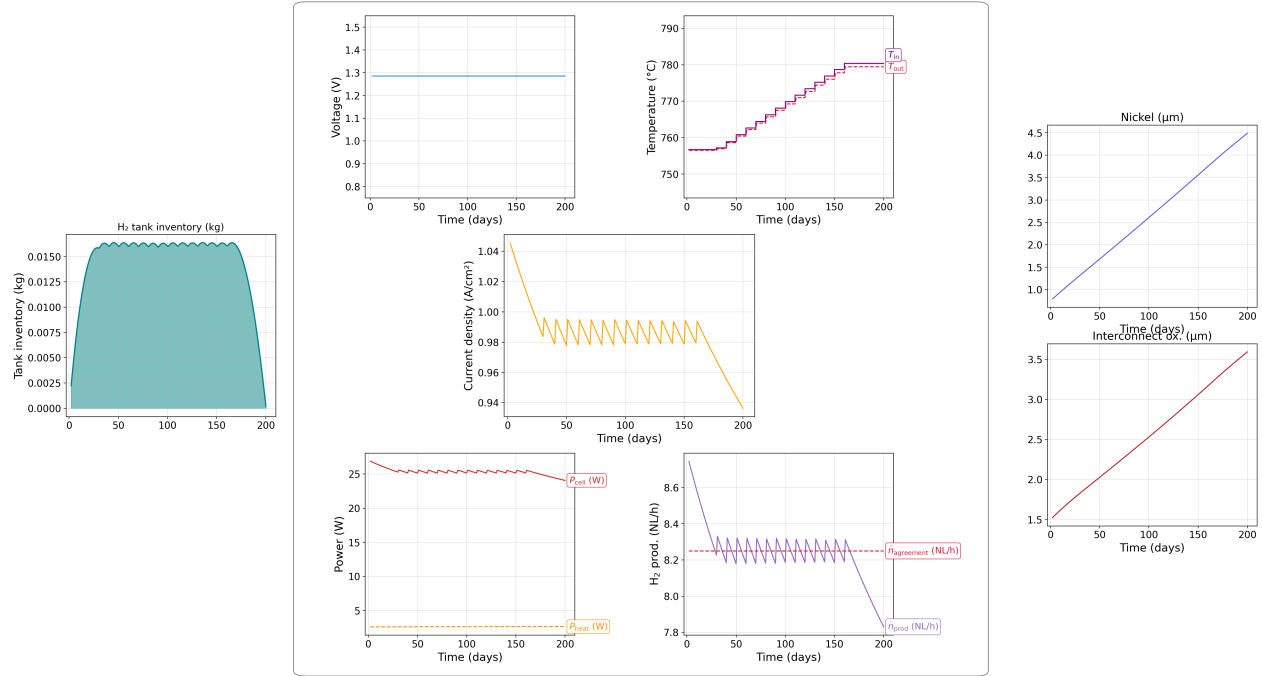


Figure 6.3: WRITE

In both cases the running revenue is the same add 15.87 EUR. And the final salvation is 1.21 EUR, leading to a loss in cell-value of 0.7 EUR. And in both cases the tank has as little hydrogen left, such that the influence on the final objective can be neglected. But And the final net-revenue ends up at 15.10 EUR.

## 6.4 24 hour, varying power price

Lastly we want to look at a 24-hour cycle with varying power prices. It could be that our power prices are heavily related to solar power, hence we have a power drop during the day, and rise during night. For this we would like to analyse the cyclic effect. Hence we will have the added constraint on the tank that the tank content at the end is equal to the tank content in the beginning;  $m(0) = m(T)$ . But then we don't gain anything from selling the content from the tank. Leaving us with the updated settings seen in Table 6.3.

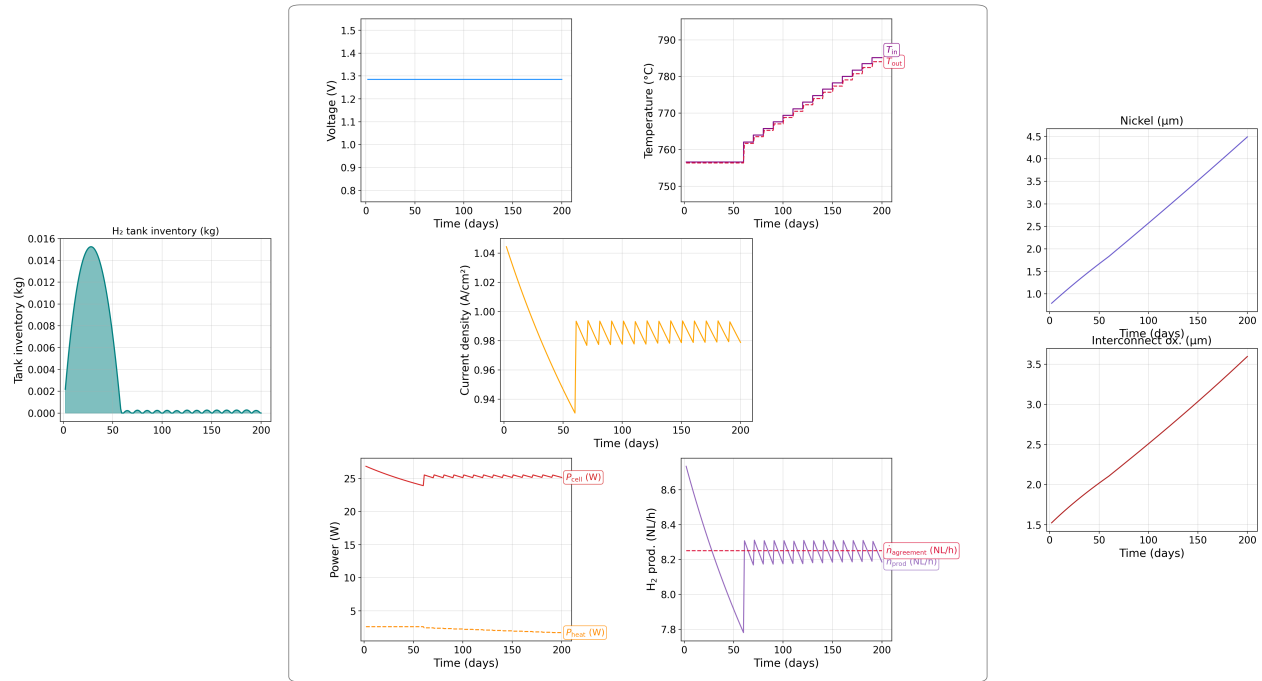


Figure 6.4: WRITE

| Updated Variables                                  | Value                                                                                             | Unit      | Reference       |
|----------------------------------------------------|---------------------------------------------------------------------------------------------------|-----------|-----------------|
| Control segments $N_t$                             | 12                                                                                                | —         | Chosen          |
| Terminal liquidation credit $\kappa_{\text{sell}}$ | 0                                                                                                 | —         | Chosen          |
| Initial tank inventory $m_{\text{tank},0}$         | $m_{\text{tank},T}$                                                                               | —         | Chosen Boundary |
| Power price $c_{P,k}$                              | $\bar{c}_P \left( 1 - a \cos \left( 2\pi \frac{h_k - 12 \text{ h}}{24 \text{ h}} \right) \right)$ | EUR/(W·s) | Chosen          |
| Mean power price $\bar{c}_P$                       | 0.079                                                                                             | EUR/kWh   | [19]            |
| Diurnal swing $a$                                  | 0.5                                                                                               | —         | Chosen          |

Table 6.3: Updated model settings for the 24-hour cyclic scenario. No terminal sale of hydrogen is allowed ( $\kappa_{\text{sell}} = 0$ ), and the initial tank content is enforced as a periodic boundary. Twelve control segments are used for the day. The piecewise-constant power price on segment  $k$  follows a single cosine cycle over 24 h, with  $h_k$  the hour-of-day at the segment midpoint; the minimum  $c_{P,k} = \bar{c}_P(1 - a)$  occurs at midday ( $h_k = 12 \text{ h}$ ) and the maximum  $\bar{c}_P(1 + a)$  at midnight, modelling lower prices when solar supply is high.

## 7 Discussion and Conclusion

### 7.1 Introduction

### 7.2 Interpretation of control freedom

#### 7.2.1 Baseline without delivery obligations

#### 7.2.2 Effect of a fixed delivery contract

#### 7.2.3 Diurnal electricity prices

### 7.3 Physical model limitations

#### 7.3.1 Notes

The optimal-control conclusions rest on the modelling assumptions collected in Section 3.1 and on the degradation and cell equations summarized in Table 4.1 and Table 4.2.

**Spatial and transport simplifications.** The stack is modelled as one-dimensional flow with constant channel area. Concentration overpotential is neglected, which is reasonable when reactant utilisation remains moderate but may underestimate losses at high current. Heat conduction is neglected; in reality, lateral and axial conduction can smooth temperature peaks that would otherwise locally accelerate degradation rates.

**Degradation mechanisms.** Only nickel migration and interconnect oxidation are resolved dynamically. Nickel agglomeration enters indirectly through a fixed cathode exchange-current multiplier  $\lambda_c \approx 0.55$  (Section 3.1), justified by its short timescale relative to the 200-day horizon. A time-varying  $\lambda_c$  could alter the trade-off between current density and temperature over life, especially in scenarios with extended galvanostatic operation.

**Validation and spatial resolution.** IV-curve validation (Figure 5.3) shows agreement within roughly  $10^{-2}$  in the intended operating range. Grid-independence tests (Figure 5.4) indicate that  $\mathcal{O}(10^{-3})$  relative error in the steady-state fields would require on the order of 200 FVM cells, whereas the optimization runs use  $N_{\text{cell}} = 20$  (Table 6.1). The coarser mesh is a deliberate computational compromise; degradation trajectories and optimal controls should therefore be interpreted as qualitatively reliable rather than grid-converged to high precision.

**Unit scale.** All results are computed for a single 20 cm<sup>2</sup> laboratory-scale cell. Stack-level effects—temperature maldistribution, flow allocation, and cell-to-cell variability—are not represented. Scaling arguments (for example, the industrial stack count mentioned in Section 6.3) illustrate production context but do not change the per-cell optimal-control structure derived here.

## 7.4 Economic and boundary-condition limitations

### 7.4.1 Notes

The objective combines running revenue, terminal salvation, and—when the tank is active—contract revenue and optional liquidation (Table 5.1). Several economic parameters are marked *Chosen* in Table 6.1 and Table 6.2 rather than taken from market data. The qualitative conclusions are therefore conditional on those numbers.

**Salvation weighting.** The terminal penalty  $\Psi$  in Equation 5.4 with  $\alpha_\Psi = 0.5$  rises steeply only when degradation approaches critical thicknesses. A smaller  $\alpha_\Psi$  would make the optimizer more willing to accept degradation early in life; a larger value would push operation further from break limits, potentially at the expense of production revenue.

**Tank penalties and credits.** The spot-purchase multiplier  $\kappa_{\text{buy}}$  and liquidation credit  $\kappa_{\text{sell}}$  set how severely shortfalls and end-of-horizon inventory are priced. In the constant-delivery results,  $\kappa_{\text{buy}} = 1.5$  and  $\kappa_{\text{sell}} = 1/8$  were used (Table 6.2), whereas the tank formulation in Section 5.1.4 quotes  $\kappa_{\text{sell}} = 0.9$  as a default. Sensitivity to these coefficients was not explored systematically; they should be aligned and, where possible, justified from offtake-contract structures or market studies [4, 10].

**Delivery rate and horizon.** The contractual rate  $\dot{n}_{\text{H}_2, \text{agreement}}$  and the 200-day horizon jointly determine how often the tank forces galvanostatic operation. A longer horizon, a higher delivery obligation, or a stricter purchase penalty would strengthen the incentive for early inventory build-up and may reduce the set of economically equivalent trajectories observed in Section 6.3.

**Diurnal pricing.** The cosine power-price profile in Table 6.3 is a stylized stand-in for solar-driven day–night spreads. Real price series include ramps, negative prices, and correlation with renewable availability that a single-harmonic model cannot capture. Conclusions about load shifting under diurnal prices should be revisited once results for that scenario are finalized.

## 7.5 Solver and numerical limitations

### 7.5.1 Notes

The optimal-control problem is transcribed to a single-shooting NLP as described in Section 5.2.6. Piecewise-constant controls over  $N_t$  segments are appropriate for implementable set-points, but they bound how finely the optimizer can track fast price or load variations. The baseline used  $N_t = 5$ ; the delivery case used  $N_t = 20$ ; the diurnal case uses  $N_t = 12$  over 24 hours (Table 6.1, Table 6.2, Table 6.3). Refining  $N_t$  increases the decision-space dimension and the cost of each adjoint gradient evaluation.

The NLP solvers (SLSQP and trust-region constrained methods) find local optima. The pair of equivalent



delivery solutions in Figure 6.3 and Figure 6.4 is consistent with a flat or weakly curved region of the objective landscape: many inventory-management policies deliver the same contractual hydrogen while incurring similar power and degradation costs. Without additional regularization—for example, penalties on control jumps or a minimum tank reserve constraint—the solver has no reason to prefer one member of that family over another.

Gradients were verified for the forward model and economic terms (Appendix, Appendix A5 and gradient-verification figures). Remaining numerical uncertainty comes mainly from the FVM spatial discretization, the implicit time stepping over long horizons, and finite convergence tolerances in the outer optimizer. Reported objective values should be read to the precision stated in the results chapter; differences below that level are not physically meaningful.

## 7.6 Alternative objective formulations

### 7.6.1 Notes

The optimization results in Section 6.2–Section 6.3 all use the objective implemented in Equation 5.1: maximize integrated running revenue plus a terminal salvation term. This section contrasts that choice with the introductory formulation in Equation 2.1 and with objectives common in the SOEC optimal-control literature.

### 7.6.2 Weighted revenue–degradation form

At the outset of the thesis, the problem was described schematically in Equation 2.1:

$$\max_u \left\{ \alpha(t) \int_0^T \text{revenue} \, dt - (1 - \alpha(t)) \text{degradation} \right\} \quad (7.1)$$

where  $\alpha(t) \in [0, 1]$  weights instantaneous production against degradation. The motivation was that  $\alpha(t)$  could be tied to market conditions—for example, favouring production when hydrogen prices are high and penalizing degradation more when replacement cost dominates. This form is useful for presentations because it makes the trade-off explicit in a single integral.

The implemented objective does not use Equation 2.1 directly. Instead, degradation enters through the **terminal** salvation map  $\Psi(\mathbf{d})$  in Equation 5.4, while the running integral contains only the revenue rate  $R$ . As noted in Section 5.1.1, an equivalent modelling choice would penalize a **running** degradation rate inside the integral rather than terminal state. The two constructions answer slightly different questions:

- $\int_0^T R \, dt + \Psi(\mathbf{d}(T))$  (**this work**): cash flow over  $[0, T]$  plus end-of-horizon residual value; tends to favour gentle operation when  $\Psi$  is steep near failure limits.
- $\int_0^T [\alpha R - (1 - \alpha) \dot{\mathbf{d}}] \, dt$ : explicit trade-off at every instant; can push away from high  $\dot{\mathbf{d}}$  even when the terminal state is still healthy.
- $\Psi = 0, T$  **equal to lifetime (ideal)**: total lifetime revenue; requires predicting prices and degradation far ahead.

The salvation-based terminal penalty approximates the lifetime objective from Figure 5.1 on a rolling horizon  $T \ll$  stack life. It does not reproduce a time-varying  $\alpha(t)$  unless  $\alpha$  is identified with exogenous price signals—which was not done in the reported runs.

### 7.6.3 Objectives in the literature

Recent SOEC dynamic-optimization studies use several distinct scalar objectives [4, 7, 10]:

- **Minimize terminal degradation** (or maximize remaining life margin) at fixed horizon.
- **Maximize integral efficiency** over the operating window.
- **Minimize levelized cost of hydrogen (LCOH)**, coupling production, energy, capital, and replacement.
- **Maximize hydrogen production** or **minimize energy consumption** subject to thermal and degradation constraints [7].

Giridhar et al. report that LCOH-oriented control can outperform strategies that optimize terminal degradation or integral efficiency alone, with relative gains that depend on electricity price. Beyrami et al. embed degradation and stack replacement into plant-scale economic optimization. These works suggest that the qualitative conclusions of this thesis—especially the sensitivity of  $u^*(t)$  to delivery constraints and the flat objective landscape in Section 6.3—could shift if the scalar objective were changed.

### 7.6.4 Implications for the results presented

Several findings are **objective-dependent** rather than universal:

1. **Non-uniqueness under delivery contracts.** Two trajectories with equal  $\int R dt + \Psi$  (Figure 6.3, Figure 6.4) might separate if the objective penalized control jumps, minimum inventory, or running degradation rate.
2. **Potentiostatic–isothermal baseline.** Near-thermoneutral operation is optimal for  $\int R dt + \Psi$  without delivery forcing. A pure terminal-degradation minimization might accept lower immediate revenue for slower  $\dot{d}$ ; an LCOH objective might favour higher utilisation when electricity is cheap (relevant to the diurnal scenario in Table 6.3).
3. **Salvation sharpness  $\alpha_\Psi$ .** The exponent in Equation 5.4 plays a role analogous to  $(1 - \alpha)$  in Equation 2.1, but only at  $t = T$ . Sweeps over  $\alpha_\Psi$  or over an explicit  $\alpha$  in a running penalty were not carried out here.

Implementing Equation 2.1 with price-linked  $\alpha(t)$ , or switching to LCOH as in [10], would be a natural extension. The existing NLP and adjoint infrastructure could accommodate a different integrand without changing the spatial or degradation models, provided gradients of the new terms are derived or verified in the same way as in Appendix A5.

## 7.7 Use of generative AI tools

### 7.7.1 Notes

Large language models (LLMs) and AI-assisted coding environments were used during this project. This section records that use transparently, in line with institutional expectations for thesis work. The primary tool was Cursor [2], an AI-augmented editor integrated with the project repository.

#### 7.7.1.1 Scope of AI assistance

AI tools were applied to **supporting** tasks rather than to the scientific conclusions themselves. Documented uses include:

- **Software development:** debugging, vectorizing numerical code, structuring modules, and generating repetitive boilerplate (e.g. parallel implementations of similar residual blocks).
- **Verification support:** drafting scripts for finite-difference gradient checks against the adjoint implementation (Appendix A5 and appendix gradient plots).
- **Documentation and prose:** reformulating sentences, drafting parts of the appendix, and generating nomenclature tables (Nomenclature).
- **Literature workflow:** locating and formatting references (all citations were checked against the primary sources before inclusion).

The following remained under direct author responsibility: problem formulation with supervisors (Dynelectro, DTU Energy), choice of degradation mechanisms and parameters, model validation against published data, interpretation of optimization results, and all figures presenting final numerical outcomes.

### 7.7.2 Verification and limitations

Outputs from generative models were not accepted without review. In particular:

- **Physics and equations** were checked against the cited literature and hand-derived limits (e.g. IV-curve validation in Figure 5.3, ODE replay in the solver-validation section).
- **Gradients** used in the NLP were verified numerically before trusting optimization results.
- **Prose** was edited for technical accuracy, notation consistency with Table 4.1, and alignment with the implemented code.

LLMs can produce plausible but incorrect equations, wrong unit conversions, or citations that do not match the claimed source. They also reflect training data that may not include the latest SOEC literature. For these reasons, AI-generated text and code were treated as drafts, not as authoritative references.

## 7.8 Conclusions and outlook

### 7.8.1 Conclusions

1. **Control freedom is scenario-dependent.** Additional temporal freedom in  $U$  and  $T_{\text{in}}$  did not change the optimal operating mode for the unrestricted 200-day baseline: potentiostatic–isothermal operation near the thermoneutral point remained optimal. Freedom became economically relevant only when a fixed hydrogen delivery contract and buffer tank were introduced.

2. **Delivery contracts activate inventory-aware operation.** With contractual offtake, the optimizer alternates between gentle potentiostatic–isothermal periods and galvanostatic periods dictated by tank inventory and penalty prices. Multiple control trajectories can achieve the same objective, so uniqueness should not be assumed without further constraints.
3. **Degradation-aware objectives favour uniform, moderate operation.** Flat temperature profiles and operation away from aggressive current densities slow both modelled degradation mechanisms and align with the salvation term. This provides a consistent link between the physical degradation model and the economic optimum in the cases studied.
4. **The toolchain is fit for purpose at engineering fidelity.** IV validation, ODE replay against reference degradation data, and gradient checks support using the model for qualitative optimal-control studies, subject to the spatial-resolution and mechanism-scope limitations above.
5. **Objective choice shapes what “optimal” means.** The implemented form  $\int_0^T R \, dt + \Psi$  differs from the weighted schematic in Equation 2.1 and from LCOH- or efficiency-based objectives in the literature (Section 7.6). Several reported degeneracies—especially equivalent delivery trajectories—are artefacts of that scalar choice.

### 7.8.2 Future Work





## A1 Deriving PDE's for molecule balances

From [15] eq. [A-3], [A-4] and [A-5]:

$$\frac{PV}{RT} \frac{\partial x_{\text{H}_2\text{O}}}{\partial t} = \underbrace{A_{int} N_{in, \text{H}_2\text{O}}}_{\text{Inlet}} + \underbrace{A_{cell} N_{a, \text{H}_2\text{O}}}_{\text{Cell contribution}} - \underbrace{A_{int} N_{out, \text{H}_2\text{O}}}_{\text{Outlet}}$$

$$N_{in/out, \text{H}_2\text{O}} = v_{fuel} \mu_{in/out, \text{H}_2\text{O}}$$

$$N_{a, \text{H}_2\text{O}} = \nu_{\text{H}_2\text{O}} \frac{i}{2F}$$

The equations are also required in terms of the concentration  $\mu_{\text{H}_2\text{O}}$ , defined by:

$$\mu_{\text{H}_2\text{O}} = \frac{n_{\text{H}_2\text{O}}}{V}$$

Inserting the above and the ideal gas law, and discretizing, yields

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{A_{cell}}{V} \nu_{\text{H}_2\text{O}} \frac{i}{2F} + \frac{A_{int}}{V} v_{fuel} (\mu_{\text{H}_2\text{O}}(z - \Delta z) - \mu_{\text{H}_2\text{O}}(z))$$

Further,  $A_{cell} = w\Delta z$  and  $V = \Delta z A_{int}$  are discretized. Inserting and isolating the time derivative gives:

$$\begin{aligned} \frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} &= \frac{w\Delta z}{A_{int}\Delta z} \nu_{\text{H}_2\text{O}} \frac{i}{2F} + \frac{A_{int}}{A_{int}\Delta z} v_{fuel} (\mu_{\text{H}_2\text{O}}(z - \Delta z) - \mu_{\text{H}_2\text{O}}(z)) \\ &= \frac{w}{A_{int}} \nu_{\text{H}_2\text{O}} \frac{i}{2F} + v_{fuel} \frac{(\mu_{\text{H}_2\text{O}}(z - \Delta z) - \mu_{\text{H}_2\text{O}}(z))}{\Delta z} \end{aligned}$$

Letting  $\Delta z \rightarrow 0$  yields

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{w}{A_{int}} \nu_{\text{H}_2\text{O}} \frac{i}{2F} - v_{fuel} \frac{\partial \mu_{\text{H}_2\text{O}}}{\partial z}$$

or since,  $N_{\text{H}_2\text{O}} = v_{\text{fuel}} \mu_{\text{H}_2\text{O}}$

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{w}{A_{\text{int}}} \nu_{\text{H}_2\text{O}} \frac{i}{2F} - \frac{\partial N_{\text{H}_2\text{O}}}{\partial z}$$

For  $x_{\text{H}_2}$  and  $x_{\text{O}_2}$  the same steps give:

$$\frac{\partial \mu_i}{\partial t} = \frac{w}{A_{\text{int}}} \nu_i \frac{i}{2F} - \frac{\partial N_i}{\partial z}, \quad \text{for } i \in \{\text{H}_2\text{O}, \text{H}_2, \text{O}_2\}$$

Where  $\nu_i = (1, -1, -\frac{1}{2})^\top$ .

## A1.1 Unit computation test only for H<sub>2</sub>O

The units for the H<sub>2</sub>O equation are verified as follows:

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{w}{A_{\text{int}}} \frac{i}{2F} - v_{\text{fuel}} \frac{\partial \mu_{\text{H}_2\text{O}}}{\partial z}$$

**Left side units:** -  $\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t}$ :  $[\text{mol} \cdot \text{m}^{-3} \cdot \text{s}^{-1}]$

**Right side units:** -  $\nu_{\text{H}_2\text{O}} \frac{w}{A_{\text{int}}} \frac{i}{2F}$ : -  $\nu_{\text{H}_2\text{O}}$  is dimensionless. -  $\frac{w}{A_{\text{int}}}$ :  $[\text{m}]/[\text{m}^2] = [\text{m}^{-1}]$  -  $\frac{i}{2F}$ :  $[\text{A} \cdot \text{m}^{-2}]/[\text{C} \cdot \text{mol}^{-1}]$

$$[\text{m}^{-1}] \cdot [\text{A} \text{m}^{-2}]/[\text{C} \text{mol}^{-1}] = [\text{A} \text{m}^{-3}]/[\text{C} \text{mol}^{-1}]$$

Next, since  $1 \text{ A} = 1 \text{ C/s}$ :

$$= [\text{C} \text{s}^{-1} \text{m}^{-3}]/[\text{C} \text{mol}^{-1}] = [\text{mol} \text{s}^{-1} \text{m}^{-3}]$$

So the total units are  $[\text{mol} \text{m}^{-3} \text{s}^{-1}]$

- $v_{\text{fuel}} \frac{\partial \mu_{\text{H}_2\text{O}}}{\partial z}$ :  $[\text{m} \cdot \text{s}^{-1}] \cdot \frac{[\text{mol} \cdot \text{m}^{-3}]}{[\text{m}]} = [\text{mol} \cdot \text{m}^{-3} \cdot \text{s}^{-1}]$  (since  $\partial \mu / \partial z$  has units concentration per length, i.e.  $[\text{mol} \cdot \text{m}^{-3}]/[\text{m}] = [\text{mol} \cdot \text{m}^{-4}]$ ).

Both terms on the right have units  $[\text{mol} \cdot \text{m}^{-3} \cdot \text{s}^{-1}]$ , which matches the left side. The unit computation is consistent.



## A2 Deriving PDE's for energy balances

Starting with. Setting  $\mathcal{S} = \{\text{H}_2\text{O}, \text{O}_2, \text{H}_2\}$ :

$$\rho \frac{\partial h}{\partial t} = \frac{\partial p}{\partial t} + \nabla \cdot (\lambda_T \nabla T) - \sum_{i \in \mathcal{S}} \nabla \cdot (h_i N_i) + Q_T$$

Using the assumption  $\frac{\partial p}{\partial t} = \frac{\partial p}{\partial z} = 0$ ,  $h \approx c_p T$  and the equation becomes:

$$\rho c_p \frac{\partial T}{\partial t} = \nabla \cdot (\lambda_T \nabla T) - \sum_{i \in \mathcal{S}} \nabla \cdot (c_p T N_i) + Q_T$$

Neglecting conductivity gives:

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} c_{p,i} \nabla \cdot (T N_i) + Q_T$$

In 1D the divergence reduces to the derivative:

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} c_{p,i} \frac{\partial T N_i}{\partial z} + Q_T$$

With  $N_i = v_i \mu_i$ ,

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} v_i c_{p,i} \frac{\partial T \mu_i}{\partial z} + Q_T$$

### A2.1 Getting source term

The source term follows from the energy per second (power) in the specific volume:

First the power, which is the current times the “voltage drop”

$$P = i A_{cell} U$$

Dividing by the volume gives  $Q_T$ :

$$Q_T = \frac{P}{V} = \frac{A_{cell}}{V} iU$$

With  $A_{cell} = wdz$  and  $V = A_{int}dz$ ,

$$Q_T = \frac{w}{A_{int}} iU$$

Hence the overall equation is

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} v_i c_{p,i} \frac{\partial T \mu_i}{\partial z} + \frac{w}{A_{int}} iU$$

## A2.2 Getting the steady state equation:

For the steady-state equation, the derivative in the sum is expanded and the time derivative is set to zero:

$$0 = - \sum_{i \in \mathcal{S}} v_i c_{p,i} \left( \frac{\partial T}{\partial z} \mu_i + T \frac{\partial \mu_i}{\partial z} \right) + \frac{w}{A_{int}} iU$$

And substitute back in that  $h_i = c_{p,i} T$  and the steady state equation for  $v \frac{\partial}{\partial z} \mu_i = \frac{w}{A_{int}} \nu_i \frac{i}{n_e F}$  to get that

$$0 = - \sum_{i \in \mathcal{S}} \left( v_i c_{p,i} \frac{\partial T}{\partial z} \mu_i + \frac{w}{A_{int}} \frac{i}{n_e F} \nu_i h_i \right) + \frac{w}{A_{int}} iU$$

Now takin all but the indexed paramters out of the sum:

$$0 = - \frac{\partial T}{\partial z} \sum_{i \in \mathcal{S}} v_i c_{p,i} \mu_i - i \frac{w}{A_{int}} \sum_{i \in \mathcal{S}} \nu_i h_i + i \frac{w}{A_{int}} U$$

Defining the sums as

$$\sum_{i \in \mathcal{S}} v_i c_{p,i} \mu_i = C_p, \quad U_{th} = \frac{1}{n_e F} \sum_{i \in \mathcal{S}} \nu_i h_i$$

yields:

$$0 = i \frac{w}{A_{int}} (U - U_{th}) - C_p \frac{\partial T}{\partial z}$$

## A3 Computing Specific Finite Volume Equations

### A3.1 Equations for moles

Starting from Equation 4.5, Equation 4.6 and Equation 4.7, integration over the volume gives:

$$\int_{\Omega_k} \frac{\partial \mu_i}{\partial t} dV = \int_{\Omega_k} \frac{w}{A_{int}} N_{c,i} dV - \int_{\Omega_k} \frac{\partial N_i}{\partial z} dV$$

The time derivative can be moved outside the integral, and the concentration integrated over a volume equals the amount of moles in that volume:

$$\int_{\Omega_k} \frac{\partial \mu_i}{\partial t} dV = \partial_t \int_{\Omega_k} \mu_i dV = \frac{\partial n_i}{\partial t} = \dot{n}_i$$

Using the approximation in Section 5.2.2 with  $V_k = A_{int} \Delta z$ ,

$$\int_{\Omega_k} \frac{w}{A_{int}} N_{c,i} dV \approx \frac{w}{A_{int}} N_{c,i}(z_k) V_k = w N_{c,i}(z_k) \Delta z$$

For the last term, the integral is split so that integration over the area normal to  $z$  follows integration over  $z$ , giving

$$\begin{aligned} \int_{A_{int}} \int_{z_{k-\frac{1}{2}}}^{z_{k+\frac{1}{2}}} \frac{\partial N_i}{\partial z} dz dA &\approx \int_{A_{int}} \left( N_i(z_k) - N_i(z_{k-1}) \right) dA \\ &= \left( N_i(z_k) - N_i(z_{k-1}) \right) A_{int} \end{aligned}$$

Hence for each volume:

$$|\Omega_k| \frac{\partial \mu_i}{\partial t}(z_k) = \dot{n}_i(z_k) \approx w N_{c,i} \Delta z - A_{int} (N_i(z_k) - N_i(z_{k-1}))$$

## A3.2 Equations for heat

Steady state is treated first, then the time derivative.

### A3.2.1 Steady state

Starting from Equation 4.18:

$$0 = i \frac{w}{A_{int}} (U - U_{th}) - C_p \frac{\partial T}{\partial z}$$

The same steps as for the mole balances apply:

$$0 = \int_{\Omega_k} i \frac{w}{A_{int}} (U - U_{th}) - \int_{\Omega_k} C_p \frac{\partial T}{\partial z}$$

Following the same steps as the previous subsection:

$$\int_{\Omega_k} C_p \frac{\partial T}{\partial z} dV \approx C_p (T(z_k) - T(z_{k-1})) A_{int}$$

And the rest is obvious, then the final equation is:

$$0 \approx iw(U - U_{th})\Delta z - C_p(T(z_k) - T(z_{k-1}))A_{int}$$

### A3.2.2 Time derivative

For the time derivative:

$$\int_{\Omega_k} \rho c_p \frac{\partial T}{\partial t} = \int_{\Omega_k} Q_T - v \sum_{i \in \mathcal{S}} \int_{\Omega_k} c_{p,i} \frac{\partial T \mu_i}{\partial z}$$

integrating the right hand side, we see that the density becomes the mass in the volume, and the rest will be the average of that volume:

$$\int_{\Omega_k} \rho c_p \frac{\partial T}{\partial t} \approx m_k c_p \frac{\partial T}{\partial t}(z_k)$$

the source term is treated as for the other equations,  $\int_{\Omega_k} Q_T = Q_T(z_k)A_{int}\Delta z$ , and for the flux term one species suffices (the others follow analogously):

$$\int_{\Omega_k} c_{p,i} \frac{\partial T \mu_i}{\partial z} \approx c_{p,i} (T(z_k)\mu_i(z_k) - T(z_{k-1})\mu_i(z_{k-1}))A_{int}$$

The final expression is:

$$m_k c_p \frac{\partial T}{\partial t}(z_k) \approx Q_T(z_k) A_{int} \Delta z - \sum_{i \in \mathcal{S}} v_i c_{p,i} \left( T(z_k) \mu_i(z_k) - T(z_{k-1}) \mu_i(z_{k-1}) \right) A_{int}$$



## A4 Relevant Gradients for numerical solvers

### A4.1 Molar balance

$$\text{Jacobian}_\mu[x] = \begin{bmatrix} \frac{1}{\mu^f} & -\frac{1}{\mu^f} & 0 \\ -\frac{1}{\mu^f} & \frac{1}{\mu^f} & 0 \\ 0 & 0 & \frac{\mu_{in,N_2}}{(\mu_{in,N_2} + \mu_{O_2})} \end{bmatrix}$$

Then

$$\nabla_\mu f(x) = (\text{Jacobian}_\mu[x])^\top \nabla_x f$$

#### A4.1.1 Nernst Equation

##### A4.1.1.1 Gradient for molar fractions: $\nabla_x$

$$\nabla_x \eta_{nernst} = \frac{RT}{2F} \begin{bmatrix} -\frac{1}{x_{H_2O}} \\ \frac{1}{x_{H_2}} \\ \frac{1}{2x_{O_2}} \end{bmatrix}$$

##### A4.1.1.2 Gradient for temperature: $\nabla_T$

$$\nabla_T \eta_{nernst} = \frac{\nabla_T(\Delta G)}{2F} + \frac{R}{2F} \log \left\{ \frac{x_{H_2} \sqrt{x_{H_2}}}{x_{H_2O} \sqrt{x_0}} \right\}$$

$$\nabla_T(\Delta G) = -0.0062T + -49.119$$

#### A4.1.2 Activation overpotential

##### A4.1.2.1 Gradient for molar fractions: $\nabla_x$

$$\nabla_x (\text{Butler-Volmer}_\zeta) = \nabla_x (i_0^\zeta) \left( \exp \left[ \alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] - \exp \left[ - (1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right)$$

$$\nabla_x(i_0^a) = \gamma_a T \exp \left\{ -\frac{E_{act}^a}{RT} \right\} \begin{bmatrix} 0 \\ 0 \\ m_{O_2} \left( \frac{x_{O_2}}{x_0} \right)^{m_{O_2}-1} \end{bmatrix}$$

$$\nabla_x(i_0^f) = \lambda_f \gamma_f T \exp \left\{ -\frac{E_{act}^f}{RT} \right\} \begin{bmatrix} m_{H_2} \left( \frac{x_{H_2O}}{x_0} \right)^{m_{H_2O}-1} \left( \frac{x_{H_2}}{x_0} \right)^{m_{H_2}} \\ m_{H_2O} \left( \frac{x_{H_2O}}{x_0} \right)^{m_{H_2O}} \left( \frac{x_{H_2}}{x_0} \right)^{m_{H_2}-1} \\ 0 \end{bmatrix}$$

#### A4.1.2.2 Gradient for temperature: $\nabla_T$

$$\begin{aligned} \nabla_T(\text{Butler-Volmer}_\zeta) &= \nabla_T(i_0^\zeta) \left( \exp \left[ \alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] - \exp \left[ - (1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right) \\ &+ i_0^\zeta \left( -\alpha_\zeta \frac{n_e F}{RT^2} \eta_{act}^\zeta \exp \left[ \alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] - (1 - \alpha_\zeta) \frac{n_e F}{RT^2} \eta_{act}^\zeta \exp \left[ - (1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right) \\ \nabla_T(i_0^\zeta) &= \left( 1 - \frac{E_{act}^\zeta}{RT} \right) \lambda_\zeta \gamma_\zeta \exp \left\{ -\frac{E_{act}^\zeta}{RT} \right\} \prod_{i \in \mathcal{S}} \left( \frac{x_i}{x_0} \right)^{m_i} \end{aligned}$$

#### A4.1.2.3 Gradient for activation overpotential: $\nabla_{\eta_{act}^\zeta}$

$$\nabla_{\eta_{act}^\zeta}(\text{Butler-Volmer}_\zeta) = i_0^\zeta \left( \alpha_\zeta \frac{n_e F}{RT} \exp \left[ \alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] + (1 - \alpha_\zeta) \frac{n_e F}{RT} \exp \left[ - (1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right)$$

## A4.2 Degredation

### A4.2.1 Ohmic degradation

#### A4.2.1.1 Gradient for molar fractions: $\nabla_x$

$$\nabla_x R_{ohm} = \mathbf{0}$$

#### A4.2.1.2 Gradient for temperature: $\nabla_T$

$$\nabla_T R_{ohm} = \left( 1 - \frac{E_{a,ohm}}{RT} \right) \frac{1}{B_{ohm}} \exp \left\{ \frac{E_{a,ohm}}{RT} \right\} + \sum_{d \in \mathcal{D}_{ohm}} \nabla_T R_d$$

$$\nabla_T R_{Ni-mi} = d_{Ni-mi} \frac{T - E_{act,elec}/R}{\sigma_{elec,0} T \exp \left\{ -\frac{E_{act,elec}}{RT} \right\}}$$

## A4.3 Temperature equations



### A4.3.1 Specific heat

#### A4.3.1.1 Gradient for molar fractions: $\nabla_\mu$

$$\nabla_\mu C_p = \begin{bmatrix} c_{p,\text{H}_2\text{O}} \\ c_{p,\text{H}_2} \\ c_{p,\text{O}_2} \end{bmatrix}$$

#### A4.3.1.2 Gradient for temperature: $\nabla_T$

$$\nabla_T C_p = \sum_{i \in \mathcal{S}} \mu_i \nabla_T c_{p,i}$$

### A4.3.2 Thermaneutral voltage

#### A4.3.2.1 Gradient for molar fractions: $\nabla_\mu$

$$\nabla_\mu U_{th} = \mathbf{0}$$

#### A4.3.2.2 Gradient for temperature: $\nabla_T$

$$\nabla_T U_{th} = \frac{1}{n_e F} \sum_{i \in \mathcal{S}} \nu_i \nabla_T h_i$$



## A5 NLP Gradients

This appendix records the gradients used by the nonlinear programming (NLP) formulation discussed in Equation 5.1. The discrete chain rule for the stage model is stated first, then the partial derivatives that enter it, then the linear systems that yield sensitivities of the spatial finite-volume model and of the slow trajectory in time.

### A5.1 Discrete chain rule for the stage model

Between shooting stages, the integrated objective contribution  $\phi$  and the degradation variables  $d$  satisfy a discrete sensitivity chain. For a scalar stage index  $i$  and a control component  $u_k$ ,

$$\frac{d}{du_k} \phi_{i+1} = \nabla_{u_i} \dot{\phi} \cdot \nabla_{u_k} u_i + \nabla_{d_i} \dot{\phi} \frac{d}{du_k} d_i + \frac{d}{du_k} \phi_i,$$

with the analogous relation for the degradation state,

$$\frac{d}{du_k} d_{i+1} = (\nabla_{u_i} \dot{d}_i) \nabla_{u_k} u_i + (\nabla_{d_i} \dot{d}_i) \frac{d}{du_k} d_i + \dots,$$

where the trailing terms collect any additional dependence of the stage map on  $u_k$  (for example through implicit stage equations if  $d_{i+1}$  is defined implicitly).

The partial gradients of the instantaneous rates are

$$\begin{aligned} \nabla_u \dot{\phi} &= c_{H_2} \nabla_u \frac{\partial n_{H_2}}{\partial t} - c_P (u \nabla_u I - I), \\ \nabla_d \dot{\phi} &= c_{H_2} \nabla_d \frac{\partial n_{H_2}}{\partial t} - c_P u \nabla_d I - \left[ c_{i,\text{utilization}} \frac{1}{d_{i,\text{critical}}} \right]_{i \in \mathcal{D}_{\text{fail}}}, \\ \nabla_\phi \dot{\phi} &= 0, \\ \nabla_u \dot{d} &= c_2 \nabla_u i + c_3 \nabla_u T + c_4 (\nabla_u i T + i \nabla_u T), \\ \nabla_d \dot{d} &= c_2 \nabla_d i + c_3 \nabla_d T + c_4 (\nabla_d i T + i \nabla_d T), \\ \nabla_\phi \dot{d} &= 0. \end{aligned}$$

Note that  $\nabla_\zeta I = \frac{A_{\text{cell}}}{N_{\text{cell}}} \sum_{j=1}^{N_{\text{cell}}} \nabla_\zeta i_j$  for  $\zeta \in \{u, d, \phi, \dots\}$ .

The remaining ingredients are the gradients of the current density with respect to the cell voltage and with respect to the local degradation state; those are given in the next two sections. Further electrochemical partials are listed in Appendix A4.

## A5.2 Gradient with respect to cell voltage: $\nabla_u i$

The current is expressed in terms of fuel- and air-side activation branches in the same notation as Appendix A4. With scalars  $\nabla_{\eta_{\text{act}}^f}$  (Butler-Volmer<sub>f</sub>) and  $\nabla_{\eta_{\text{act}}^a}$  (Butler-Volmer<sub>a</sub>) denoting  $\partial i / \partial \eta_{\text{act}}^f$  and  $\partial i / \partial \eta_{\text{act}}^a$  at the operating point,

$$\nabla_u i = \frac{1}{R_{\text{ohm}} + \frac{1}{\nabla_{\eta_{\text{act}}^f}(\text{Butler-Volmer}_f)} + \frac{1}{\nabla_{\eta_{\text{act}}^a}(\text{Butler-Volmer}_a)}}.$$

## A5.3 Gradient with respect to degradation: $\nabla_d i$

Similarly, with  $\nabla_d R_{\text{ohm}}$  the partial of the ohmic resistance with respect to the local degradation variable,

$$\nabla_d i = -i \frac{\nabla_d R_{\text{ohm}}}{R_{\text{ohm}} + \frac{1}{\nabla_{\eta_{\text{act}}^f}(\text{Butler-Volmer}_f)} + \frac{1}{\nabla_{\eta_{\text{act}}^a}(\text{Butler-Volmer}_a)}}.$$

## A5.4 Sensitivity of the spatial FVM discretization

At each time level the converged spatial state satisfies a residual of flux form. With cell index  $k$  along the stack, let  $Q(u_k)$  denote the cellwise source residual and  $F(u_k)$  the numerical flux between neighbours. The source term is scaled by the cell thickness  $\Delta z$  and the flux difference by the interface area  $A_{\text{int}}$ , so the semi-discrete steady relation is

$$0 = \Delta z Q(u_k) - A_{\text{int}} (F(u_k) - F(u_{k-1})).$$

Differentiating with respect to a parameter  $p$  (a control coefficient, a boundary value, etc.) and writing  $\partial u_k / \partial p$  for the sensitivity of the converged state gives the familiar block recursion

$$\begin{aligned} & \left( \Delta z \frac{\partial Q}{\partial u_k}(u_k) - A_{\text{int}} \frac{\partial F}{\partial u_k}(u_k) \right) \frac{\partial u_k}{\partial p} + A_{\text{int}} \frac{\partial F}{\partial u_{k-1}}(u_{k-1}) \frac{\partial u_{k-1}}{\partial p} \\ & = A_{\text{int}} \left( \frac{\partial F}{\partial p}(u_k) - \frac{\partial F}{\partial p}(u_{k-1}) \right) - \Delta z \frac{\partial Q}{\partial p}(u_k). \end{aligned}$$

Stacking all cells, this is the linear system

$$J_{\text{fvm}} \frac{\partial \mathbf{u}}{\partial p} = b_{\text{fvm}}^{(p)},$$

with the block-lower-bidiagonal Jacobian and right-hand side

$$J_{\text{fvm}} = \begin{bmatrix} \Delta_1 & & & \\ A_{\text{int}} \frac{\partial F}{\partial u_1}(u_1) & \Delta_2 & & \\ & \ddots & \ddots & \\ & & A_{\text{int}} \frac{\partial F}{\partial u_{N-1}}(u_{N-1}) & \Delta_N \end{bmatrix},$$

$$\text{with } \Delta_k = \Delta z \frac{\partial Q}{\partial u_k}(u_k) - A_{\text{int}} \frac{\partial F}{\partial u_k}(u_k),$$

$$b_{\text{fvm}}^{(p)} = \begin{bmatrix} A_{\text{int}} \left( \frac{\partial F}{\partial p}(u_1) - \frac{\partial F}{\partial p}(u_{\text{in}}) \right) - \Delta z \frac{\partial Q}{\partial p}(u_1) \\ A_{\text{int}} \left( \frac{\partial F}{\partial p}(u_2) - \frac{\partial F}{\partial p}(u_1) \right) - \Delta z \frac{\partial Q}{\partial p}(u_2) \\ \vdots \\ A_{\text{int}} \left( \frac{\partial F}{\partial p}(u_N) - \frac{\partial F}{\partial p}(u_{N-1}) \right) - \Delta z \frac{\partial Q}{\partial p}(u_N) \end{bmatrix}$$

The same block structure matches the flux assembly used in Appendix A3.

## A5.5 Sensitivity of the ODE system.

For this section the problem is written in general form:

$$\begin{aligned} \max_u \quad & \left\{ \text{Objective} = \int_0^T \Phi(X, d, u) dt + \Psi(X, d, u) \right\} \\ \text{s.t.} \quad & 0 = R_{\text{fvm}}(X, d, u) \\ & \dot{d} = f(X, d, u) \end{aligned}$$

The method of adjoint gradients [16], [8] is used, with the following discretization ( $t_0 = 0 < t_1 \dots t_i \dots t_N = T$ ):

$$\begin{aligned} X(t_i) &\approx X_i, \quad d(t_i) \approx d_i, \quad u(t_i) \approx u_i. \\ R_{\text{fvm},i} &= R_{\text{fvm}}(X_{i+1}, d_{i+1}, u_i), \\ D_i &= d_{i+1} - f(X_{i+1}, d_{i+1}, u_i) \Delta t - d_i \\ \Phi_i &= \Phi(X_{i+1}, d_{i+1}, u_i) \Delta t \approx \int_{t_i}^{t_{i+1}} \Phi(X, d, u) dt \end{aligned}$$

The combined residual for the FVM constraints and the ODE defect is then:

$$R_i = \begin{bmatrix} D_i \\ R_{\text{fvm},i} \end{bmatrix}$$

The state variables are combined as

$$w_i = \begin{bmatrix} X_i \\ d_i \end{bmatrix}$$

The Jacobian of the residual with respect to the internal and control variables is

$$\begin{aligned} \frac{\partial R_i}{\partial w_i} &= \begin{bmatrix} \mathbf{0} & \frac{\partial D_i}{\partial d_i} \\ \mathbf{0} & \mathbf{0} \end{bmatrix} & \frac{\partial R_i}{\partial w_{i+1}} &= \begin{bmatrix} \frac{\partial D_i}{\partial X_{i+1}} & \frac{\partial D_i}{\partial d_{i+1}} \\ \frac{\partial R_{\text{fvm},i}}{\partial X_{i+1}} & \frac{\partial R_{\text{fvm},i}}{\partial d_{i+1}} \end{bmatrix} & \frac{\partial R_i}{\partial u_i} &= \begin{bmatrix} \frac{\partial D_i}{\partial u_i} \\ \frac{\partial R_{\text{fvm},i}}{\partial u_i} \end{bmatrix} \\ \frac{\partial \Phi_i}{\partial w_{i+1}} &= \begin{bmatrix} \frac{\partial \Phi_i}{\partial X_{i+1}} \\ \frac{\partial \Phi_i}{\partial d_{i+1}} \end{bmatrix} & \frac{\partial \Phi_i}{\partial u_i} & \end{aligned}$$

For implementation these blocks are spelled out in more detail:

$$\begin{aligned} \frac{\partial R_i}{\partial w_i} &= \begin{bmatrix} \mathbf{0} & -\mathbf{I} \\ \mathbf{0} & \mathbf{0} \end{bmatrix} \\ \frac{\partial R_i}{\partial w_{i+1}} &= \begin{bmatrix} -\Delta t \frac{\partial f}{\partial X_{i+1}}(X_{i+1}, d_{i+1}, u_i) & \mathbf{I} - \Delta t \frac{\partial f}{\partial d_{i+1}}(X_{i+1}, d_{i+1}, u_i) \\ \frac{\partial R_{\text{fvm},i}}{\partial X_{i+1}}(X_{i+1}, d_{i+1}, u_i) & \frac{\partial R_{\text{fvm},i}}{\partial d_{i+1}}(X_{i+1}, d_{i+1}, u_i) \end{bmatrix} \\ \frac{\partial R_i}{\partial u_i} &= \begin{bmatrix} -\Delta t \frac{\partial f}{\partial u_i}(X_{i+1}, d_{i+1}, u_i) \\ \frac{\partial R_{\text{fvm},i}}{\partial u_i}(X_{i+1}, d_{i+1}, u_i) \end{bmatrix} \end{aligned}$$

The blocks  $\partial R_{\text{fvm},i} / \partial X_{i+1}$  coincide with  $J_{\text{fvm}}$  from the spatial sensitivity section (same flux assembly). At each time level:

$$\frac{\partial R_{\text{fvm},i}}{\partial X_{i+1}} = J_{\text{fvm}} \quad \frac{\partial R_{\text{fvm},i}}{\partial u_i} = \begin{bmatrix} \left| \begin{array}{c} \\ b_{\text{fvm}}^{(u_1^{(U)})} \\ \end{array} \right| & \left| \begin{array}{c} \\ b_{\text{fvm}}^{(u_i^{(T_0)})} \\ \end{array} \right| \end{bmatrix} \quad \frac{\partial R_{\text{fvm},i}}{\partial d_i} = b_{\text{fvm}}^{(d)}$$

With these blocks, the gradient of the objective with respect to  $u_i$  is.

$$\nabla_{u_i} \text{Objective} = \frac{\partial \Phi_i}{\partial u_i} + \left( \frac{\partial R_i}{\partial u_i} \right)^\top \lambda_{i+1} \quad \text{for } i = 1, \dots, N$$

The adjoint variables  $\Lambda = (\lambda_k)_k$  are found by solving the system:

$$\begin{aligned} \left( \frac{\partial R_{N-1}}{\partial w_N} \right)^\top \lambda_N &= -\frac{\partial \Phi_{N-1}}{\partial w_N} - \frac{\partial \Psi}{\partial w_N}, \\ \left( \frac{\partial R_{i-1}}{\partial w_i} \right)^\top \lambda_i + \left( \frac{\partial R_i}{\partial w_i} \right)^\top \lambda_{i+1} &= -\frac{\partial \Phi_{i-1}}{\partial w_i}, \quad i = 1, \dots, N-1. \end{aligned}$$

Equivalently, one large block system can be assembled for  $\Lambda$ .

$$\begin{bmatrix} \frac{\partial R_0}{\partial w_1} & & & & \\ \frac{\partial R_1}{\partial w_1} & \frac{\partial R_1}{\partial w_2} & & & \\ & \ddots & \ddots & & \\ & & \frac{\partial R_{N-2}}{\partial w_{N-1}} & & \\ & & \frac{\partial R_{N-1}}{\partial w_{N-1}} & \frac{\partial R_{N-1}}{\partial w_N} & \end{bmatrix}^\top \Lambda = - \begin{bmatrix} \frac{\partial \Phi_0}{\partial w_1} \\ \frac{\partial \Phi_1}{\partial w_2} \\ \vdots \\ \frac{\partial \Phi_{N-2}}{\partial w_{N-1}} \\ \frac{\partial \Phi_{N-1}}{\partial w_N} + \frac{\partial \Psi}{\partial w_N} \end{bmatrix}$$





## **A6 Gradient verification plots**

This appendix collects all current diagnostic figures generated in `code/figures/testers/gradients_test/` (42 plots at the time of writing). Most panels compare analytical derivatives to finite-difference checks from the standalone gradient test scripts.

### **A6.1 Complete current plot set**

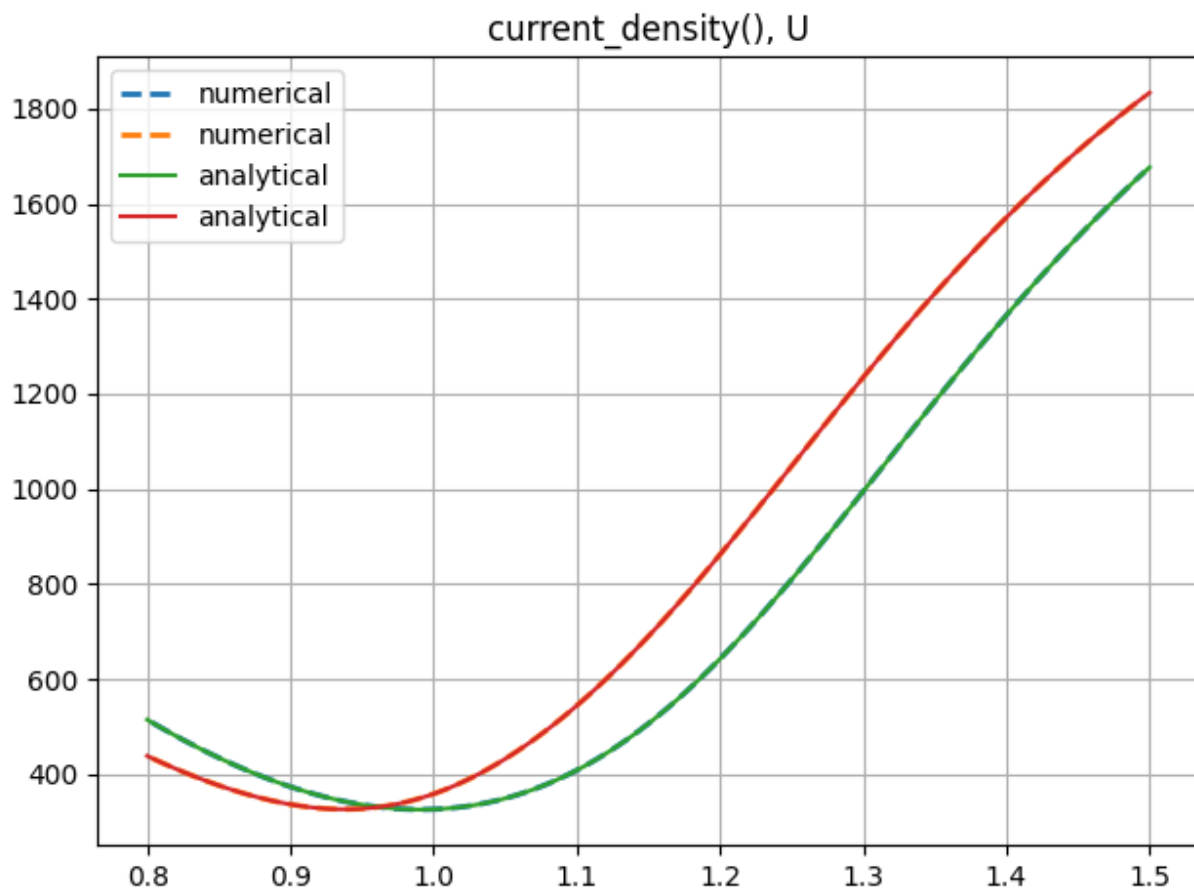


Figure A6.1: Gradient verification output: current\_density\_U.png.

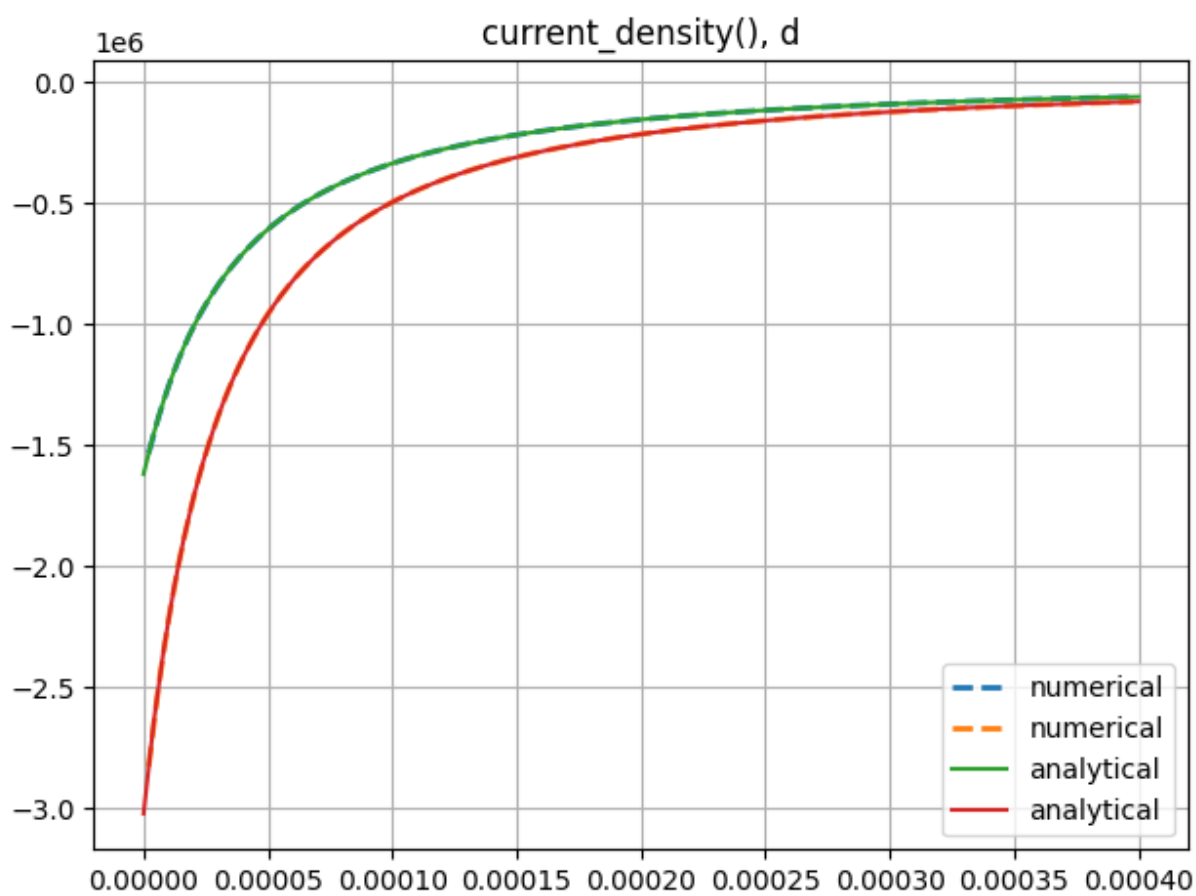


Figure A6.2: Gradient verification output: current\_density\_d.png.

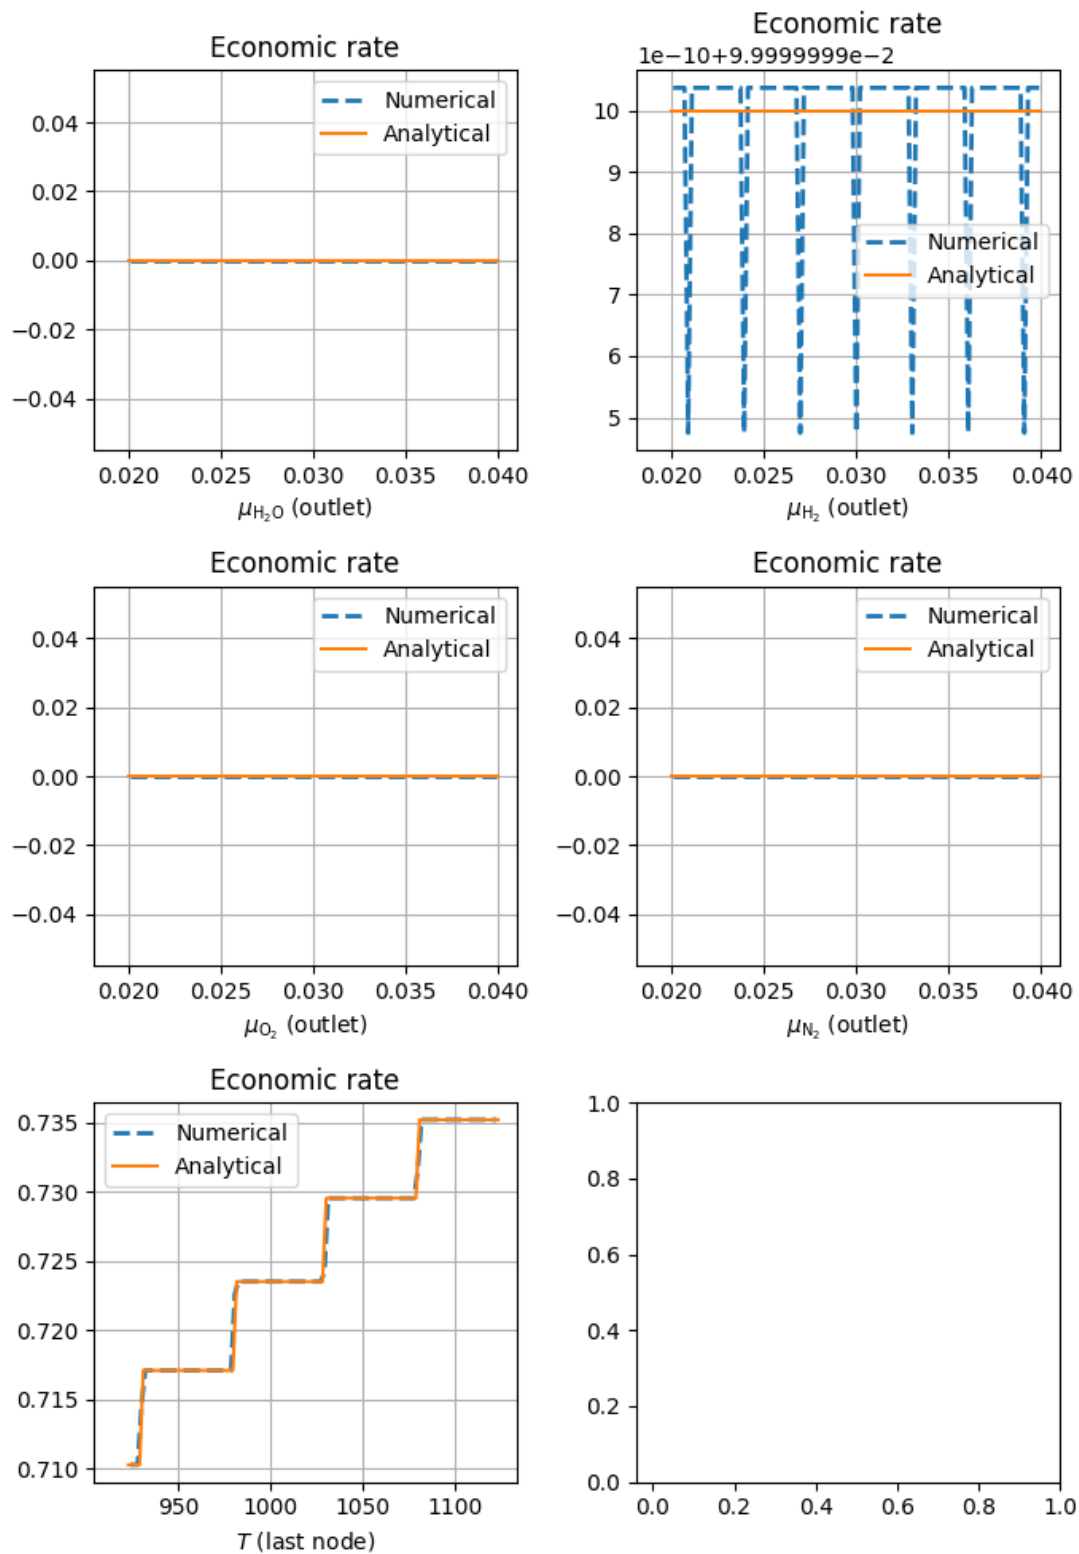


Figure A6.3: Gradient verification output: economic\_rate.png.

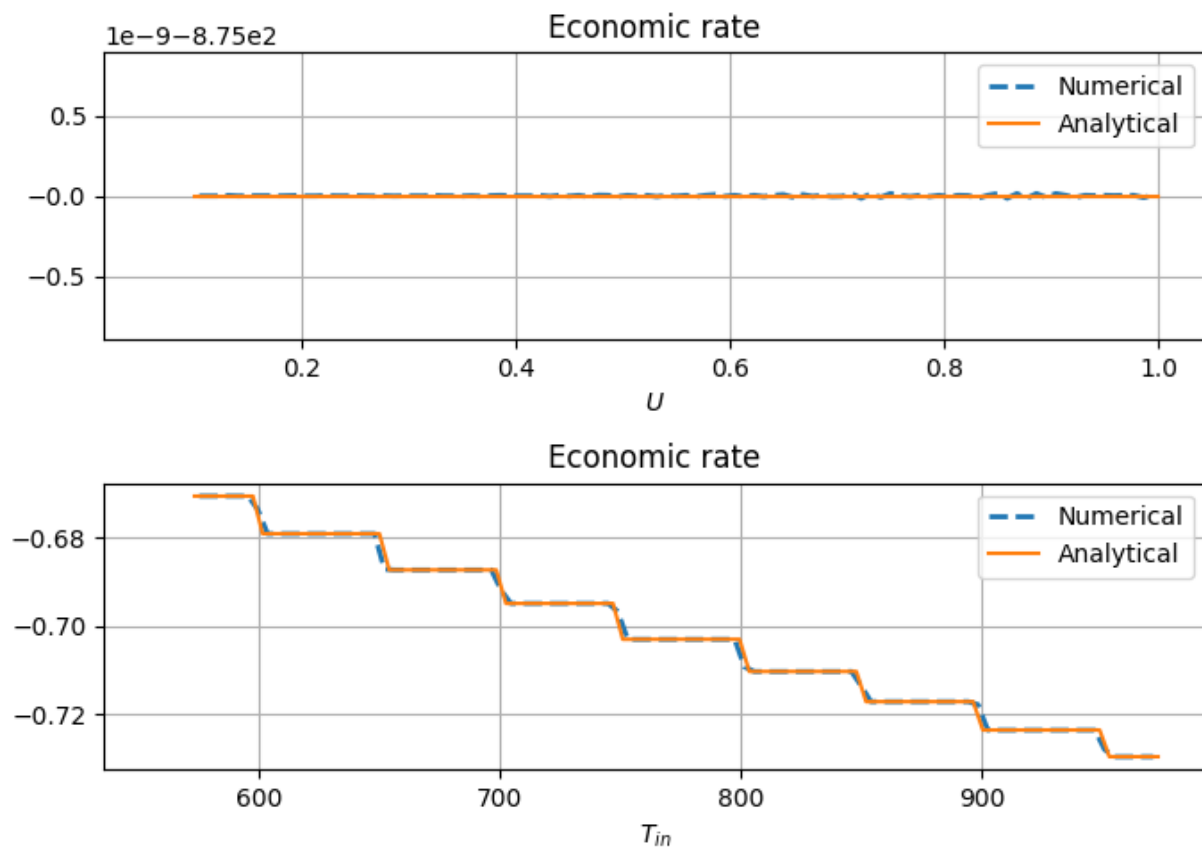


Figure A6.4: Gradient verification output: economic\_rate\_dp.png.

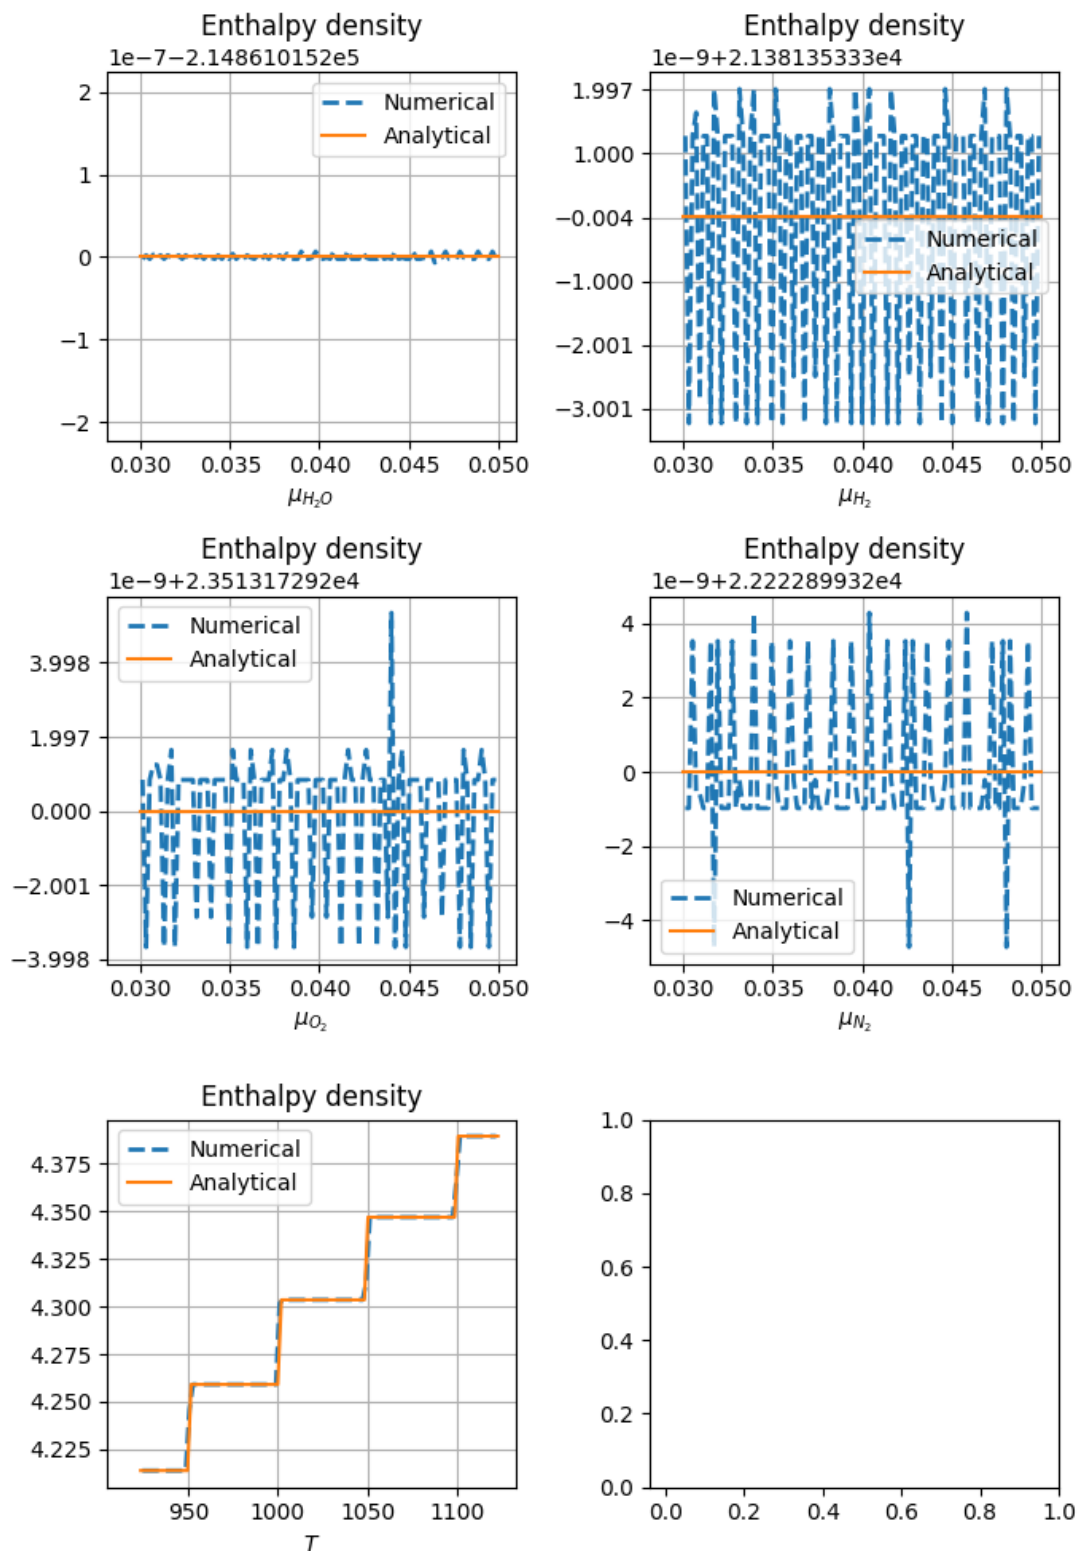


Figure A6.5: Gradient verification output: enthalpy\_density.png.

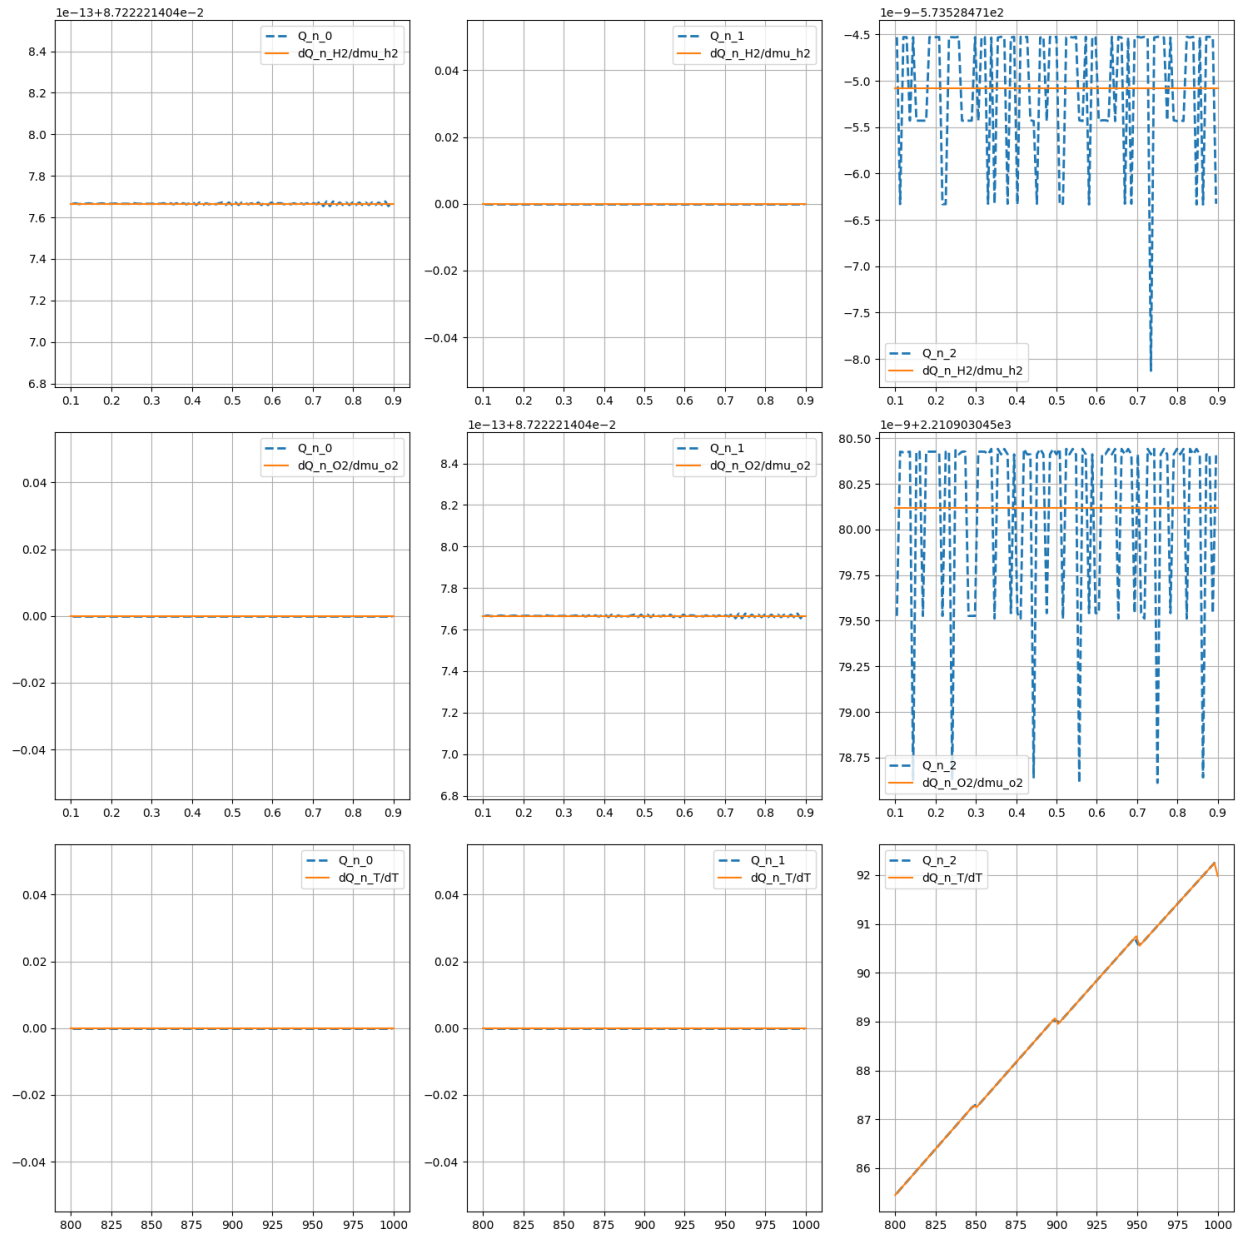


Figure A6.6: Gradient verification output: flux\_term\_jacobian.png.

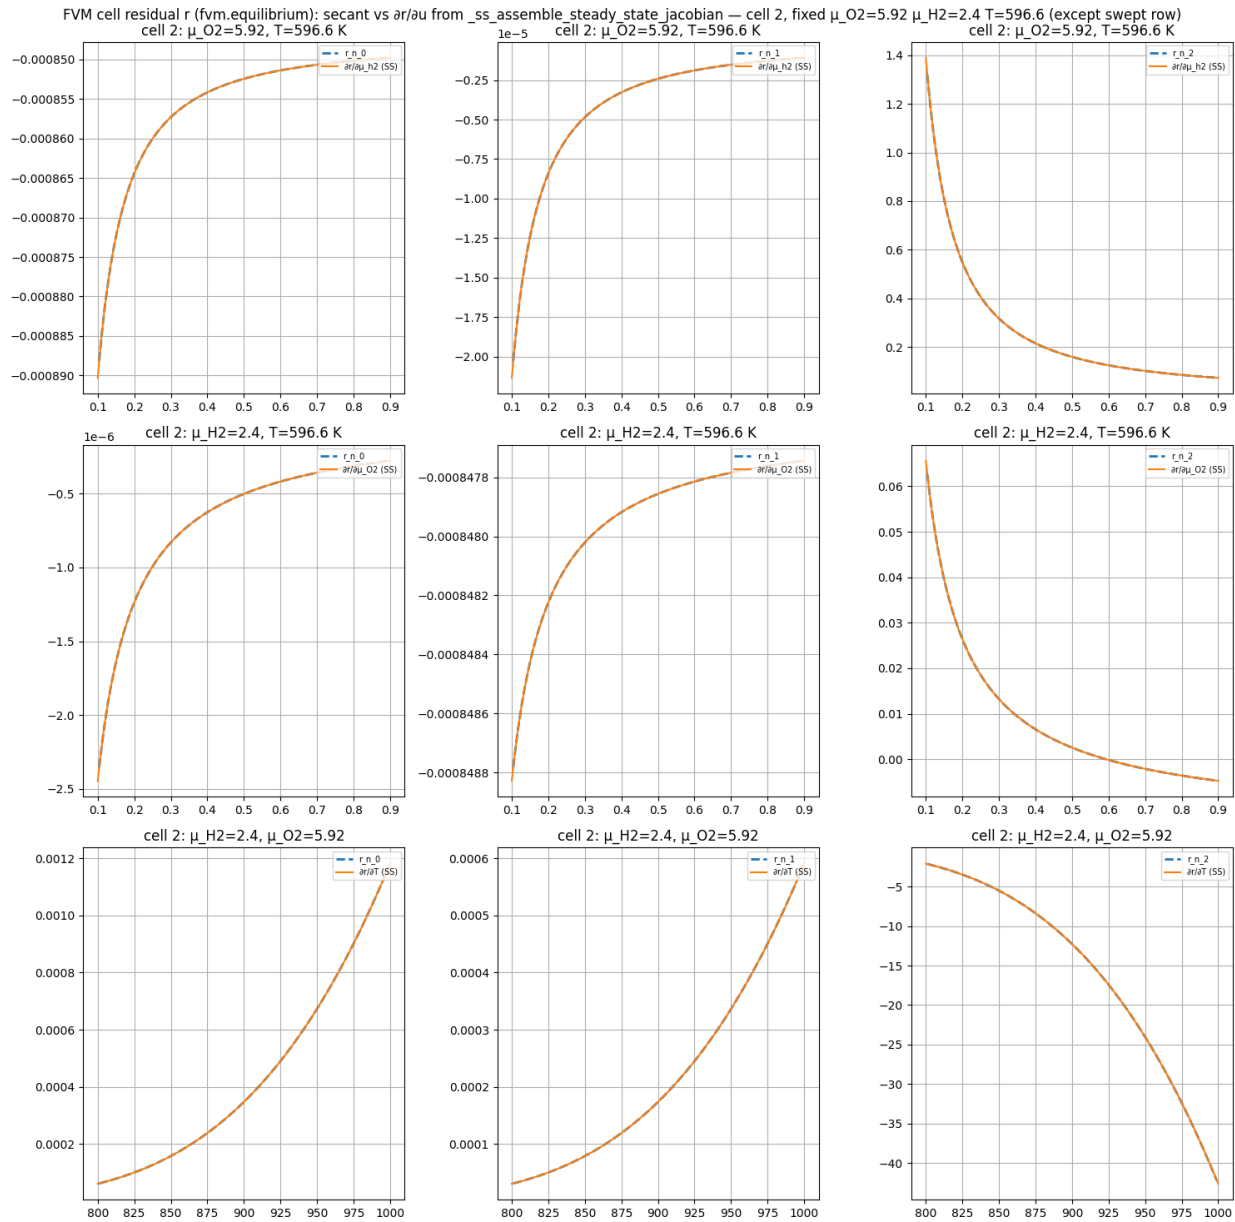


Figure A6.7: Gradient verification output: fvm\_residual\_ss\_jacobian\_vs\_fd.png.



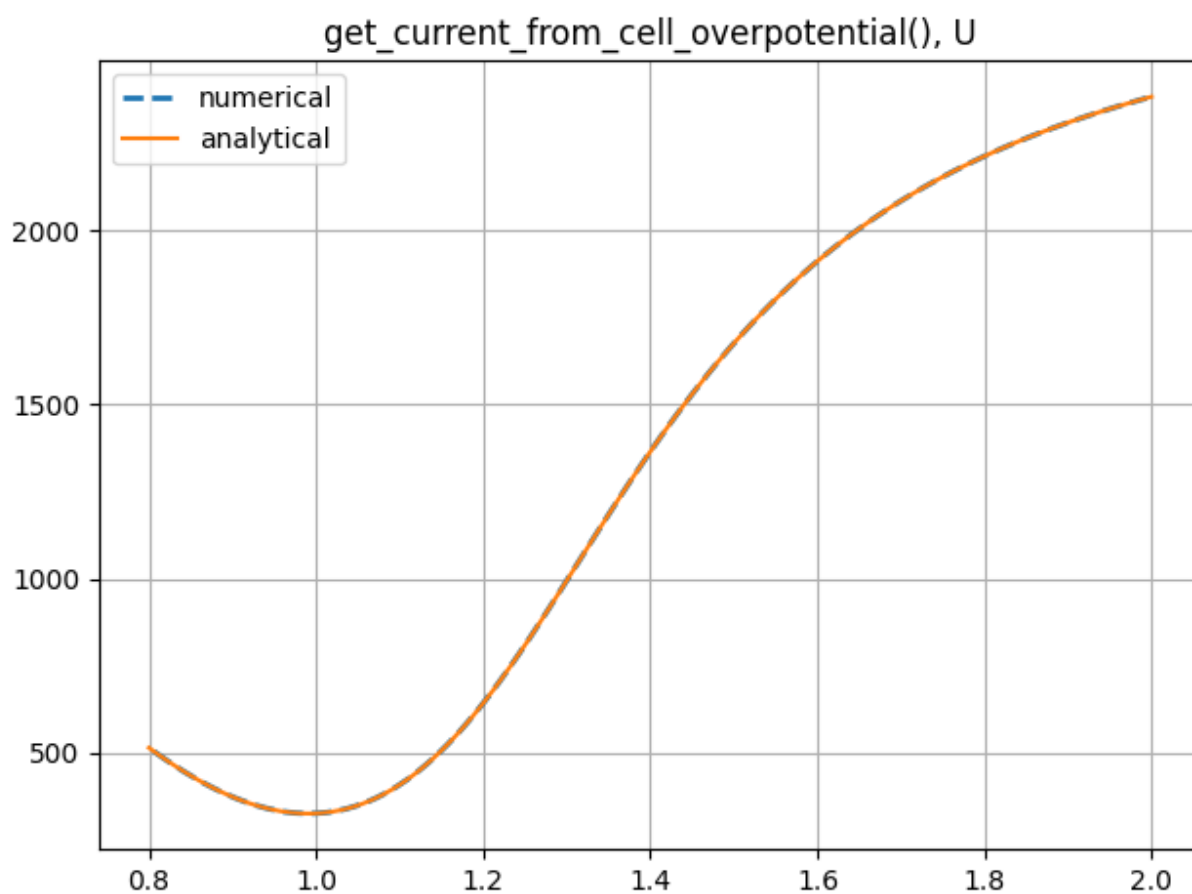


Figure A6.8: Gradient verification output: get\_current\_from\_cell\_overpotential\_U.png.

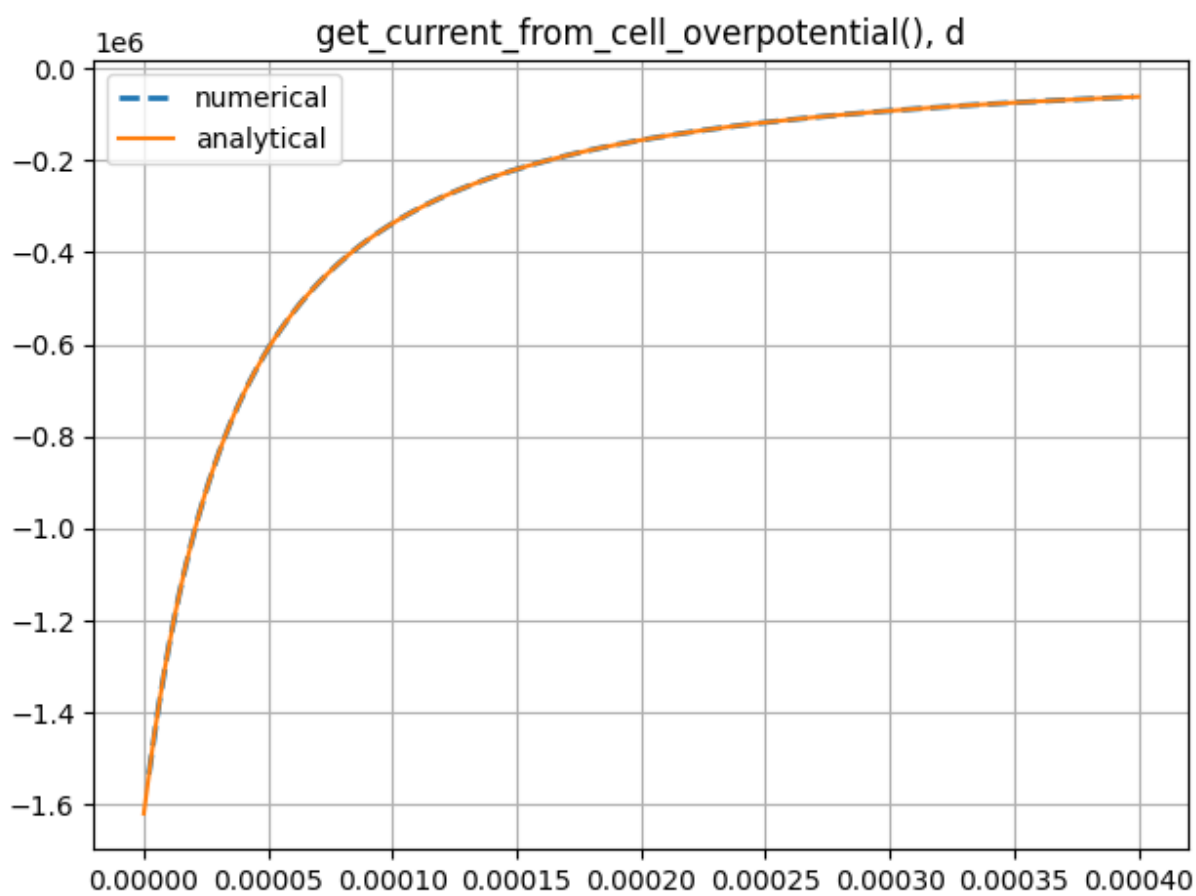


Figure A6.9: Gradient verification output: get\_current\_from\_cell\_overpotential\_d.png.

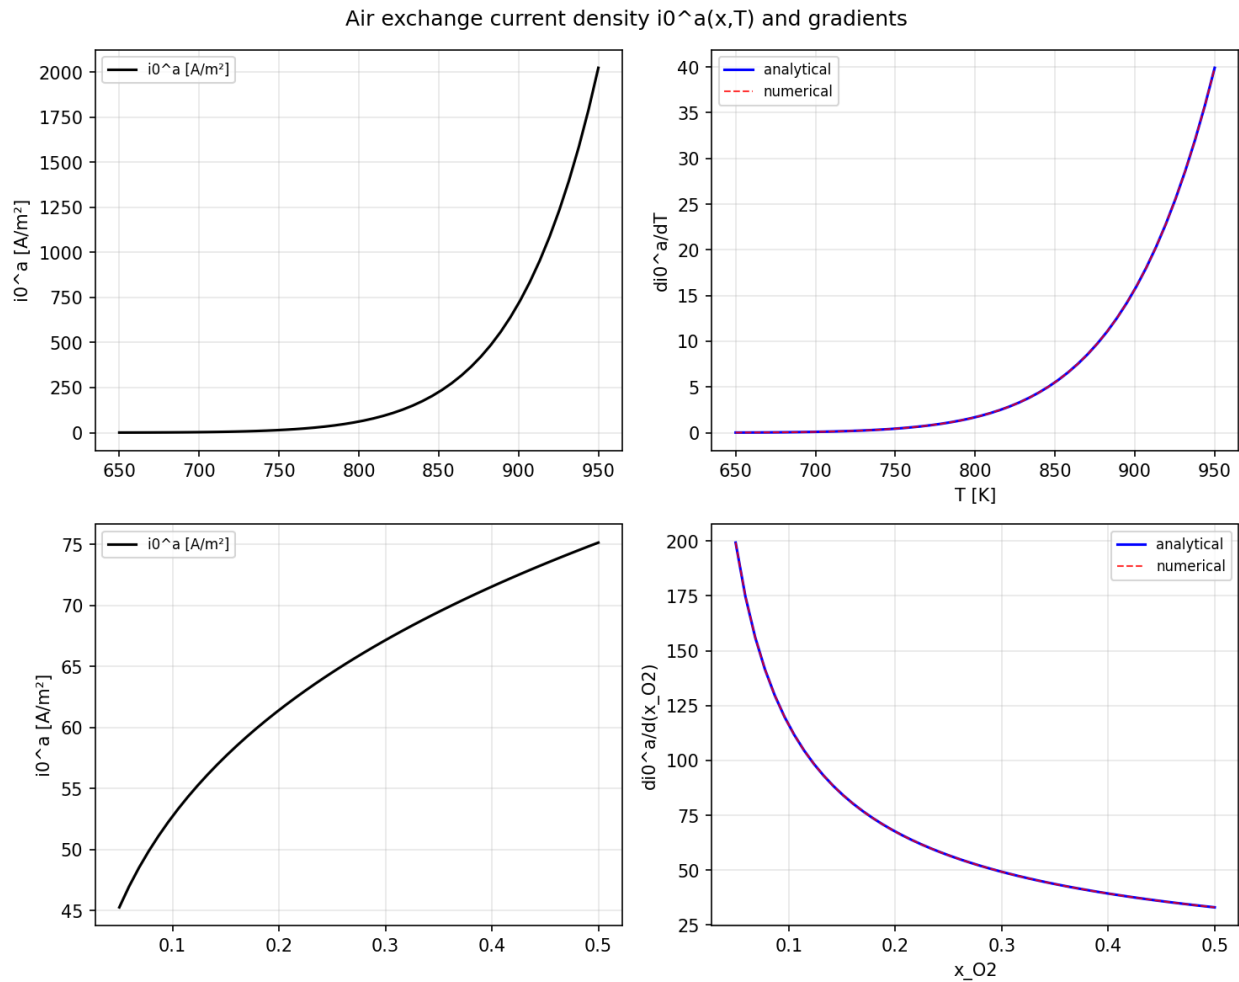
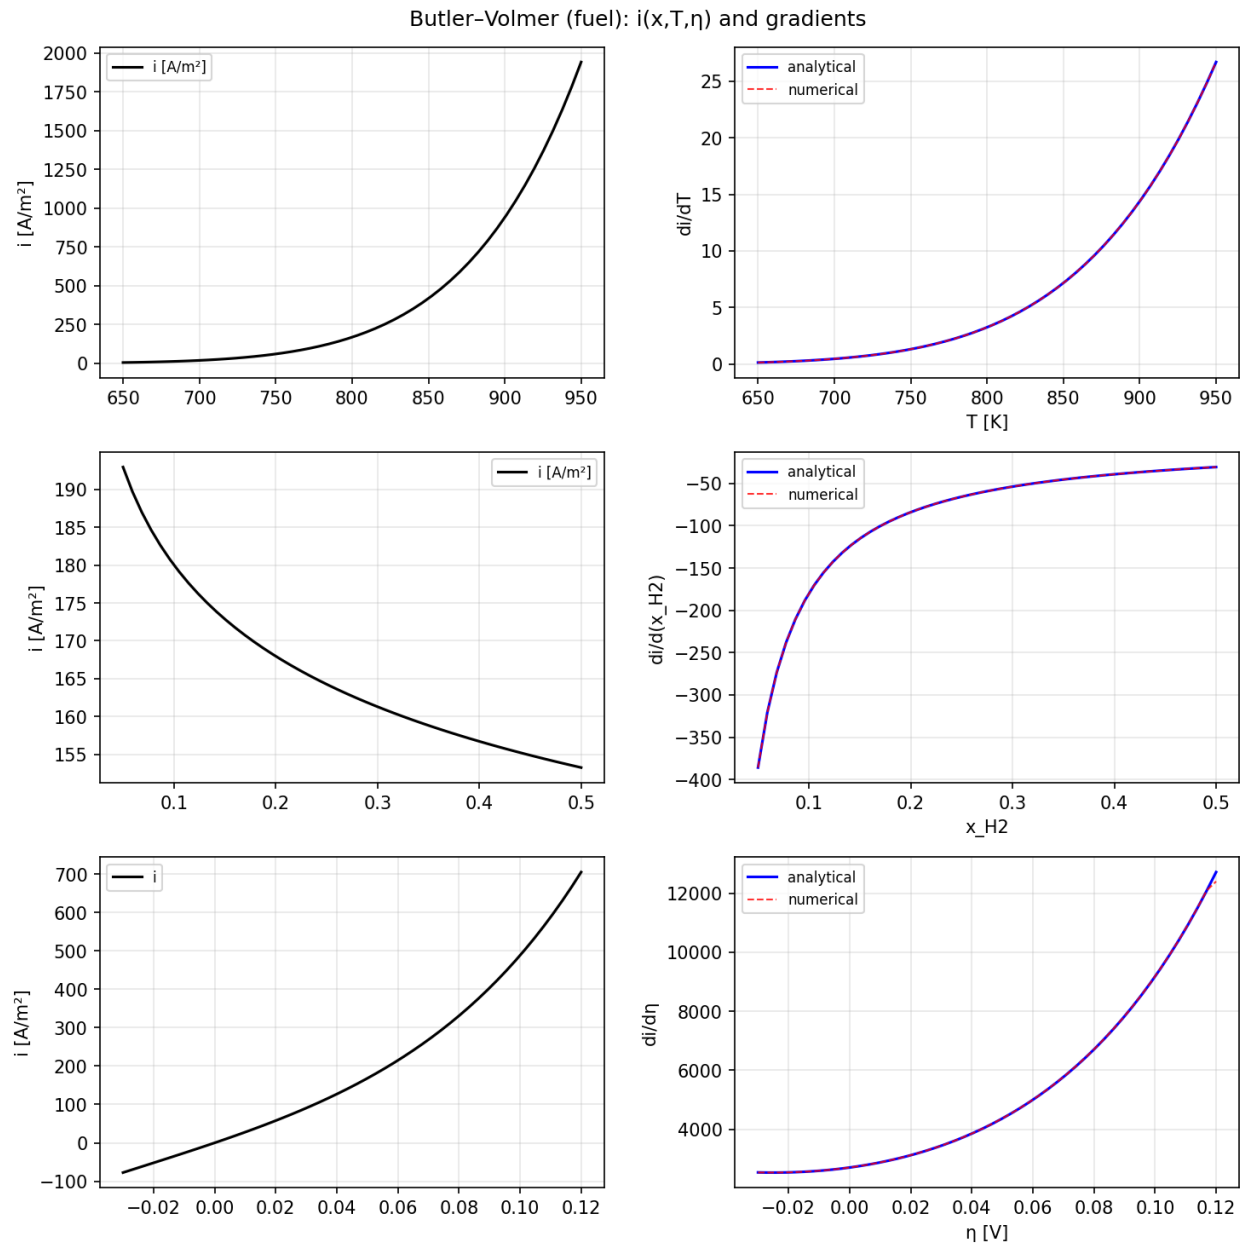


Figure A6.10: Gradient verification output: gradient\_test\_air\_i0.png.

Figure A6.11: Gradient verification output: `gradient_test_butler_volmer.png`.

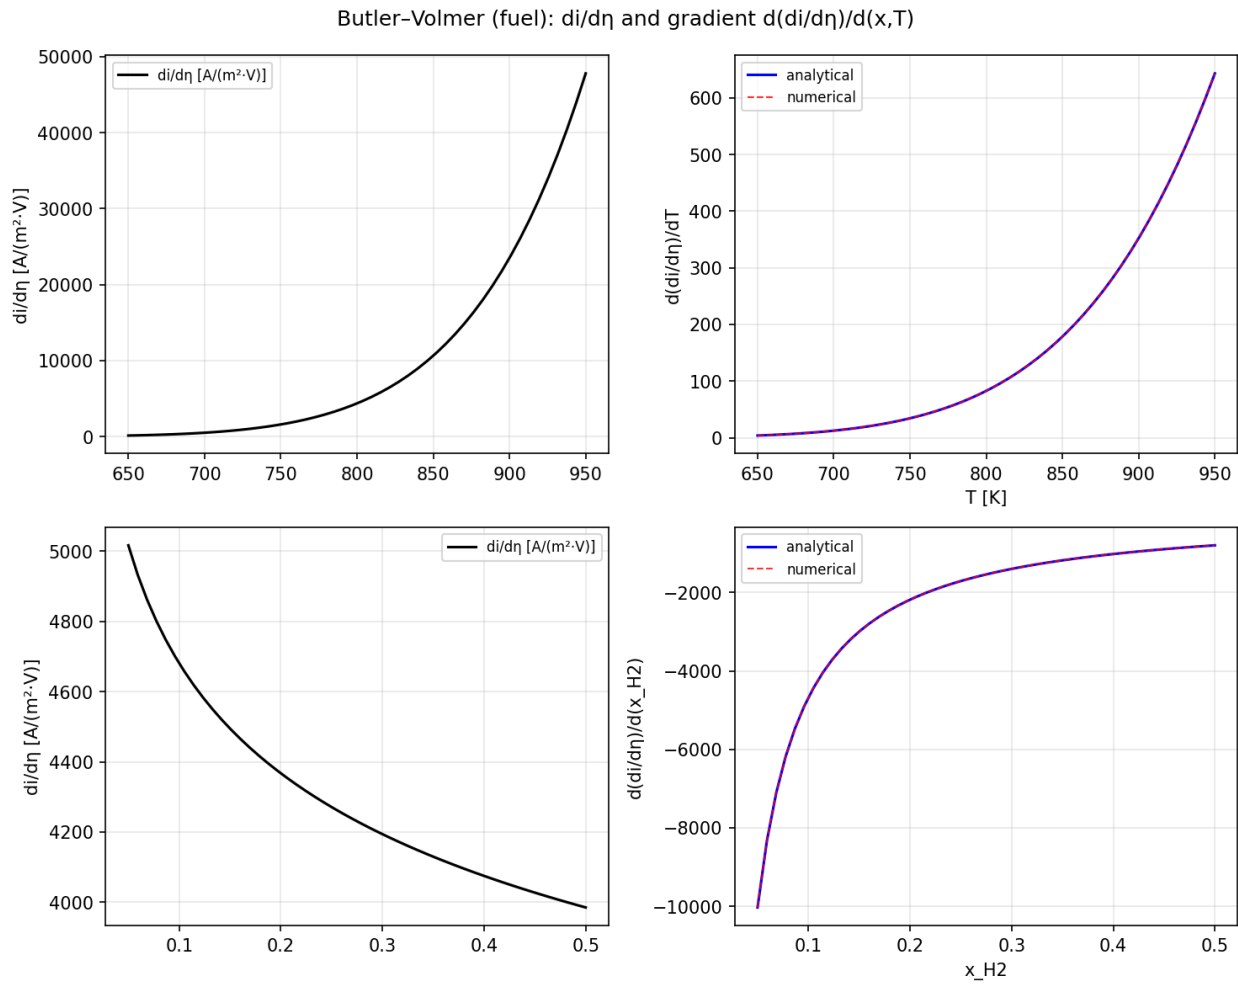


Figure A6.12: Gradient verification output: gradient\_test\_butler\_volmer\_deta\_gradient.png.

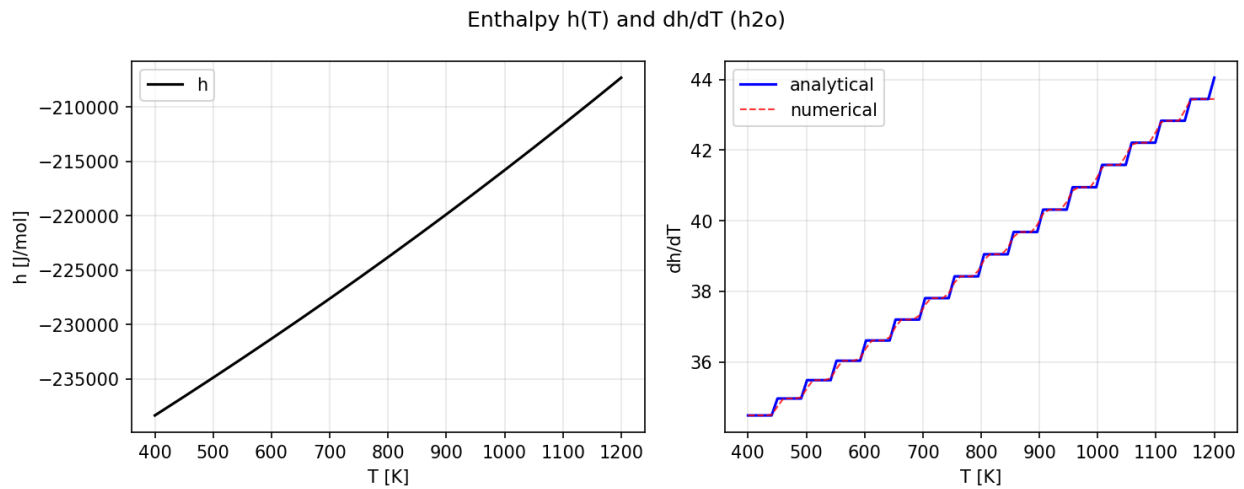


Figure A6.13: Gradient verification output: gradient\_test\_enthalpy.png.

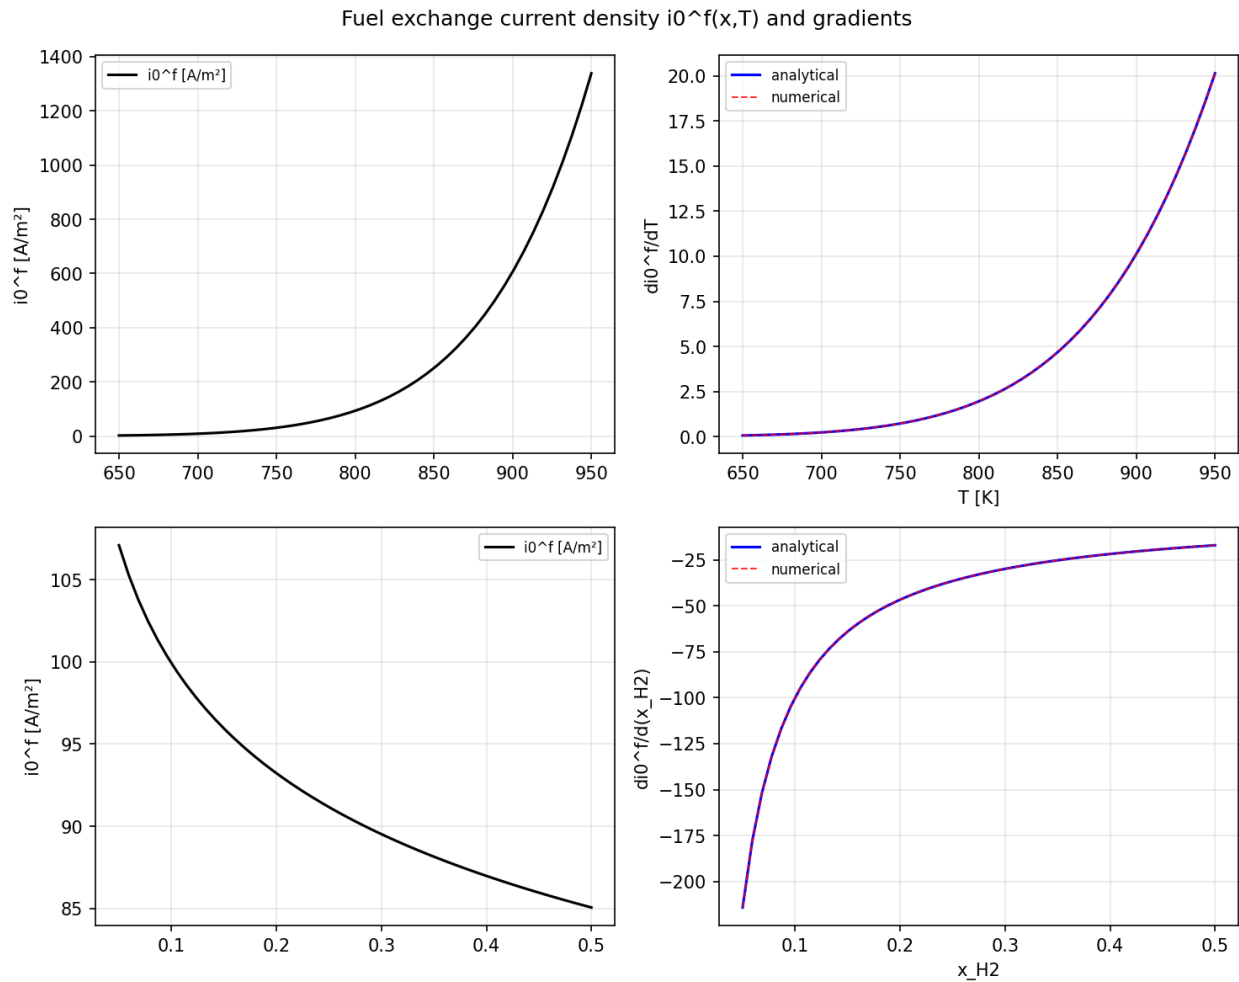
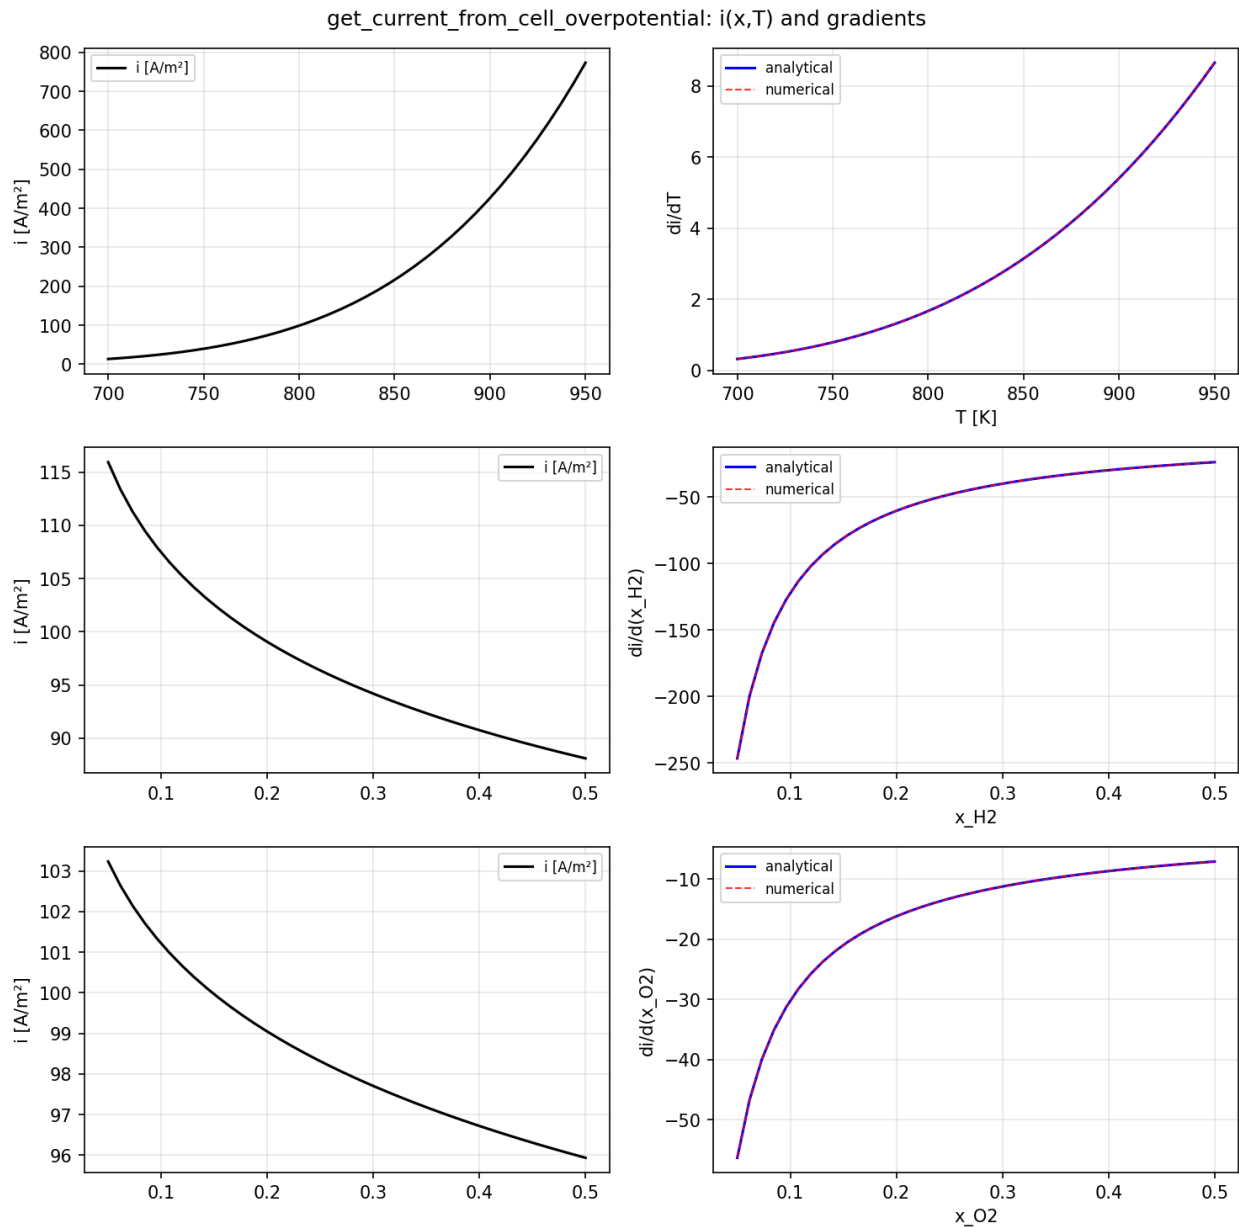


Figure A6.14: Gradient verification output: gradient\_test\_fuel\_i0.png.

Figure A6.15: Gradient verification output: `gradient_test_get_current.png`.

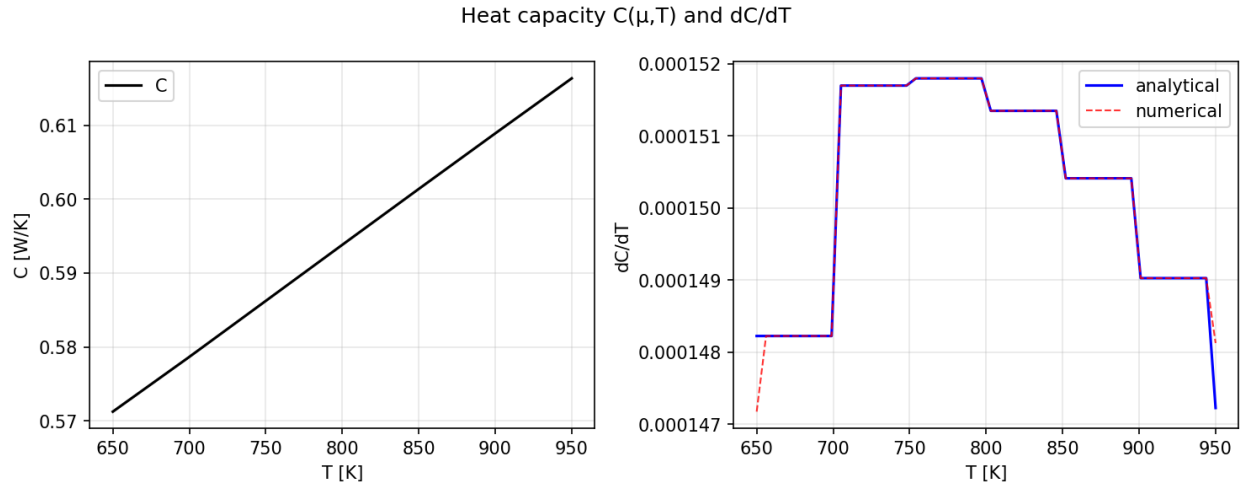


Figure A6.16: Gradient verification output: gradient\_test\_heat\_capacity.png.

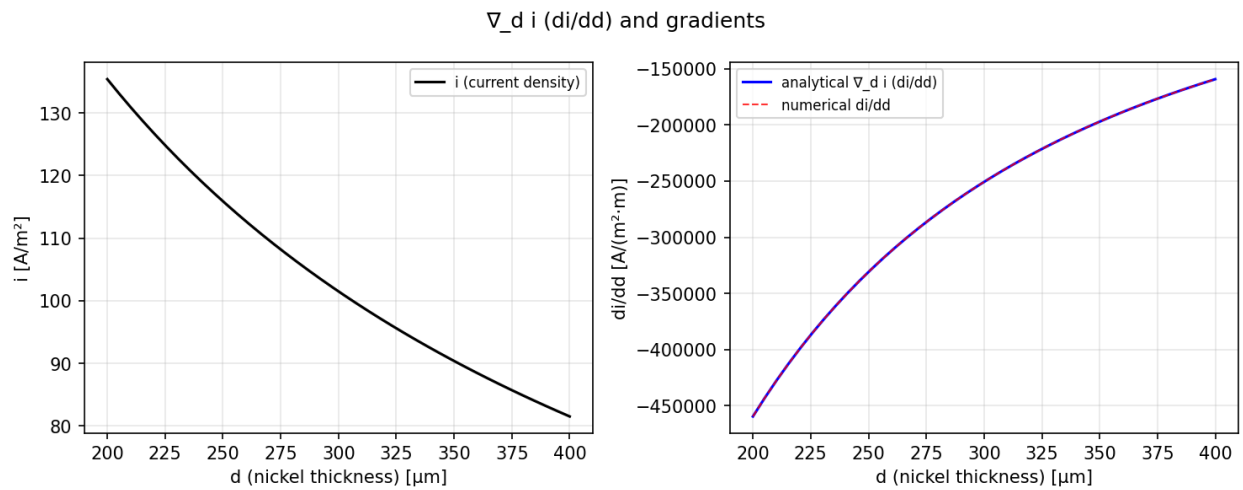


Figure A6.17: Gradient verification output: gradient\_test\_nabla\_d.png.

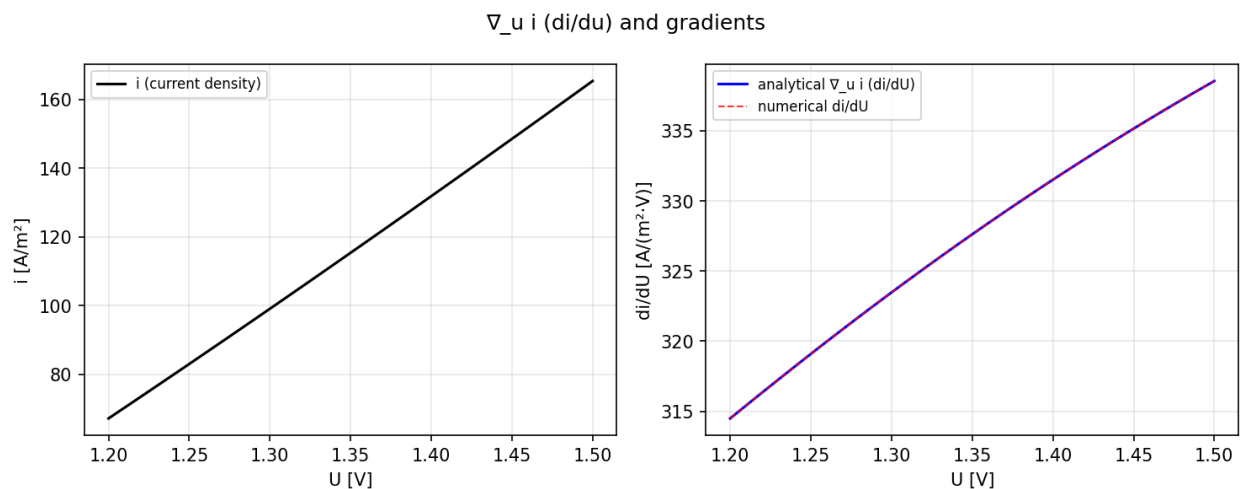


Figure A6.18: Gradient verification output: gradient\_test\_nabla\_u.png.



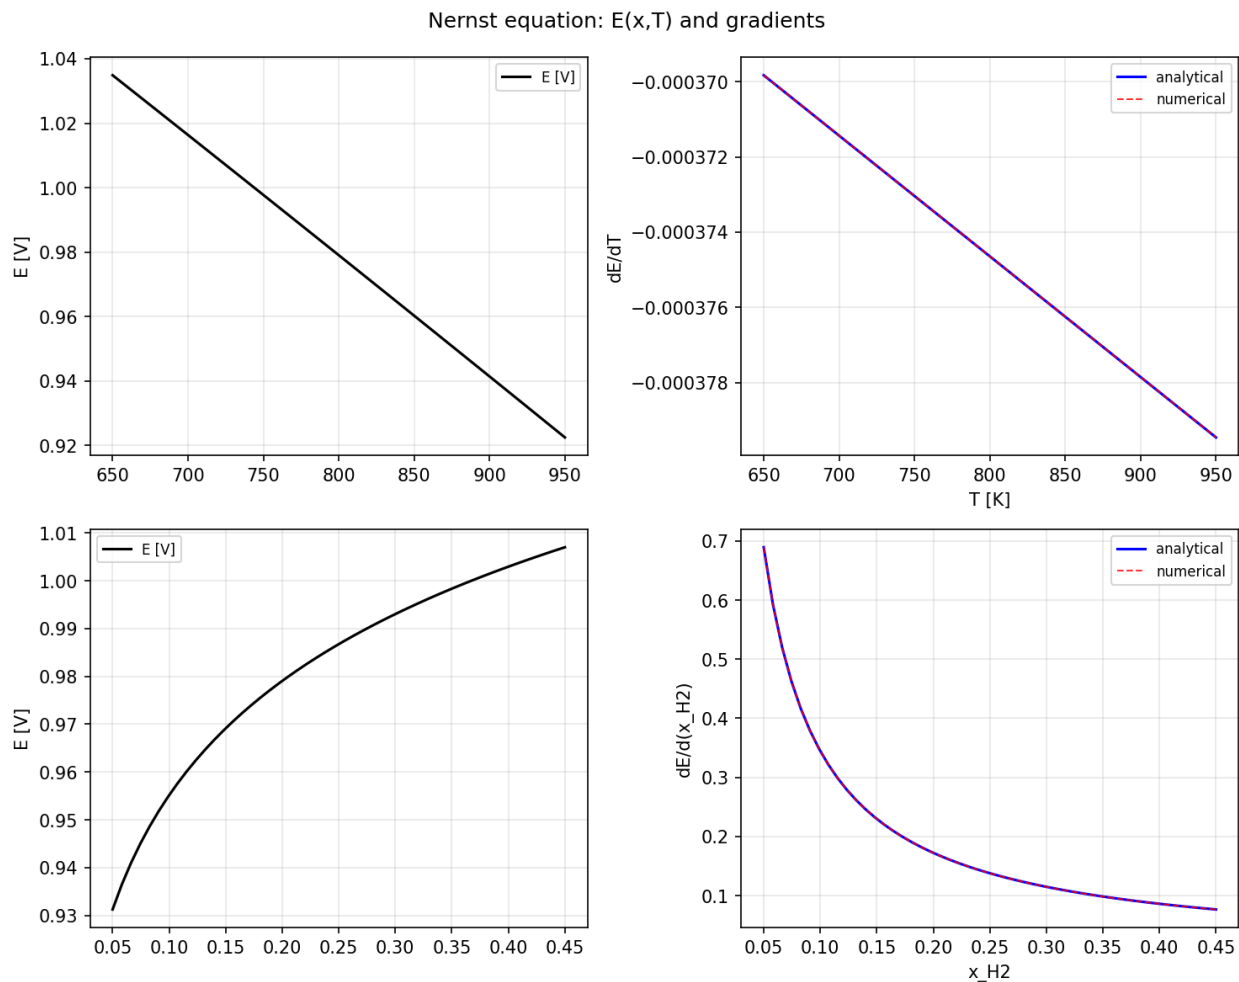


Figure A6.19: Gradient verification output: gradient\_test\_nernst.png.

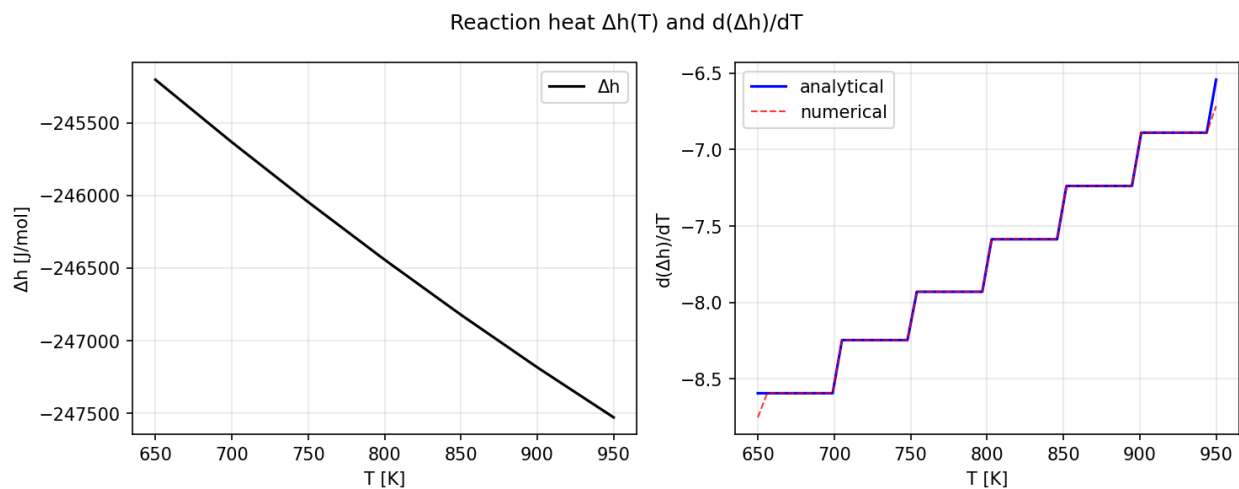
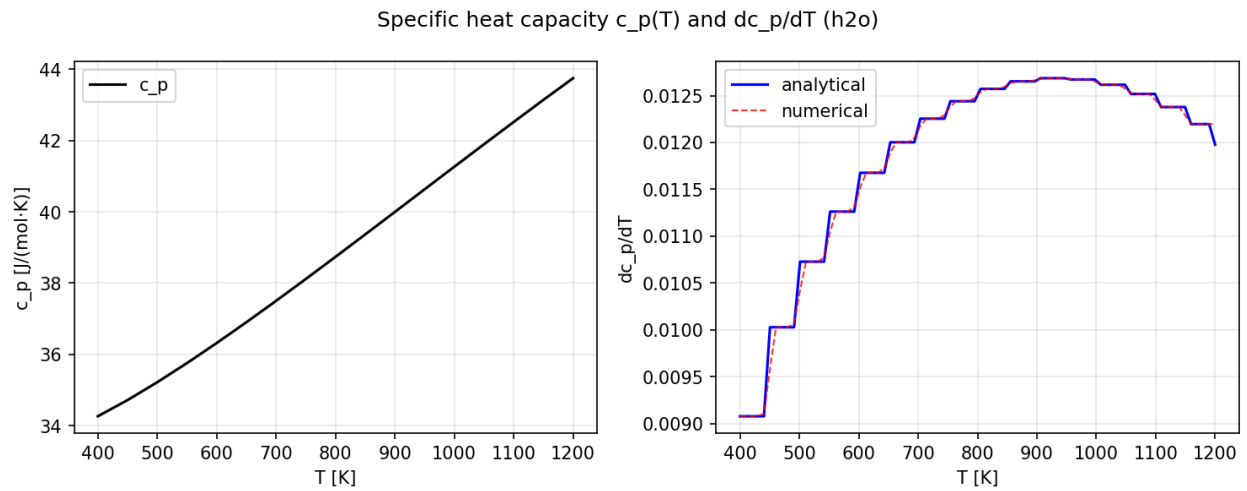
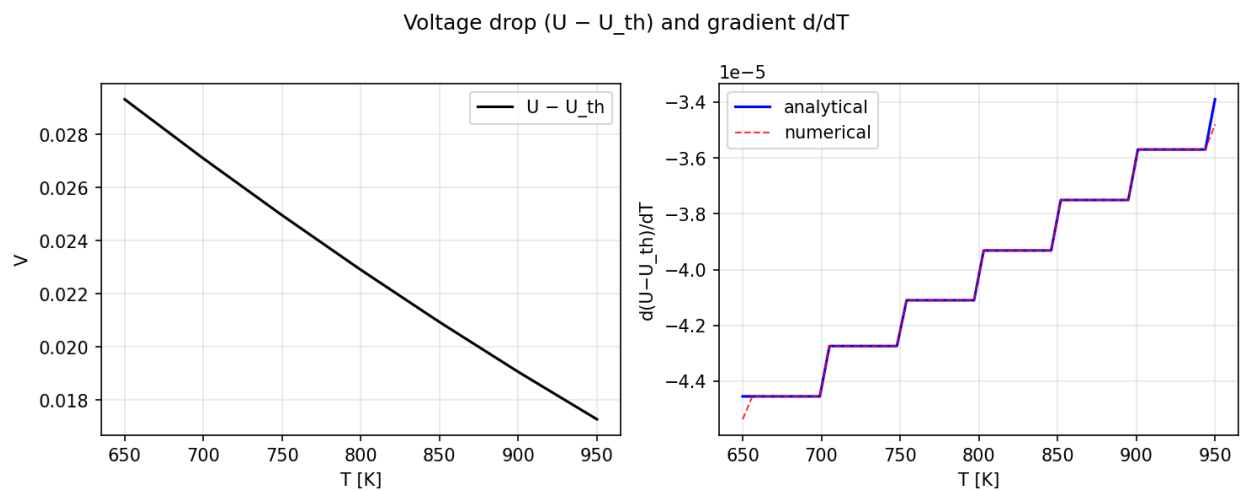


Figure A6.20: Gradient verification output: gradient\_test\_reaction\_heat.png.

Figure A6.21: Gradient verification output: `gradient_test_specific_heat_capacity.png`.Figure A6.22: Gradient verification output: `gradient_test_voltage_drop_gradient.png`.

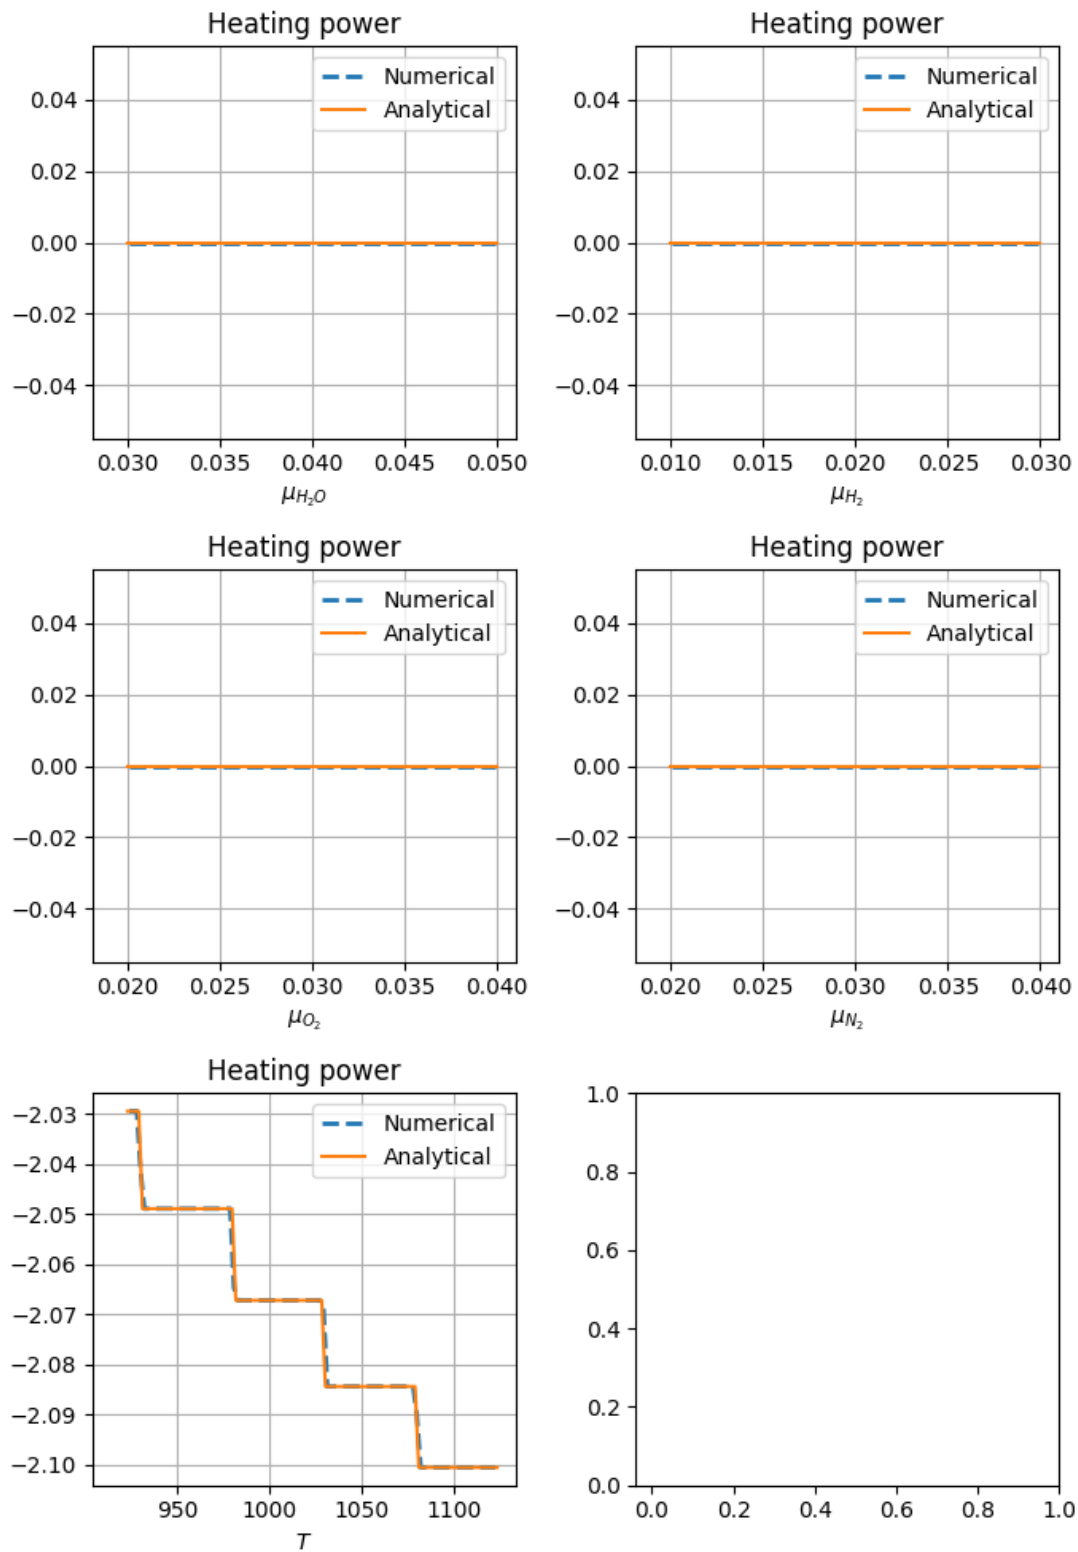


Figure A6.23: Gradient verification output: heating\_power.png.

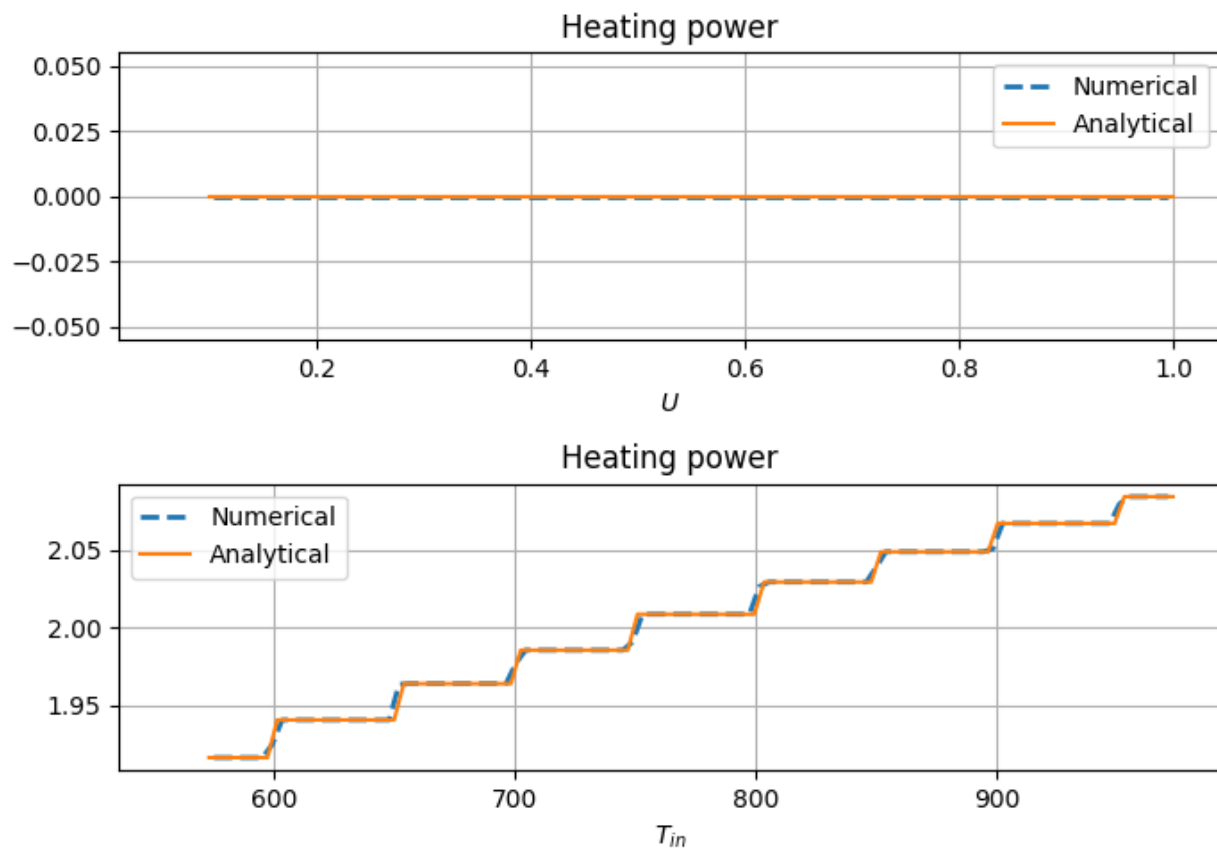


Figure A6.24: Gradient verification output: heating\_power\_dp.png.

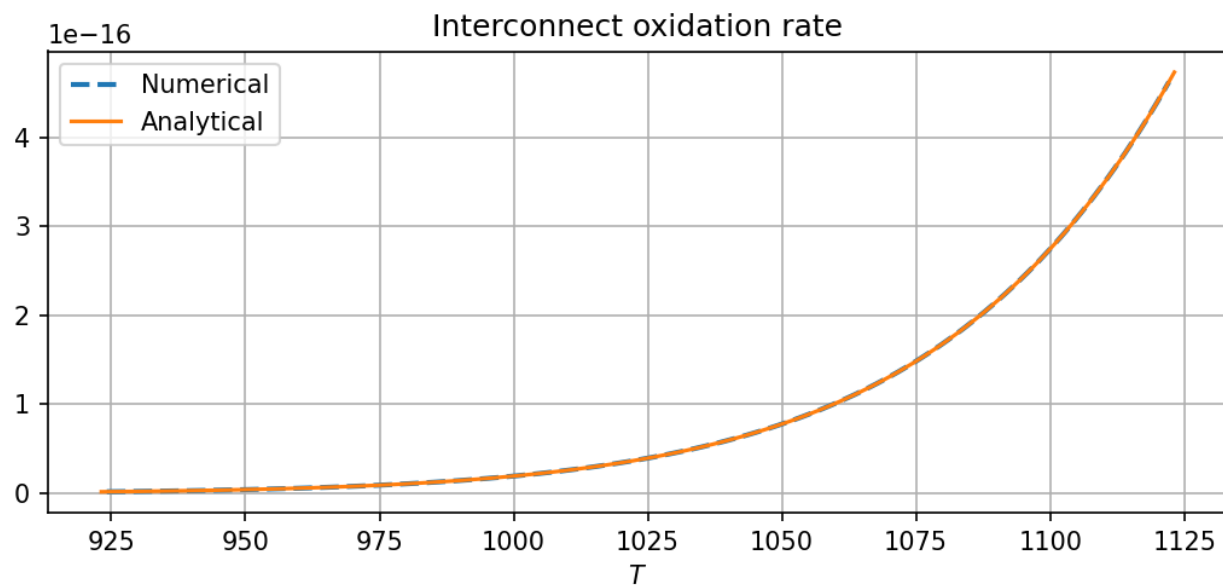


Figure A6.25: Gradient verification output: interconnect\_oxidation\_rate.png.

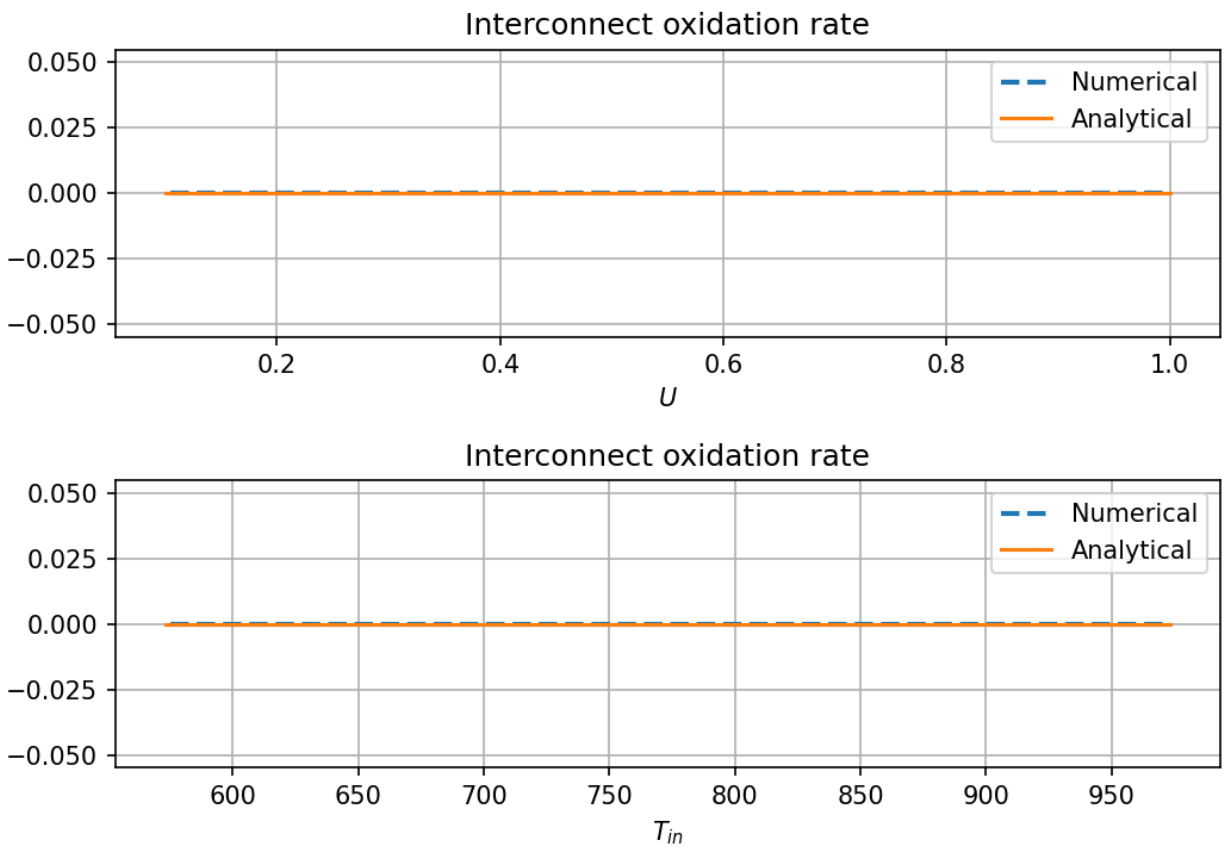


Figure A6.26: Gradient verification output: interconnect\_oxidation\_rate\_dp.png.

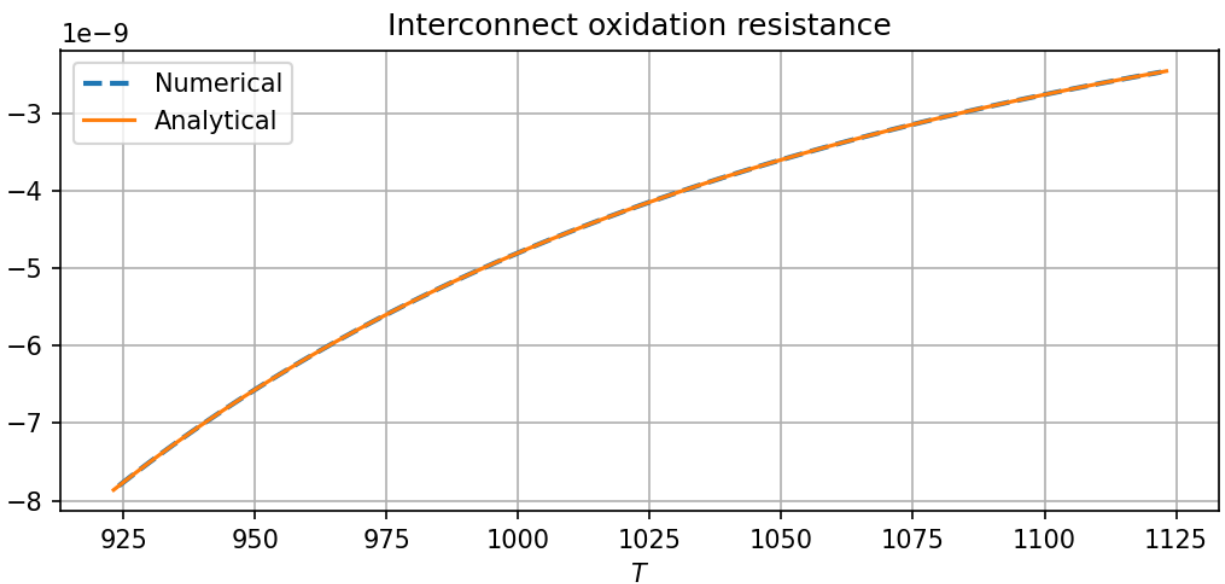


Figure A6.27: Gradient verification output: interconnect\_oxidation\_resistance.png.

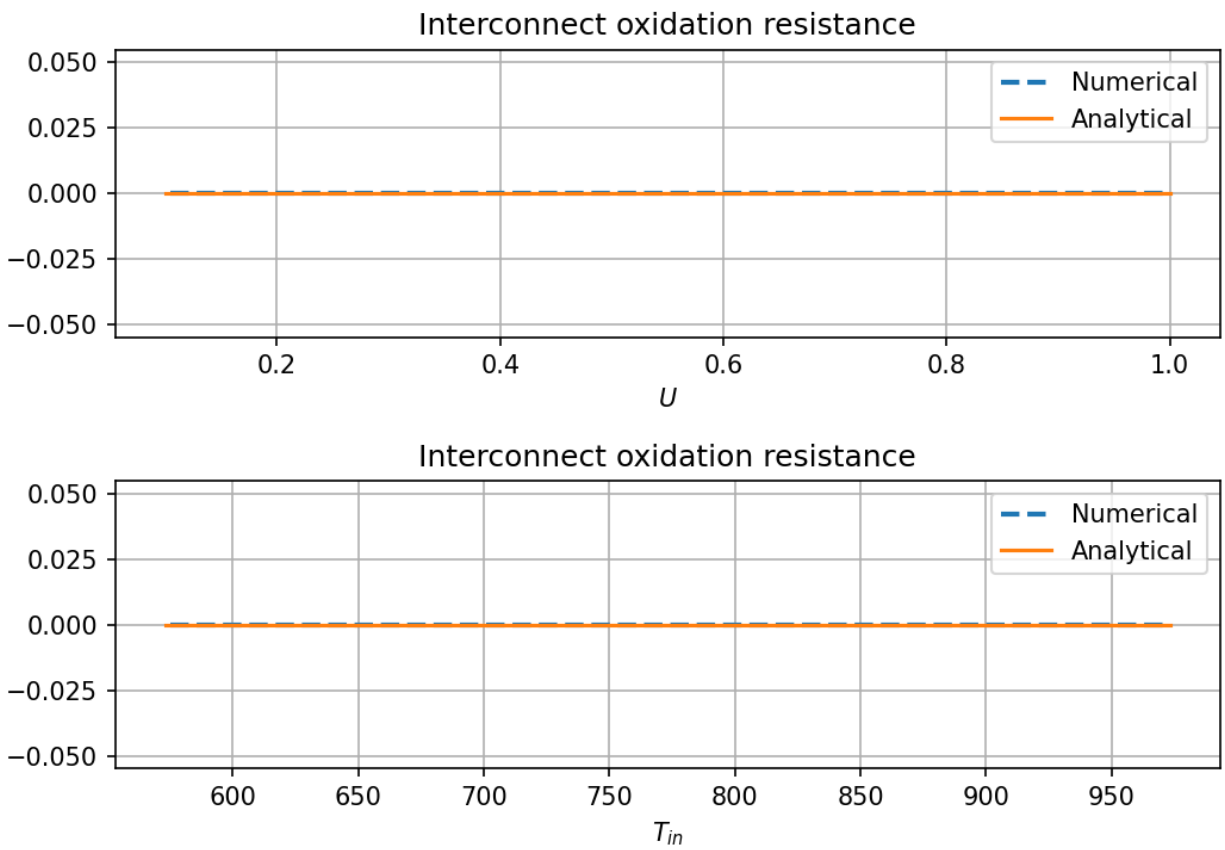


Figure A6.28: Gradient verification output: interconnect\_oxidation\_resistance\_dp.png.

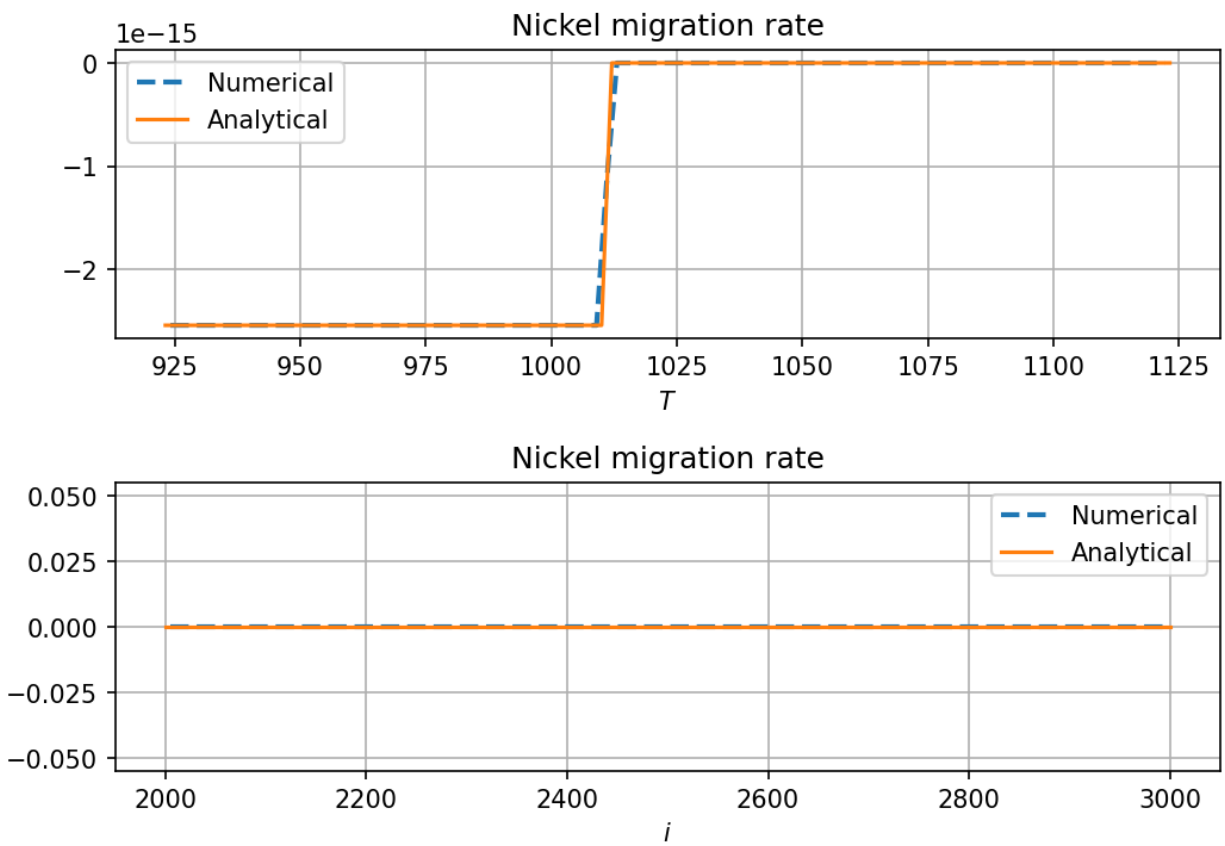


Figure A6.29: Gradient verification output: nickel\_migration\_rate.png.

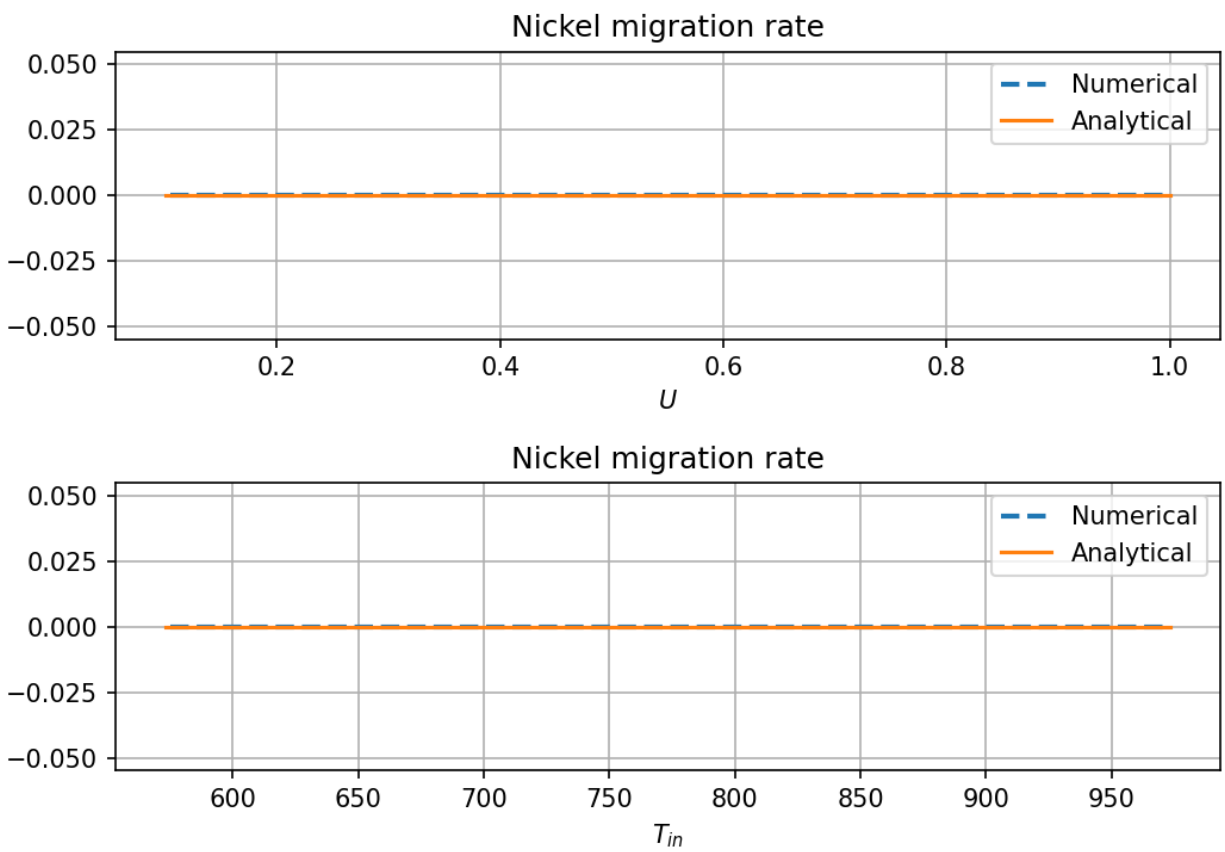


Figure A6.30: Gradient verification output: nickel\_migration\_rate\_dp.png.



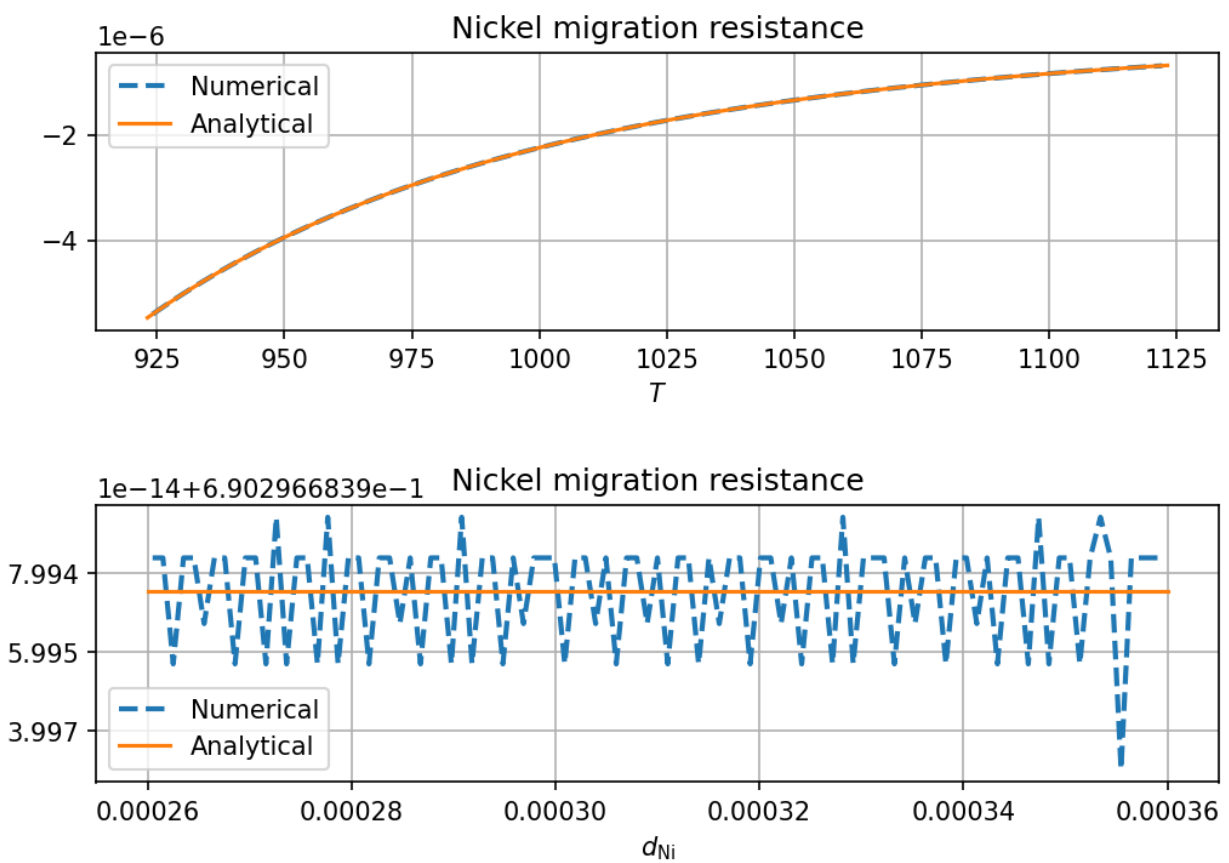


Figure A6.31: Gradient verification output: nickel\_migration\_resistance.png.

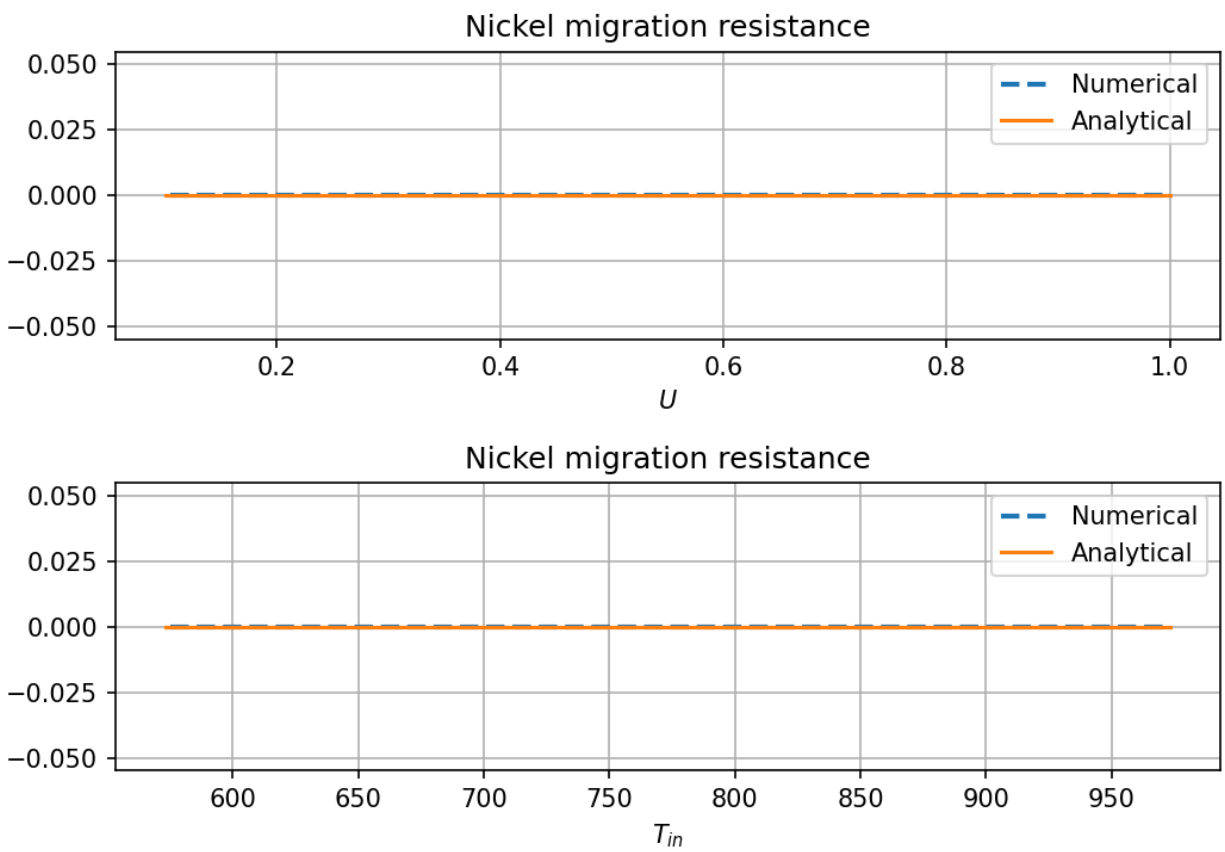


Figure A6.32: Gradient verification output: nickel\_migration\_resistance\_dp.png.

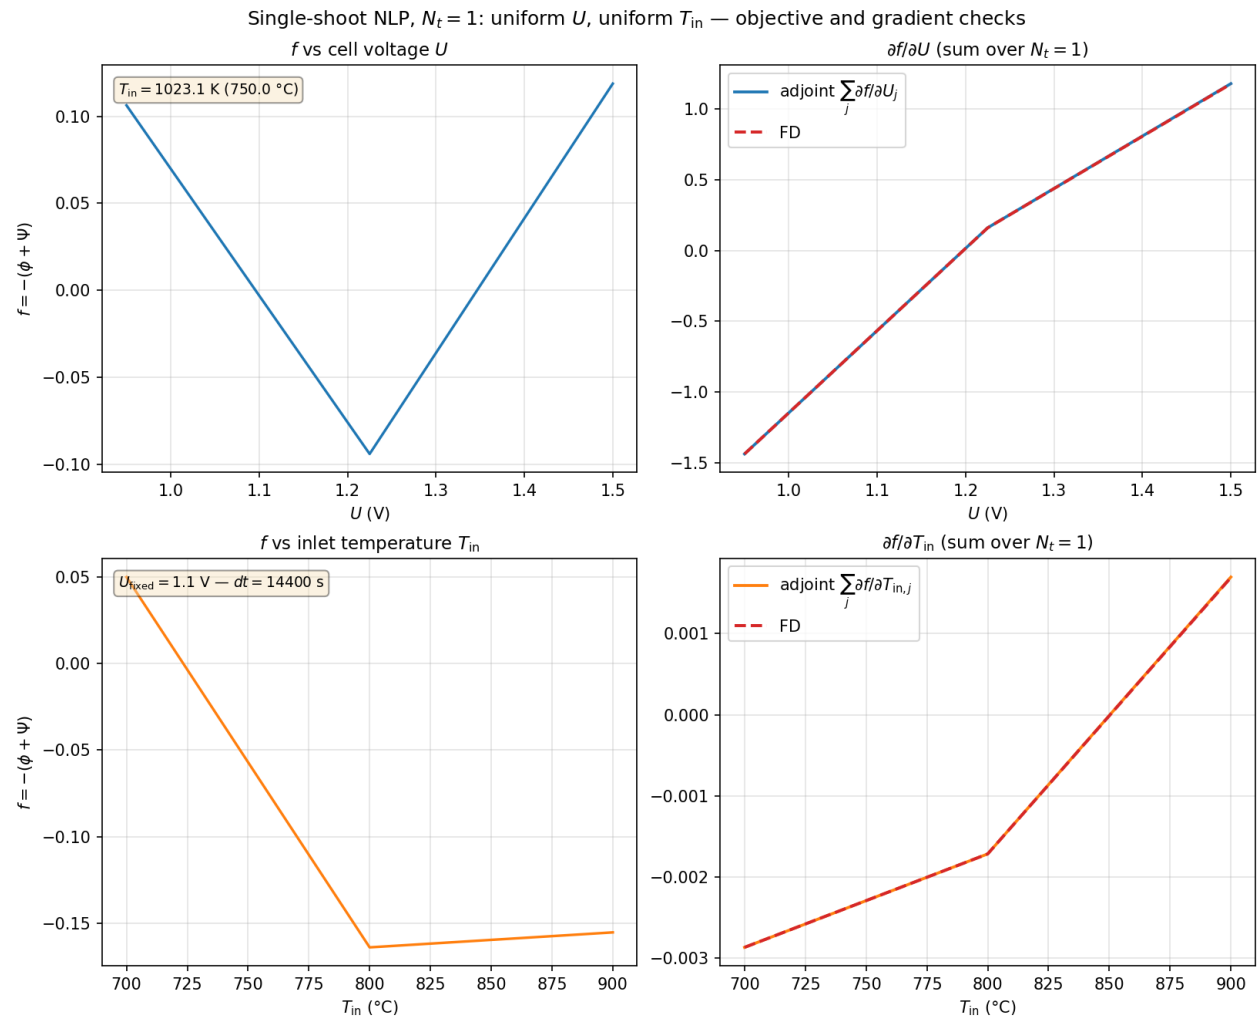


Figure A6.33: Gradient verification output: nlp\_gradients\_NT1.png.

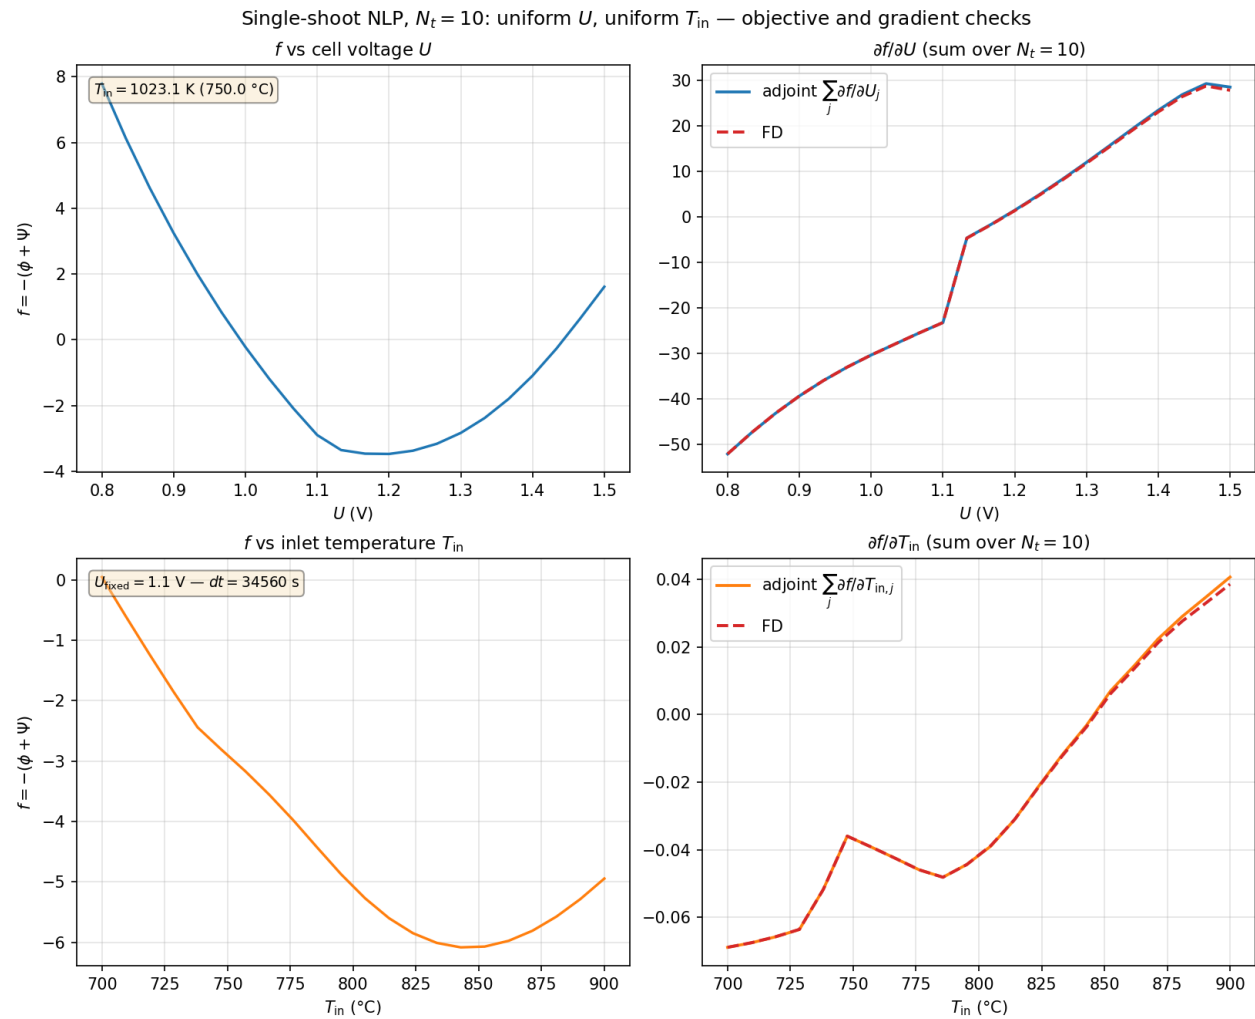


Figure A6.34: Gradient verification output: nlp\_gradients\_NT10.png.

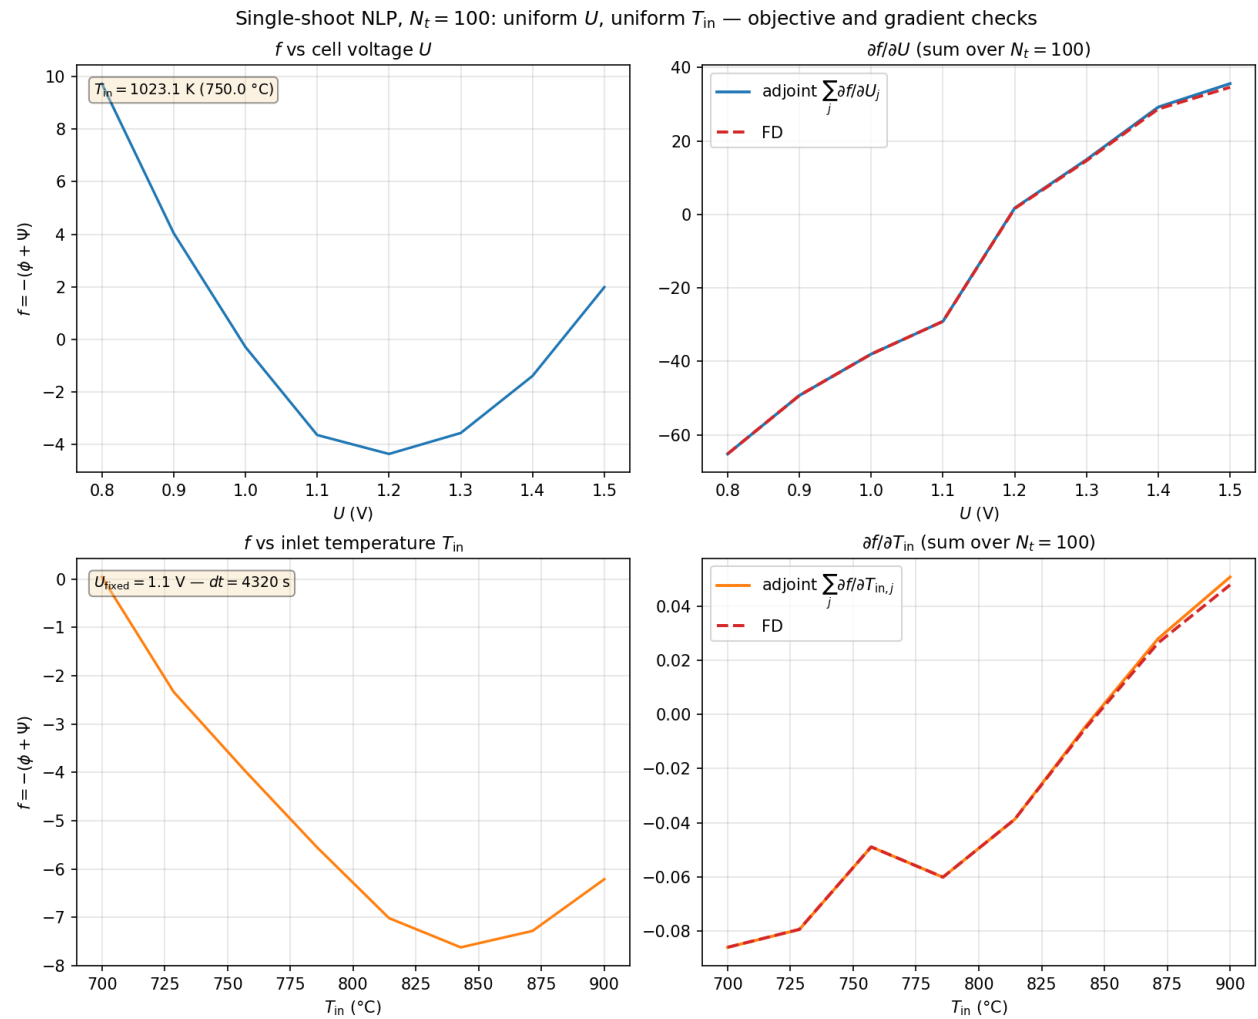


Figure A6.35: Gradient verification output: nlp\_gradients\_NT100.png.

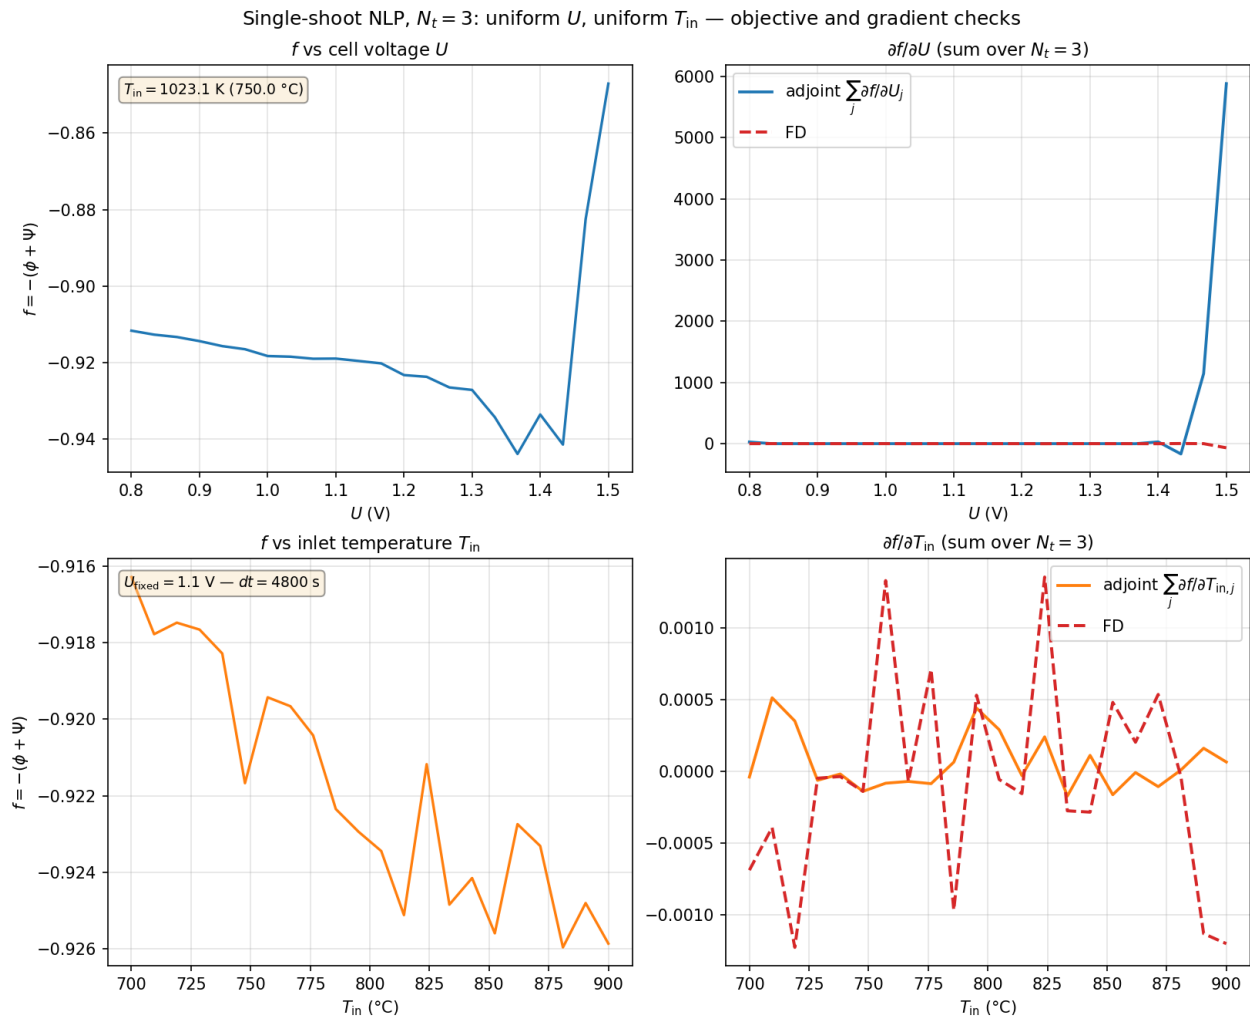


Figure A6.36: Gradient verification output: nlp\_gradients\_NT3.png.

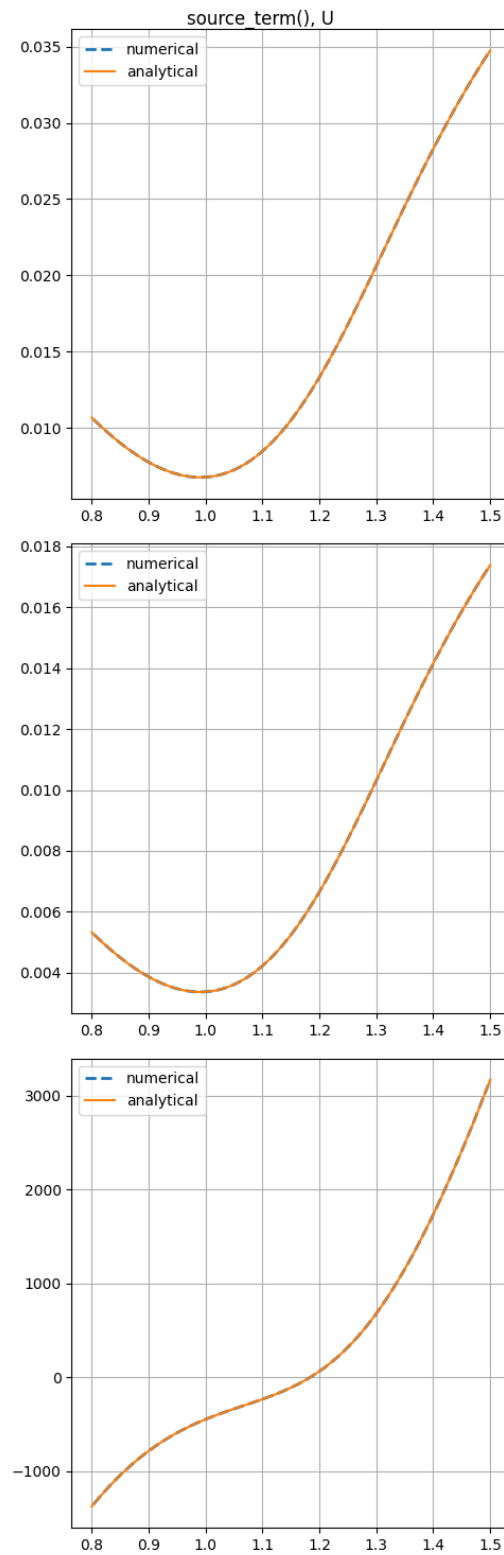


Figure A6.37: Gradient verification output: source\_term\_U.png.

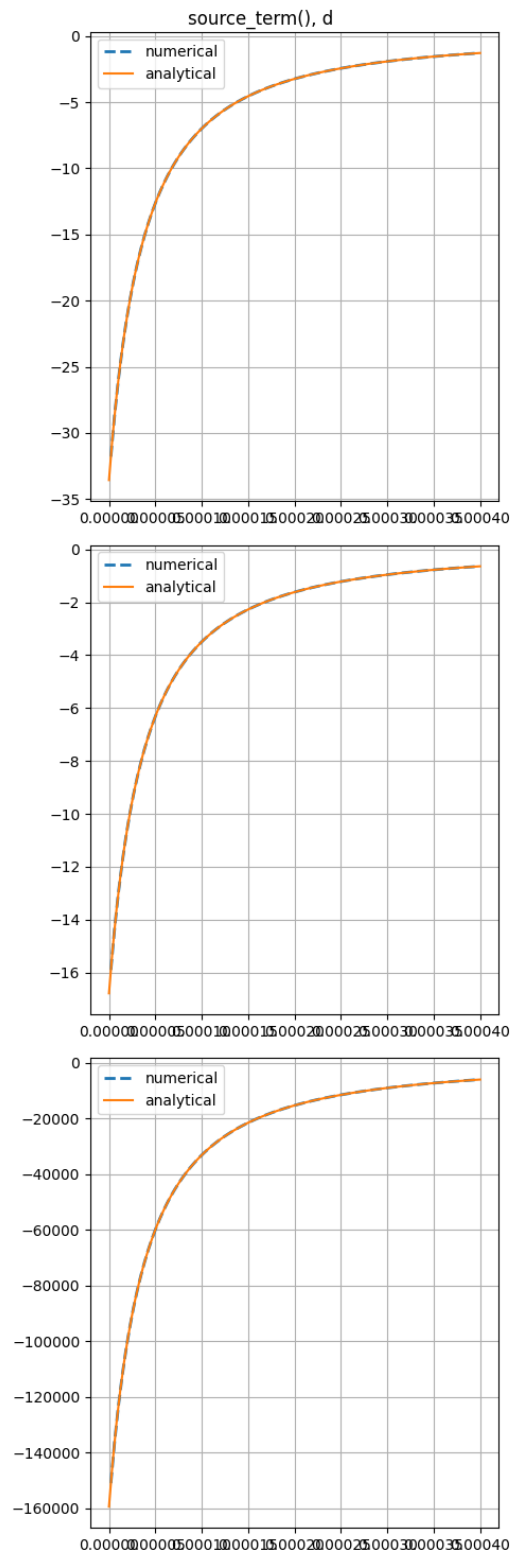


Figure A6.38: Gradient verification output: source\_term\_dd.png.



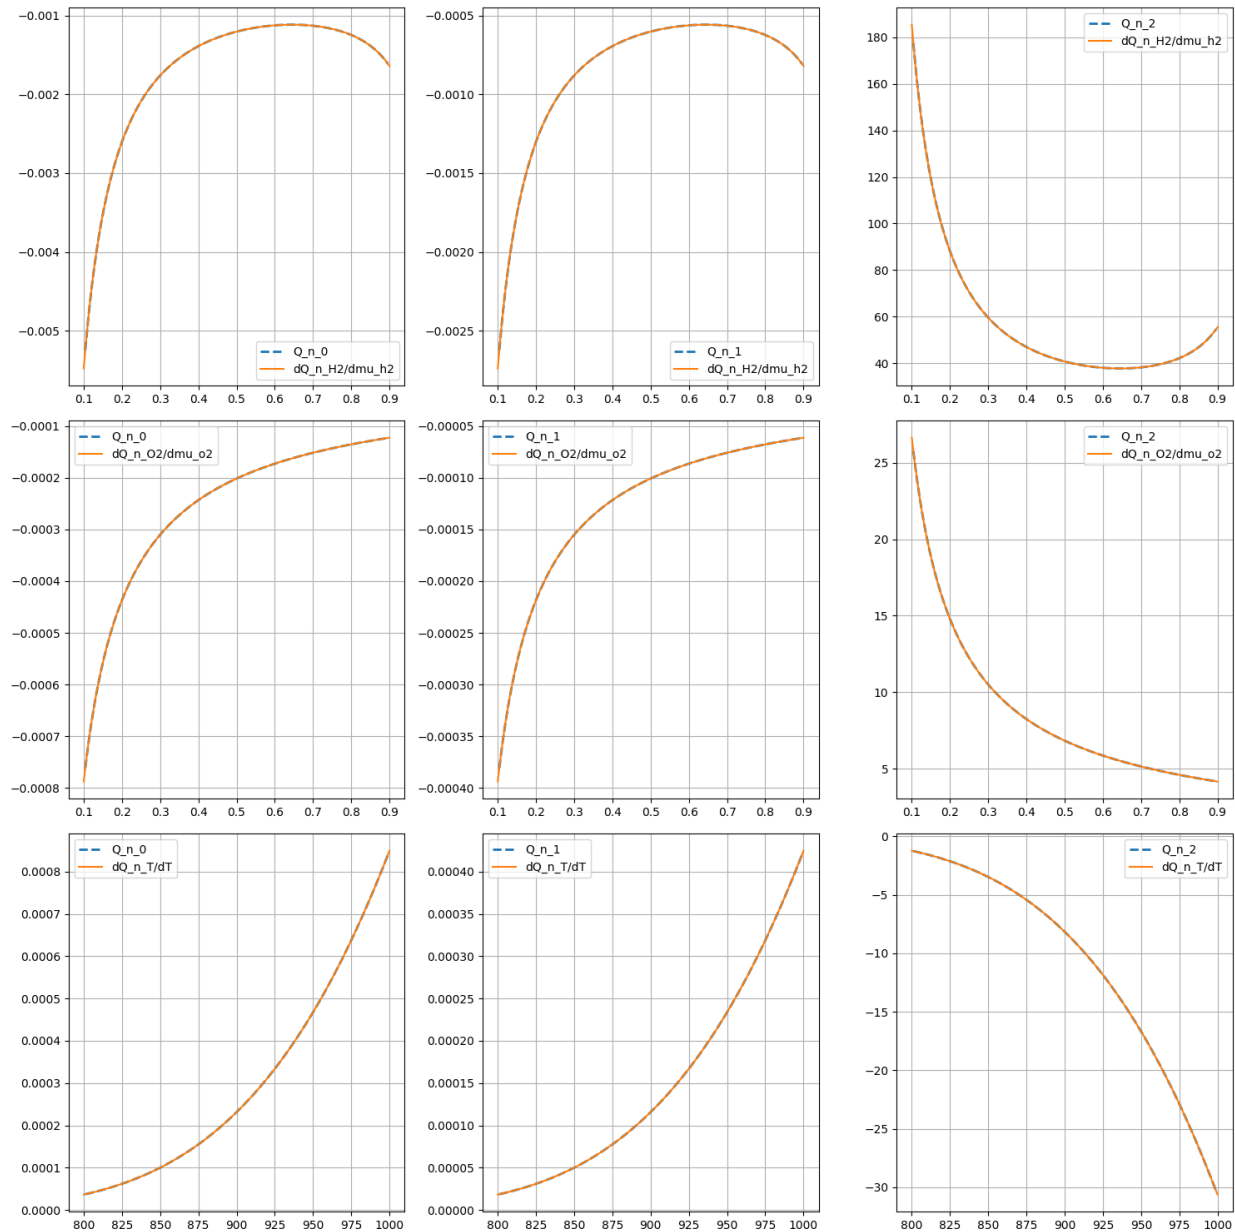


Figure A6.39: Gradient verification output: source\_term\_jacobian.png.

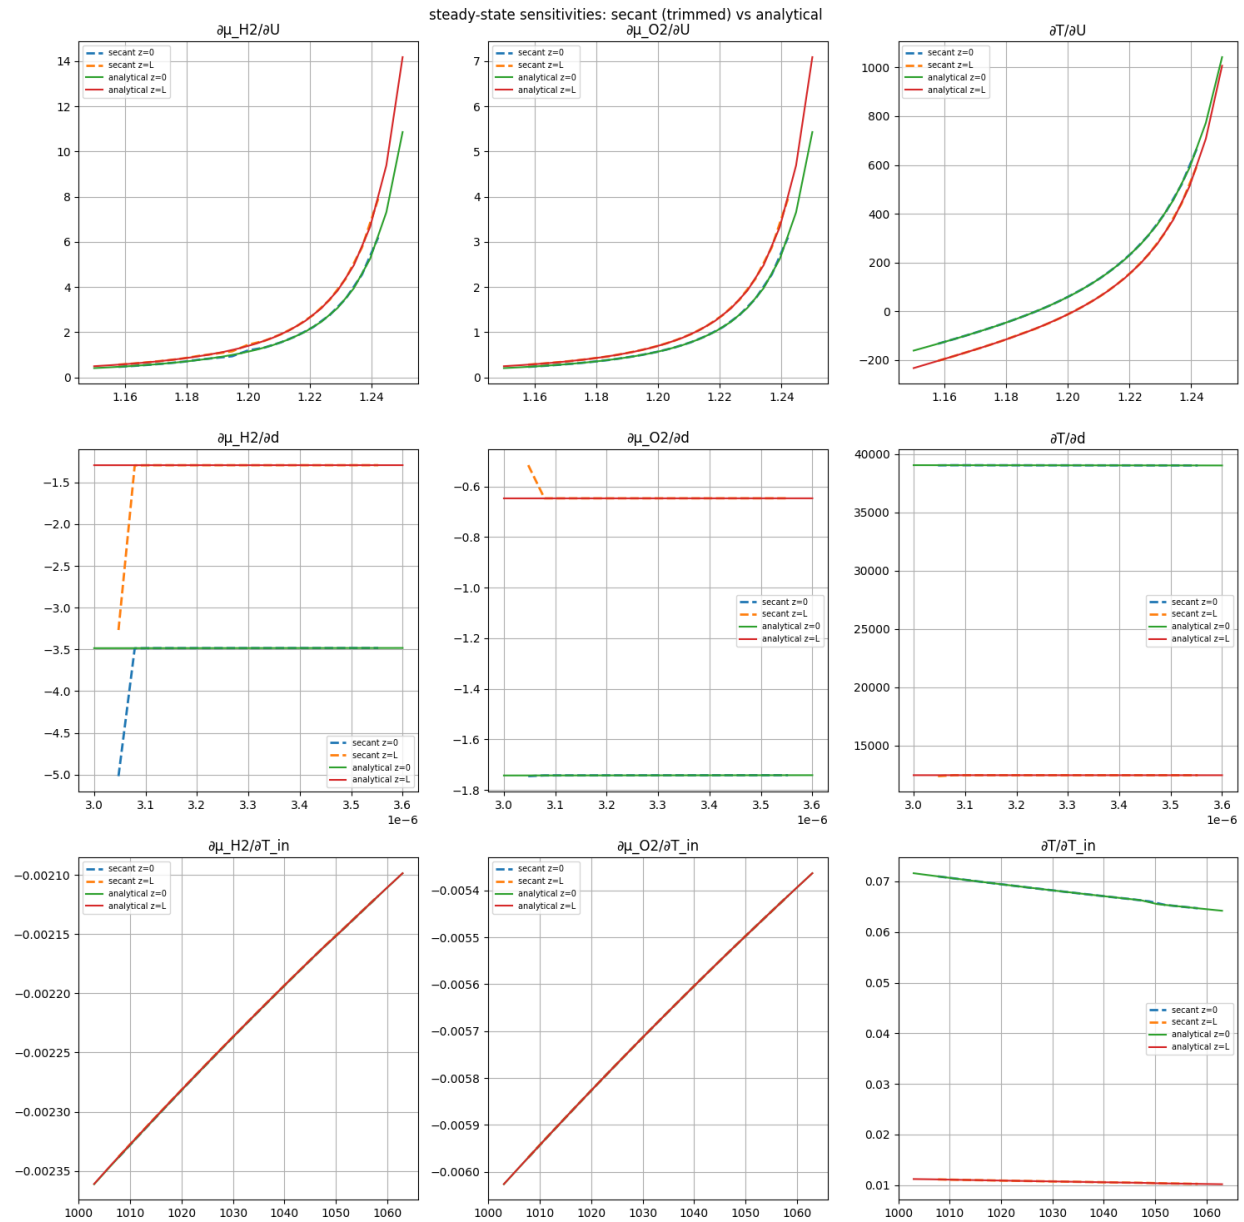


Figure A6.40: Gradient verification output: steady\_state\_dmu\_3x3.png.

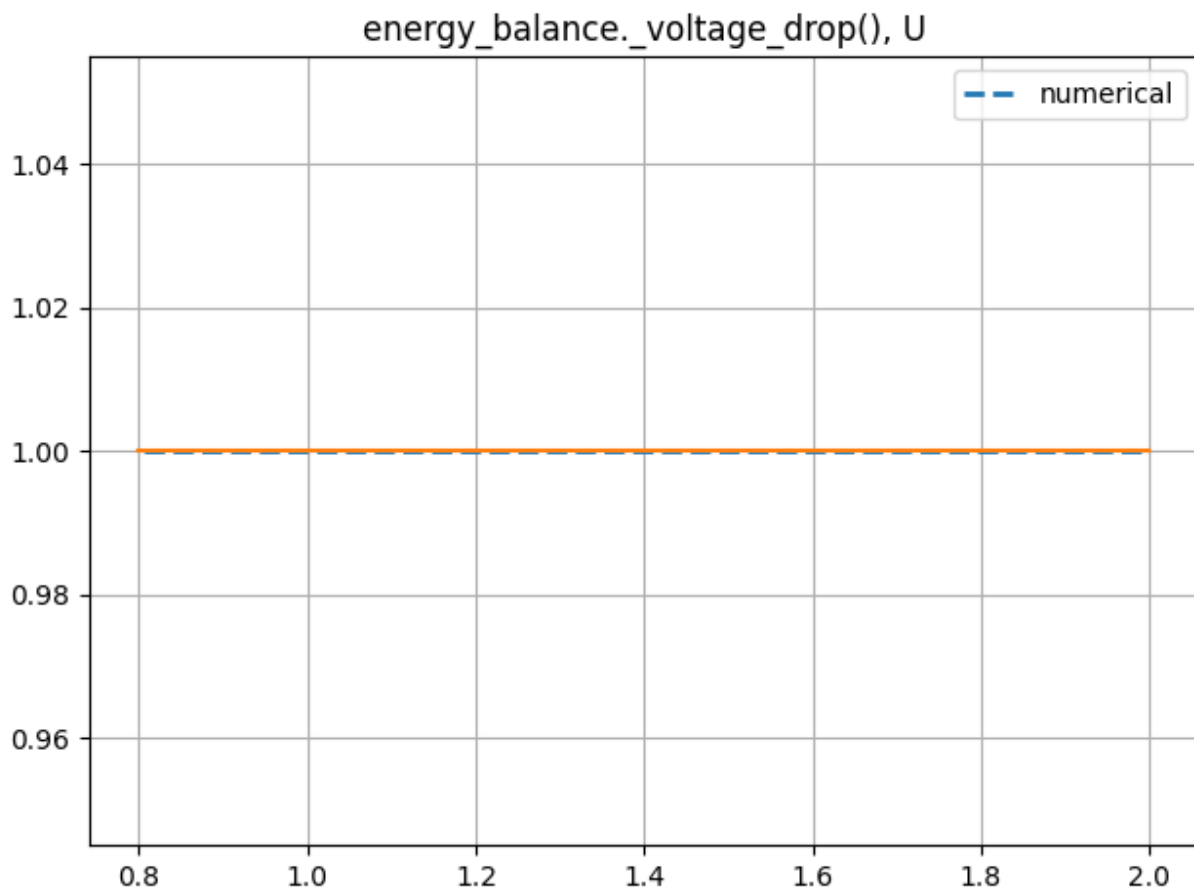


Figure A6.41: Gradient verification output: voltage\_drop\_U.png.

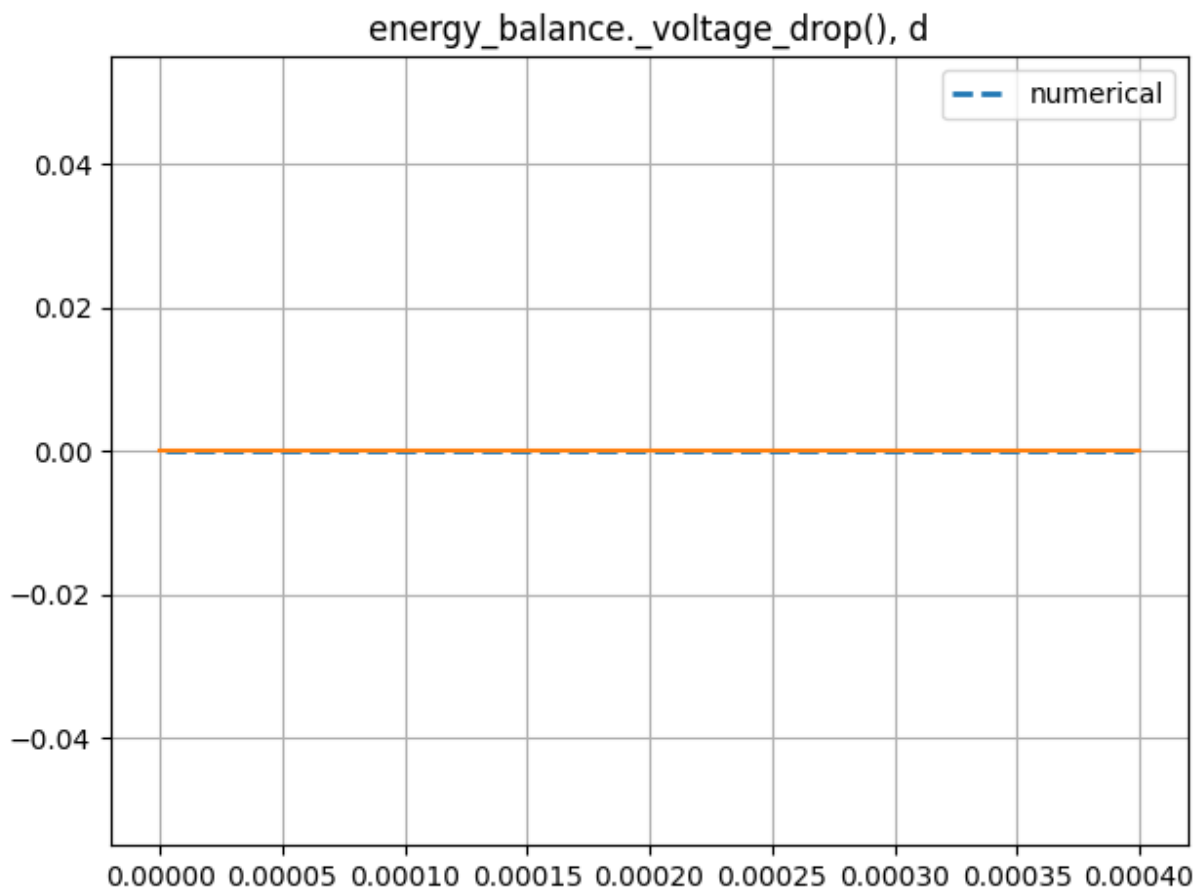


Figure A6.42: Gradient verification output: voltage\_drop\_d.png.

# Literature

- [1] Cost of hydrogen production | european hydrogen observatory. Retrieved from [https://observatory.clean-hydrogen.europa.eu/hydrogen-landscape/production-trade-and-cost/cost-hydrogen-production?utm\\_source=chatgpt.com](https://observatory.clean-hydrogen.europa.eu/hydrogen-landscape/production-trade-and-cost/cost-hydrogen-production?utm_source=chatgpt.com)
- [2] Anysphere. 2022. Cursor.
- [3] Javid Beyrami, Rafael Nogueira Nakashima, Arash Nemati, and Henrik Lund Frandsen. 2025. Lifetime and performance of solid oxide electrolysis stacks and systems under different operation modes and conditions. *International Journal of Hydrogen Energy* 102, (February 2025), 980–995. <https://doi.org/10.1016/J.IJHYDENE.2025.01.028>
- [4] Javid Beyrami, Rafael Nogueira Nakashima, Arash Nemati, and Henrik Lund Frandsen. 2026. Economic optimization of modular solid oxide electrolysis system considering degradation and lifetime. *Energy Conversion and Management* 348, (January 2026), 120782. <https://doi.org/10.1016/J.ENCONMAN.2025.120782>
- [5] Javid Beyrami, Rafael Nogueira Nakashima, Arash Nemati, and Henrik Lund Frandsen. 2024. Degradation modeling in solid oxide electrolysis systems: A comparative analysis of operation modes. *Energy Conversion and Management: X* 23, (2024), 100653. <https://doi.org/https://doi.org/10.1016/j.ecmx.2024.100653>
- [6] Tomasz Brylewski, Sebastian Molin, Mirosław Stygar, Maciej Bik, Piotr Jeleń, Maciej Sitarz, Aleksander Gil, Ming Chen, and Peter Vang Hendriksen. 2024. Oxidation kinetics and electrical properties of oxide scales formed under exposure to air and ar–H<sub>2</sub>-H<sub>2</sub>O atmospheres on the crofer 22 h ferritic steel for high-temperature applications such as interconnects in solid oxide cell stacks. *International Journal of Hydrogen Energy* 94, (December 2024), 209–222. <https://doi.org/10.1016/J.IJHYDENE.2024.11.091>
- [7] Qiong Cai, Claire S. Adjiman, and Nigel P. Brandon. 2014. Optimal control strategies for hydrogen production when coupling solid oxide electrolyzers with intermittent renewable energies. *Journal of Power Sources* 268, (December 2014), 212–224. <https://doi.org/10.1016/J.JPOWSOUR.2014.06.028>
- [8] Andrea Capolei. 2013. Numerical methods for oil reservoirs management. PhD thesis. Technical University of Denmark. Retrieved from [https://people.compute.dtu.dk/jbjo/PhD\\_Thesis\\_2013\\_AndreaCapolei.pdf](https://people.compute.dtu.dk/jbjo/PhD_Thesis_2013_AndreaCapolei.pdf)
- [9] Robert Eymard, Thierry Gallouët, and Raphaële Herbin. 2000. Finite volume methods. *Handbook of Numerical Analysis* 7, (January 2000), 713–1018. [https://doi.org/10.1016/S1570-8659\(00\)07005-8](https://doi.org/10.1016/S1570-8659(00)07005-8)

- 
- [10] Nishant V. Giridhar, Douglas A. Allan, Mingrui Li, Stephen E. Zitney, Lorenz T. Biegler, and Debangsu Bhattacharyya. 2024. Optimal operation of solid-oxide electrolysis cells considering long-term chemical degradation. *Energy Conversion and Management* 319, (November 2024), 118950. <https://doi.org/10.1016/J.ENCONMAN.2024.118950>
- [11] Ernst Hairer and Gerhard Wanner. 1996. *Solving ordinary differential equations II: Stiff and differential-algebraic problems* (2nd ed.). Springer, Berlin, Heidelberg. <https://doi.org/10.1007/978-3-642-05221-7>
- [12] R. J.. Kee, Michael Elliott. Coltrin, Peter. Glarborg, and Huayang. Zhu. 2018. Chemically reacting flow : Theory, modeling, and simulation. (2018), 747.
- [13] D. Larrain, J. Van herle, and D. Favrat. 2006. Simulation of SOFC stack and repeat elements including interconnect degradation and anode reoxidation risk. *Journal of Power Sources* 161, (October 2006), 392–403. <https://doi.org/10.1016/J.JPOWSOUR.2006.04.151>
- [14] Andre Leonide, Yannick Apel, and Ellen Ivers-Tiffée. 2009. SOFC modeling and parameter identification by means of impedance spectroscopy. *ECS Transactions* 19, (October 2009), 81–109. <https://doi.org/10.1149/1.3247567>
- [15] S. Primdahl and M. Mogensen. 1998. Gas conversion impedance: A test geometry effect in characterization of solid oxide fuel cell anodes. *Journal of The Electrochemical Society* 145, 7 (July 1998), 2431. <https://doi.org/10.1149/1.1838654>
- [16] Tobias K. S. Ritschel, Andrea Capolei, Jozsef Gaspar, and John Bagterp Jørgensen. 2018. An algorithm for gradient-based dynamic optimization of UV flash processes. *Computers & Chemical Engineering* 114, (June 2018), 281–295. <https://doi.org/10.1016/J.COMPCHEMENG.2017.10.007>
- [17] Omid Babaie Rizvandi, Matti Noponen, Henrik Lund Frandsen, and Xiufu Sun. 2025. Numerical investigation of electrochemical performance of commercial solid oxide cell stacks. *International Journal of Hydrogen Energy* 102, (February 2025), 830–844. <https://doi.org/10.1016/J.IJHYDENE.2025.01.101>
- [18] Bengt Sundén. 2019. Electrochemistry and thermodynamics. *Hydrogen, Batteries and Fuel Cells* (2019), 15–36. <https://doi.org/10.1016/B978-0-12-816950-6.00002-6>
- [19] Pauli Virtanen, Ralf Gommers, Travis E. Oliphant, Matt Haberland, Tyler Reddy, David Cournapeau, Evgeni Burovski, Pearu Peterson, Warren Weckesser, Jonathan Bright, Stéfan J. van der Walt, Matthew Brett, Joshua Wilson, K. Jarrod Millman, Nikolay Mayorov, Andrew R. J. Nelson, Eric Jones, Robert Kern, Eric Larson, C J Carey, İlhan Polat, Yu Feng, Eric W. Moore, Jake VanderPlas, Denis Laxalde, Josef Perktold, Robert Cimrman, Ian Henriksen, E. A. Quintero, Charles R. Harris, Anne M. Archibald, Antônio H. Ribeiro, Fabian Pedregosa, Paul van Mulbregt, and SciPy 1.0 Contributors. 2020. SciPy 1.0: Fundamental Algorithms for Scientific Computing in Python. *Nature Methods* 17, (2020), 261–272. <https://doi.org/10.1038/s41592-019-0686-2>
- [20] Wikipedia contributors. 2025. Projectile motion — Wikipedia, the free encyclopedia.