

DIY Optical ToF Distance Measurement

OST – Ostschweizer Fachhochschule

CAS Sensors and Sensor Signal Conditioning

Matthias Schär, Timon Burkard

28.03.2025

Table of contents

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

- ➊ Objective (2 min)
- ➋ Realization (7 min)
 - Circuits
 - Firmware
- ➌ Results (8 min)
 - Electrical Results
 - Optical Results
- ➍ Conclusion (3 min)
- ➎ Demonstration (5 min)

Objective

Objective


OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

- Develop ToF demonstrator
 - Custom PCB with 2x TDC7200
- First step: Measure cable lengths
- Second step: Optical measurement
 - Distance: 10 m
 - Resolution: 30 cm

Realization


Blockdiagramm

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

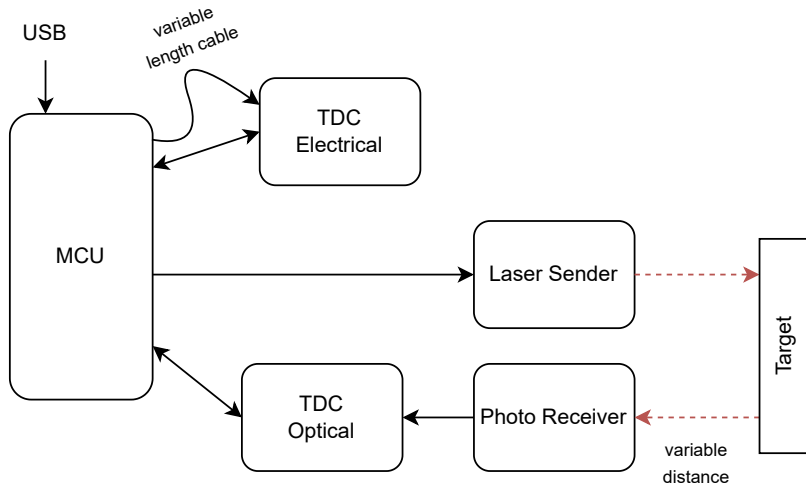


Blockdiagramm

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

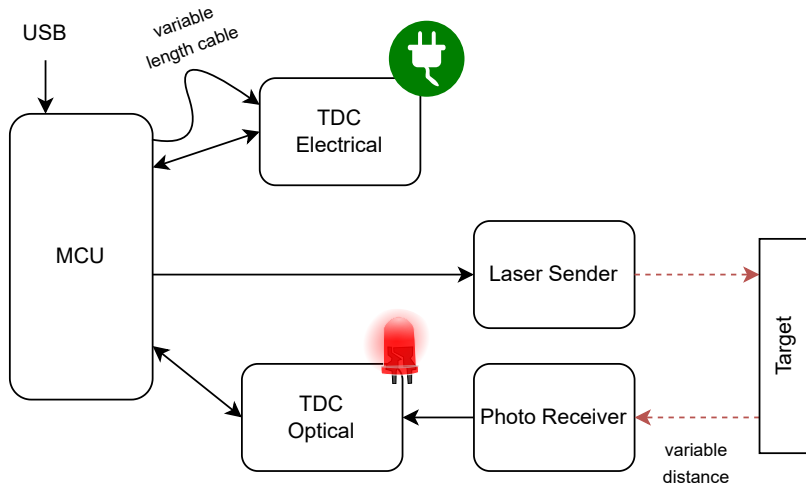

Concept: Optical Part

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

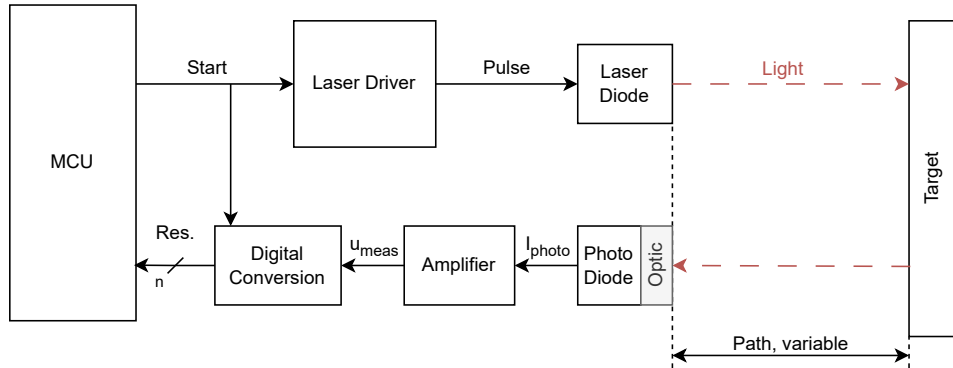

Realization


Circuits

TDC Electrical

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning



TDC electrical signal

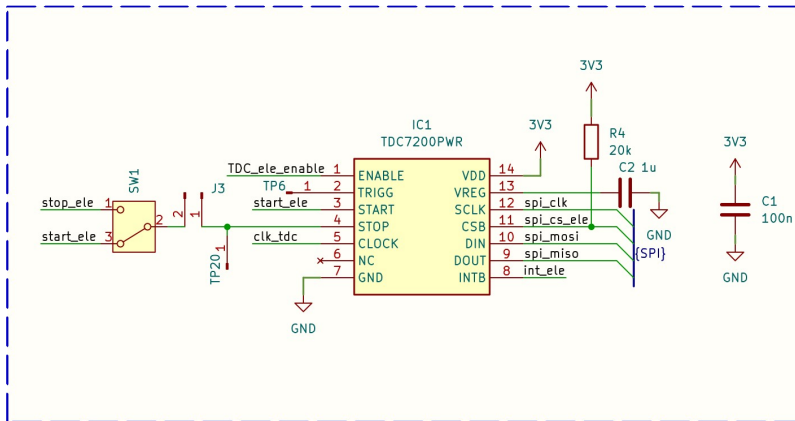


TDC Optical

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning



TDC optical signal

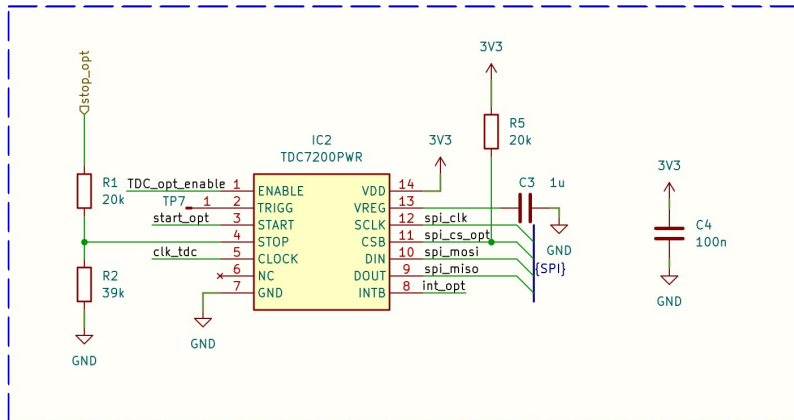

Laser Driver

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

Laser driver


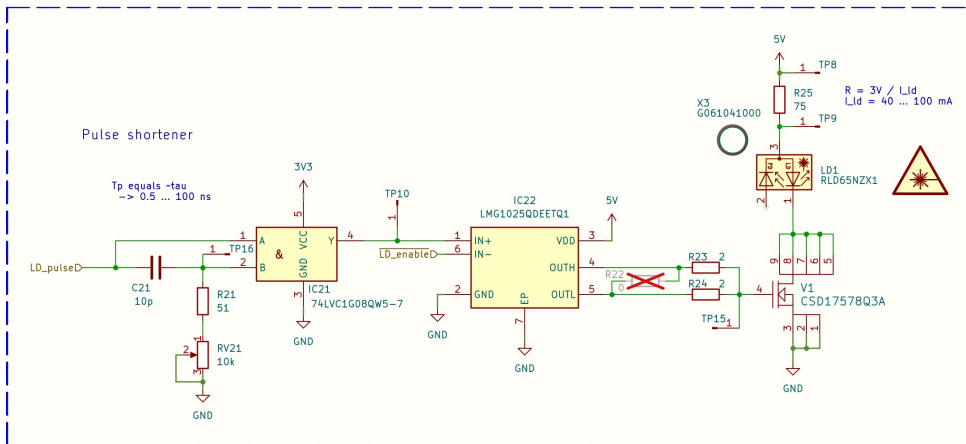


Photo Receiver

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning




Receiver

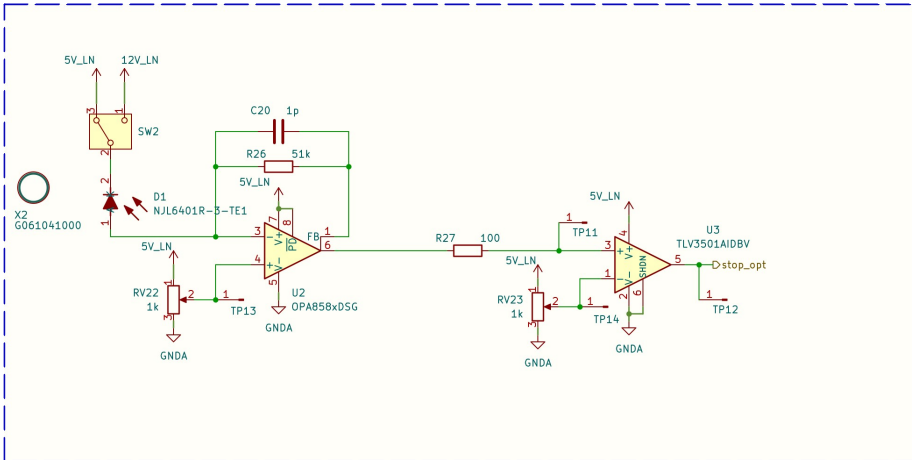


3D View

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

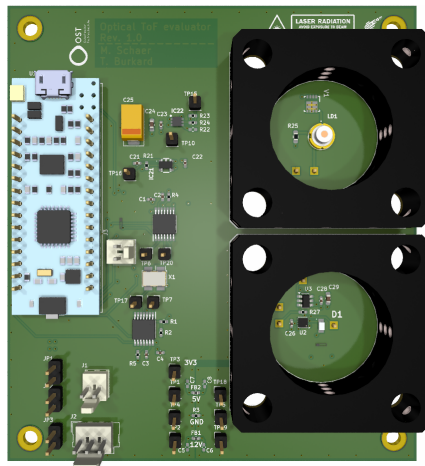

Demonstrator

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

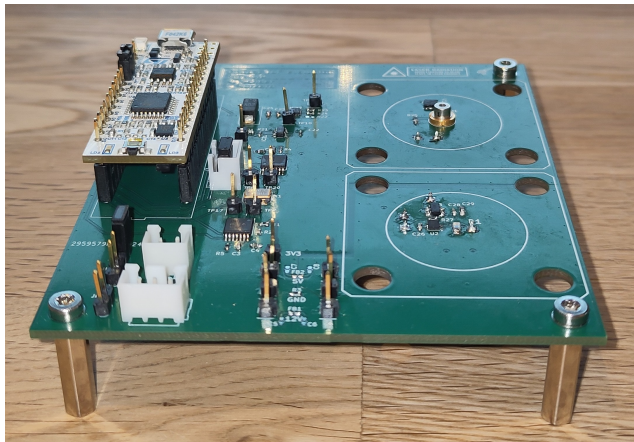


Realization

Firmware

Firmware block diagram

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

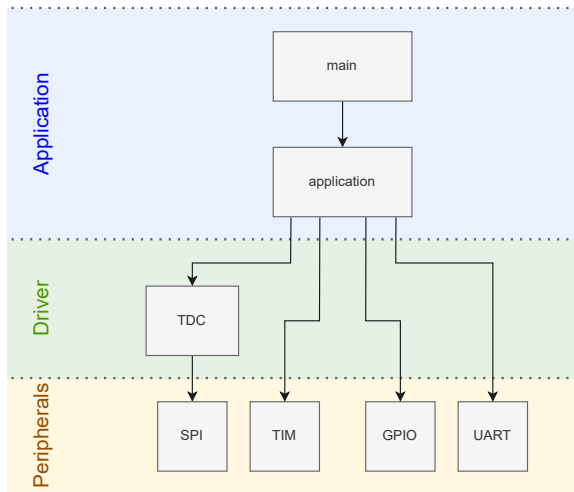

Firmware example: configuration

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

```
1 // Configuration
2
3 TDC_init(&tdc_ele, &hspi1, SPI_CS_ELE_GPIO, TDC_ELE_ENABLE_GPIO);
4
5 TDC_enable(&tdc_ele);
6
7 // SPI Communication
8
9 TDC_read(&tdc_ele, TDC_ADR_CONFIG1, data);
10
11 data[0] |= TDC_CONFIG1_MEAS_MODE_1;
12
13 TDC_write(&tdc_ele, TDC_ADR_CONFIG1, data);
```

Firmware example: configuration

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

```
1 // Configuration
2
3 TDC_init(&tdc_ele, &hspi1, SPI_CS_ELE_GPIO, TDC_ELE_ENABLE_GPIO);
4
5 TDC_enable(&tdc_ele);
6
7 // SPI Communication
8
9 TDC_read(&tdc_ele, TDC_ADR_CONFIG1, data);
10
11 data[0] |= TDC_CONFIG1_MEAS_MODE_1;
12
13 TDC_write(&tdc_ele, TDC_ADR_CONFIG1, data);
```

Firmware example: configuration

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

```
1 // Configuration
2
3 TDC_init(&tdc_ele, &hspi1, SPI_CS_ELE_GPIO, TDC_ELE_ENABLE_GPIO);
4
5 TDC_enable(&tdc_ele);
6
7 // SPI Communication
8
9 TDC_read(&tdc_ele, TDC_ADR_CONFIG1, data);
10
11 data[0] |= TDC_CONFIG1_MEAS_MODE_1;
12
13 TDC_write(&tdc_ele, TDC_ADR_CONFIG1, data);
```

Firmware example: Measurement

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

```
1 uint64_t tof_fs = 0;
2
3 while (1) {
4     TDC_start(&tdc_ele);
5
6     // Set Pins to High with direct register access
7     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 8); // START_ELE
8     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 11); // STOP_ELE
9
10    TDC_read_result(&tdc_ele, &tof_fs);
11
12    // ToF result in [fs] is ready
13 }
```

Firmware example: Measurement

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

```
1 uint64_t tof_fs = 0;
2
3 while (1) {
4     TDC_start(&tdc_ele);
5
6     // Set Pins to High with direct register access
7     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 8); // START_ELE
8     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 11); // STOP_ELE
9
10    TDC_read_result(&tdc_ele, &tof_fs);
11
12    // ToF result in [fs] is ready
13 }
```

Firmware example: Measurement

```
1 uint64_t tof_fs = 0;
2
3 while (1) {
4     TDC_start(&tdc_ele);
5
6     // Set Pins to High with direct register access
7     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 8); // START_ELE
8     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 11); // STOP_ELE
9
10    TDC_read_result(&tdc_ele, &tof_fs);
11
12    // ToF result in [fs] is ready
13 }
```

Firmware example: Measurement

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

```
1 uint64_t tof_fs = 0;
2
3 while (1) {
4     TDC_start(&tdc_ele);
5
6     // Set Pins to High with direct register access
7     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 8); // START_ELE
8     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 11); // STOP_ELE
9
10    TDC_read_result(&tdc_ele, &tof_fs);
11
12    // ToF result in [fs] is ready
13 }
```


Firmware example: Measurement

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

```
1 uint64_t tof_fs = 0;
2
3 while (1) {
4     TDC_start(&tdc_ele);
5
6     // Set Pins to High with direct register access
7     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 8); // START_ELE
8     *((volatile uint32_t*)(GPIOA_BASE + 0x14)) |= (1 << 11); // STOP_ELE
9
10    TDC_read_result(&tdc_ele, &tof_fs);
11
12    // ToF result in [fs] is ready
13 }
```


Results

Results

Electrical Results

Different cable lengths

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

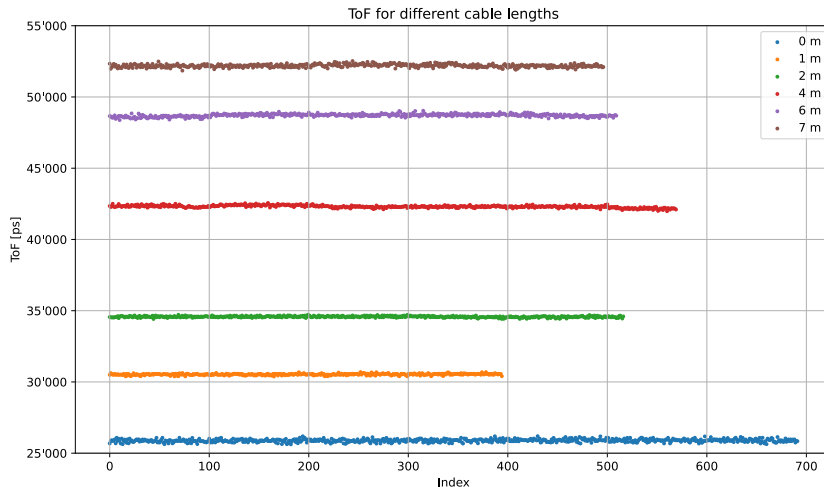

Different cable lengths: Results

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning



Length	Mean	Standard deviation	Δ at 0 m
0 m	25'890 ps	104 ps	0 ns
1 m	30'531 ps	53 ps	4.6 ns
2 m	34'575 ps	50 ps	8.7 ns
4 m	42'308 ps	88 ps	16.4 ns
6 m	48'710 ps	98 ps	22.8 ns
7 m	52'194 ps	104 ps	26.3 ns

Different cable lengths: Calculated backwards

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning




Length	TDC recalculated with 0.9 c
0 m	0.0 m
1 m	1.2 m
2 m	2.3 m
4 m	4.4 m
6 m	6.2 m
7 m	7.1 m

Results

Optical Results


Signal Path Transmitter

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

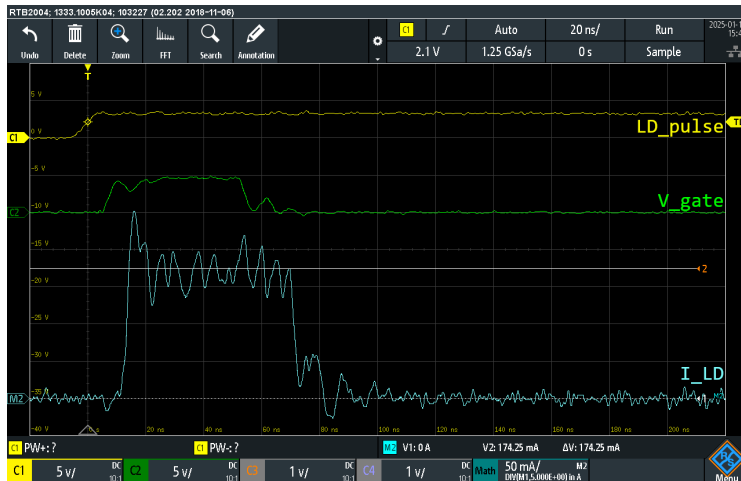


ToF measurements via mirror

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

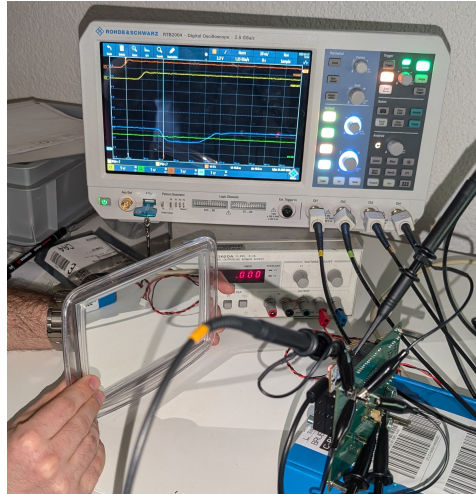


ToF measurements via mirror: DSO

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

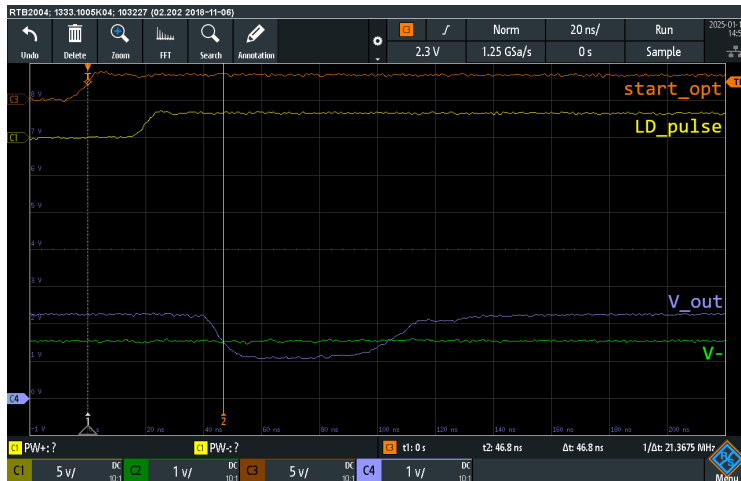

ToF measurements via mirror: Results

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

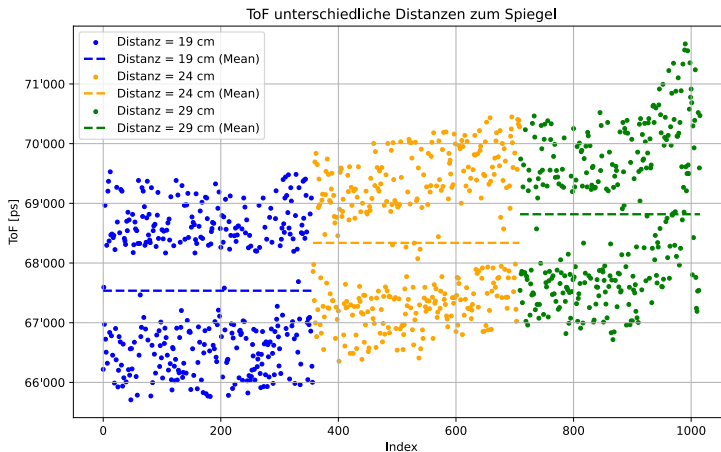

ToF measurements via mirror: analysis

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning



Distance to mirror	Mean value	Standard deviation
19 cm	67'536 ps	1'172 ps
24 cm	68'338 ps	1'191 ps
29 cm	68'817 ps	1'273 ps

ToF measurements via mirror: analysis




Distance to mirror	Mean value	Standard deviation
19 cm	67'536 ps	1'172 ps
24 cm	68'338 ps	1'191 ps
29 cm	68'817 ps	1'273 ps

$$\Delta ToF_{meas} \approx 0.6 \text{ ns}$$

$$\Delta ToF_{calc} = \frac{\Delta L}{c} = \frac{10 \text{ cm}}{3 \cdot 10^8 \text{ m/s}} = 0.33 \text{ ns}$$

ToF measurements via mirror: drift

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

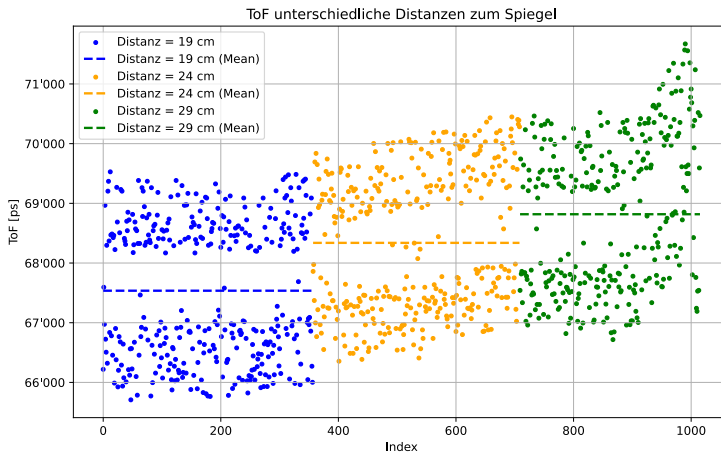

ToF measurements via mirror: >30 cm

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning



ToF measurements via wall

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning



- Unfortunately, optics not yet designed for this

Conclusion

Outlook

- Better coordinate optics, try other focal lengths
- Minimize jitter (higher clock or external clock)
- Switch GPIOs faster
- Optical receive path
 - Different amplifications TIA
 - Different switching thresholds for comparator
- Optical transmission path: try higher transmission power
- Analysis of optical results: why two clusters?
- Mechanical test setup for mirror

Lessons Learned

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

- Overall very satisfied
 - Learned a lot of new things
 - Unfortunately, a little short of time
 - Time resolution less of a problem than the amount of light received
- ⇒ Invest more time in optics and optoelectronics

Demonstration

Fragen?

OST – Ostschweizer Fachhochschule
CAS Sensors and Sensor Signal Conditioning

