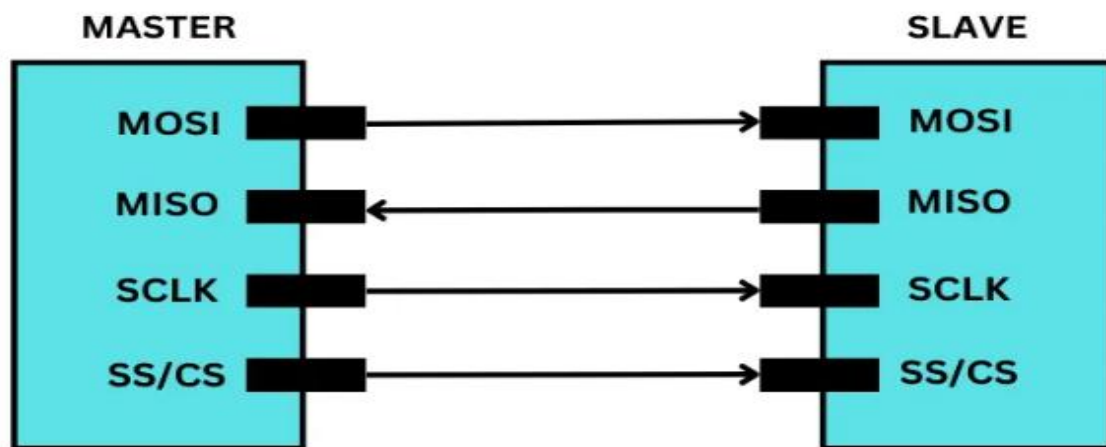| Created By	Mohamed Ahmed Mohamed Hussein

SPI_Interface

Introduction to SPI Communication Protocol:

The Serial Peripheral Interface (SPI) is a synchronous serial communication protocol developed by Motorola, widely used for short-distance communication in embedded systems. SPI allows for high-speed data transfer between a master device and one or more peripheral devices. It is particularly valued for its simplicity, efficiency, and low pin count, making it an essential protocol in digital design and embedded systems.

Definition of SPI Communication Protocol

SPI operates in a master-slave configuration, where the master device initiates communication and controls the clock signal. The key signals in SPI communication are:

- **MOSI (Master Out Slave In):** Data line for transmission from master to slave.
- **MISO (Master In Slave Out):** Data line for transmission from slave to master.
- **SCLK (Serial Clock):** Clock signal generated by the master to synchronize data transfer.
- **SS (Slave Select):** Control line for selecting the slave device.

Data transfer in SPI is full-duplex, meaning data can be sent and received simultaneously. The protocol supports different modes of operation, determined by the clock polarity (CPOL) and clock phase (CPHA) settings, allowing flexibility in communication.

Importance of SPI Communication Protocol

SPI is crucial in embedded systems and digital design for several reasons:

1. **Speed:** SPI supports high-speed data transfers, making it suitable for applications requiring quick data exchanges, such as sensors, memory devices, and display controllers.
2. **Simplicity:** The protocol's straightforward design and minimal overhead make it easy to implement and debug, reducing development time and complexity.
3. **Efficiency:** SPI's full-duplex communication and streamlined signal lines contribute to efficient data transmission, minimizing latency and maximizing throughput.
4. **Scalability:** SPI can connect multiple slave devices to a single master, using individual slave select lines, allowing for scalable and expandable system designs.
5. **Versatility:** SPI is compatible with a wide range of devices, from simple sensors to complex microcontrollers, making it a versatile choice for various applications.
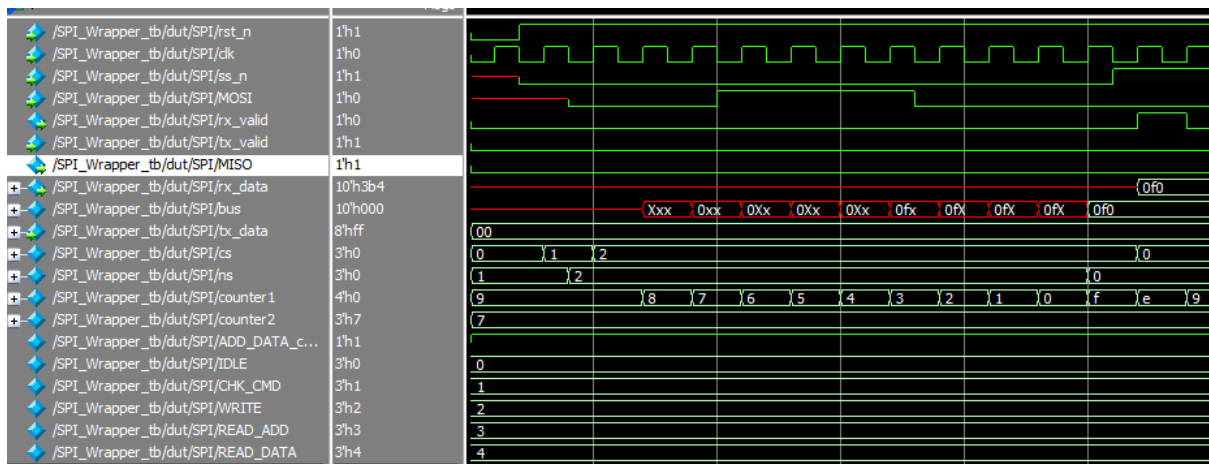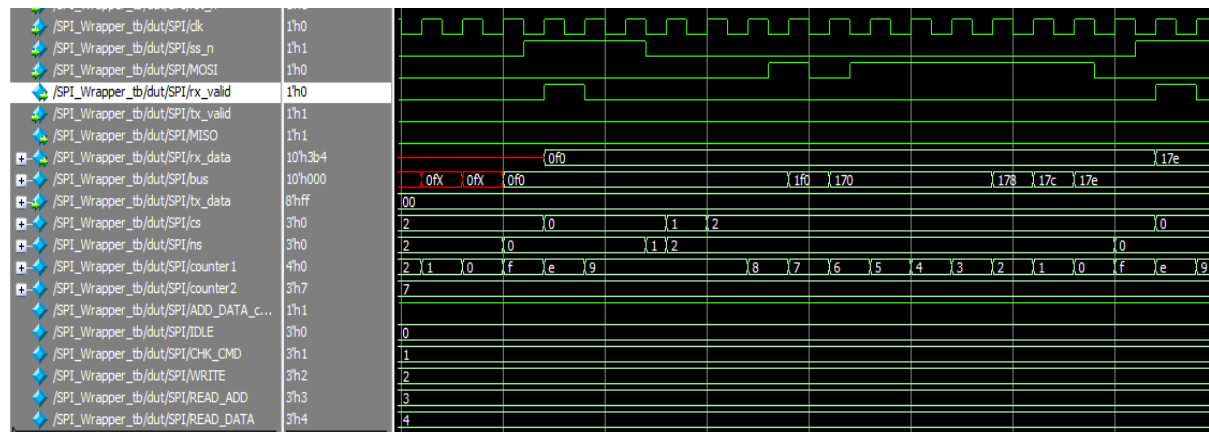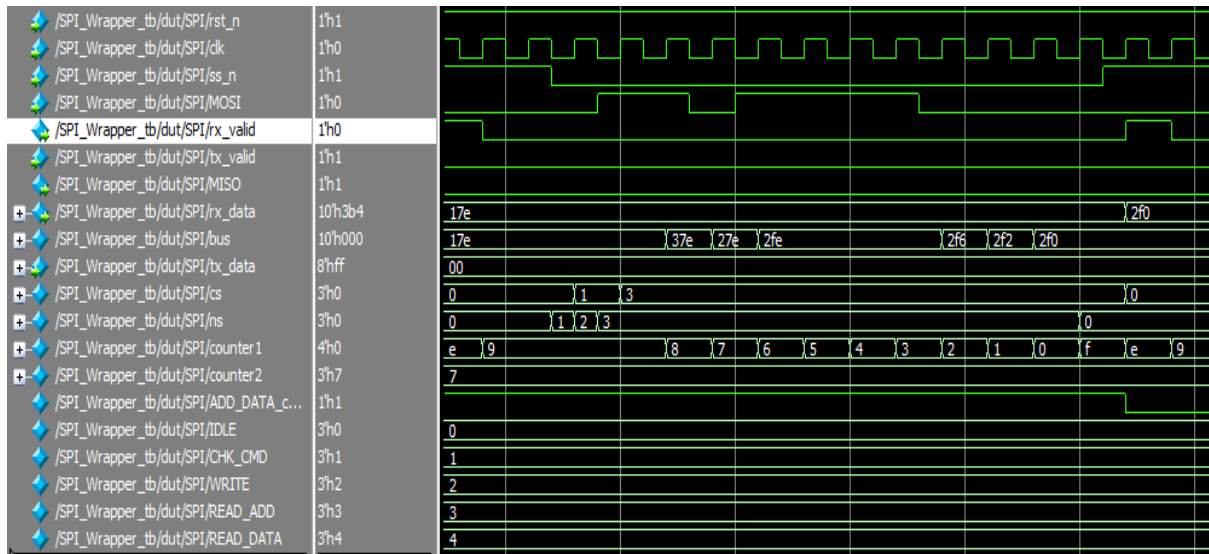
Snapshot of the whole wave form:
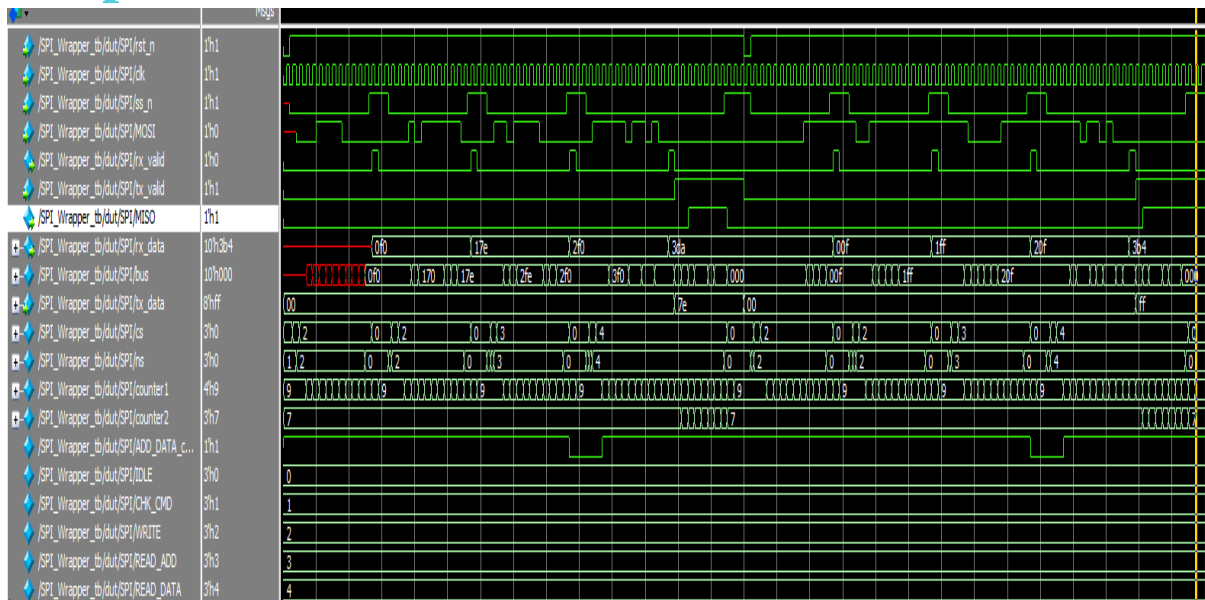
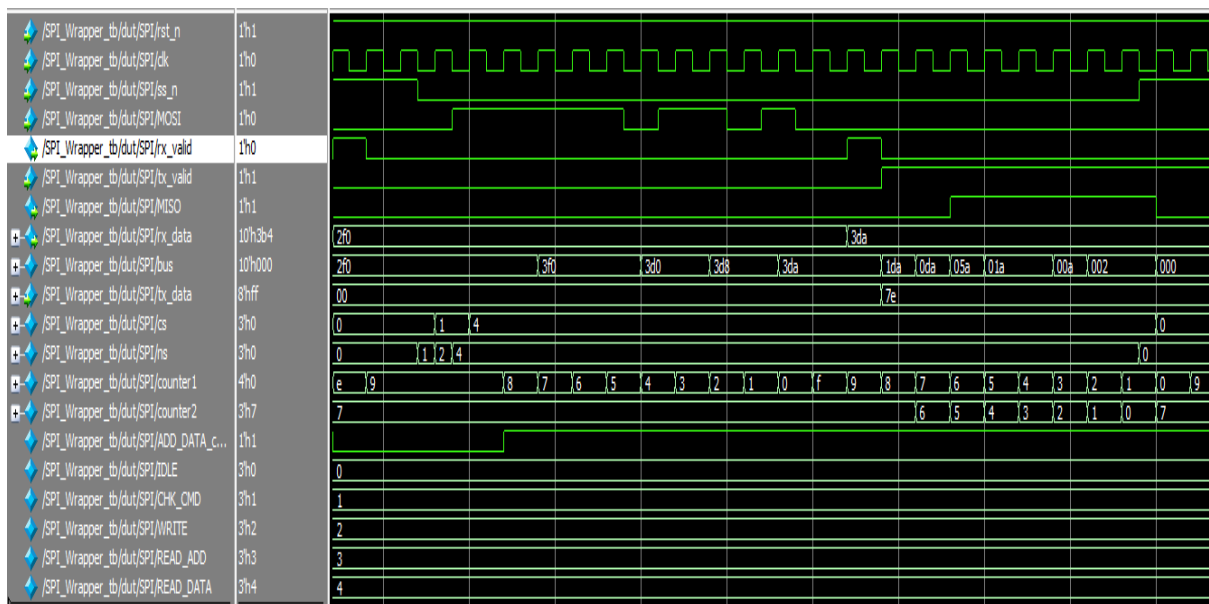# First scenario:
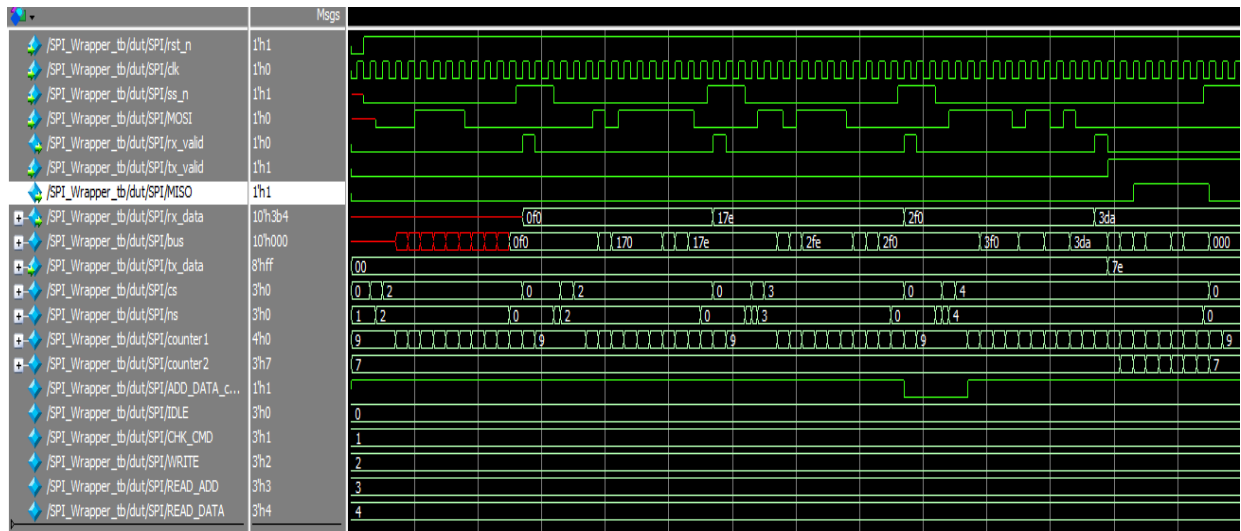
- ## WRITE state (Address):
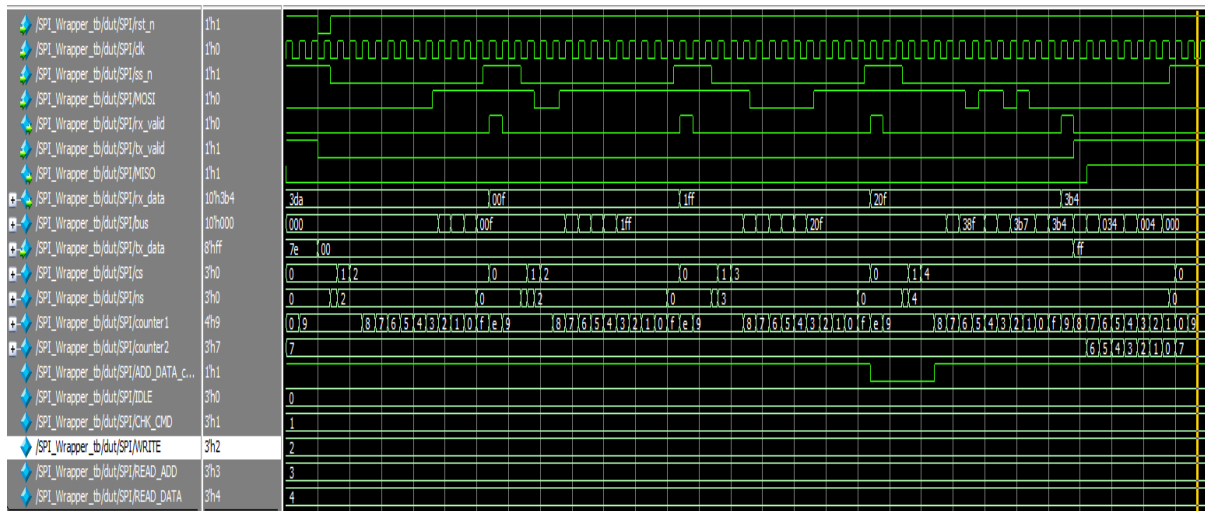

- ## WRITE state (Data):

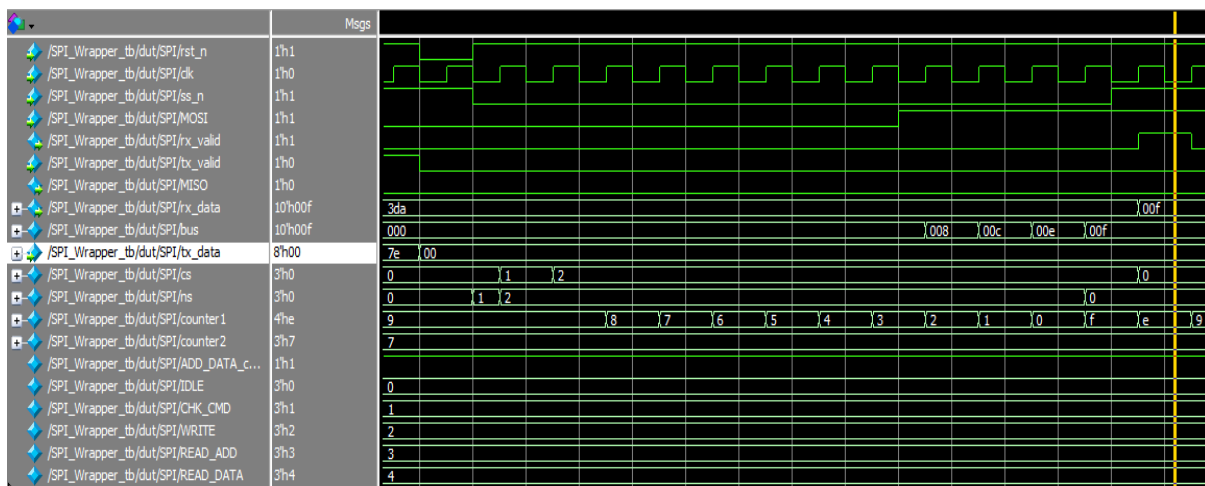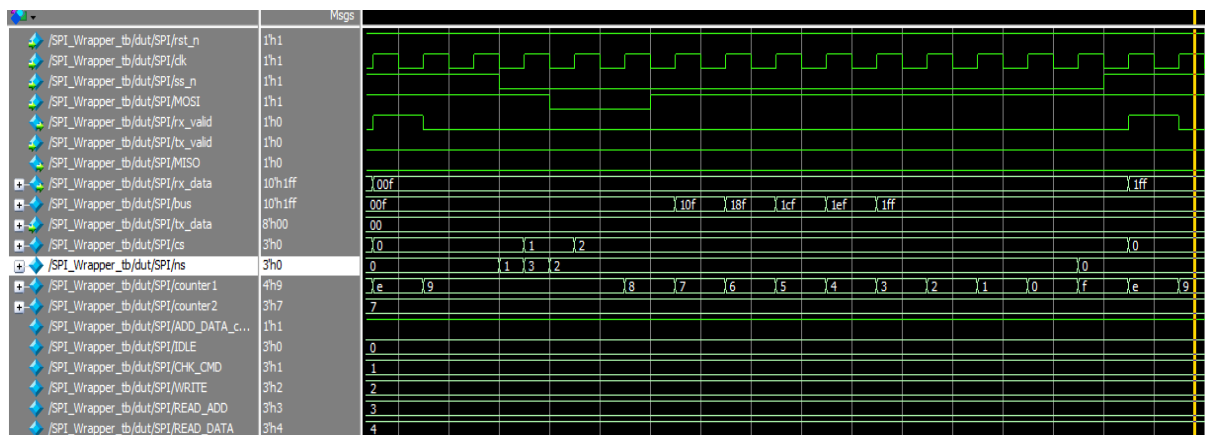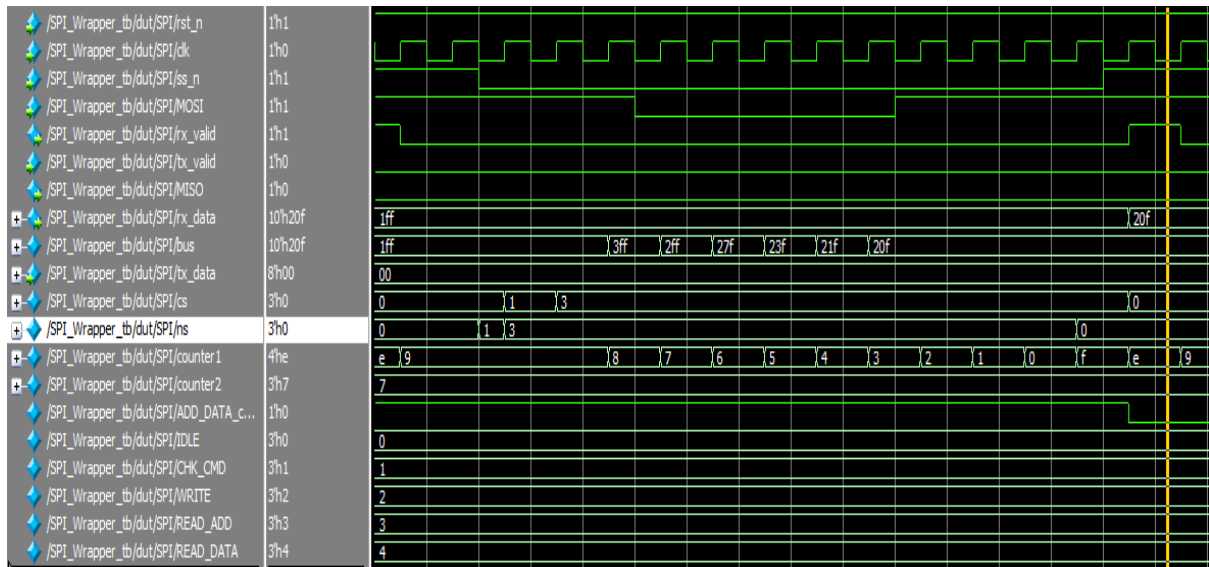- ## READ_ADD state:

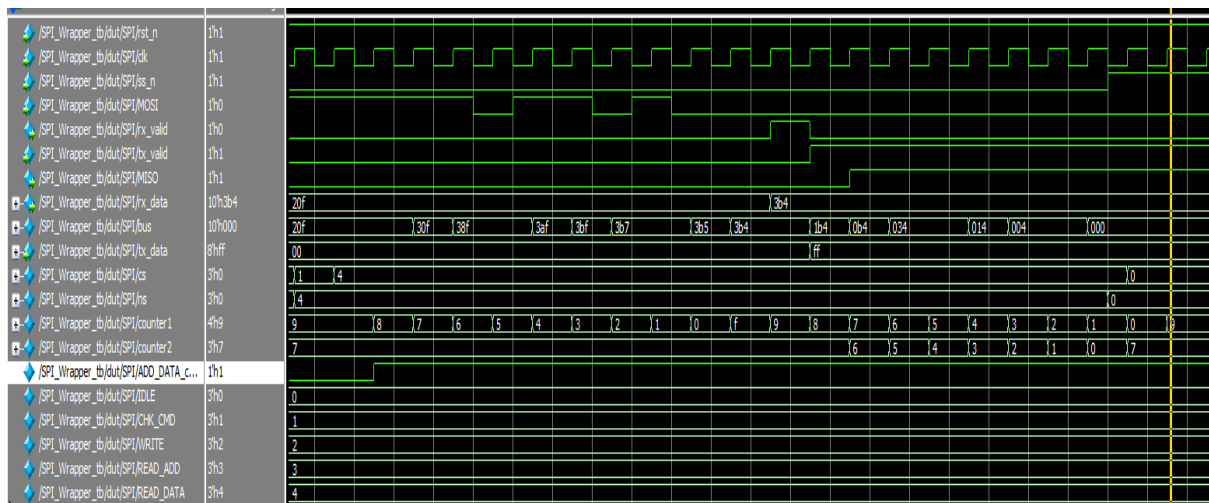- ## READ_DATA state:

Second scenario:

- ## WRITE state (Address):
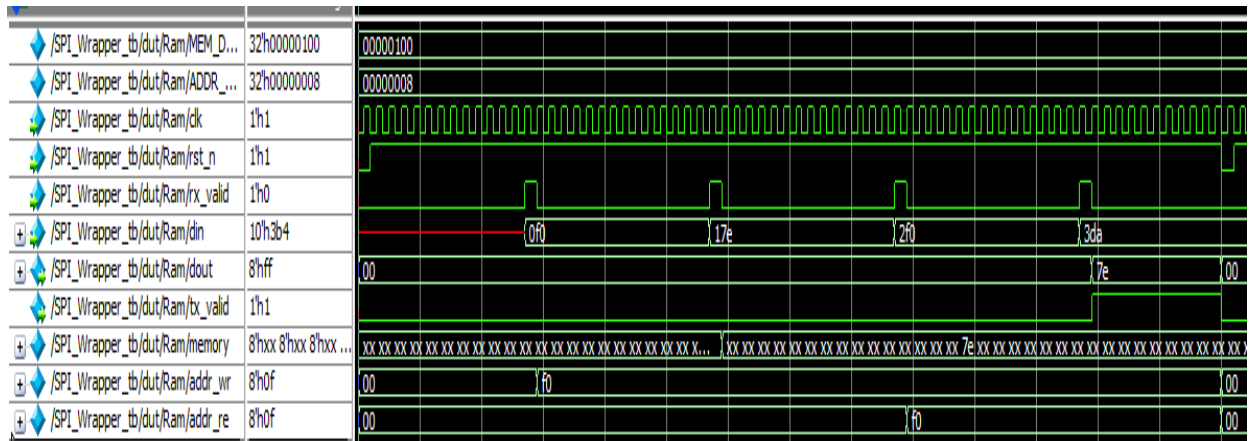

- ## WRITE state (Data):
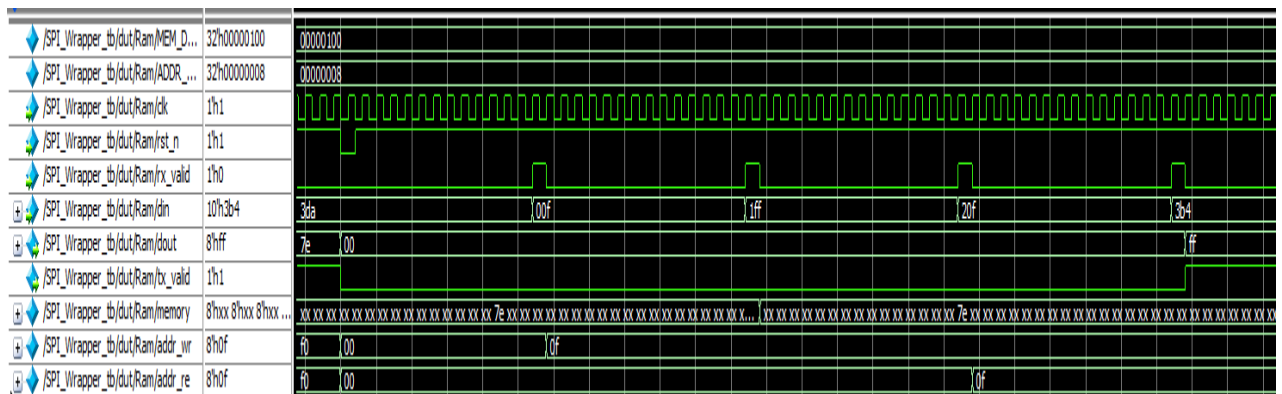
- **READ_ADD state:**

- **READ_DATA state:**

Snapshots of RAM:

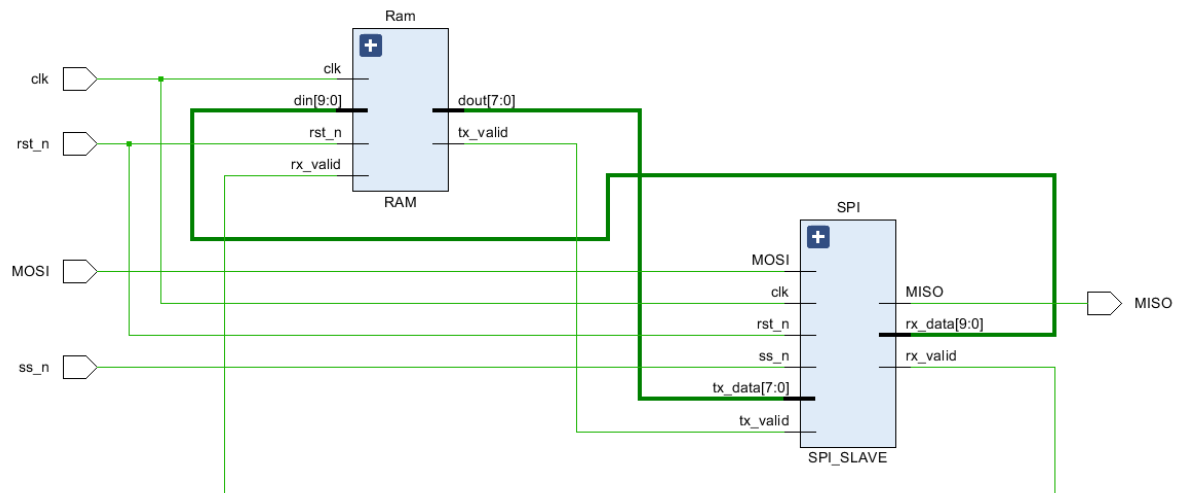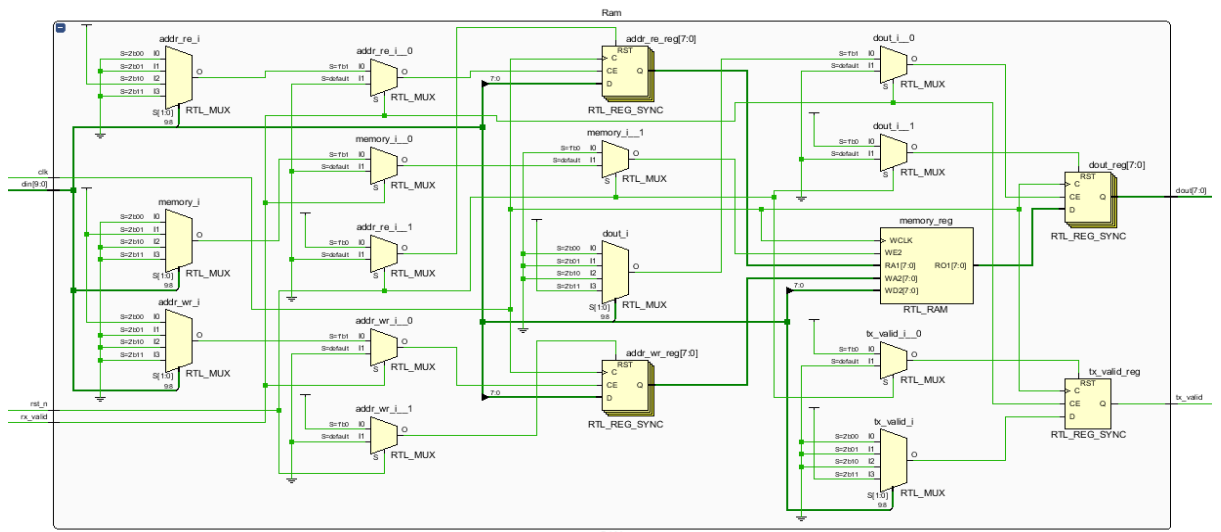- ## First scenario:

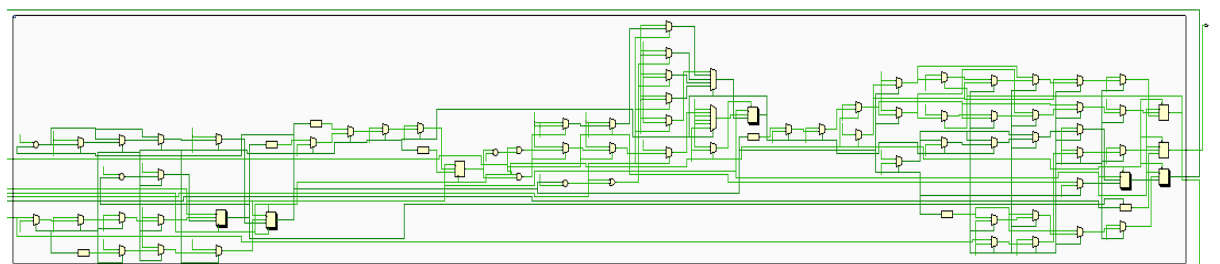- ## Second scenario:
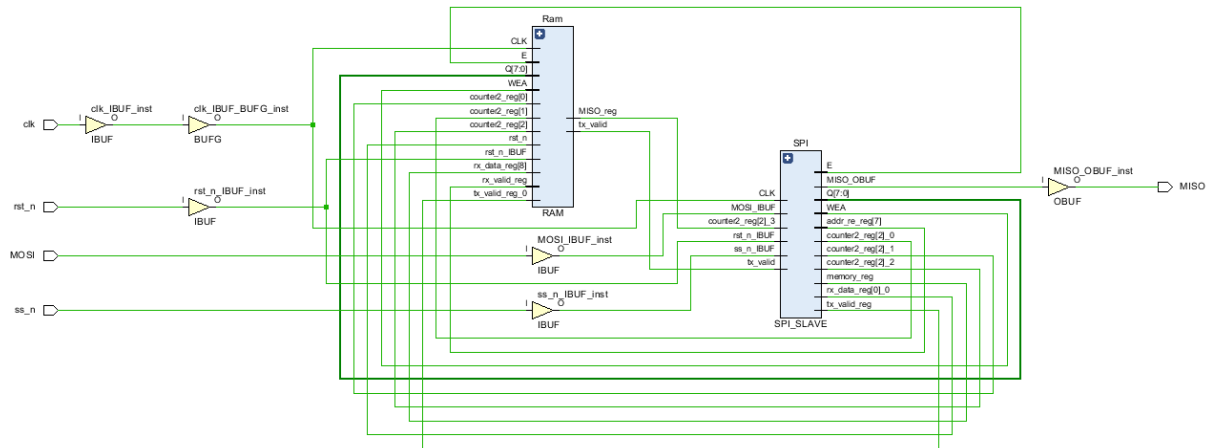
Vivado:

- Elaboration:
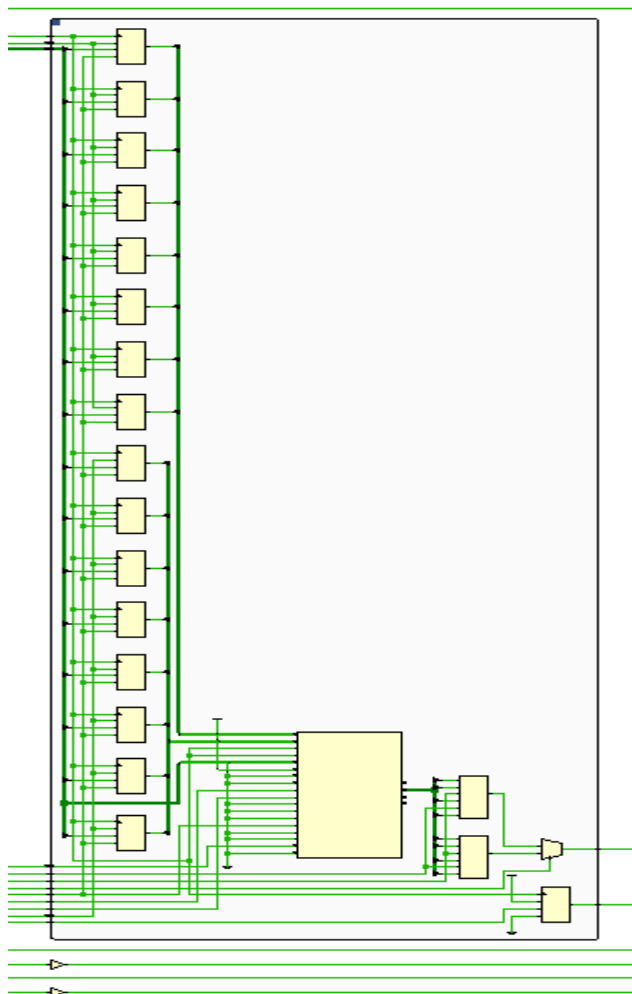 - System:

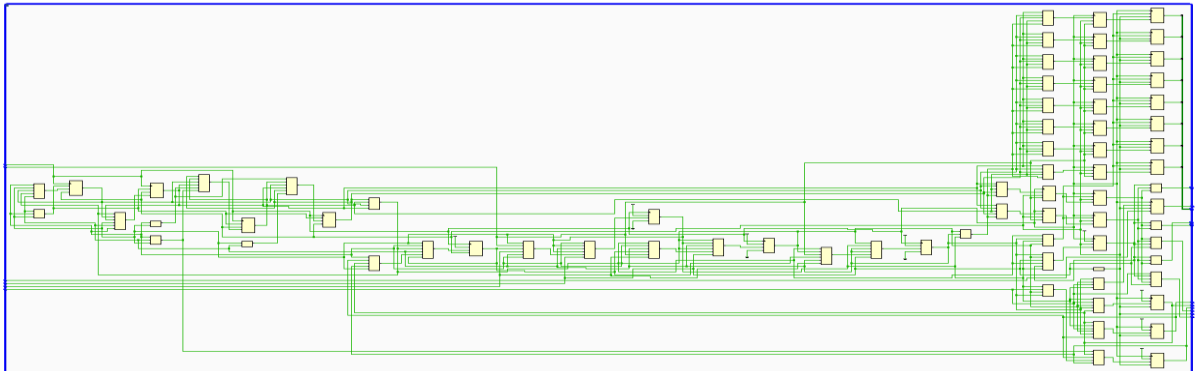 - Ram:

  - SPI:

- **Synthesis:**
  - **Seq:**
    - Schematic:
      - System:

      - Ram:

- SPI:

Encoding Report:

```
----------------------------------------------------------------------------------------
              State |           New Encoding |          Previous Encoding
----------------------------------------------------------------------------------------
               IDLE |                    000 |                       000
            CHK_CMD |                    001 |                       001
              WRITE |                    010 |                       010
           READ_ADD |                    011 |                       011
          READ_DATA |                    100 |                       100
----------------------------------------------------------------------------------------
```

Timing Summary:

Critical Path:

○ **Gray:**
  ▪ Schematic:
    ● System:
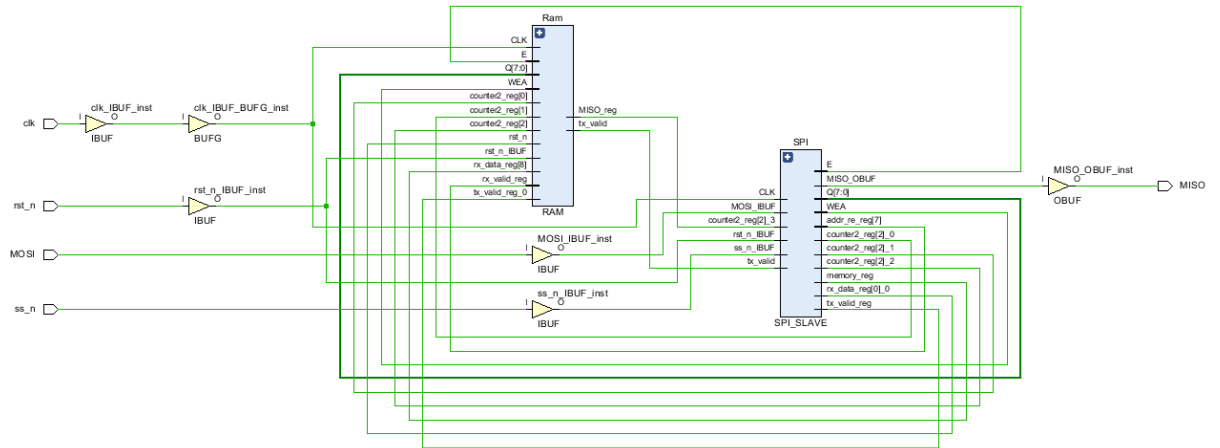
    ● Ram:

- SPI:

■ Encoding Report:

```
-----------------------------------------------------------------------------------
           State |              New Encoding |           Previous Encoding
-----------------------------------------------------------------------------------
            IDLE |                      000 |                           000
         CHK_CMD |                      001 |                           001
           WRITE |                      011 |                           010
        READ_ADD |                      010 |                           011
       READ_DATA |                      111 |                           100
-----------------------------------------------------------------------------------
```
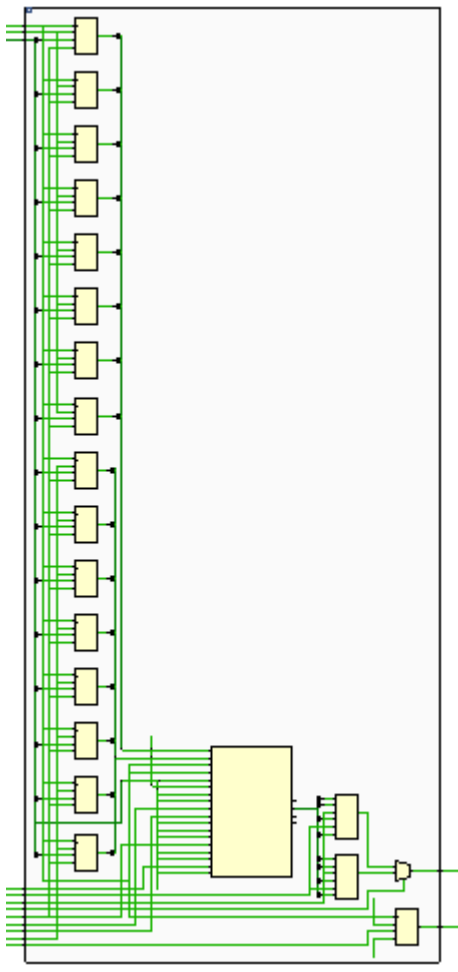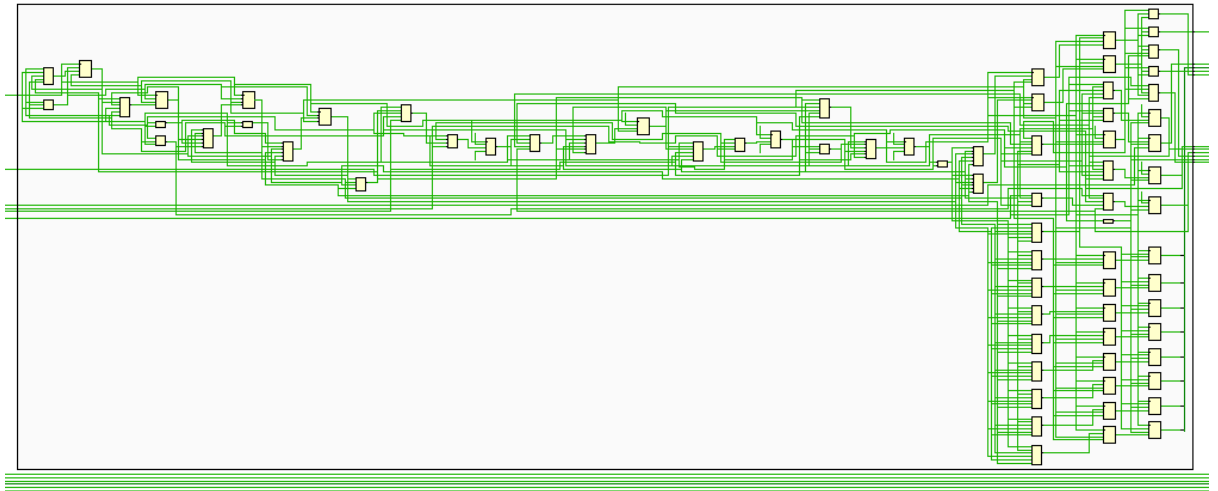
■ Timing Summary:

■ Critical Path:

o One_Hot:
▪ Schematic:
• System:

• Ram:

- SPI:
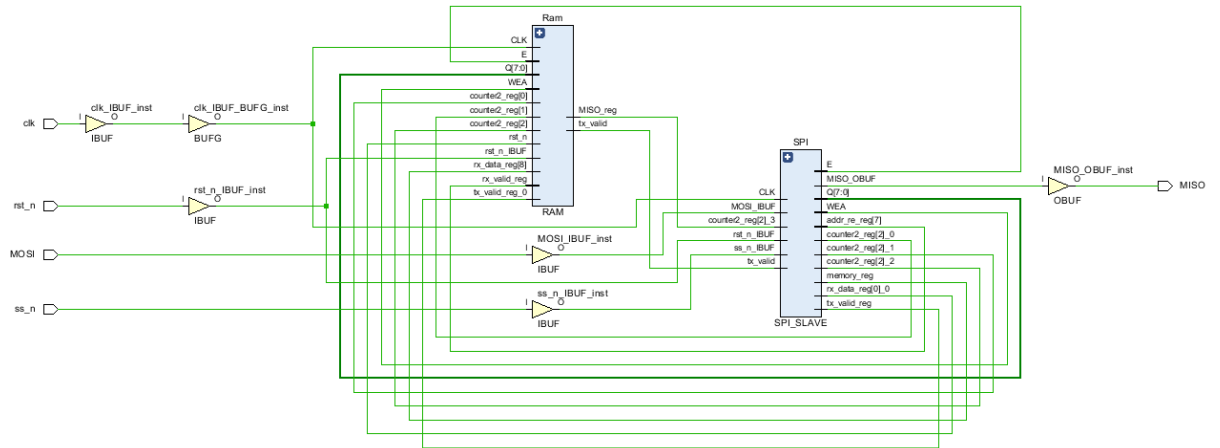
■ Encoding Report:

```
----------------------------------------------------------------------------
             State |           New Encoding |        Previous Encoding
----------------------------------------------------------------------------
              IDLE |                  00001 |                      000
           CHK_CMD |                  00010 |                      001
             WRITE |                  00100 |                      010
          READ_ADD |                  01000 |                      011
         READ_DATA |                  10000 |                      100
----------------------------------------------------------------------------
```

■ Timing Summary:

■ Critical Path:

- **Implementation:**
  - **Seq:**
    - Schematic:
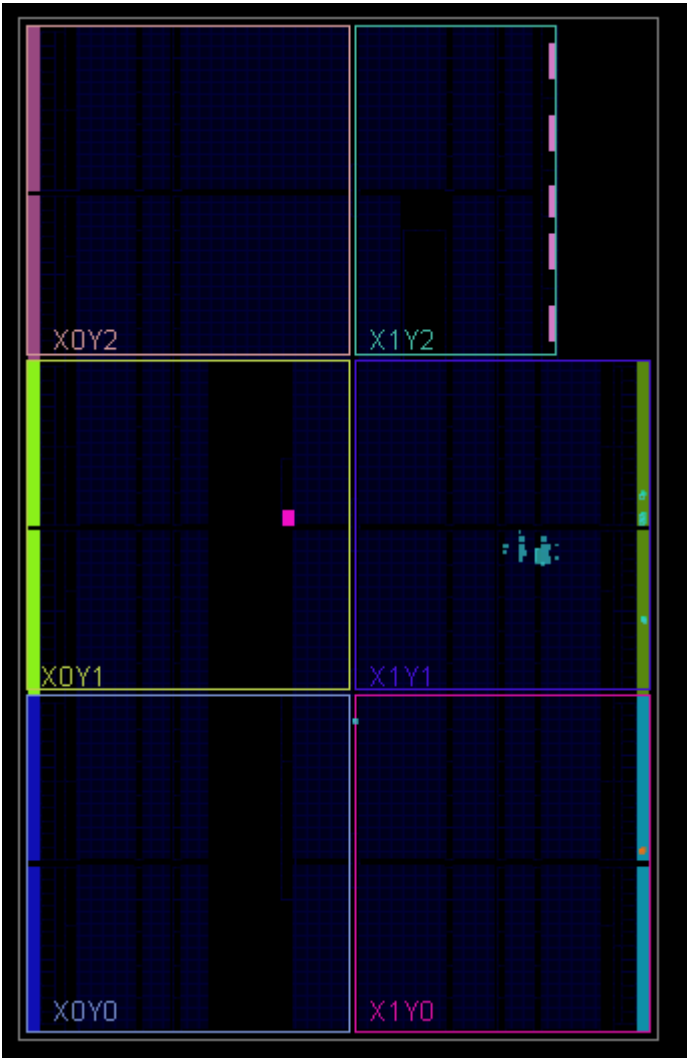
    - Timing:

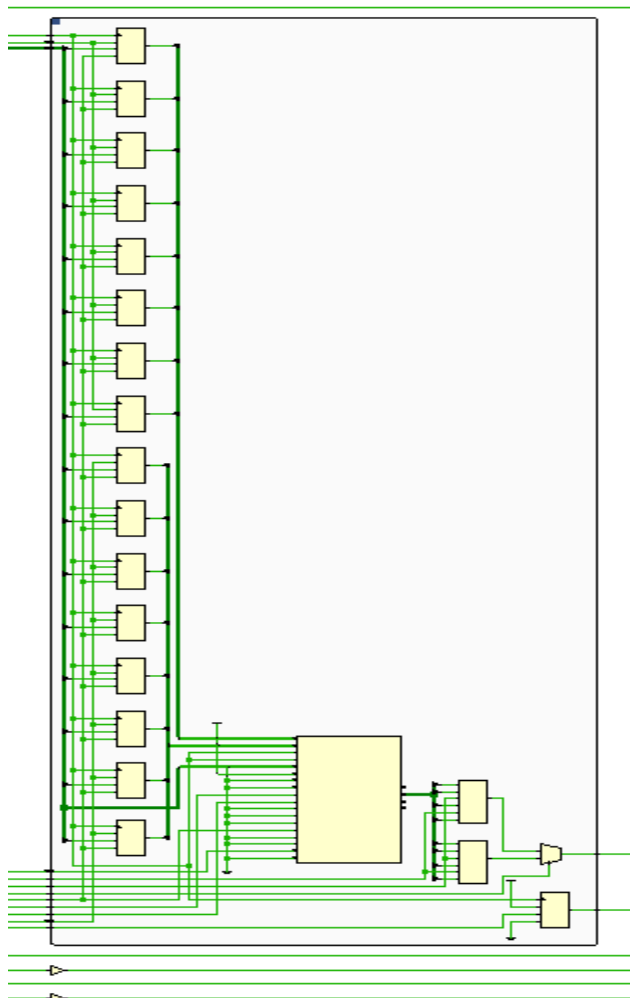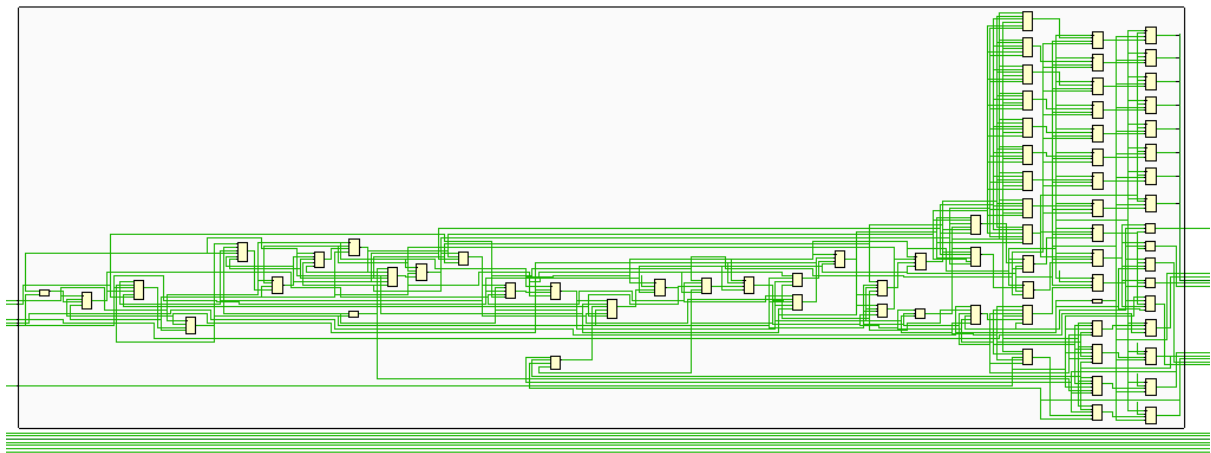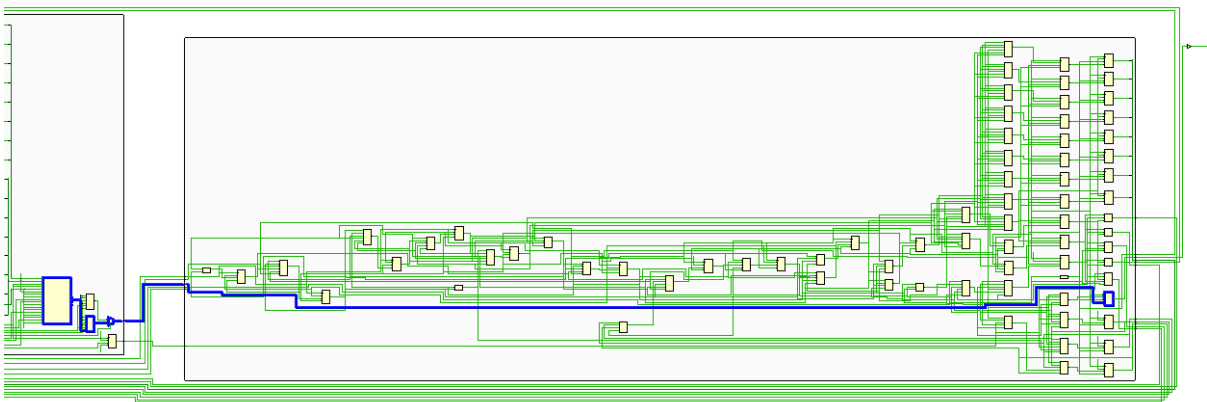| Setup		Hold		Pulse Width	
Worst Negative Slack (WNS):	6.118 ns	Worst Hold Slack (WHS):	0.098 ns	Worst Pulse Width Slack (WPWS):	4.500 ns
Total Negative Slack (TNS):	0.000 ns	Total Hold Slack (THS):	0.000 ns	Total Pulse Width Negative Slack (TPWS):	0.000 ns
Number of Failing Endpoints:	0	Number of Failing Endpoints:	0	Number of Failing Endpoints:	0
Total Number of Endpoints:	109	Total Number of Endpoints:	109	Total Number of Endpoints:	53

All user specified timing constraints are met.

    - Utilization:

Name	Slice LUTs (20800)	Slice Registers (41600)	F7 Muxes (16300)	Slice (8150)	LUT as Logic (20800)	LUT Flip Flop Pairs (20800)	Block RAM Tile (50)	Bonded IOB (106)	BUFGCTRL (32)
SPI_Wrapper	42	50	1	24	42	13	0.5	5	1
Ram (RAM)	3	17	1	6	3	0	0.5	0	0
SPI (SPI_SLAVE)	39	33	0	21	39	12	0	0	0

○ Gray:

▪ Schematic:

▪ Timing:

	Setup		Hold		Pulse Width	
General Information						
Timer Settings						
Design Timing Summary	Worst Negative Slack (WNS):	5.843 ns	Worst Hold Slack (WHS):	0.052 ns	Worst Pulse Width Slack (WPWS):	4.500 ns
Clock Summary (1)	Total Negative Slack (TNS):	0.000 ns	Total Hold Slack (THS):	0.000 ns	Total Pulse Width Negative Slack (TPWS):	0.000 ns
Check Timing (4)	Number of Failing Endpoints:	0	Number of Failing Endpoints:	0	Number of Failing Endpoints:	0
Intra-Clock Paths	Total Number of Endpoints:	109	Total Number of Endpoints:	109	Total Number of Endpoints:	53
Inter-Clock Paths						
Other Path Groups	All user specified timing constraints are met.					

▪ Utilization:

Name	Slice LUTs (20800)	Slice Registers (41600)	F7 Muxes (16300)	Slice (8150)	LUT as Logic (20800)	LUT Flip Flop Pairs (20800)	Block RAM Tile (50)	Bonded IOB (106)	BUFGCTRL (32)
⌄ N SPI_Wrapper	44	50	1	21	44	13	0.5	5	1
☰ Ram (RAM)	3	17	1	5	3	0	0.5	0	0
☰ SPI (SPI_SLAVE)	41	33	0	18	41	12	0	0	0

○ One_Hot:
▪ Schematic:
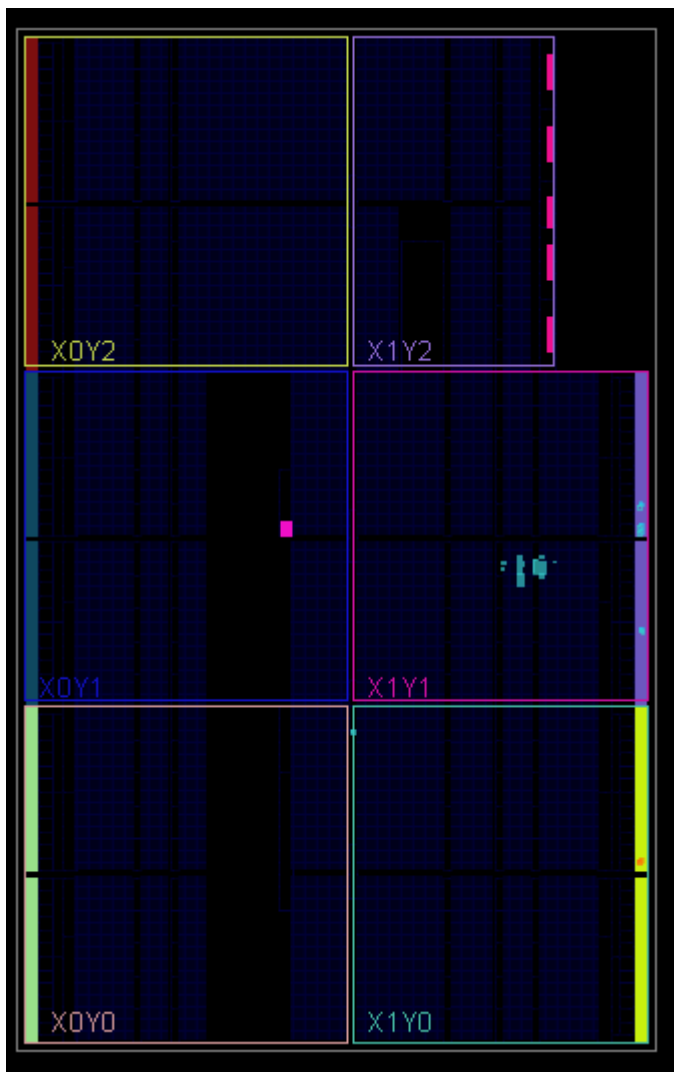
▪ Timing:

	Setup		Hold		Pulse Width	
Worst Negative Slack (WNS):	5.954 ns	Worst Hold Slack (WHS):	0.050 ns	Worst Pulse Width Slack (WPWS):	4.500 ns
Total Negative Slack (TNS):	0.000 ns	Total Hold Slack (THS):	0.000 ns	Total Pulse Width Negative Slack (TPWS):	0.000 ns
Number of Failing Endpoints:	0	Number of Failing Endpoints:	0	Number of Failing Endpoints:	0
Total Number of Endpoints:	116	Total Number of Endpoints:	116	Total Number of Endpoints:	55

All user specified timing constraints are met.
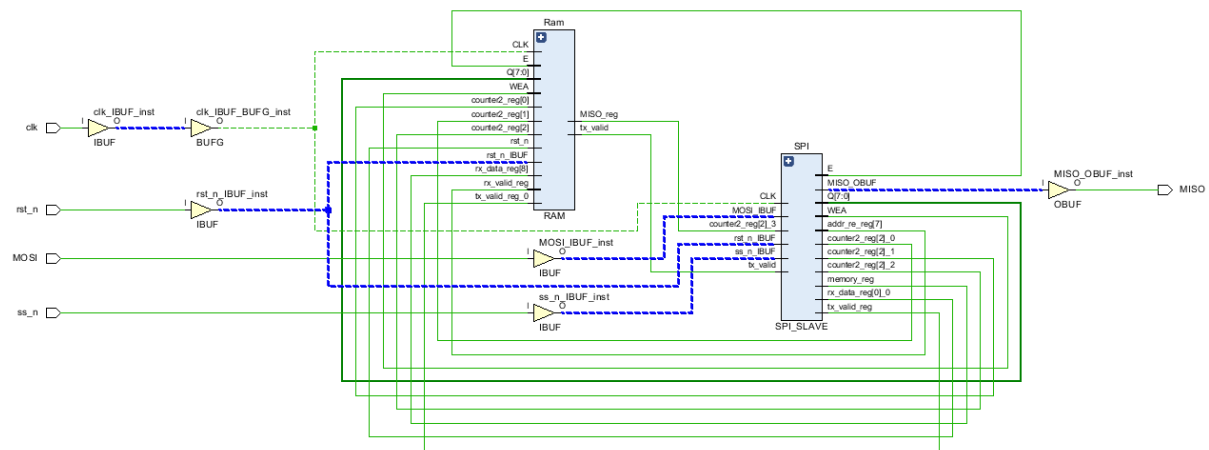
▪ Utilization:

Name	Slice LUTs (20800)	Slice Registers (41600)	F7 Muxes (16300)	Slice (8150)	LUT as Logic (20800)	LUT Flip Flop Pairs (20800)	Block RAM Tile (50)	Bonded IOB (106)	BUFGCTRL (32)
∨ N SPI_Wrapper	42	52	1	21	42	15	0.5	5	1
▮ Ram (RAM)	3	17	1	5	3	0	0.5	0	0
▮ SPI (SPI_SLAVE)	39	35	0	19	39	14	0	0	0

From the results we found that the best encoding is seq.

- ## Messages:

- ## Debugged Design:

- ## Timing after debug:

- ## Messages after debug:

• Implementation of Device after Debug:

• Bitstream Successfull: