


A closed lid with three clearly labelled controls

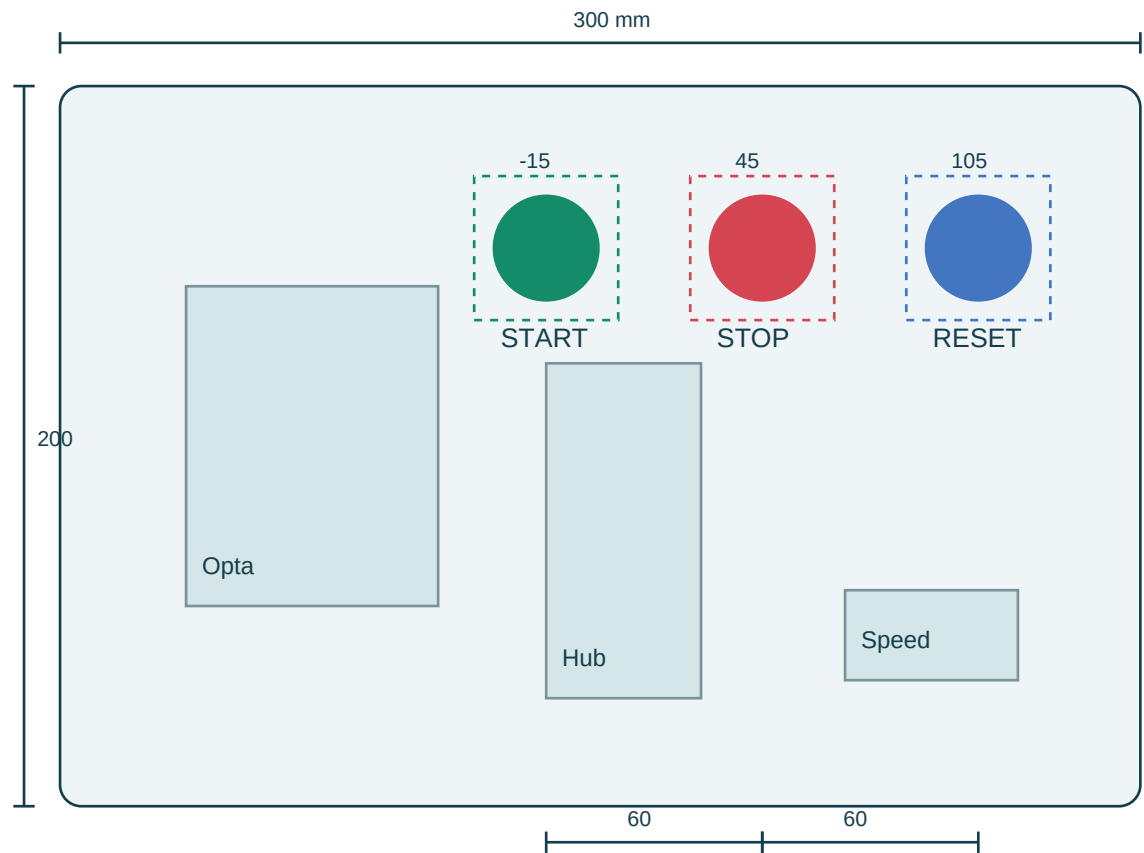

Datum: box centre X/Y; proposed row Y=55; not a drilling template
Dashed squares: ASSUMED 40 x 40 rear envelopes

Verified OEM mounting instruction: BRU46063 page2 specifies 22.3mm hole with +0.4/-0 tolerance; 1-6mm panel range for these ordinary heads. Same-row minimum 30mm; proposed 60mm pitch exceeds this. Labels and installed accessories must still fit.

Detected in the private box STEP: lid thickness 4.0mm at all three proposed centres. It lies within the head mounting range. This does not establish delivered thickness, retention or ingress protection after drilling.

Assumed, not measured: rear stack 40x40x55mm below inner lid plus 20mm wire-tail depth. Reservations remain the same size. OEM box collision checks exclude only the mounting panel for supported bodies. Actual button assembly and wire bends still need verification.


Digital conflict closed: hub rotated 90 degrees and moved; controller moved below button row. All unchanged wire-tail and service reservations now clear each other and the OEM box. Current lower-left coordinates: hub -15/-70; controller 68/-65; buttons Y55. Supports are not designed; see CURRENT_CONTROL_PLACEMENT.csv.

Speed setting: retain the unmodified internal NA-FC1 for now. Disconnect the external source before access; set speed, then close the lid before operation. Live adjustable external knob mounting is NOT designed. Ordinary STOP is not isolation.

Control	Candidate head / collar / contact	Centre X/Y mm	Function
START	ZB5AA3 / ZB5AZ009 / ZBE1016	[-15, 55]	NO spring-return
STOP	ZB5AA4 / ZB5AZ009 / ZBE1026	[45, 55]	NC spring-return
RESET	ZB5AA6 / ZB5AZ009 / ZBE1016	[105, 55]	NO spring-return

Ordinary input circuit - not a safety circuit

PROPOSED PROTECTED +12 V CONTROL BRANCH - PROTECTION / TERMINALS UNSELECTED

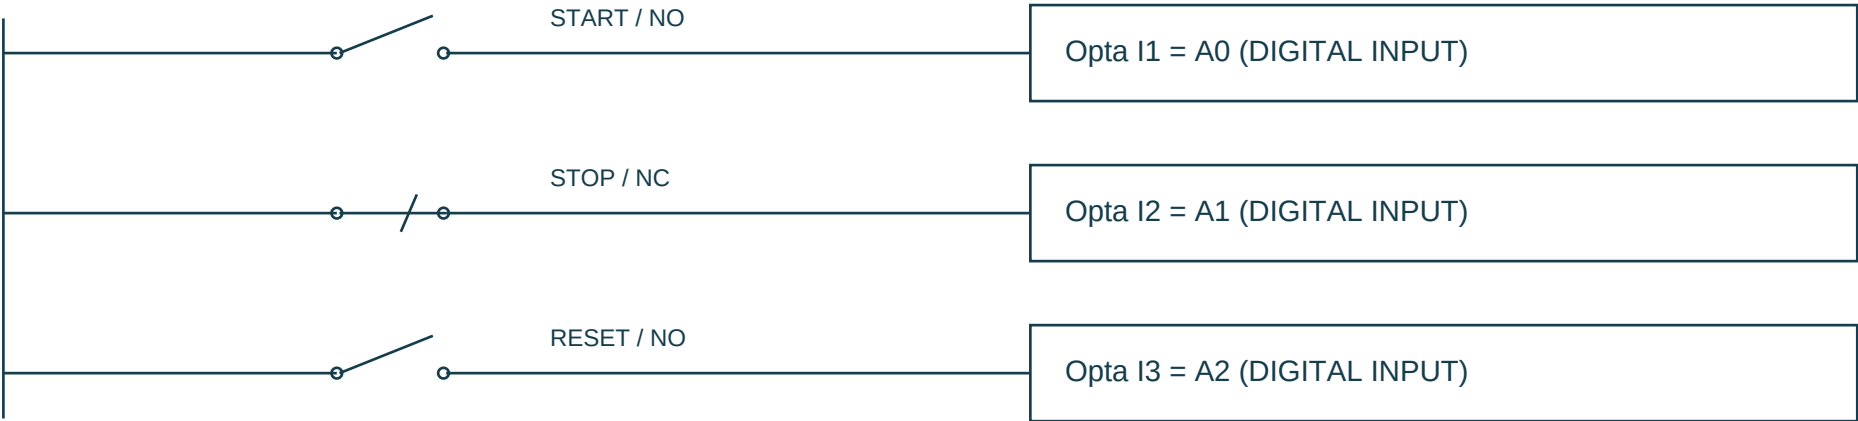

Contact screw IDs intentionally omitted - not verified

Input state	Ordinary software interpretation
START NO pressed / I1 HIGH	Request RUN only when existing logic permits. Held START cannot auto-restart.
STOP NC healthy / I2 HIGH	Pressing STOP opens contact; LOW requests stop. This is NOT protective isolation.
RESET NO pressed / I3 HIGH	Clear ordinary latched fault only when logic allows; does NOT itself start fans.
Common / additional inputs	Opta negative shares reviewed source0V. I4 bench permit / I5 source present remain E02 references; not protective inputs.

OEM electrical facts: Opta digital input0-24V, HIGH minimum6.6V, LOW maximum4.46V, impedance8.9kOhm,1.12mA at10V.12V/8.9kOhm =1.348mA is a nominal resistance screen only, not guaranteed current. Gold-flashed ZBE1016(NO) / ZBE1026(NC) are manufacturer-designated low-power contacts. Their numerical minimum switching range at our conditions remains UNKNOWN.

Bench-only status: default sketch leaves every relay OFF; this circuit cannot yet operate the fans. No protective PR1 selected, no fan-power contact assignment, no fuses or wire sizes released. Verify contact minimum rating, terminal IDs, retention, source/branch protection, actual cables, service loop, heat and isolation before any dummy-load commissioning.

Primary sources checked5 Oct2026: Schneider BRU46063 page2; Harmony catalogue; current Digest0100CT2401-SEC-19 page19-42; Arduino Opta input specification. Full links in module JSON / README. Current Digest confirms low-power parts but does not give numerical minimum switching limits. OEM files stay private. Physical prototypes0; R03M unchanged.