V5 sketch 3 (concept, not CAD): the sleeve question, the no-sleeve option, and a one-piece housing

A sleeve design (sketch 2): 4 bolts hold tube, module and transition

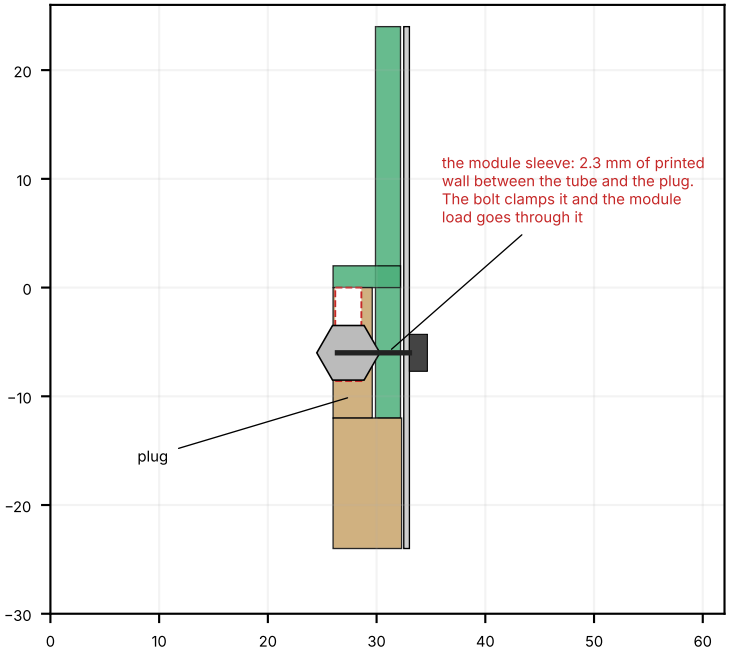

B no sleeve: 8 bolts (4 + 4), nothing printed between tube and transition

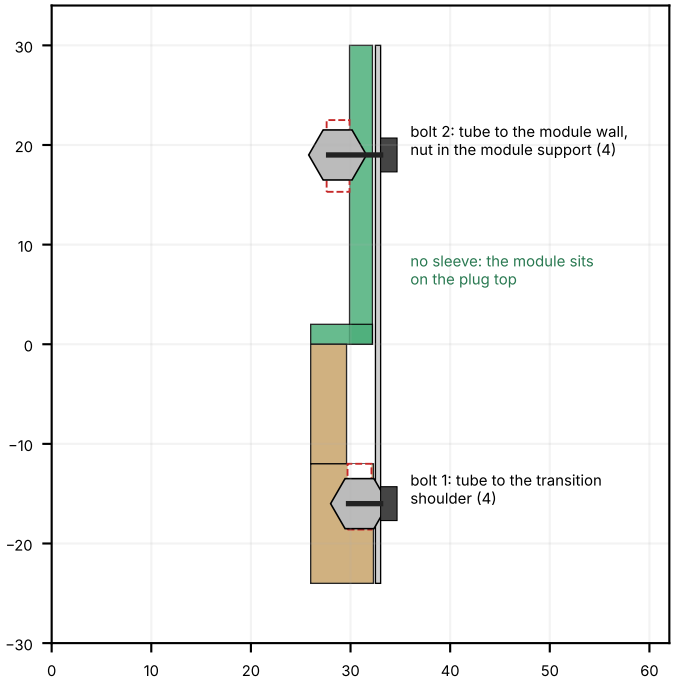

C one-piece housing: the rotor goes in from the top (concept)

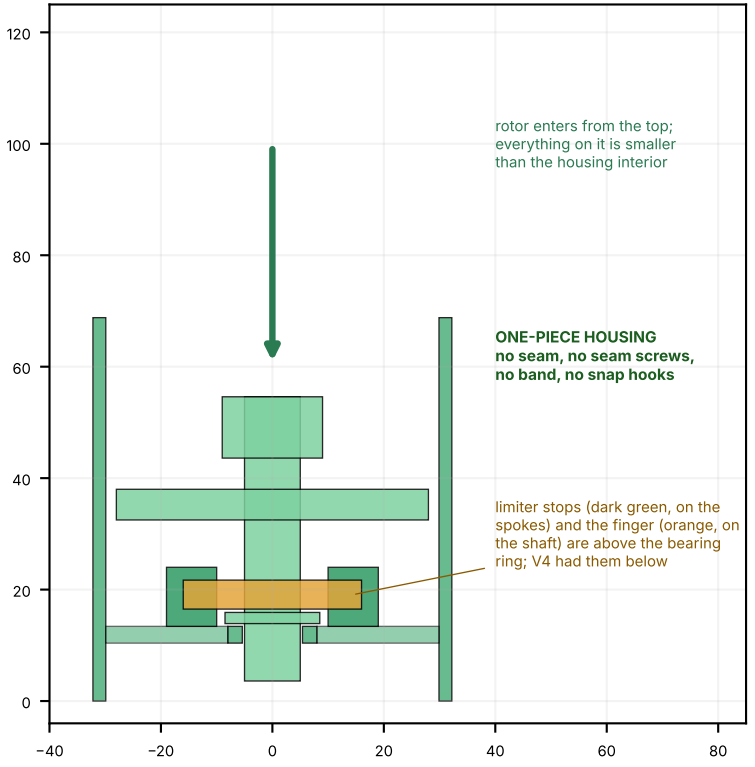

What "sleeve in the bolt path" means

In sketch 2 the module has a bottom sleeve that wraps the transition plug. The bolt goes through the tube, then through that printed sleeve wall, then into the nut in the plug. So the sleeve is clamped between tube and plug, and the module load passes through it. It is the module (the part that breaks), so it is the first thing to crush or creep loose; it also adds 12 mm.
Rough numbers: a 100 g shock on a 105 g module is about 100 N, 25 N per bolt; an M3 bolt in a 2.3 mm printed wall bears about 100 to 240 N (screening values), so it should hold, but there is little margin.

Option B has no sleeve: the transition is bolted to the tube, and the module has its own four bolts (8 in all, +4 compared with A).

The housing seam, without snap hooks or a band

The seam exists only because the rotor, which has a limiter finger below the bearing ring, must be fitted from the top. If the limiter moves above the ring (mirror of V4), the rotor drops in from the top and the housing can be one piece: no seam, no seam screws, nothing to hold together. Fins fit through the open windows; the catch caps are printed with the rotor.
Risk: it changes the V4 geometry; the limiter clearance, the rotor sweep and the hinge access through the windows must be checked. Fallback: keep the two halves and join them with a sliding dovetail along the seam (no flexing parts).