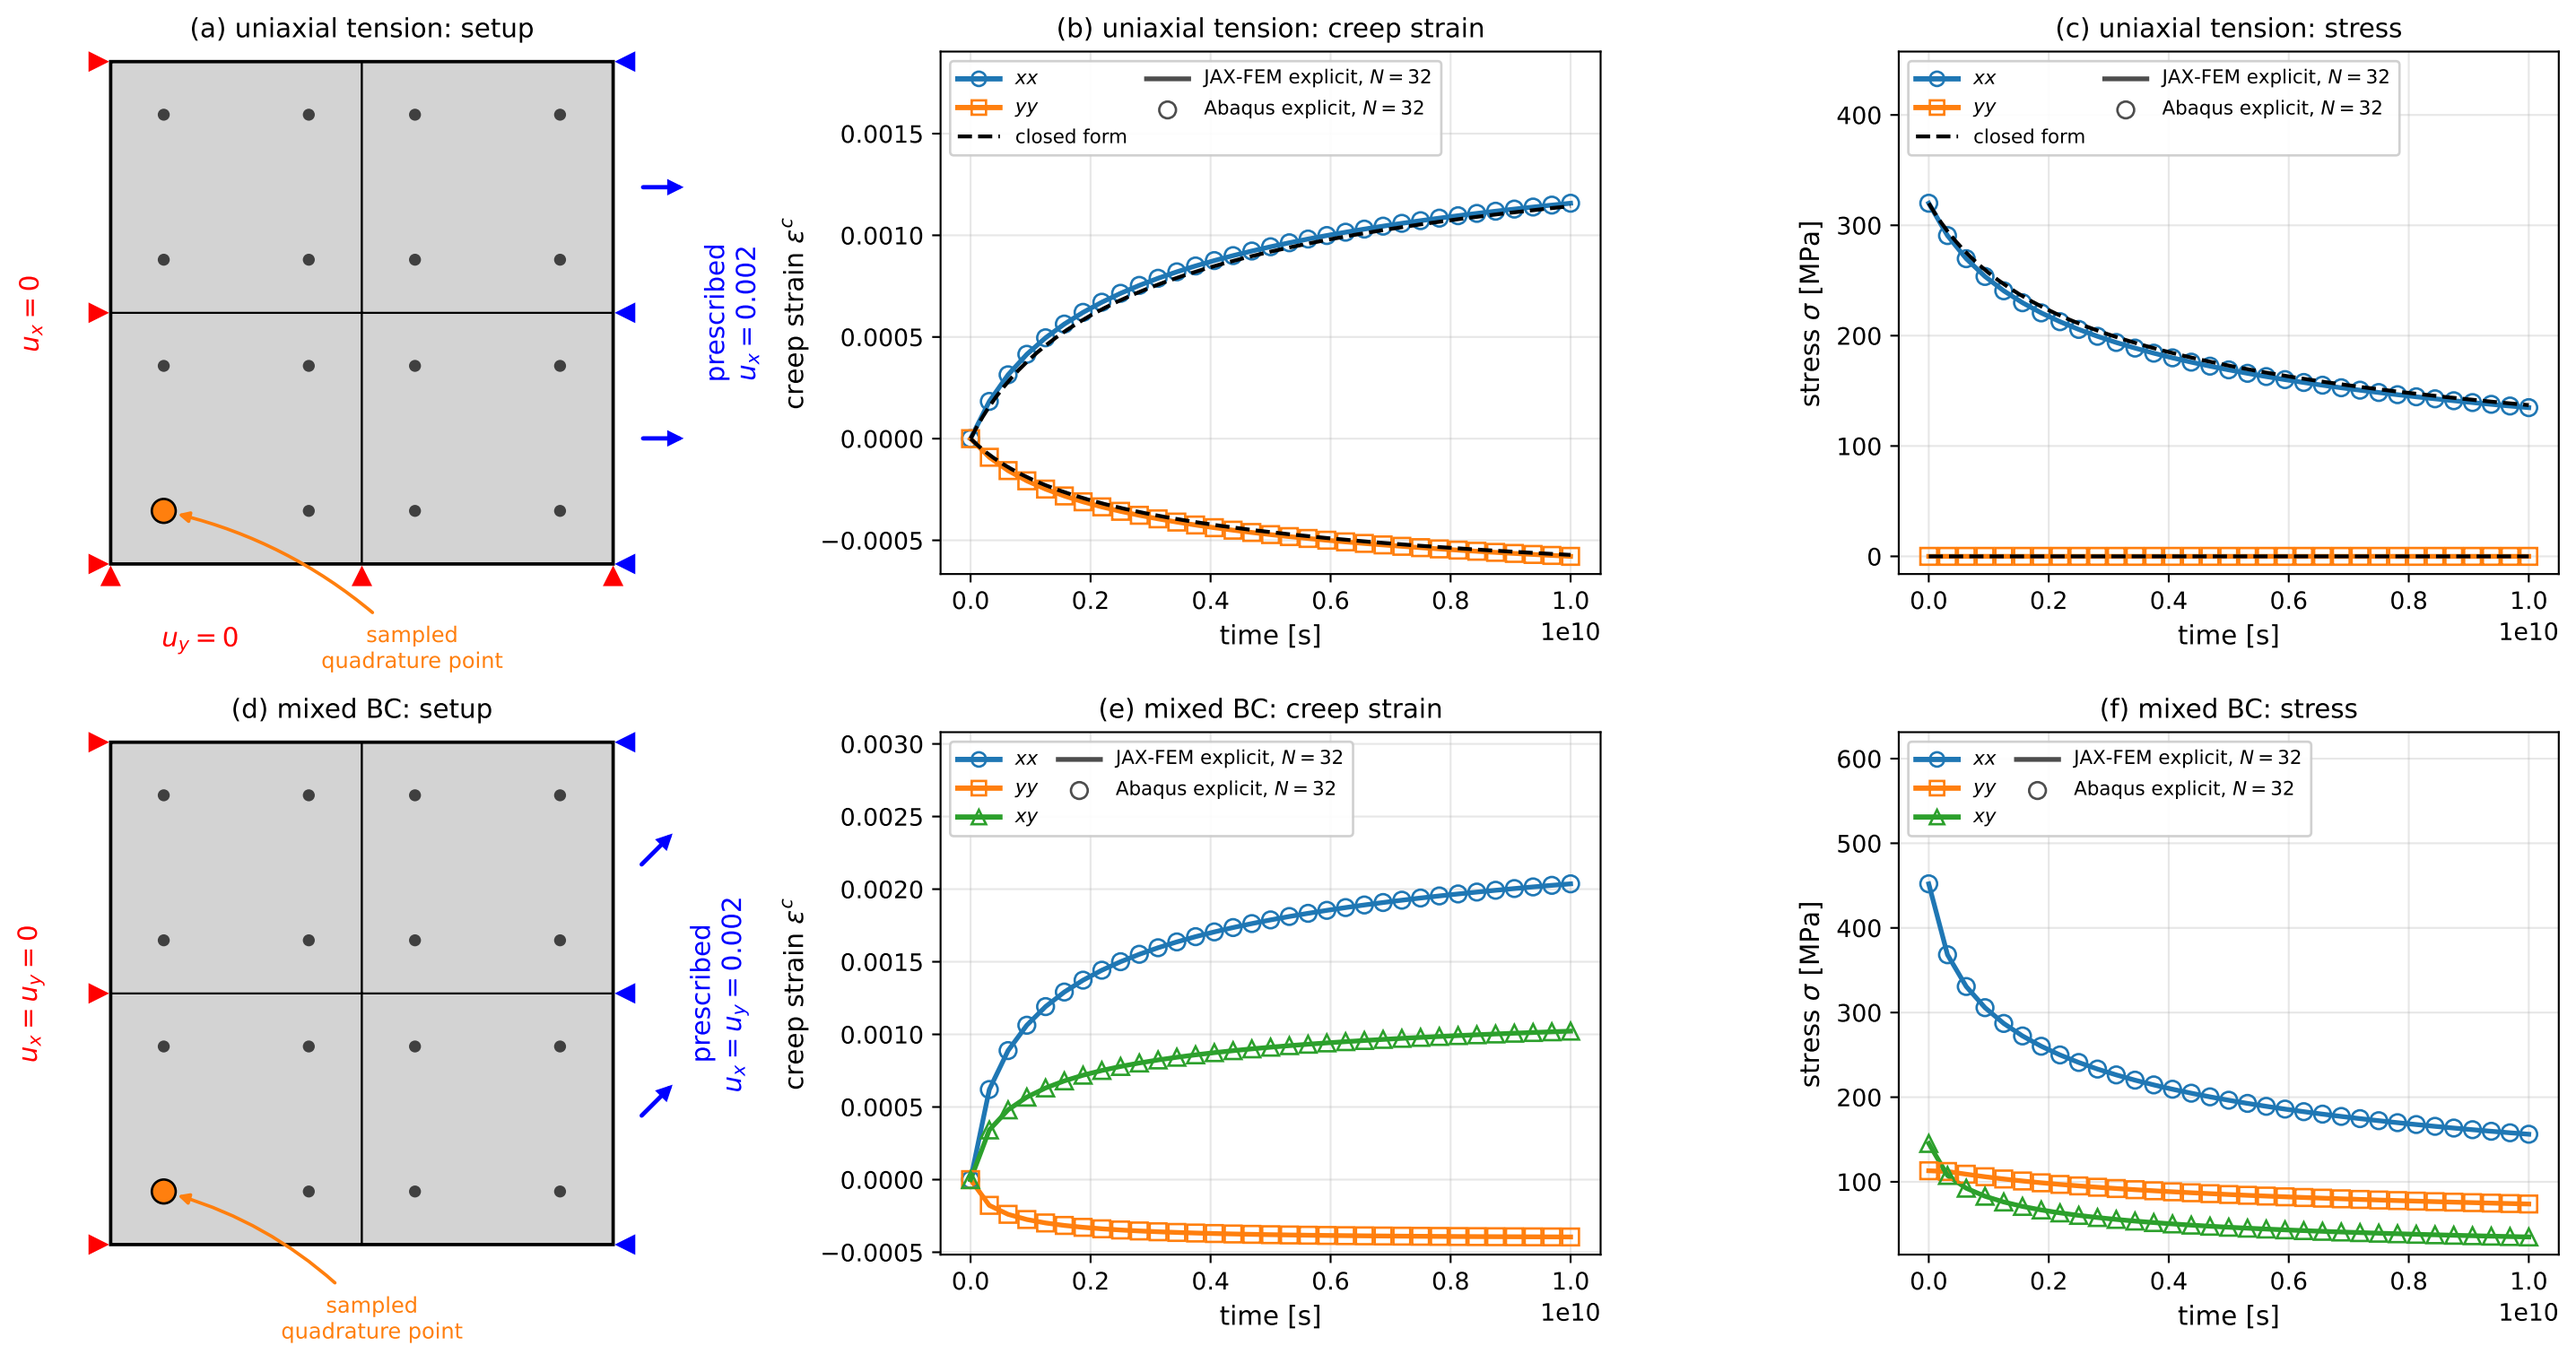
(a) uniaxial tension: setup
$u_x = 0$
$u_y = 0$
prescribed
$u_x = 0.002$
sampled
quadrature point
(b) uniaxial tension: creep strain
xx
yy
closed form
JAX-FEM explicit, $N = 32$
Abaqus explicit, $N = 32$
creep strain ε^c
time [s]
1e10
(c) uniaxial tension: stress
stress σ [MPa]
(d) mixed BC: setup
$u_x = u_y = 0$
prescribed
$u_x = u_y = 0.002$
(e) mixed BC: creep strain
xy
(f) mixed BC: stress