Remote Controller with Fail-Safe Update

Concept of Operations

Reference	TBD [**TBD-1**]
Issue / revision	Issue 1, Revision 1 — DRAFT
Date	10 October 2026
Author	Andrew Toma
Open items	10 TBD, 10 TBR (App. C)

Document change record

Issue	Rev.	Date	Change
1	0	2026-10-10	First draft
1	1	2026-10-10	Single need statement, accepted by the author, with its source (§3.1); N-1 to N-3 retired into goals G-5 to G-7; rationale added (§1.1.1); References [3] and [4] added.

Contents

1.0 Introduction **2**
1.1 Project Description . . . 2
1.2 Overview of the Envisioned System . . . 2

2.0 Documents **2**
2.1 Applicable Documents . . . 2
2.2 Reference Documents . . . 3

3.0 Description of Envisioned System **3**
3.1 Needs, Goals and Objectives . . . 3
3.2 Overview of System and Key Elements . . . 3
3.3 Interfaces . . . 3
3.4 Modes of Operations . . . 3
3.5 Proposed Capabilities . . . 4

4.0 Physical Environment **4**

5.0 Support Environment **4**

6.0 Operational Scenarios **5**
6.1 Nominal Conditions . . . 5
6.2 Off-Nominal Conditions . . . 5

7.0 Impact Considerations **5**

8.0 Risks and Potential Issues **5**

A Acronyms **6**

B Glossary **6**

C Open Items **6**

1.0 Introduction

1.1 Project Description

1.1.1 Background

A controller in space must be updated, watched and commanded from the ground, with nobody able to reach it [**TBR-1**]. A failed update can leave it unable to run any firmware or accept new firmware. Without physical access that state is permanent. It is the worst outcome this System guards against.


Rationale: the loss has happened. NASA records a mission terminated after an in-flight software upload omitted a patch for a defective countdown timer; its recommendations include test-bed verification of in-flight software updates [4, Lesson 0559, p. 199].

1.1.2 Assumptions and Constraints

C-1 The ground has no direct link to the controller, only through the onboard computer.
C-2 All software follows critical-software practice. Rigour per part is set later by its software class.
C-3 One engineer. Demonstration date [**TBD-2**].
C-4 Bench hardware stands in for flight hardware [**TBR-1**].
A-1 No physical access after deployment [**TBR-1**].
A-2 Controller power can be lost at any instant, including during a firmware write [**TBR-2**].
A-3 The ground link exists only during contact windows [**TBD-6**].
A-4 One operator [**TBR-3**].
A-5 Single-bit memory errors occur [**TBR-1**].

1.2 Overview of the Envisioned System

1.2.1 Overview

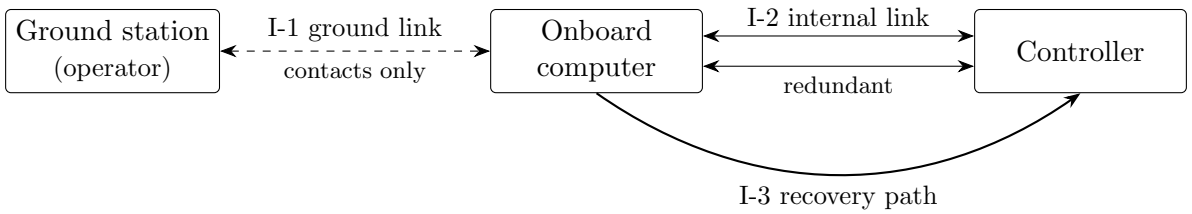

1.2.2 System Scope

In scope: the controller's job, telemetry, commanding, fault handling between contacts, firmware update of the controller. Out of scope: the onboard computer's own software update [**TBR-7**]; radio equipment.

2.0 Documents

2.1 Applicable Documents

[1] NASA, *NASA Systems Engineering Handbook*, NASA/SP-2016-6105 Rev 2, 2016. This outline follows its App. S, pp. 251–253, tailored per its §3.11.1, p. 34: Section 7.0 not applicable; App. C added for open items per its App. C, pp. 197–198.

2.2 Reference Documents

[2] NASA, *Software Assurance and Software Safety Standard*, NASA-STD-8739.8B, 2022. Off-nominal scenarios cite App. A, Table 2.
[3] ESA, *Space engineering — Software*, ECSS-E-ST-40C Rev. 1, 30 April 2025.
[4] NASA, *Fault Management Handbook*, NASA-HDBK-1002, Draft 2, 2 April 2012. A draft, not a released standard.

3.0 Description of Envisioned System

3.1 Needs, Goals and Objectives

NEED A controller that nobody can reach must stay operable, observable and correctable for its whole life. The three properties are three areas a space software specification must cover: operation, observability, and maintenance including in-flight modification over the specified lifetime [3, Annex B, items 5.11–5.13, p. 113].
G-5 Operable: the controller keeps doing its job and acts on the operator's commands. Capabilities JOB, CMD, FM.
G-6 Observable: the ground can know what the System is doing, how healthy it is, and what happened between contacts. Capabilities TM.
G-7 Correctable: the controller's firmware can be replaced for its whole life without losing the controller. Capabilities UPD.
G-1 No update, and no failure during one, leaves the controller without firmware it can run.
G-2 The System acts only on firmware and commands from the operator.
G-3 Losing one connection of the internal link stops nothing.
G-4 Between contacts the System handles faults alone and reports them later **[TBR-5]**.
O-1 Every scenario in Section 6.0 is demonstrated on hardware and recorded.
N-1 Retired in Rev. 1; now G-7. NASA requires a single need statement [1, §4.1, p. 49].
N-2 Retired in Rev. 1; now G-6.
N-3 Retired in Rev. 1; now G-5.

3.2 Overview of System and Key Elements

Ground Operator releases firmware, sends firmware and commands, reads reports.
Onboard computer Checks and passes on firmware and commands, stores reports, watches and restores the controller.
Controller Does its job, reports, keeps known-good firmware to fall back on.

3.3 Interfaces

I-1 Ground link. Radio, contact windows only.
I-2 Internal link. Redundant: losing one connection does not cut the controller off.
I-3 Recovery path. Rewrites and restarts the controller with no controller firmware running.

3.4 Modes of Operations

OPERATE Runs confirmed firmware. New firmware can arrive **[TBR-6]**.
TRIAL Runs new firmware not yet judged good **[TBD-7]**.
FALLBACK Runs previous or last-resort firmware after a failed trial or start.
RECOVERY Runs nothing. Restored through I-3.

3.5 Proposed Capabilities

JOB-1 Do the controller's job [**TBD-3**].
TM-1 Send regular health reports: alive, firmware, uptime, last restart reason, temperature [**TBR-4**].
TM-2 Report important events at once [**TBR-4**].
TM-3 Timestamp every report [**TBR-4**].
TM-4 Store reports between contacts, send all at the next one, report any lost.
TM-5 Report the health of each internal connection [**TBR-4**].
CMD-1 Accept commands only from the operator. Refuse replayed commands.
CMD-2 Answer every command: received, refused with reason, or done with result.
CMD-3 Refuse commands not allowed in the current state.
CMD-4 Run a resent command at most once.
CMD-5 Dangerous commands need two steps: arm, then execute.
CMD-6 Refuse impossible values.
CMD-7 Let the operator cancel an update, leaving known-good firmware running.
CMD-8 Run commands at a set time. Refuse expired commands.
CMD-9 Log every command and its answer.
FM-1 Notice a silent controller and try to bring it back [**TBR-5**].
FM-2 Carry on over the other connection when one dies [**TBR-5**].
FM-3 Restart crashed onboard programs and continue [**TBR-5**].
FM-4 Record every fault and action for the ground [**TBR-5**].
UPD-1 Take firmware from the ground through dropping links.
UPD-2 Refuse firmware that is damaged, not from the operator, for something else, or below the minimum version.
UPD-3 Get the firmware to the controller.
UPD-4 Switch the controller to it [**TBD-4**].
UPD-5 Decide whether it is good [**TBD-5**].
UPD-6 Go back to working firmware if not, with nobody's help.
UPD-7 Tell the ground what happened.
UPD-8 Never leave the controller without runnable firmware.
VER-1 Degrade the ground link on purpose (test only).
VER-2 Cut controller power and break one connection on command (test only) [**TBR-10**].

4.0 Physical Environment

Follows from the situation [**TBR-1**]. Response legend [1, App. S §4.0, p. 252]: OPERATE = all functions continue; SURVIVE = functions stop and return when the condition ends.

Condition	Response	Scenario
No ground contact	OPERATE	OPS-110
Controller power loss at any instant	SURVIVE	OPS-340
Single-bit memory error	OPERATE	OPS-400
Temperature range	[**TBD-10**]	—

5.0 Support Environment

Firmware is built and released on the ground and sent up during contacts, one transfer across several if needed. The onboard computer keeps the last known-good firmware. Update rate [**TBD-9**]. Nothing is repaired after deployment [**TBR-1**].

6.0 Operational Scenarios

6.1 Nominal Conditions

OPS-100 Update: release, upload over one or more contacts, check, transfer **[TBR-6]**, switch **[TBD-4]**, judged good **[TBD-5]**, confirmed, outcome reported.
OPS-110 Telemetry: reports stamped and stored between contacts, all sent at the next one.
OPS-120 Scheduled command: received during a contact, runs at its time, answer sent at the next contact.

6.2 Off-Nominal Conditions

Trigger, then expected outcome. Sources in brackets are items of [2, App. A, Table 2].
OPS-200 Ground link lost mid-transfer: resumes next contact where it stopped.
OPS-210 Command not from operator or replayed: refused, logged [2, p. 62].
OPS-220 Answer lost, command resent: not run again, "already done".
OPS-230 Command wrong for current state: refused with reason [2, p. 63].
OPS-240 Impossible value: refused with reason [2, p. 62].
OPS-250 Dangerous command not armed: refused with reason.
OPS-260 Command expired: refused with reason [2, p. 63].
OPS-270 Report storage full: ground told how many were lost.
OPS-300 Firmware damaged in transfer: refused before the controller [2, p. 63].
OPS-310 Firmware not from operator: refused.
OPS-320 Firmware below minimum version: refused.
OPS-330 Firmware for another controller: refused [2, p. 63].
OPS-340 Power lost during firmware write: previous firmware runs; retry possible [2, p. 63].
OPS-350 New firmware hangs: back to previous, unaided.
OPS-360 New firmware restart loop: back to previous after **[TBD-8]** starts [2, p. 64].
OPS-370 New firmware never judged good: back to previous.
OPS-380 Previous firmware also bad: last-resort firmware runs.
OPS-390 Operator cancels update: known-good firmware left running.
OPS-400 Bit error in stored firmware: detected, not run **[TBR-9]** [2, p. 63].
OPS-410 No firmware can run: restored through I-3 [2, p. 63].
OPS-500 One internal connection fails: everything continues on the other; reported.
OPS-510 Whole internal link fails: controller keeps working; loss reported; I-3 still usable **[TBR-8]**.
OPS-520 Controller silent: noticed, recovery tried, recorded **[TBR-5]**.
OPS-530 Onboard program crash: it restarts and resumes any update; the controller is unaffected **[TBR-5]**.

7.0 Impact Considerations

Not applicable: bench demonstration.

8.0 Risks and Potential Issues

R-1 Both internal connections may share software; one defect could cut both.
R-2 Controller memory may not hold last-resort plus two working firmwares.
R-3 Second internal connection and recovery path not yet shown on bench.
R-4 Demonstration date **[TBD-2]**; undemonstrated scenarios are declared, not dropped.

A Acronyms

CMD command; ConOps Concept of Operations; FM fault management; OPS operational scenario; TBD To Be Determined; TBR To Be Resolved; TM telemetry; UPD update; VER verification.

B Glossary

Confirmed Firmware judged good after its trial; only confirmed firmware is known-good.
Last-resort Known-good firmware that updates never replace (golden image).
Switch The controller stops running old firmware and starts the new.
Arm First step of a dangerous command; changes nothing alone.
Expiry Time after which a waiting command is refused.

C Open Items

Unmarked statements were stated or accepted by the author on 9–10 October 2026. TBR items are resolved before the hazard analysis.

TBR-1 Spacecraft controller, ground contacts only, no physical access, bench stand-in, bit errors occur, no repair.
TBR-2 Controller power can drop at any instant, including mid-write.
TBR-3 One operator.
TBR-4 TM-1, TM-2, TM-3, TM-5 as written (shown 10 Oct, not yet accepted).
TBR-5 G-4, FM-1 to FM-4 as written (shown 10 Oct, not yet accepted).
TBR-6 Controller keeps working while new firmware arrives.
TBR-7 Onboard computer's own update out of scope.
TBR-8 Recovery path still usable with the whole internal link lost.
TBR-9 Stored firmware checked before start; damaged copy skipped.
TBR-10 Test setup can cut power and break one connection.
TBD-1 Project name and document reference.
TBD-2 Demonstration date.
TBD-3 Controller's job: power switching, heater or sensor; LED stand-in.
TBD-4 Switch automatically on arrival, or only on operator command.
TBD-5 Who judges new firmware good: controller or operator.
TBD-6 Contact window length and gap (sourced, or a test parameter).
TBD-7 Trial time limit (requirements).
TBD-8 Failed starts before going back (requirements).
TBD-9 Update rate.
TBD-10 Temperature range.