EAA CHAPTER 32 · 11/21/2026

PREHEAT FROM HOME

A cellular Tanis controller you can build yourself — no hangar Wi-Fi, no monthly fee, and it tells you the engine is actually warming.

Brian Wasson · RV-10 · KSET

THE PROBLEM

The Tanis wants hours. The hangar is 40 minutes away.

6+ hrs

Tanis recommends about six hours or longer of warm-up for full benefit

40 min

Each way, home to the hangar — driving out early just to plug in kills the morning

No Wi-Fi

T-hangar has one duplex outlet and cell signal — nothing else, and I can’t alter the wiring

WHAT'S ON THE SHELF

Plenty of ways to switch an outlet. Few tell you it worked.

Option	Upfront	Ongoing	Confirms it's heating?
HangarBot preheat kit	$729	$15 Monthly data plan	No — switches the outlet
SwitcheOn (sold by Tanis)	$323	$50/yr	No — switches the outlet
Wi-Fi plug + hotspot	~$60–100	Hotspot plan	No — two things to fail
Plug-in timer	~$30	None	No — and Tanis says no timers

Prices: Aircraft Spruce listing (HangarBot), Tanis website Oct 2026 (SwitcheOn); verify before quoting.

WHY I BUILT ONE

I wanted confidence, not just a remote switch

Proof it’s working

Engine and hangar temps on my phone — I see the rise before I leave home

No monthly bill

Particle’s free plan includes the cellular data for a device like this

Built around Tanis rules

On means on — no cycling, no timer, no thermostat on the engine heater

Grows with me

Cabin heat, flood warning and more bolt on later without starting over

EXPANSION PATH


Start with preheat. Add the rest when you want it.

Add-on	What you add	What you get
Cabin heat	Second relay + cabin probe + ceramic heater	Warm seats, auto shut-off timer
Current sensor	Clamp-on CT on the Tanis circuit	“Confirmed on” in seconds; stuck-relay alarm
Power-loss alert	Small LiPo battery on the controller	Alert when hangar power drops
Flood warning	River-gauge alerts + floor water sensor	Lead time to fly the airplane out
Activity & lights	Motion sensor + light sensor	FBO visit log; lights-left-on alert

The controller has spare inputs for all of these. No rewiring of what you already built.

THE CURRENT BUILD

Two relays. Three temperature probes. One phone.

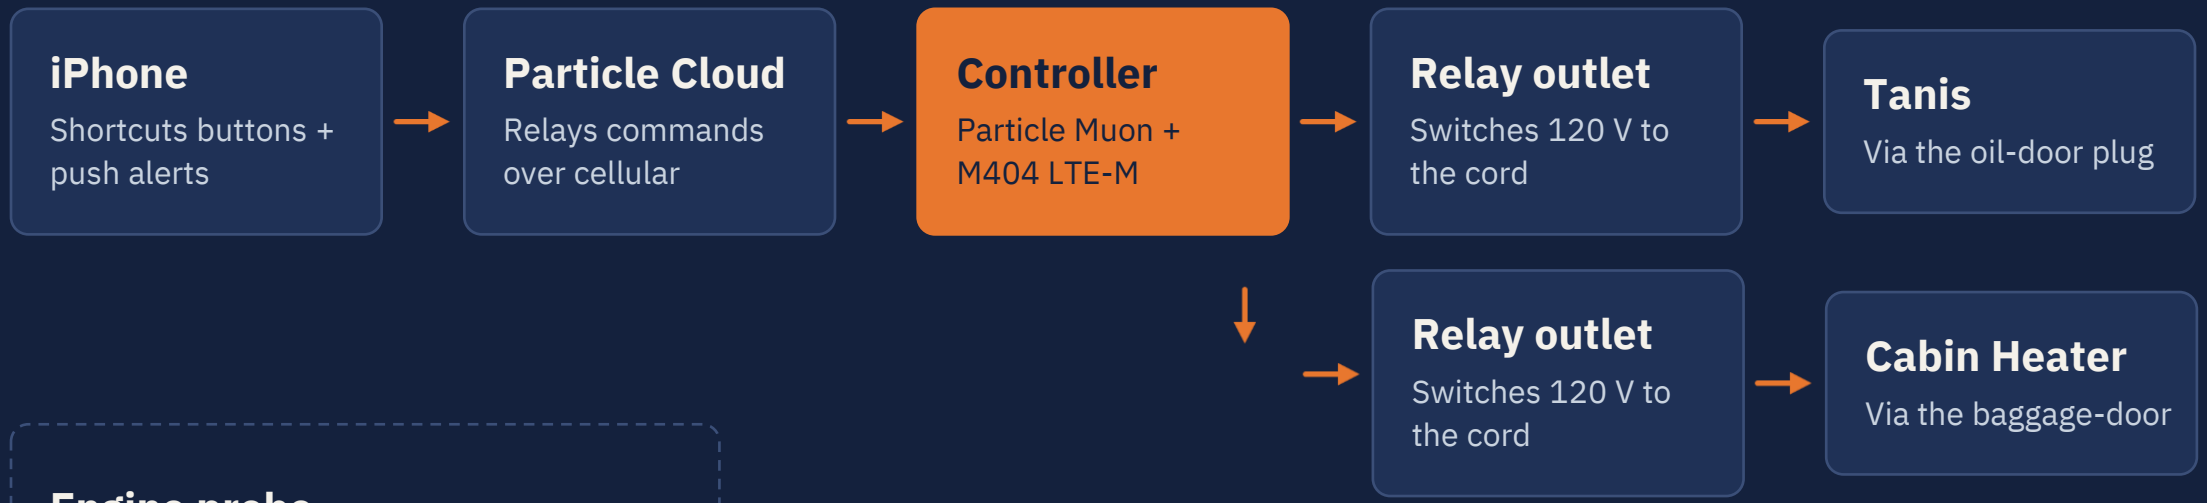

Engine probe
Taped to the Tanis cord, sits inside the cowl

Cabin probe
Taped to the Cabin cord, sits inside the baggage area


Hangar probe
Ambient reference — the rise is what matters

ARM / SAFE switch
Latching button at the box — kills it locally

THE FULL BUILD

110v Power DIN Rail

110v Relays

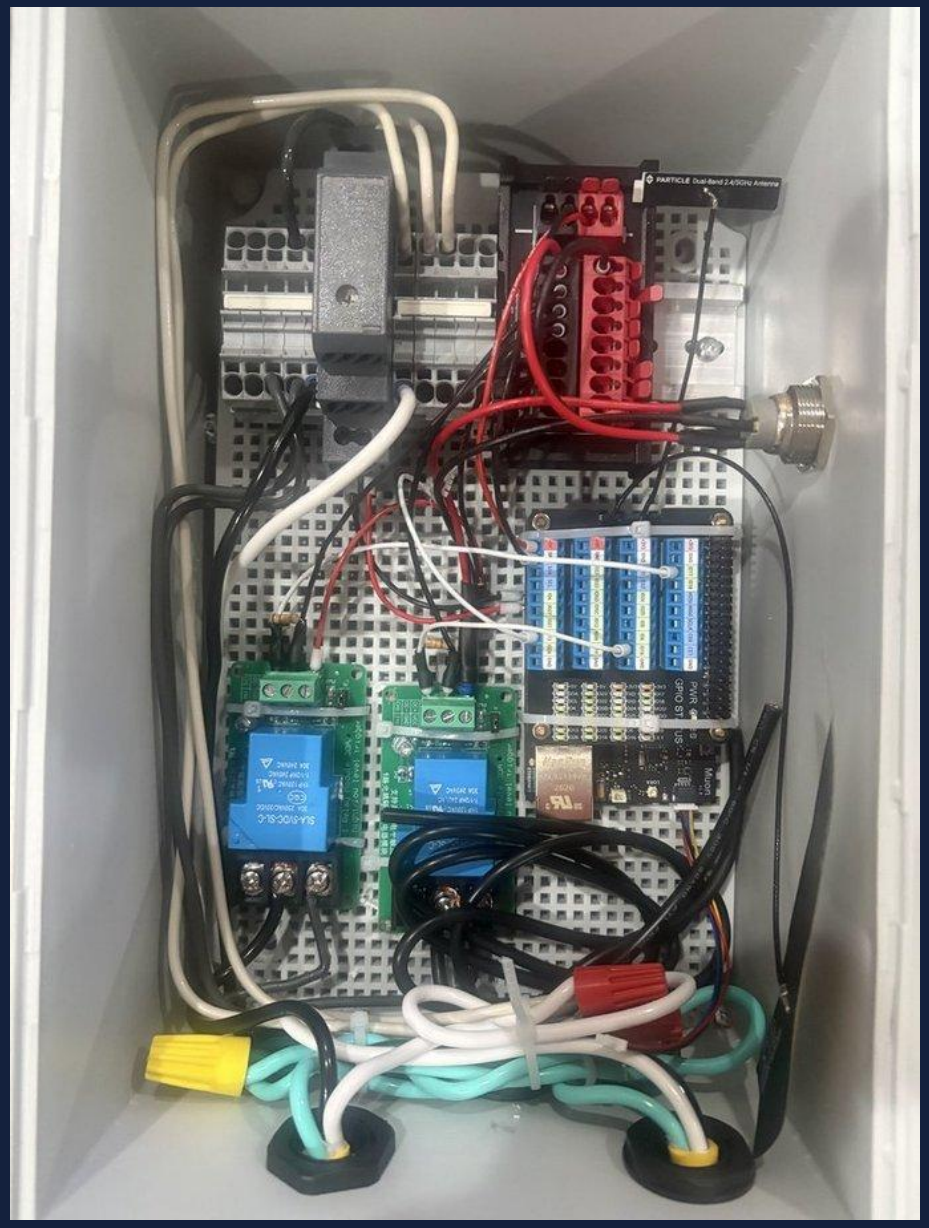


5V Power DINRail

Latching Switch

Particle Muon

Apple Shortcuts

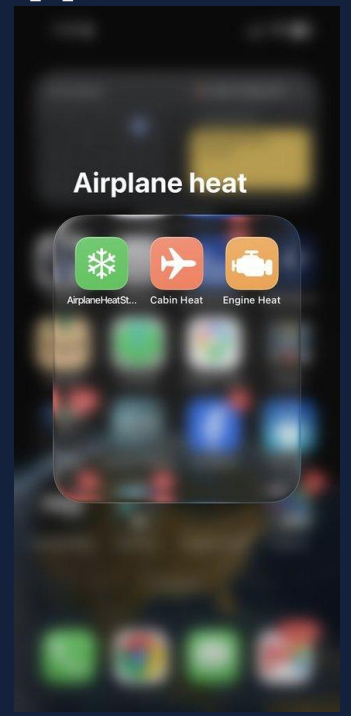

FAIL-SAFE BY DESIGN

When anything fails, the heat goes off — not on

If this happens…	…the result is
Controller dies or loses power	Relay drops open — outlet off
Cell signal or cloud goes down	Outlet holds its state; phone shows “state unknown”
ARM/SAFE button set to SAFE	Relay can’t energize, in hardware, whatever the firmware does
Re-armed after SAFE	Stays off until someone sends a new command
Fueling or engine start	Use your head - Unplugged first!

WHAT IT COSTS

Part	Approx.
Particle Muon kit, North America (M404 LTE-M)	$85
2 - 30 A relay module, opto-isolated input	$5
Waterproof DS18B20 probes (3 pack)	$6
Adafruit DS2484 probe bridge + Qwiic cable	$15
Mean Well 12v DIN rail power supply	$14
8 out DIN rail power distribution	$15
Plastic NEMA 4 box, 15 A; with DIN Rail	$38
Latching lit button, screw-terminal HAT, resistors	$19
12-ga outdoor extension cord (if needed)	$25
2 ft 12-ga outlets	$17
3 conductor 22 awg 50ft	$20
Deutsch Connectors	$10
WAGO DIN rail connector	$15
TOTAL	**$284**

Kit and bridge prices from vendor listings, Oct 2026. total is an estimate.

Estimated total

~$284

Monthly

$0

Particle Free Plan: up to 100 devices, 100K data operations/month, cellular data included

WHAT IT TAKES TO BUILD ONE

If you can wire a panel, you can build this

Skills

Relays module and pigtail outlets in an electrical box, screw terminals and a multimeter. Simpler than any panel you've wired.

Software

No coding. Set up the device in a browser, flash my shared firmware, install iPhone Shortcuts.

Time

An evening on the bench, an hour at the hangar, then a 24–48 hour soak test before you trust it.

You'll need: an iPhone, cell signal inside your hangar (we test that first), and a Tanis or similar plug-in preheater.

INSIDE THE BOX

Four details that make it fail safe

Load on COM → NO, never NC

A dead relay means a dead outlet. Wired through NC, it would heat whenever the controller is off.

Active-high + 15 kΩ pull-down

In active-low mode the outlet came on at power-up. Active-high keeps it off before firmware runs.

ARM/SAFE cuts relay power

The latching button is in the relay's 5 V feed. SAFE means no coil power, whatever the code does.

Non-metallic enclosure

Non-metallic electrical enclosure. Listed polycarbonate recommended to contain a 120 V fault near fuel; doesn't block the cellular antenna..

WANT TO BUILD ONE?

Build a Minimum Product

Just a controller, a controllable outlet and a power supply

$10



$80



$38



Project Documentation

GitHub Repository:

[WassonRV10/hangar-mate: Cellular Pre-heat manager]