
## **BUG REACTOR SIMULATION**

Using VP Link to simulate a continuous fermenter

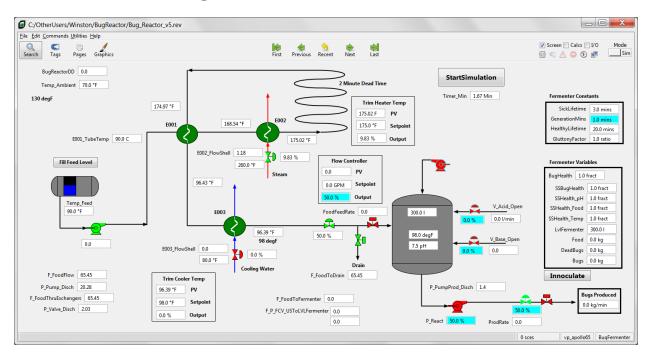

## **Abstract**

There are a number of interesting control problems with this process. .

A continuous fermenter simulation has been built with VP Link. Below is a description of the elements of that simulation.

The process is shown below. The goal of the continuous fermenter is to avoid the time consuming operations of the batch reactor including deinventory, charging, and sterilization. In the continuous fermenter food for the bugs is sterilized continuously before being fed to the fermenter. This has a set of complications that arise due to the dead time introduced by the sterilization loop. In addition, the optimum residence time for the fermenter is dependent on the growth rate of the bugs in the fermenter. If the feed rate to too fast and the residence time is too short, then the bugs can be flushed out of the reactor before they have time to multiply. If the residence time is too long, then the bugs will be starved for food and their growth rate will be lower than the optimum. Ideally, the steady state is such that the production rate out the bottom of the reactor is such that bugs are removed from the fermenter as fast as they are growing. The trick is, knowing how fast they are growing is hard to measure.

This process generally starts with a fermenter that has been filled with sterilized media including some concentration of food. Bugs are introduced into the reactor, start to eat the food and multiply. The quantity of bugs in the reactor grows at an exponential rate, as the rate at which new bugs appear is proportional to the number of bugs in the reactor. Actually the growth rate is dependent on how "happy" the bugs are in their environment. Bugs grow at the maximum rate at a certain temperature and pH (and if we want to make it more complicated, dissolved oxygen level), as long as there is sufficient food. An excess of food does not make the bugs grow even faster, as there is some limit as to their metabolism. But a scarcity of food does reduce the growth rate and causes some bugs to die, meaning they will never reproduce again, even if the food supply is restored.

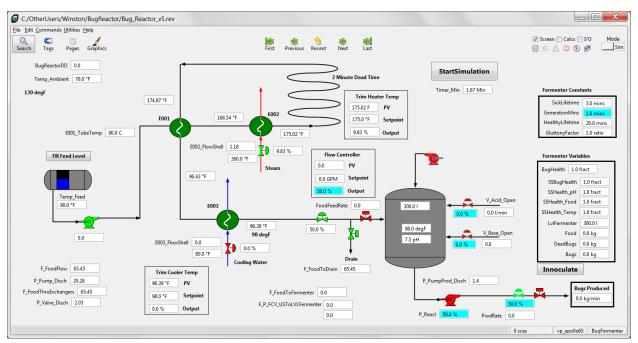


Figure 1 -- Process overview of the continuous fermenter

Here is what we know about the conditions in the bug reactor.

- Bugs grow exponentially in time when they are happy and have enough to eat.
- Bugs die. These bugs are still in the reactor (and will produce enzymes when they are sent downstream to be lysed). Dead bugs will never reproduce. Bugs can die because they are too old, or because conditions are not good, and they are no longer healthy. The farther the conditions are from optimum the fewer bugs remain healthy. Sick bugs die at a faster rate than healthy bugs.
- Bugs that are not healthy do not reproduce, but they could later if they get healthy again.
- Bugs like to be at 98 deg F.
- Bugs produce heat when they grow, so the fermenter must be cooled to maintain a steady temperature. The temperature controls do a pretty good job of controlling the fermenter temperature.
- Bugs like an environment where the pH is 7.5
- The food introduced to the reactor has a pH of 7.
- The waste product of growing bugs is basic, and as the bug growth rate increases, acid is required to maintain the pH at the proper level. You will see that the pH controls do a pretty good job.

Your job, Mr. Phelps, should you choose to accept it, is to feed the reactor at the optimum rate to maximize the bug yield. Bug yield is the totalized value of the production rate times the concentration of bugs in the effluent stream. As always, the author will disavow any knowledge of a relation to a real process.

You may also want to investigate how you can start up the sterilization loop as fast as possible, getting the food to the desired temperature for the appropriate length of time.

Other parts of the process that are important to know about.

The food needs to be pasteurized at 170 degrees F for at least two minutes. If the pasteurization criteria are not met, then invasive bugs from the outside world will be introduced into the fermenter and wipe out the laboratory bugs which are unprepared to compete with bugs that have adapted to live in the competitive life environment we call planet Earth. This means that all the laboratory bugs die, and the only option is to drain the fermenter, re-sterilize it, and start the process back up again. This is very costly.

If it is noticed that the food has not been sterilized, it can be diverted to the drain to avoid introducing it to the fermenter. While this can save the bugs in the fermenter, the bugs will go without the food supply for as long as it takes to resolve the sterilization issue and get the food going back to the fermenter.

The most likely piece of equipment to fail is the steam exchanger, E002, that does the final heating of the food to the pasteurization temperature. If the food is heated above 190 deg F, then the food (think of thinned molasses), will start to caramelize on the surface of the steam exchanger, causing it to foul and lose its effectiveness<sup>1</sup>.

<sup>&</sup>lt;sup>1</sup> In the previous century, the author mis-operated this steam exchanger to the point that in order to transfer enough heat to the food through the fouled exchanger, the temperature controller increased the the steam temperature (and therefore pressure, as well) enough to blow the seals on the plate and frame exchanger. That was about a \$30,000 mistake (in 1986 dollars)--plus lost production. Oops.

Tags available in the Simulation:

Tagname Atm	Description  Boundary Pressure(0):\OtherUsers\Winston\BugReactor\BugReactor	Mode Manual	EULo	EUHi 100
BugHealth	EU=fract; What fraction of the live bugs are healthy	Auto	0	100
BugReactorDD	Liq Network Master, Ifngen v14.2:\OtherUsers\Winston\BugReactor\I		0	100
Bugs	EU=kg; Amount of live bugs (healthy and unhealthy) in the reactor	Auto	0	5000
BugsProduced	EU=kg/min; Total amount of bugs produced	Auto	0	1000
CWPID Centrifuge_P	Eu=%; Shellside inlet temperature  Boundary Pressure(20) :\OtherUsers\Winston\BugReactor\BugReactor	Auto	0	100
DeadBugs	EU=kg How many dead bugs are there in the reactor	Auto	0	5000
E001	E001 Heat Exchanger	Auto	0	2000
E001_FlowShell	Flow on shellside (Lb / hr)	Auto	0	1000000
E001_Flowtube	Flow on tubeside (Lb / hr)	Auto	0	1000000
E001_ShellTemp	Eu=C; Shellside inlet temperature	Auto	0	1200
E001_TubeTemp E001_UA	Eu=C; Tubeside inlet temperature  Overall heat transfer coeff	Auto	0	1200
E001_shell_Cp	Specific heat of shell side (BTU / LB F) (0.5)	Auto	0	100
E002	E002 Heat Exchanger	Auto	0	2000
E002_FlowShell	Flow on shellside (Lb / hr)	Auto	0	12
E002_Flowtube	Flow on tubeside (Lb / hr)	Auto	0	1000
E002_ShellTemp	Eu=İF; Shellside inlet temperature	Auto	0	1200 1200
E002_TubeTemp E002_UA	Eu=C; Tubeside inlet temperature  Overall heat transfer coeff	Auto	0	
E002_shell_Cp	Specific heat of shell side (BTU / LB F) (0.5)	Auto	0	100
E003	E003 Heat Exchanger	Auto	0	2000
E003_FlowShell	Flow on shellside (Lb / hr)	Auto	0	22
E003_Flowtube	Flow on tubeside (Lb / hr)	Auto	0	1000000
E003_ShellTemp	Eu-°F; Shellside inlet temperature	Auto	0	1200
E003_TubeTemp E003_UA	Eu=C; Tubeside inlet temperature  Overall heat transfer coeff	Auto	0	1200
E003_shell_Cp	Specific heat of shell side (BTU / LB F) (0.5)	Auto	0	100
E10001	E10001 Heat Exchanger	Auto	0	2000
E10001_FlowShell	EU=BPD; Flow on shellside (BPD)	Auto	0	1000000
E10001_Flowtube	EU=BPD; Flow on tubeside (BPD)	Auto	0	1000000
E10001_ShellOut	F. Challedge interaction	Auto	0	100
E10001_ShellTemp E10001_ShellTemp_Lag	Eu=F; Shellside inlet temperature Eu=F; Shellside inlet temperature	Auto	80	500 120
E10001_Shell emp_tag E10001_TubeOut	Eu=r; Sheliside iniet temperature	Auto	80	100
E10001_TubeTemp	Eu=F; Tubeside inlet temperature	Manual	0	2000
E10001_UA	Overall heat transfer coeff	Manual		10000000
E10001_shell_Cp	Specific heat of shell side (BTU / BBL F) (0.5)	Auto	0	100
F_BugsToCentrifuge	Flow(design=65) from P_PumpProd_Disch to Centrifuge_P Ifngen:\Oth		0	130
F_FoodFlow	Pump(design=65) from 1.2 to P_Pump_Disch netgen:\OtherUsers\Win		0	98.9346
F_FoodThruExchangers	Flow(design=65) from P_Pump_Disch to P_Valve_Disch Ifngen:\Other\		0	130
F_FoodToDrain F_FoodToFermenter	Flow(design=65) from P_Valve_Disch to Atm   Ifngen:\OtherUsers\Wins Flow(design=145.7) from P_Valve_Disch to 1.4   Ifngen:\OtherU		0	130 291.4
F_LVLFermenterToP_PumpProd_D	Pump(design=145.7) from 1.4 to P_PumpProd_Disch netgen:\OtherUs		0	221.766
F_LVLFoodTankToP_Pump_Disch	Pump(design=145.7) from 1.2 to P_Pump_Disch netgen:BugReactorDD		0	221.766
F_P_FCV_USToLVLFermenter	Flow(design=145.7) from P_Pump_Disch to 1.4 Ifngen:BugReactorDD.:		0	291.4
F_P_PumpProd_DischToP_Reactor	Flow(design=145.7) from P_PumpProd_Disch to Centrifuge_P Ifngen:\		0	291.4
FlowPID	Eu=%; Shellside inlet temperature	Manual	0	100
FlowSetPoint	Eu=GPM;	Auto	0	12
Food	EU=kg; The amount of food in the reactor	Auto	0	1000
FoodFeedRate GenerationMins	Flow(design=65) from P_Valve_Disch to 1.4 Ifngen:\OtherUsers\Winst EU=mins; How long does it take healthy bugs to double	Manual	0	130 600
GluttonyFactor	EU=ratio; How much food does a bug eat in a generation (vs. its weig		0	10
HealthyLifetime	EU=mins; How long do healthy bugs live?	Auto	0	1000
HeatIn	Eu=%; Shellside inlet temperature	Auto	0	100
HeatTerm	Takes inAccount Blower and Heat of Rxn in TempReactor	Auto	-10	10
LvlFermenter	EU=I; Volume in the Fermenter	Auto	0	2000
LvlFoodTank	Level Tag at press =1.2; Ifngen:\OtherUsers\Winston\BugReactor\Bug		0	5000
PIDOutput PMP100	PID Output  Some digital point	Auto	Off	100 On
P Food	Eu=%; Valve between 1.2 and P_Pump_Disch Ifngen:LFN-Build-Fermer		011	100
P_Food_Running		Auto	Stopped	Running
P_PumpProd_Disch	Pressure(design=50) Ifngen:\OtherUsers\Winston\BugReactor\BugRea	Auto	0	200
P_Pump_Disch	Pressure(design=20) Ifngen:\OtherUsers\Winston\BugReactor\BugRea		0	50
P_React	Eu=%; Valve between 1.4 and P_PumpProd_Disch Ifngen:LFN-Build-Fe		0	100
P_React_Running	0 1 0 (0) 150 0 715 1 1 1500	Auto	Stopped	Running
P_Reactor P_Valve_Disch	Boundary Pressure(1):LFN-Build-Fermenter.xlsx[LFN]  Pressure(design=2) [fngen:\Other    sers\Winston\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReactor\BugReacto	Manual	0	30
P_Valve_Disch ProdRate	Pressure(design=2) Ifngen:\OtherUsers\Winston\BugReactor\BugReac Pump(design=65) from 1.4 to P_PumpProd_Disch netgen:\OtherUsers'		0	98,9346
Reactor_Temp	EU=degF; What is Temperature of the reactor	Auto	0	212
Reactor_pH	EU=pH; What is pH of the reactor	Auto	0	14
SSBugHealth	EU=fract; The target bug health fraction	Auto	0	1
SSHealth_Food	EU=fract; Contribution of Food concentration to bug health	Auto	0	1
SSHealth_Temp	EU=fract; Contribution of Temperature to bug health	Auto	0	1
SSHealth_pH SickLifetime	EU=fract; Contribution of pH to bug health EU=mins; How long do sick bugs live?	Auto	0	1000
TempCWSetPoint	EU=Rins; How long do sick bugs live?  Eu=°F;	Auto	0	200
TempSetPoint	Eu=°F;	Auto	0	200
Temp_Ambient	Eu=°F;	Auto	0	100
Temp_E001_ShellIn	Eu=°F;	Auto	0	300
Temp_E002_In	Eu=°F;	Auto	0	300
Temp_E002_Out	Eu=°F;	Auto	0	300
Temp_E003_In Temp_E003_Out	Eu=°F; Eu=°F;	Auto	0	300 300
Temp_E003_Out Temp_Feed	Eu=°F;	Auto	0	100
Timer		Auto	0	100
Timer_Min	Eu=Min	Auto	0	20
V_Acid_Open	EU=I/min; Rate of Acid addition	Auto	0	2
V_Acid_Open_Vlv	Eu=%;	Manual	0	100
V_Base_Open	5.00	Auto	0	2
V_Base_Open_Vlv	Eu=%;	Manual Manual	0	100
V_Blower_Open V_Cool	Eu=%; Valve between P_WatCool_US and P_FCV_US Ifngen:LFN-Build		0	100
V_Cool_Open		Auto	0	100
V_Drain_Open		Auto	Closed	Open
V_Hex	Eu=%; Valve between P_Pump_Disch and P_WatCool_US Ifngen:LFN-		Closed	100
V_Hex_Open		Auto	0	1
	Eu=%; Valve between P_FCV_US and 1.4 Ifngen:LFN-Build-Fermenter.:		0	100
v_React		Auto	Closed	Open
V_React V_React_Open V_Sepr	Eu=%; Valve between P_PumpProd_Disch and P_Reactor Ifngen:LFN-E		0	100
V_React_Open V_Sepr V_Sepr_Open		Auto	Closed	Open
V_React_Open V_Sepr V_Sepr_Open V_Water	Eu=%;	Auto Auto	Closed	Open 100
V_React_Open V_Sepr V_Sepr_Open		Auto Auto	Closed	Open

## Still to do:

- Adjust the pH by pooping bugs.
- Account for the heat that bugs produce while they live and eat.
- Add a cooling water valve to cool the fermenter.
- Add the section to this document that describes the model. Less for the brain design guy, but more for the eventual customer that is interested in how VP Link works to create their own models.
- Add controls for the automatic diversion of incompletely pasteurized food.
- Add description of the temperature vs. time dependence of the sterilization loop.