

TOTEM Keymap

as it is flashed today

A Miryoku-shaped layout on a 38-key split: five layers reached from the thumbs, modifiers living on the home row, and symbols pulled out of the layers into chords. Everything below is read straight from `totem.keymap` and `combos.dtsi`.

5 layers

30 combos

8 home-row mods

xiao_ble

totem_left · totem_right

☐ Plain key

☒ Hold = modifier

☒ Hold = layer

☐ Symbol


☐ Navigation & editing

☐ Bluetooth & media

☒ Falls through to base


L0 Base

Always on · QWERTY

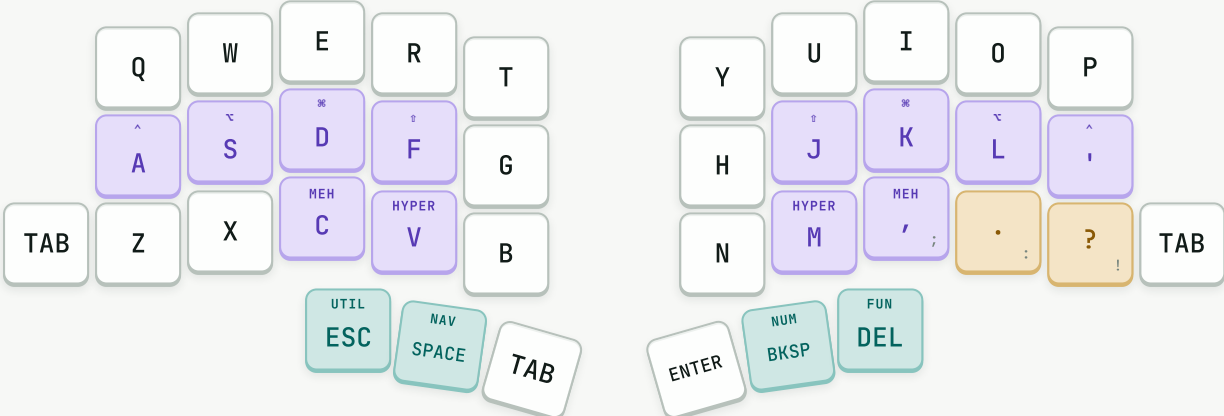The diagram shows the Base layer (L0) of the TOTEM keymap. It features a split keyboard layout with 38 keys. The keys are color-coded: white for plain keys, purple for hold modifiers, teal for hold layers, orange for symbols, blue for navigation/editing, and pink for Bluetooth/media. The layout includes a QWERTY base with various modifications. For example, the left hand has Q, W, E, R, T, A, S, D, F, G, Z, X, C, V, B, and TAB. The right hand has Y, U, I, O, P, H, J, K, L, semicolon/apostrophe, N, M, comma/underscore, period/quote, and TAB. Additional keys like ESC, SPACE, and DEL are shown at the bottom.


L1 Nav

Hold space · left middle thumb

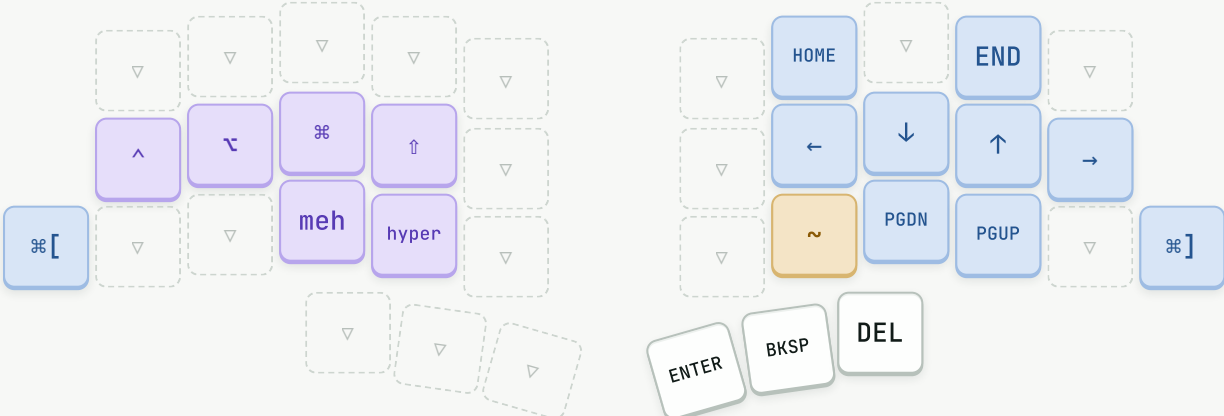The diagram shows the Nav layer (L1) of the TOTEM keymap. It features a split keyboard layout with 38 keys. The keys are color-coded: white for plain keys, purple for hold modifiers, teal for hold layers, orange for symbols, blue for navigation/editing, and pink for Bluetooth/media. The layout includes navigation and editing keys. For example, the left hand has up/down arrows, a hold modifier, and a hold layer. The right hand has HOME, END, left/right arrows, up/down arrows, PGDN, PGUP, and a hold modifier. Additional keys like ENTER, BKSP, and DEL are shown at the bottom.


L2 Num

Hold **backspace** · right middle thumb

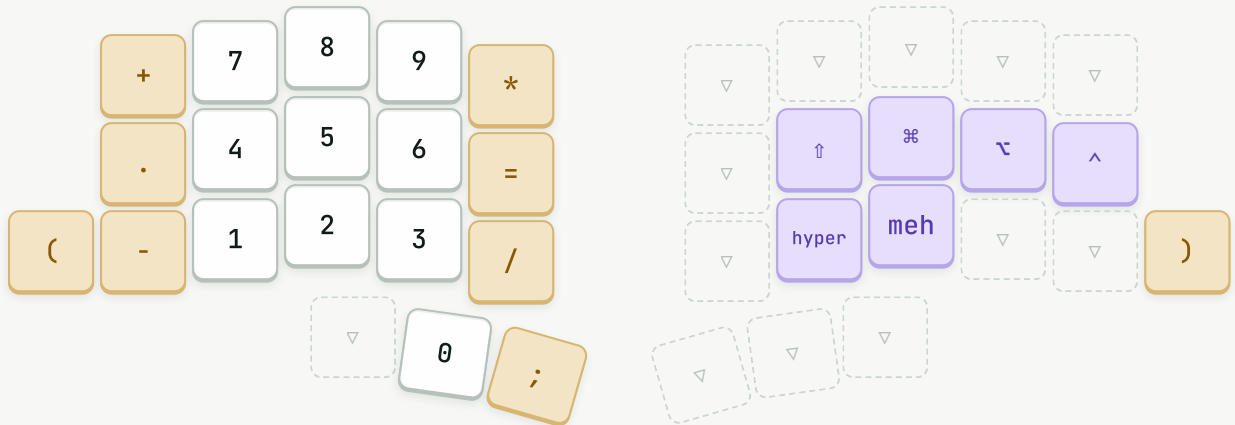


L3 Fun

Hold **delete** · right outer thumb

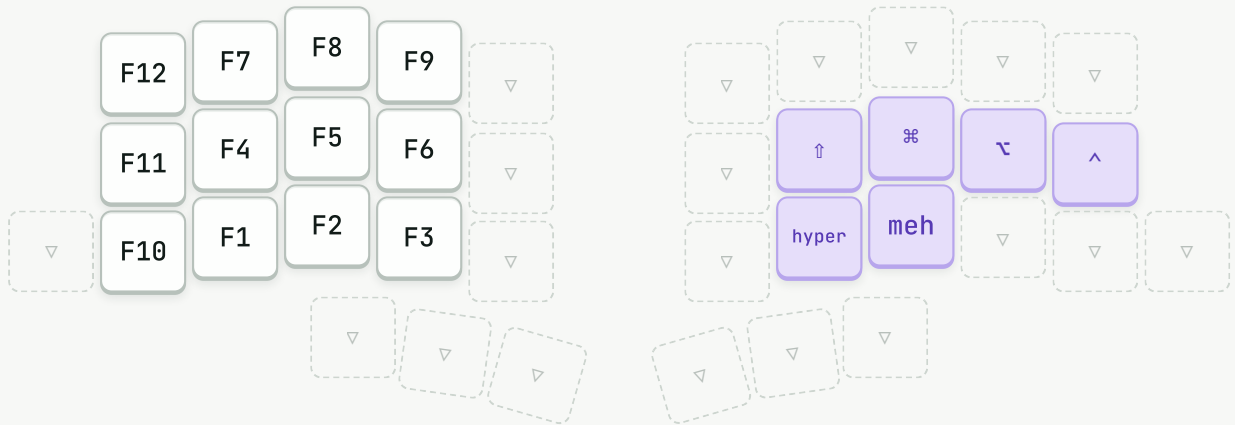



L4 Util

Hold **esc** · left outer thumb

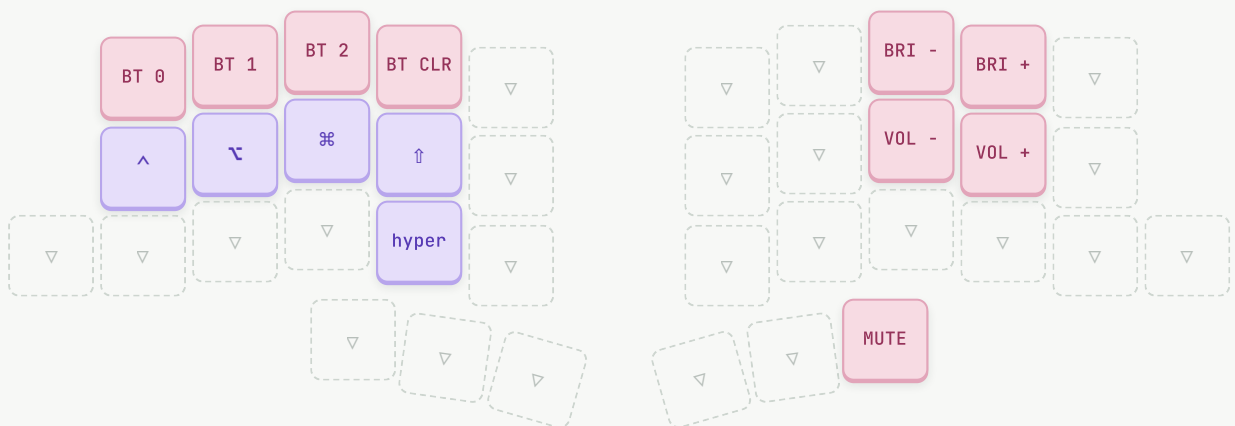

Combos

Live on Base, Nav and Num. Vertical pairs sit between the two keys that make them; the rest are listed underneath.

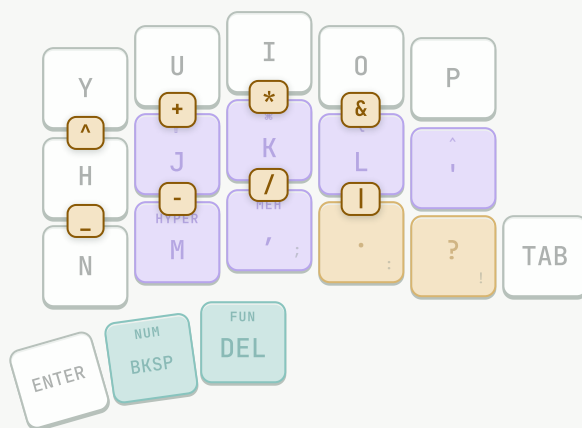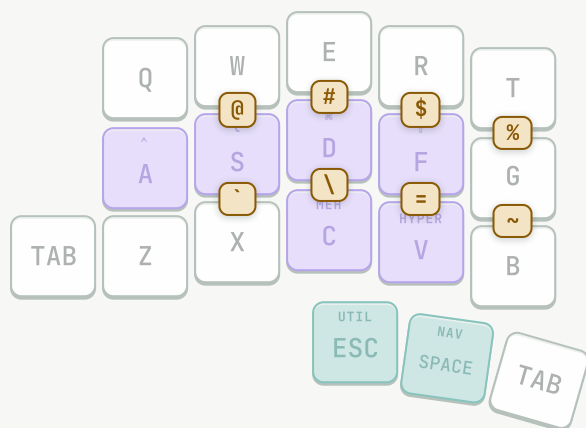

LEFT HAND · SAME ROW

W + E → {
E + R → (
W + E + R → [
Q + R → <

EDITING

X + C → ⌘C Copy
C + V → ⌘V Paste
X + V → ⌘X Cut

RIGHT HAND · SAME ROW

I + O → }
U + I →)
U + I + O →]
U + P → >

SHIFT

S + F → ⇧ Sticky shift · left
J + L → ⇧ Sticky shift · right
Z + X → CAPS Caps word

How the keys behave

HOME-ROW MODS

Balanced flavour, **280 ms** hold, **175 ms** quick-tap. Needs **125 ms** of idle first, only fires against the **opposite hand or a thumb**, and decides on release — so rolls never turn into modifiers.

LAYER TAPS

Balanced flavour, **200 ms** hold, **175 ms** quick-tap.

COMBOS

20 ms window for same-row chords, **30 ms** for the vertical ones, after **100 ms** of idle.

STICKY SHIFT

Holds for **2 s** or until the next key, with quick-release so it never doubles up.

CAPS WORD

Survives    . ignore-numbers is deleted, so a digit ends it.

KEY REPEAT

Repeats consumer keys as well as normal ones.

MORPHING KEYS

Three keys change under shift: **,** becomes **;**, **.** becomes **:**, and **?** becomes **!**

POWER & RADIO

Sleeps after **30 min** idle. Up to **4** Bluetooth connections and **4** pairings. USB logging off.