



Cable rest-length $L_{rest} = \alpha \cdot L_{flat}$: tension and stiffening sensitivity $(\alpha < 1 = \text{pre-stressed}; \alpha = 1 = \text{flat reference})$


Cable tension vs rest-length factor α
 (each curve = one taut simulation sample)

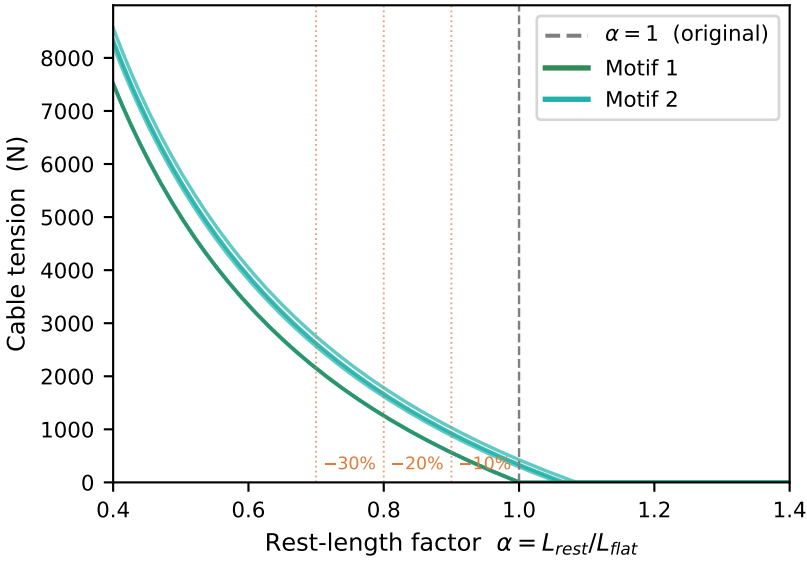

Cable activation threshold α^* vs pressure (taut when $\alpha < \alpha^*$)

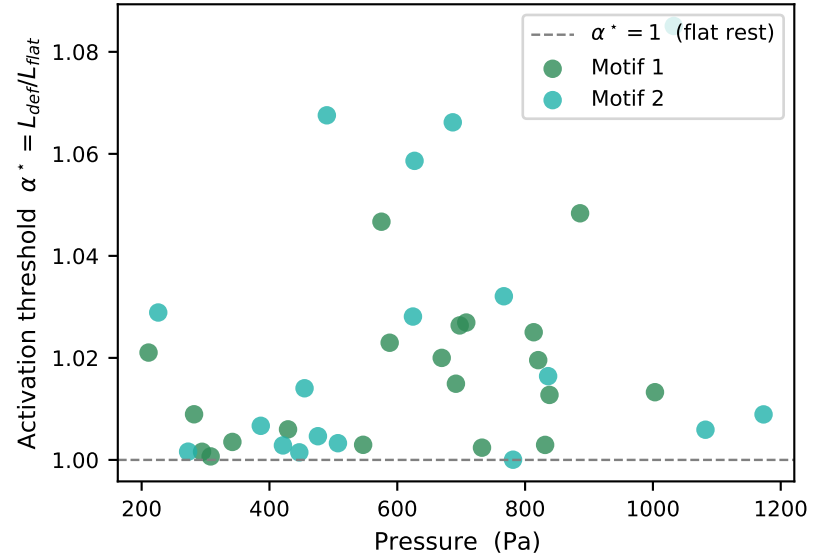

Crown height vs cable tension
 (faint points at T=0 = no-cable reference)

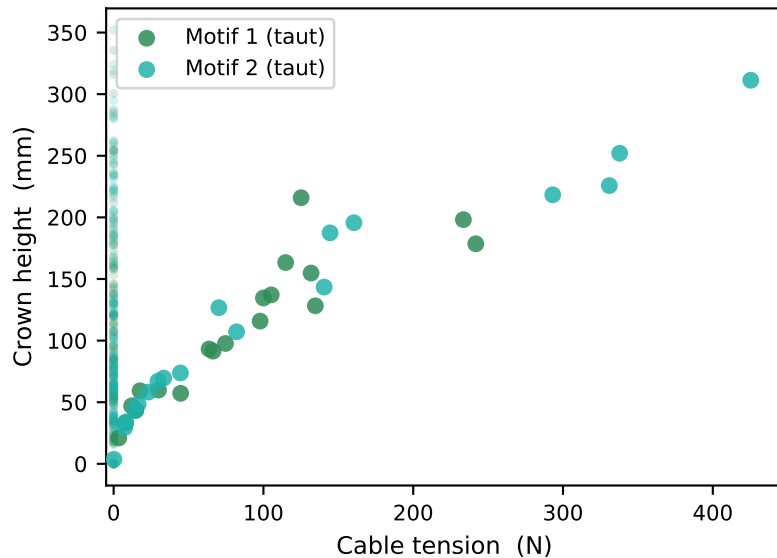

Rest-length design guide (EA=5000 N, $L_{flat} \approx 1196$ mm)
 (green rows = cable taut at typical inflation)

α	L_{rest} (mm)	T @ $L_{def} = 1.05 L_{flat}$ (N)
1.0	1196	250
0.95	1136	526
0.9	1077	833
0.85	1017	1176
0.8	957	1562
0.75	897	2000
0.7	837	2500