FreeCAD 1.0 · Demo_ship_RevA : 1

File Edit View Tools Macro 3D/BIM Manage Utils Windows Help

BIM

SonarIQ ▶ Analyse

Combo View

Model Tasks


Labels & Attributes

- Demo_ship_RevA
  - Deck 5
    - Spaces
      - COR-5-146-P
      - COR-5-152-S
    - Cabins
    - Walls
    - Doors
      - FD-5-165P
      - FD-5-165S
      - D-5-171-S
    - Stairs
      - Stair 3B
  - Deck 4
  - Deck 6
  - Deck 7

Property View · Deck 5

Property	Value
Label	Deck 5
IFC class	IfcBuildingStorey
Rev	A

Deck 5 · Top view · Rev A

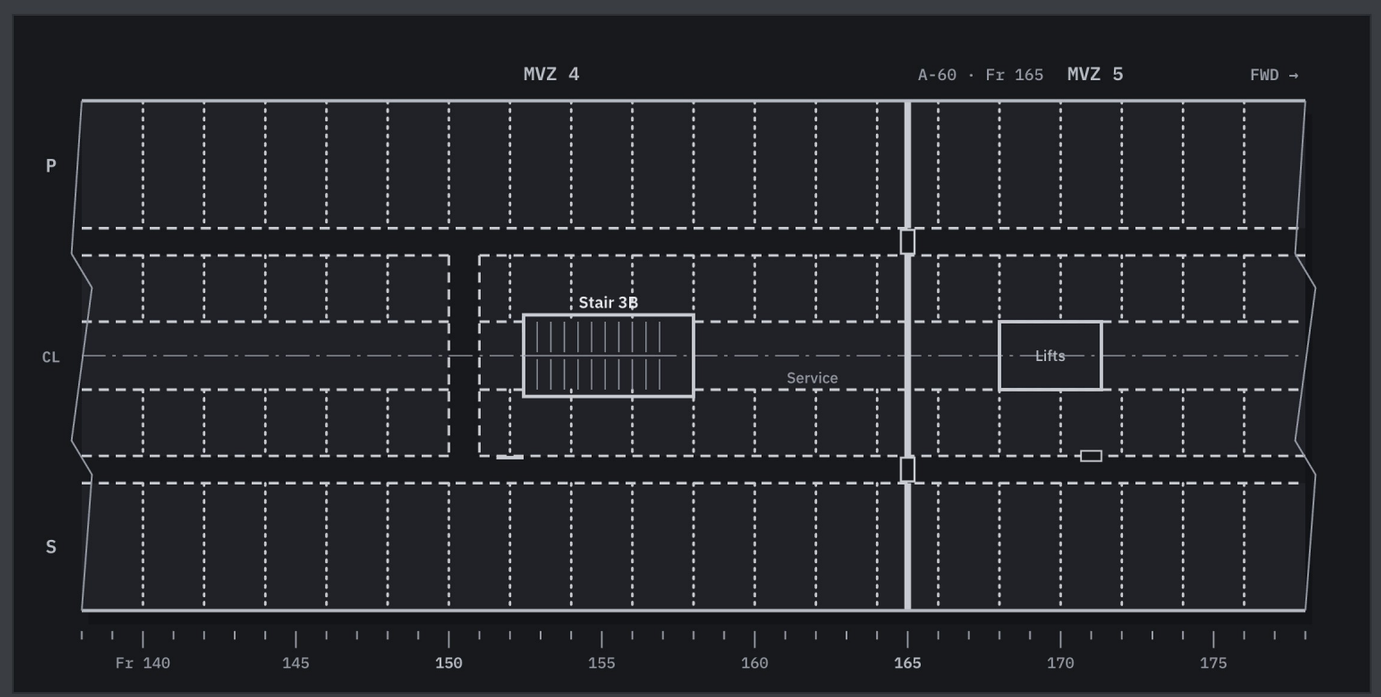

A-60
A-0
B-15
B-0

Y
X

SonarIQ Demo ship · Rev A — Live

Profile: Passenger ship · > 36 passengers

Scope: Selection | **Deck 5** | Whole model

Packs: ☑ Fire & life safety ☑ Accessibility ☑ Class · DNV To verify

Analyse

— Fail	— Warning	— Cannot verify	— Pass	— Dormant

Findings Chat History

96 checks in 3 packs will run on Deck 5.

The rule engine decides every verdict. It needs no AI and no network.

Fire & life safety · SOLAS II-2, FSS Code Ch.13	64	Verified
Accessibility · PVAG 2013 draft, ADA 2010	20	Verified
Class · DNV	12	To verify

Class rules marked To verify still run. Their verdicts carry the To verify tag until the pack is signed off.

No findings yet

Press Analyse. Findings highlight the objects in the 3D view first, then list here.

IFC4 · Demo_ship_RevA — Rule engine ready

Preselected: Deck 5

SonarIQ: idle CAD mm

FreeCAD 1.0 · Demo_ship_RevA : 1

File Edit View Tools Macro 3D/BIM Manage Utils Windows Help

BIM

SonarIQ ▶ Analyse

Combo View

Model Tasks


Labels & Attributes

- Demo_ship_RevA
  - Deck 5
    - Spaces
      - COR-5-146-P
      - COR-5-152-S ⚠ Warning
    - Cabins
    - Walls
    - Doors
      - FD-5-165P ✕ Fail
      - FD-5-165S
      - D-5-171-S [?] Cannot verify
    - Stairs
      - Stair 3B
  - Deck 4
  - Deck 6
  - Deck 7

Property View · FD-5-165P

Property	Value
Label	FD-5-165P
IFC class	IfcDoor
FireRating	A-0
Deck	5
Frame	165
Side	P
Host wall	MVZ 4/5 · A-60

Deck 5 · Top view · Rev A **SonarIQ highlights on**

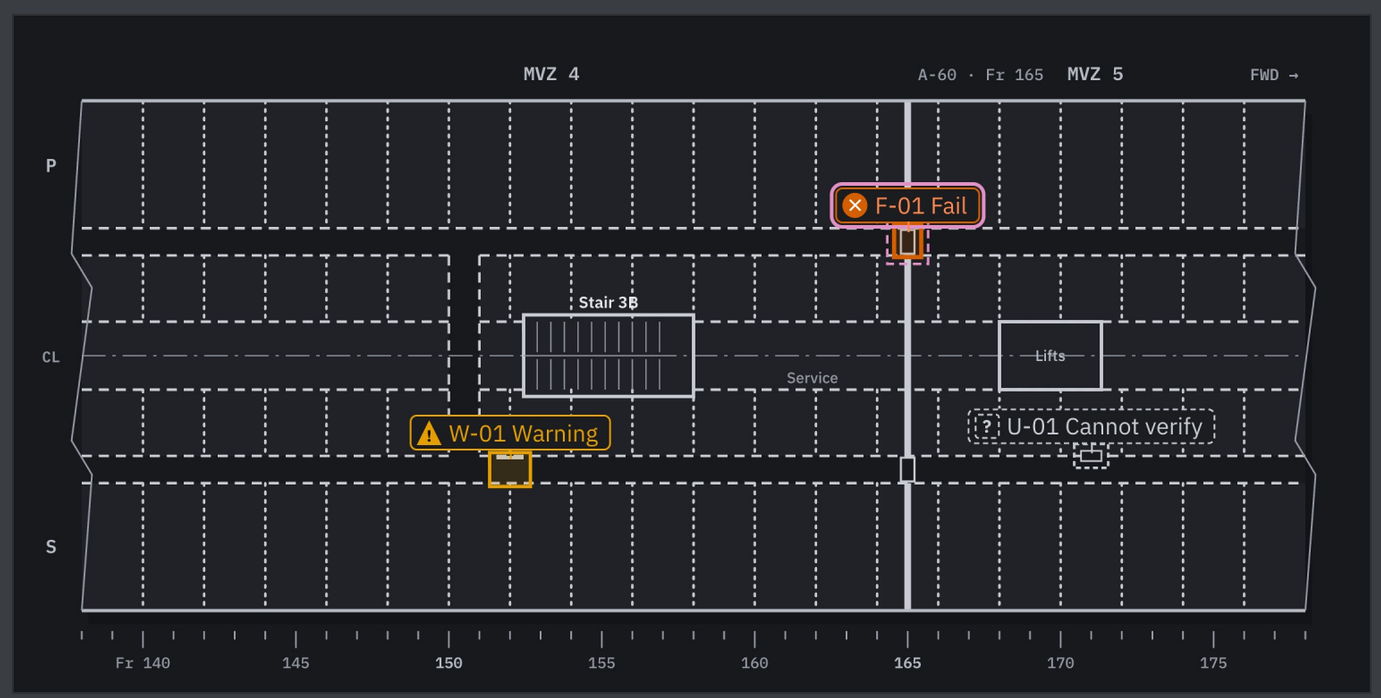

SonarIQ Demo ship · Rev A — Live

Profile: Passenger ship · > 36 passengers

Scope: Selection | **Deck 5** | Whole model

Packs: ☑ Fire & life safety ☑ Accessibility ☑ Class · DNV To verify

Analyse — 96 checks · 2.1 s · Rev A · 14:20

1	1	1	89	4
✕ Fail	⚠ Warning	[?] Cannot verify	✓ Pass	○ Dormant

Findings 3 | Chat | History

Showing open findings 3 — Group: **Discipline** | Location

FS Fire & life safety 2

✕ Fail — F-01 **Fire door FD-5-165P below bulkhead class**

Deck 5 · Fr 165 · P

SOLAS II-2/9.2.2.1.1

MVZ 4/5 bulkhead · fitted A-0 , required A-60

[?] Cannot verify — U-01 **Door D-5-171-S has no fire class**

Deck 5 · Fr 171 · S

add the property or confirm

AC Accessibility 1

⚠ Warning — W-01 **Corridor below width guideline**

Deck 5 · Fr 152 · S

PVAG 2013 draft

clear width 900

mm

. guideline

Selected: FD-5-165P · IfcDoor

SonarIQ: 1 fail · 1 warning · 1 cannot verify CAD mm

FreeCAD 1.0 · Demo_ship_RevB : 1

File Edit View Tools Macro 3D/BIM Manage Utils Windows Help

BIM

SonarIQ ▶ Analyse

Combo View

Model Tasks


Labels & Attributes

- Demo_ship_RevB
  - Deck 5
    - Spaces
      - COR-5-146-P — Fail
      - COR-5-152-S — Fail
      - Cabins (+4 · OR-117)
    - Walls
    - Doors
      - FD-5-165P — Fail
      - FD-5-165S
      - D-5-171-S — Cannot verify
    - Stairs
      - Stair 3B — Fail
  - Deck 4
  - Deck 6
  - Deck 7

Property View · Stair 3B

Property	Value
Label	Stair 3B
IFC class	IfcStair
Serves	Decks 4–7
Clear width	1,350 mm
Required	1,380 mm
MVZ	4
Rev	B

Deck 5 · Top view · Rev B **SonarIQ highlights on**

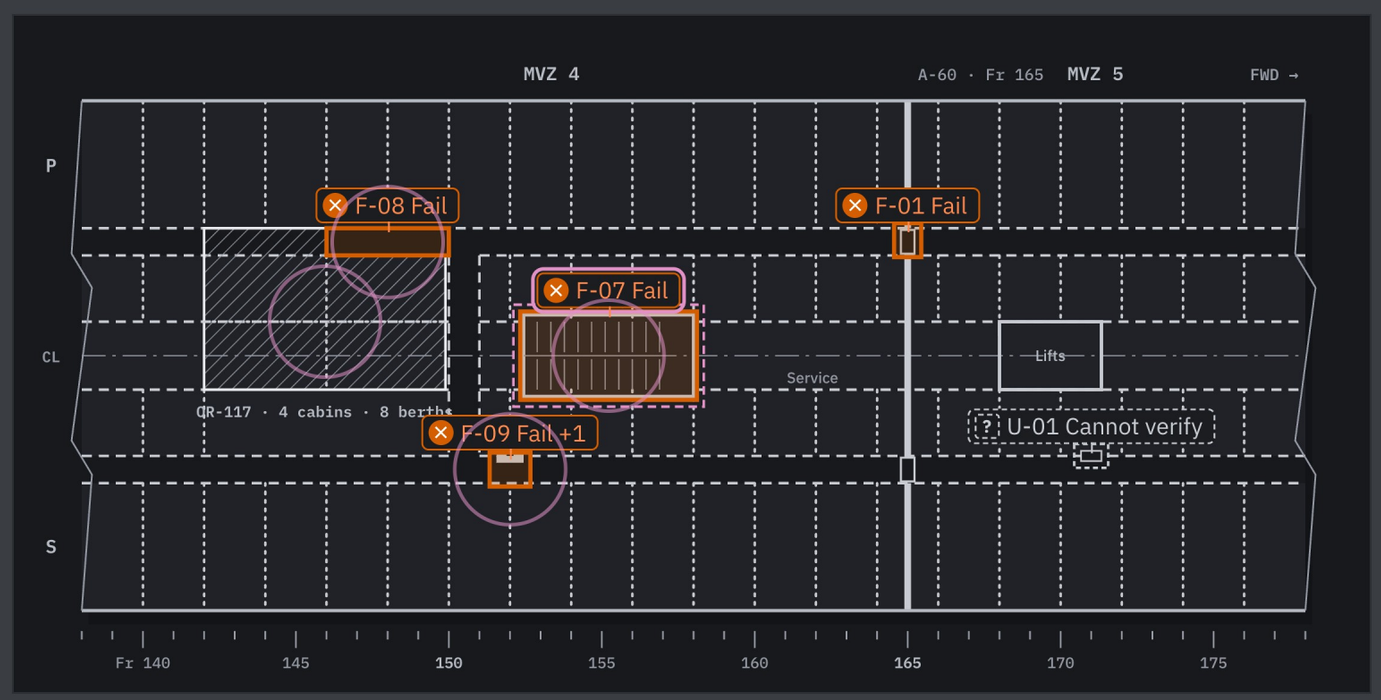

SonarIQ Demo ship · Rev B — Live

Profile: Passenger ship · > 36 passengers

Scope: Selection | **Deck 5** | Whole model

Packs: ☑ Fire & life safety ☑ Accessibility ☑ Class · DNV To verify

Analyse — 14 re-run · 0.4 s · Rev B · 14:36

3	1	1	87	4
Fail	Warning	Cannot verify	Pass	Dormant

Findings 5 | Chat | History

Rev A · Analyse · 14:20

YOU

Add four cabins aft of frame 150

EDIT PREVIEW — AI draft · you decide

Action	Add cabin block × 4
Where	Deck 5 · aft of Fr 150
Berths	8
Change order	OR-117

Confirm Cancel — Nothing changes until you confirm.


What did my last change affect? | Why does stair 3B fail?

Ask a question or describe a change — Send

Edits I can make: add a cabin block · move a wall · set a door's width · set a door's fire class.

Selected: Stair 3B · IfcStair

SonarIQ: 4 fail · 1 warning · 1 cannot verify CAD mm

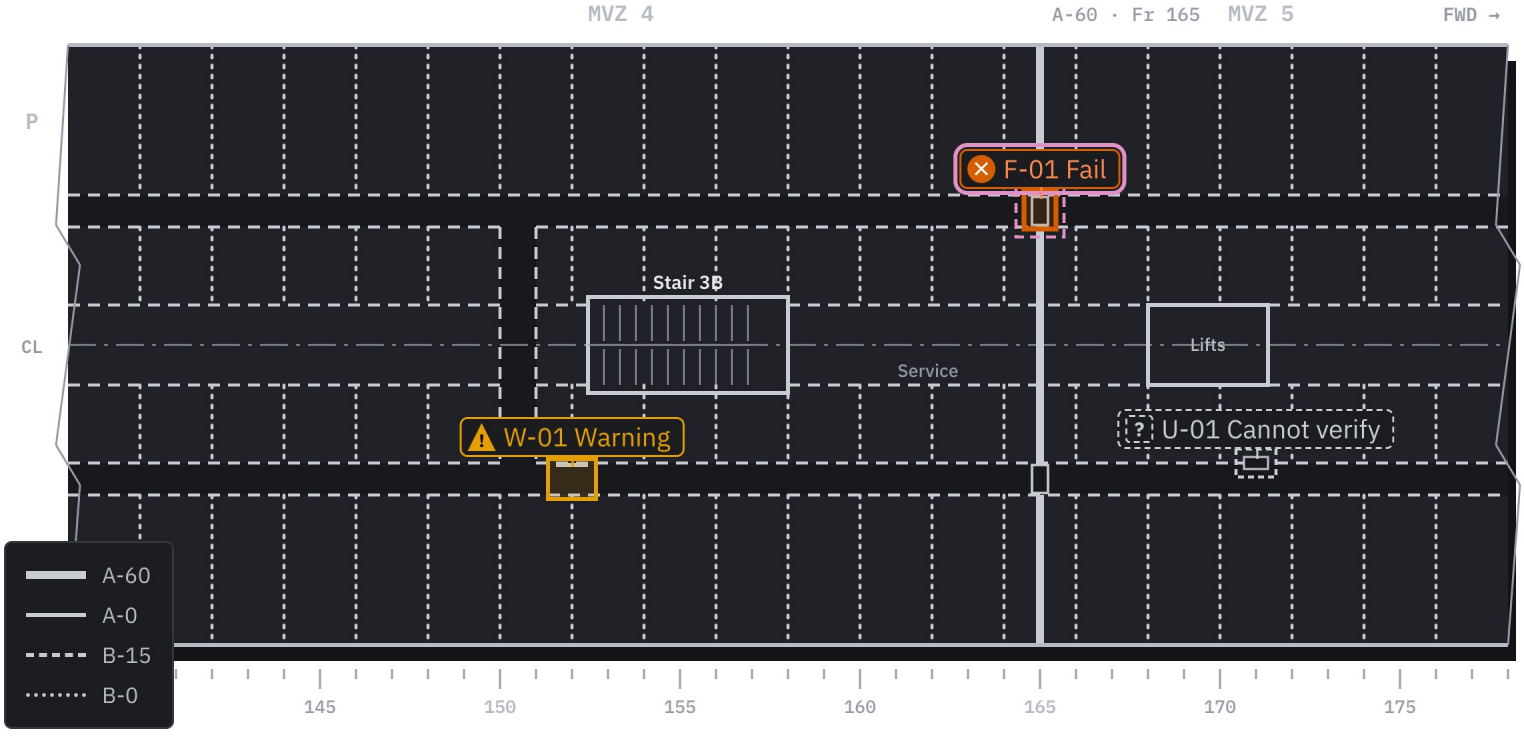
MVZ 4
A-60 · Fr 165
MVZ 5
FWD →
P
CL
F-01 Fail
Stair 3B
Service
Lifts
W-01 Warning
U-01 Cannot verify
A-60
A-0
B-15
B-0
145
150
155
160
165
170
175