


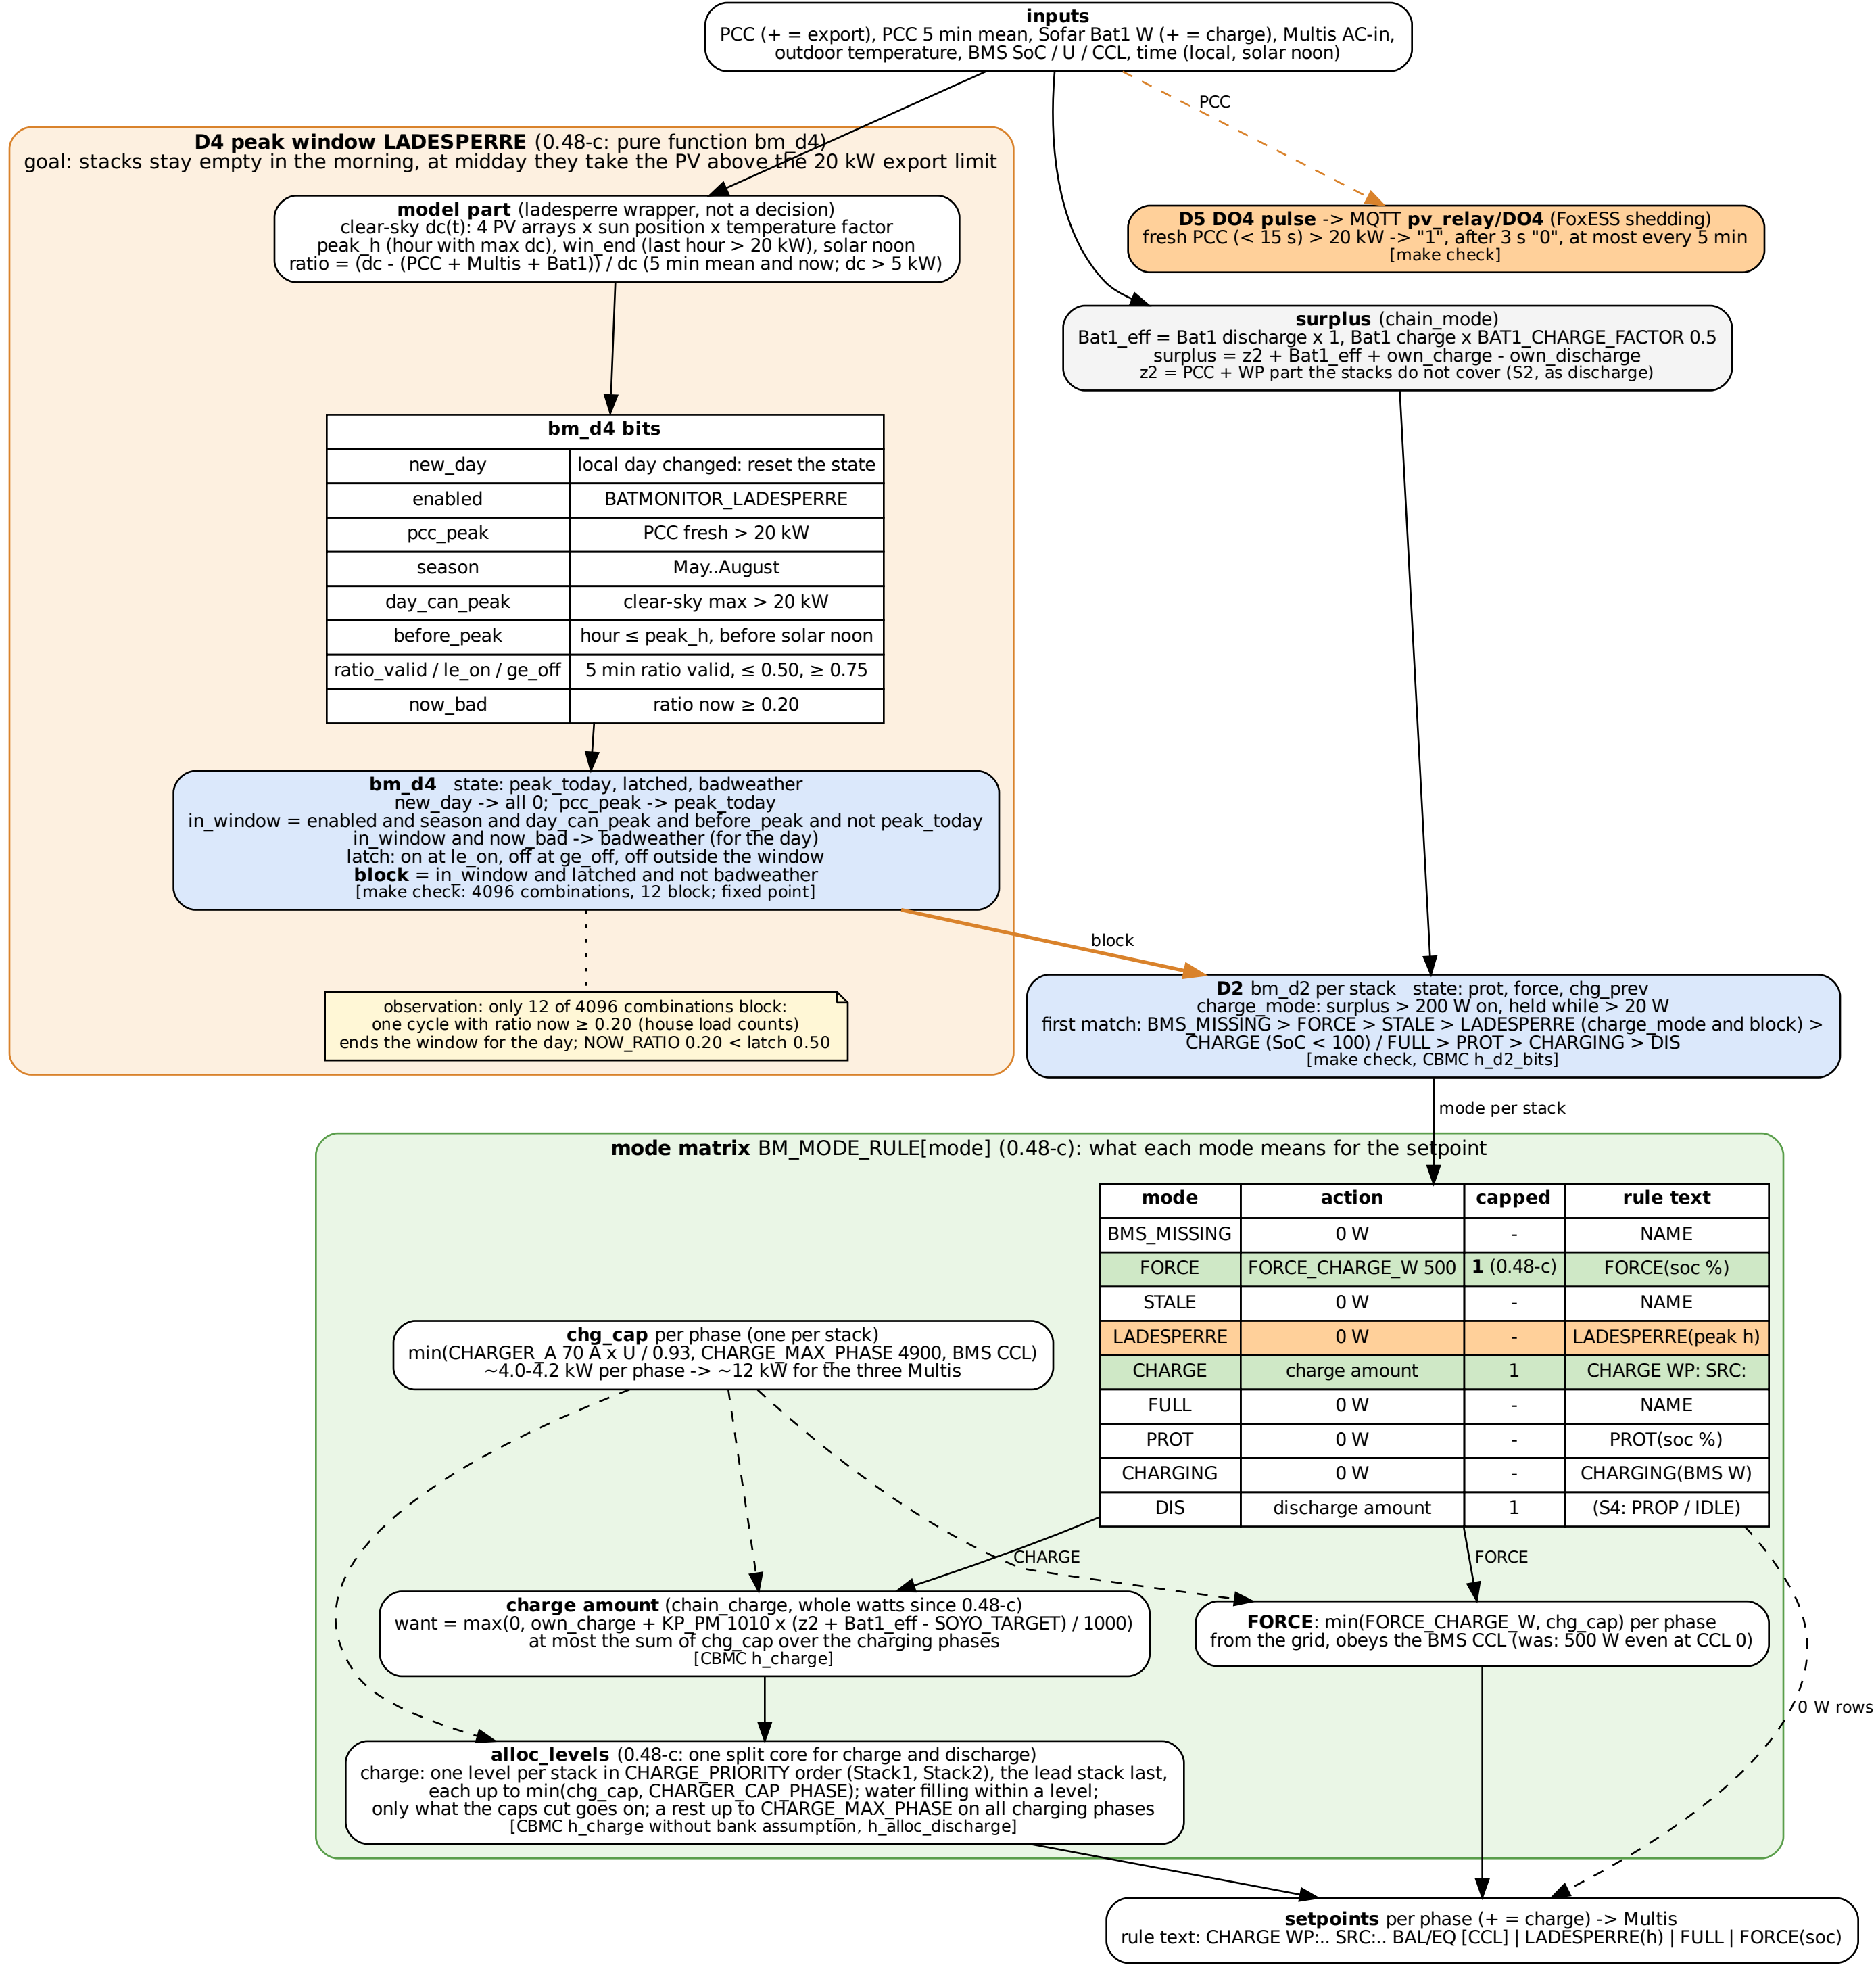

clear summer day: how the window keeps the PCC below 20 kW			
time	PV / PCC	batmonitor	stacks
05:00 .. peak	PV rising, export < 20 kW	LADESPERRE (block)	0 W, stay empty
export would pass 20 kW	PCC > 20 kW once	peak_today -> window ends -> CHARGE; DO4 pulse sheds the FoxESS	take up to ~12 kW
peak hour / solar noon	highest PV	window over anyway -> CHARGE	export - ~12 kW
afternoon	PV falling	CHARGE until FULL	-> 100 %
cloudy morning	shortfall ≥ 20 %	badweather -> no block	charge at once