
# batmonitor 0.76-py - decision flow 1 / 6: D1 - Sofar first, S3 source of the discharge, winter heat pump rule

from bm_tables.h: each table is asked row by row, top to bottom; the first row that matches decides (yes -> its result, no -> the next row)

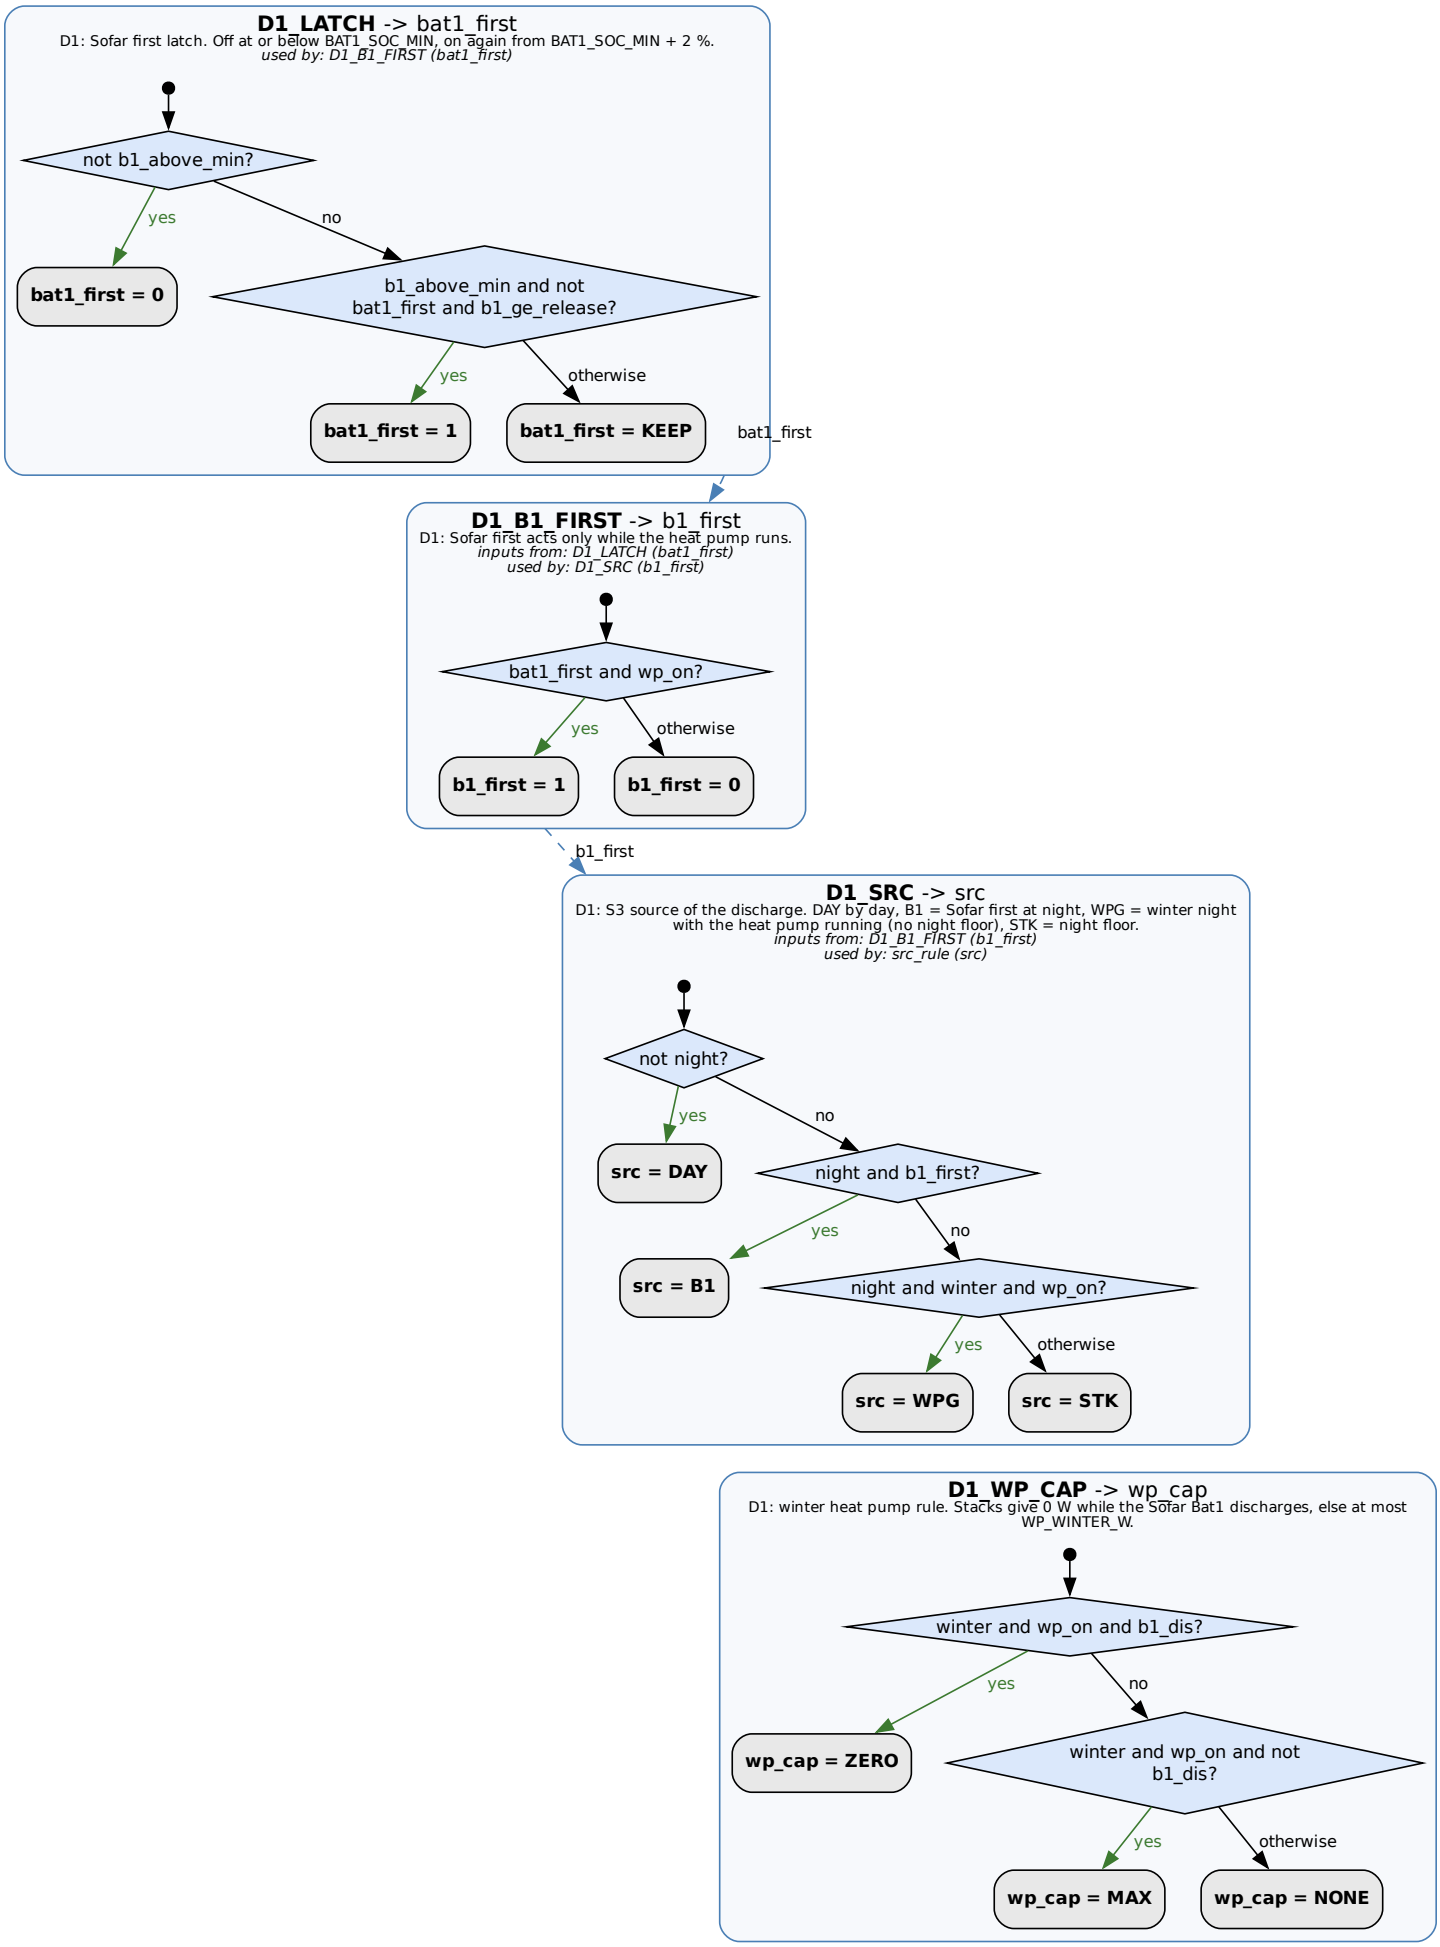


# batmonitor 0.76-py - decision flow 2 / 6: D2 - per stack: charge mode and the latches protection / force charge / LOW

from bm_tables.h: each table is asked row by row, top to bottom; the first row that matches decides (yes -> its result, no -> the next row)


## **D2_CHARGE_MODE** -> charge_mode

D2: charge mode on the surplus (> 200 W), held down to 20 W once charging.
*used by: D2_MODE (charge_mode)*

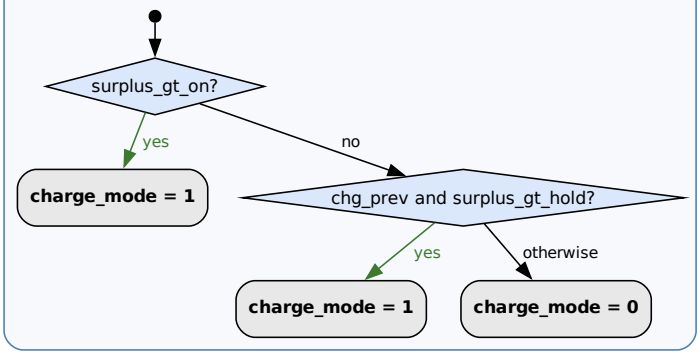



## **D2_PROT** -> prot

D2: SoC protection per stack, SOC_MIN .. SOC_MIN_RELEASE (only while the BMS reports).
*used by: D2_MODE (prot)*

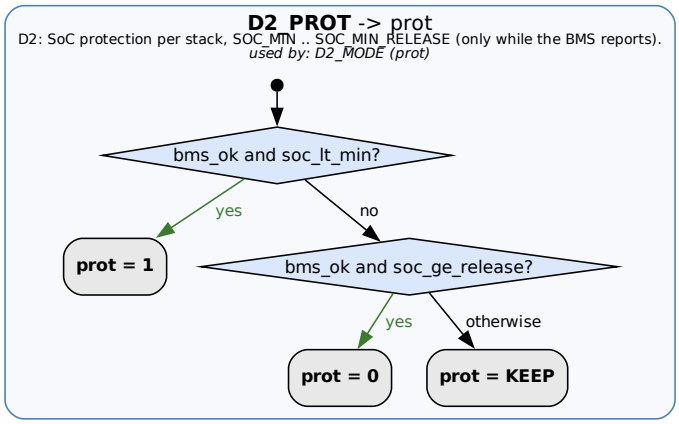



## **D2_FORCE** -> force

D2: grid force charge per stack, SOC_FORCE .. SOC_FORCE_RELEASE.
*used by: D2_MODE (force)*

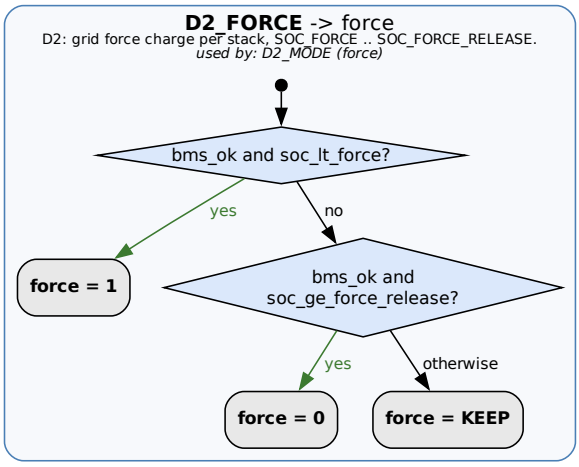



## **D2_LOW** -> low

D2: LOW force charge per stack: DCL 0 or lowest cell < CELL_FORCE_V; ends once DCL is back, the cell >= CELL_FORCE_RELEASE_V and the SoC >= SOC_MIN_RELEASE.
*used by: D2_MODE (low)*

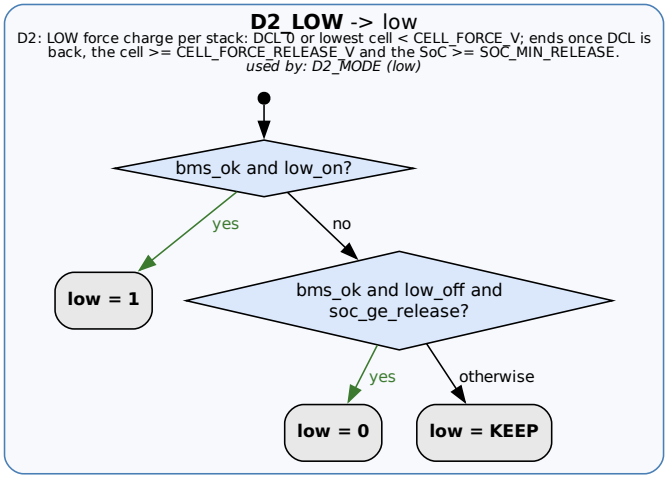


# batmonitor 0.76-py - decision flow 3 / 6: D2 - mode per stack (priority top to bottom)


from bm_tables.h: each table is asked row by row, top to bottom; the first row that matches decides (yes -> its result, no -> the next row)

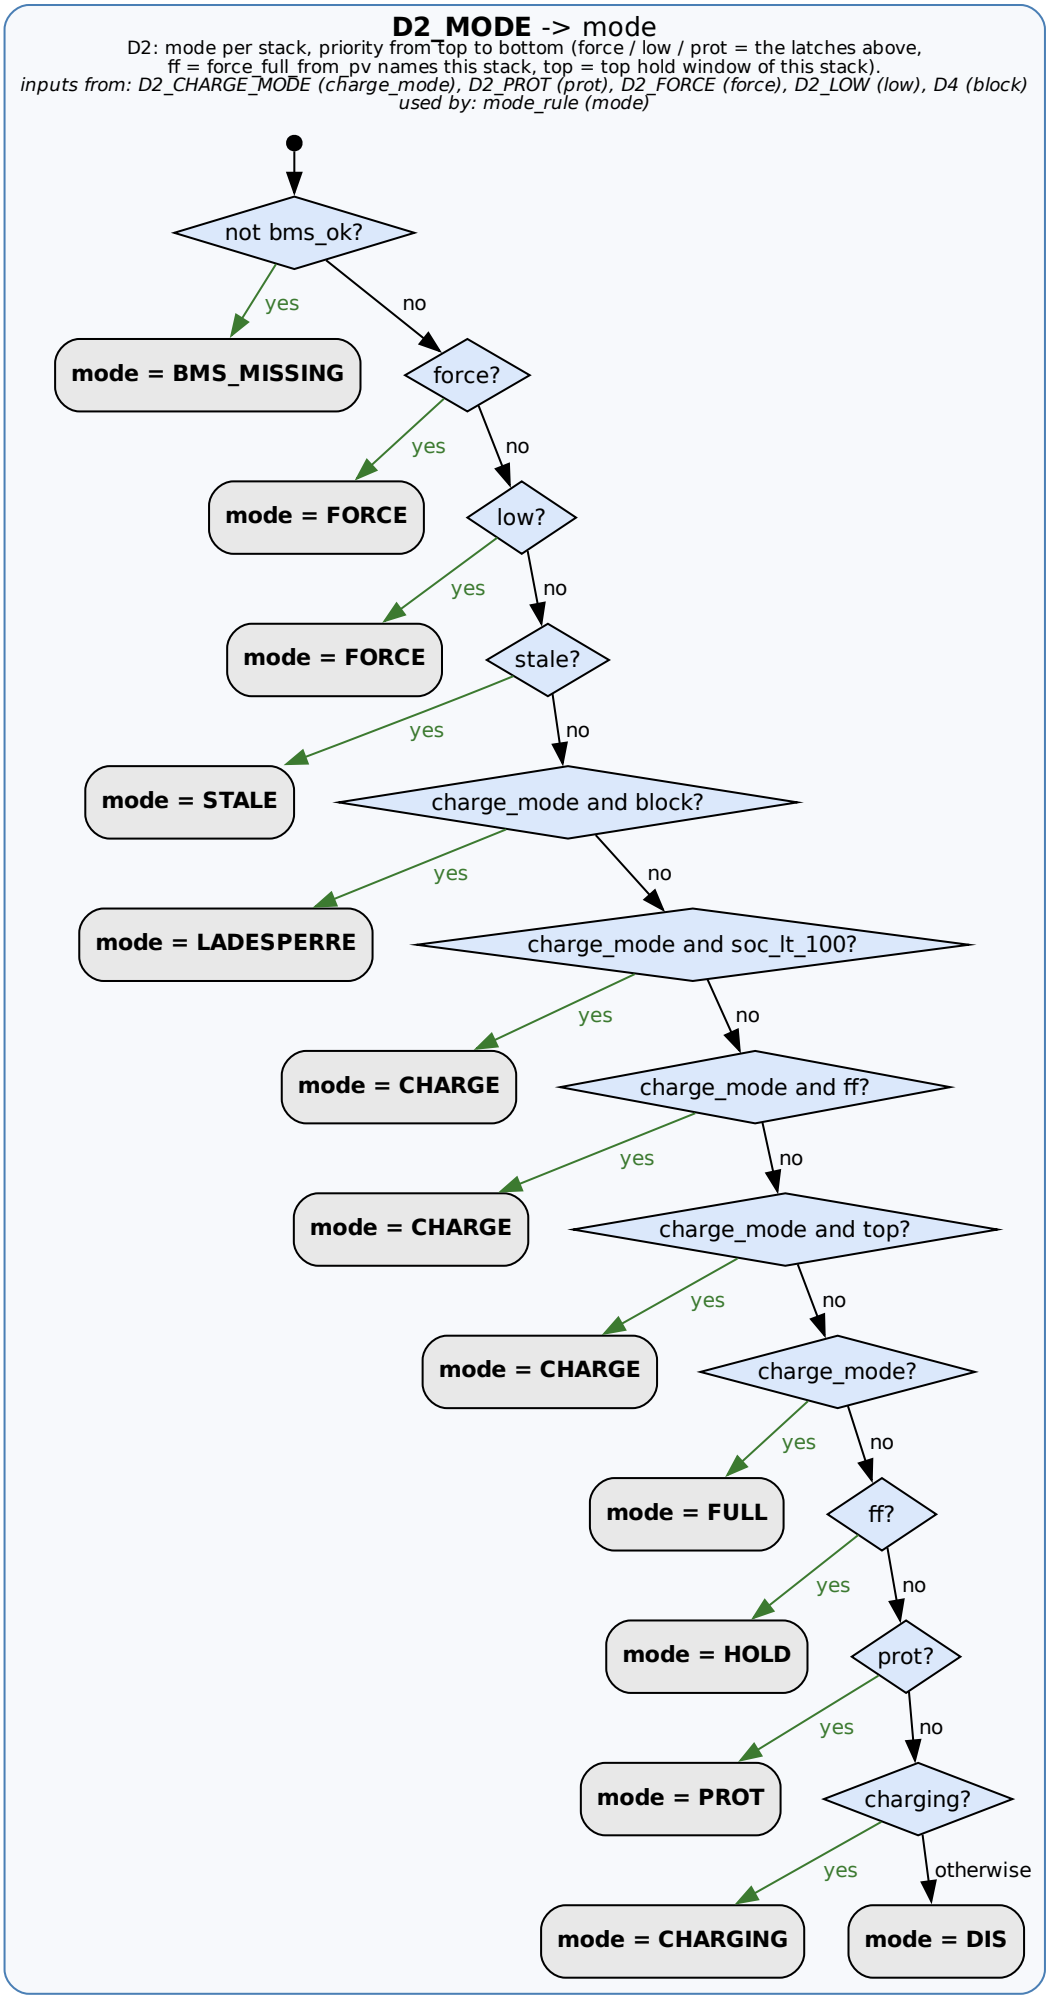

## batmonitor 0.76-py - decision flow 4 / 6: SoC balancing and D3 discharge PROP / IDLE


from bm_tables.h: each table is asked row by row, top to bottom; the first row that matches decides (yes -> its result, no -> the next row)

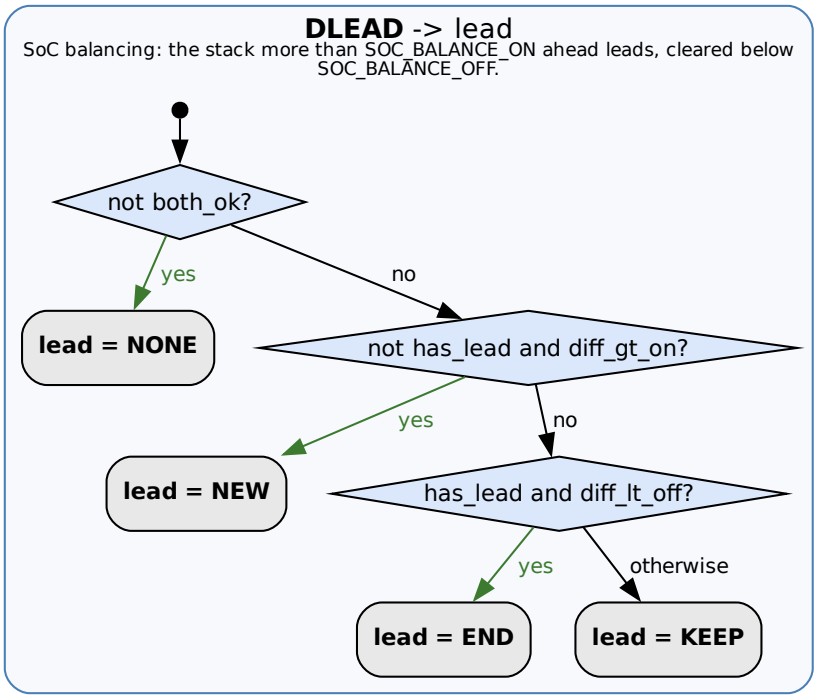

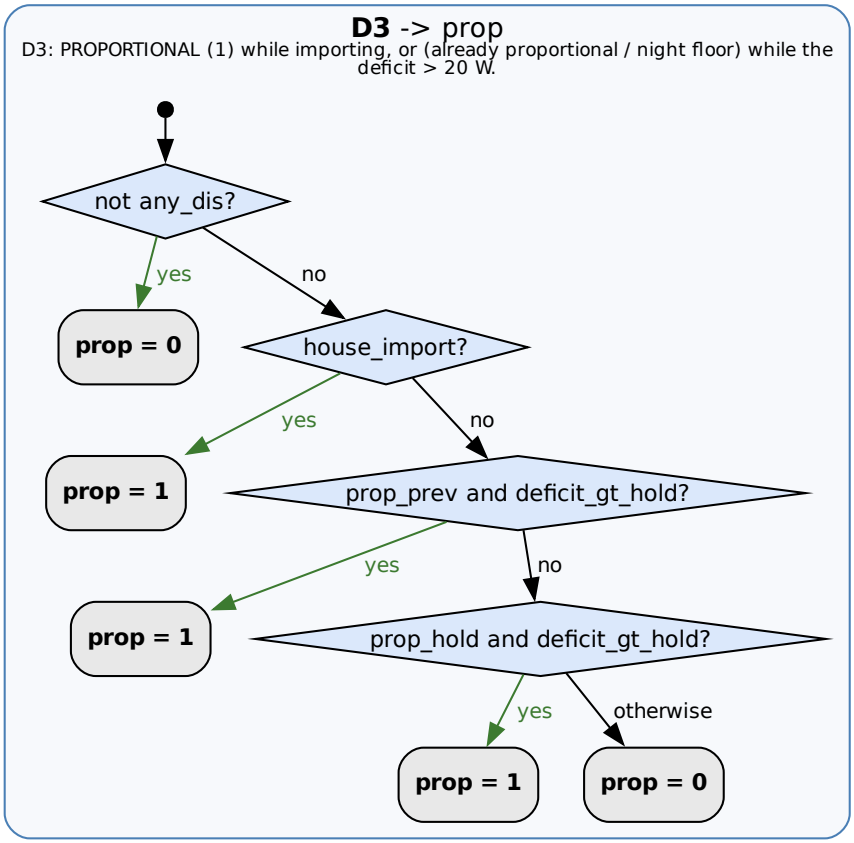
# batmonitor 0.76-py - decision flow 5 / 6: D4 - summer peak window

from bm_tables.h: each table is asked row by row, top to bottom; the first row that matches decides (yes -> its result, no -> the next row)



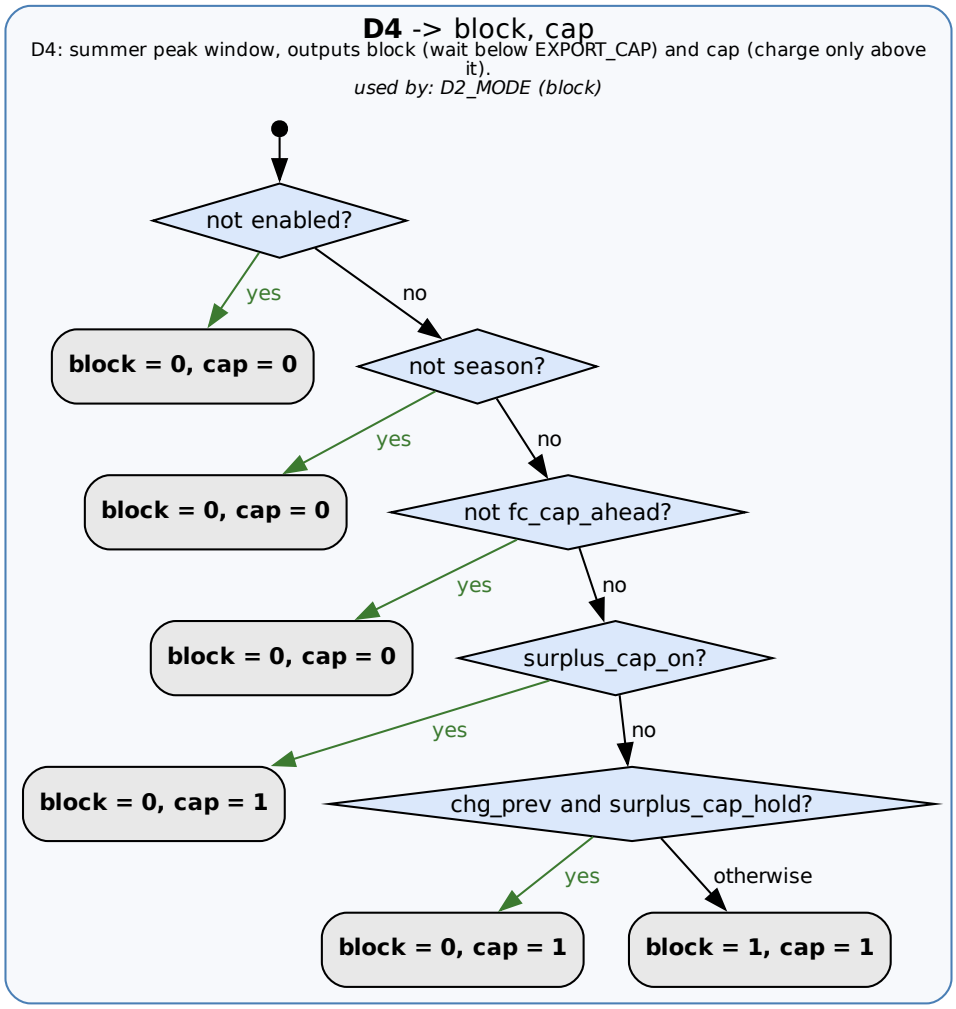


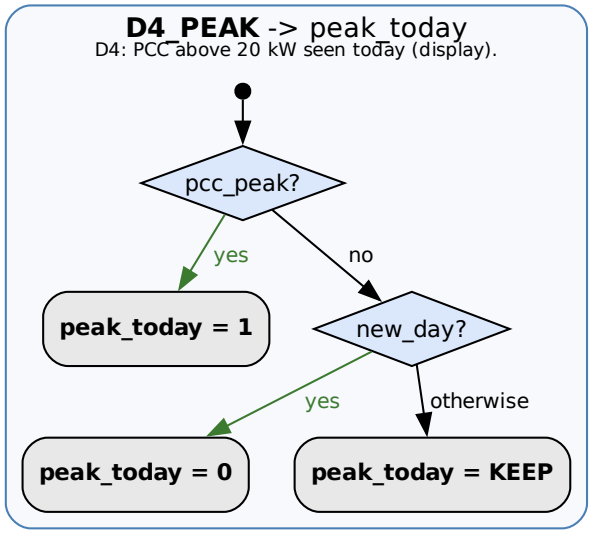
# batmonitor 0.76-py - decision flow 6 / 6: D5 - DO4 pulse, D7 - house on AC-out1

from bm_tables.h: each table is asked row by row, top to bottom; the first row that matches decides (yes -> its result, no -> the next row)

## D5 -> do4

D5: DO4 pulse (FoxESS shedding): PCC > 20 kW for the grace time or > DO4_HARD_W, or grid offline and PV overfeeds one AC-out; never twice within the lockout.

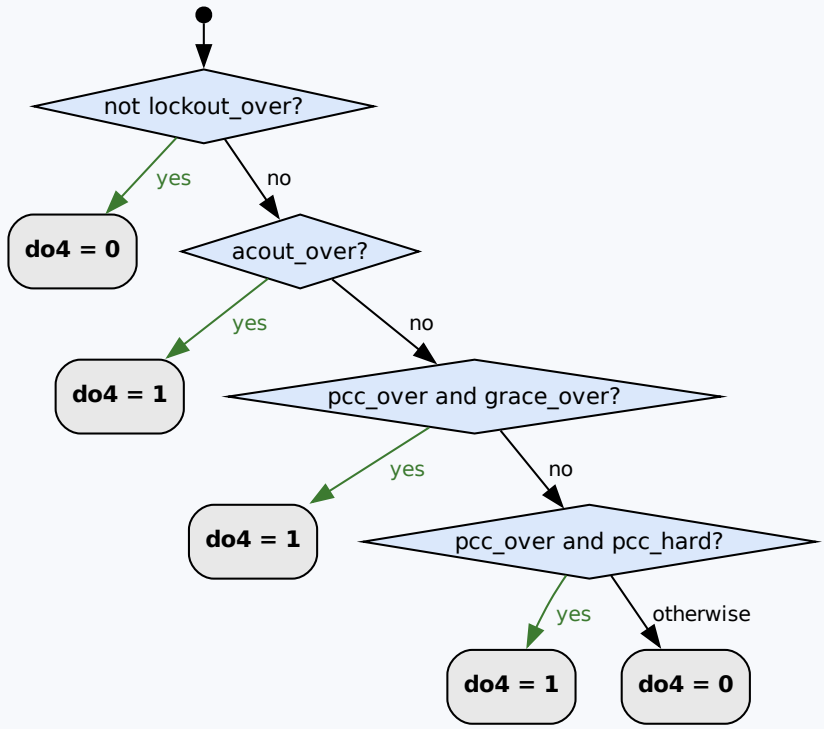


## D7 -> on, under

D7: house on AC-out1. HOUSE_ACOUT 0 = off, 1 = on, auto: on above 99 W, off after 60 s below 30 W.

