batmonitor 0.57-c: heat pump matrix BM_WP_RULE (bm_logic.c)
D1 picks one row (first match top-down), the amounts read only its columns - make check: 442368 combinations, row = 0.56-c chains

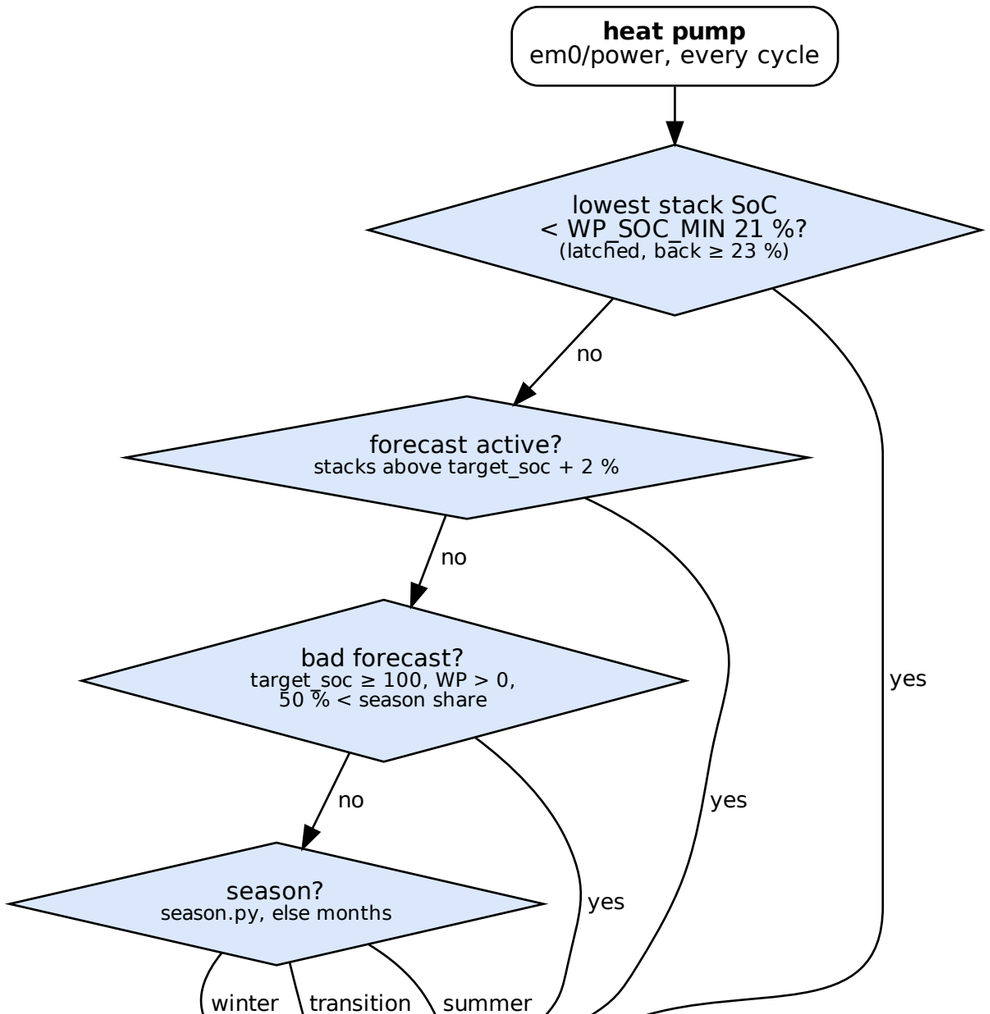

row	rule text (WP running)	cover: the stacks give the WP (discharge)	charge point z2 (the rest of the WP)	pv_charge D6 WPPV	grid pays
LOWSOC	WP:LOWSOC	NONE - 0 W	PCC + WP	0	all of the WP
FC	WP:FC	ALL	PCC	**1**	- (WPPV: min(50 % WP, 2 kW))
FCBAD	WP:FCBAD	BAD - 50 % (WP_BAT_SHARE_BAD)	PCC + 50 % WP	0	50 % of the WP
WINTER	WP:Z2	NONE - 0 W	PCC + WP	0	all of the WP
TRANS	WP:ALL, WP:T1900 above 1900 W	TRANS - up to 1900 W	PCC + (WP - 1900)	0	WP above 1900 W
SUMMER	WP:ALL	ALL	PCC	**1**	- (WPPV: min(50 % WP, 2 kW))

WP < 300 W: text WP:OFF, em0 stale: WP:NA (winter / transition: discharge capped at WP_CAP 1 kW) - the row still sets cover.
D6 WPPV (0.56-c) where pv_charge = 1, by day, no D4 export cap, PV covers house + WP (surplus > 200 W on, held ≥ 0):
the charge point gets + min(WP_PV_CHG_SHARE 50 % x WP, WP_PV_GRID_MAX 2000 W): the stacks charge it, the grid buys it as cheap heat power (rule text + WPPV).