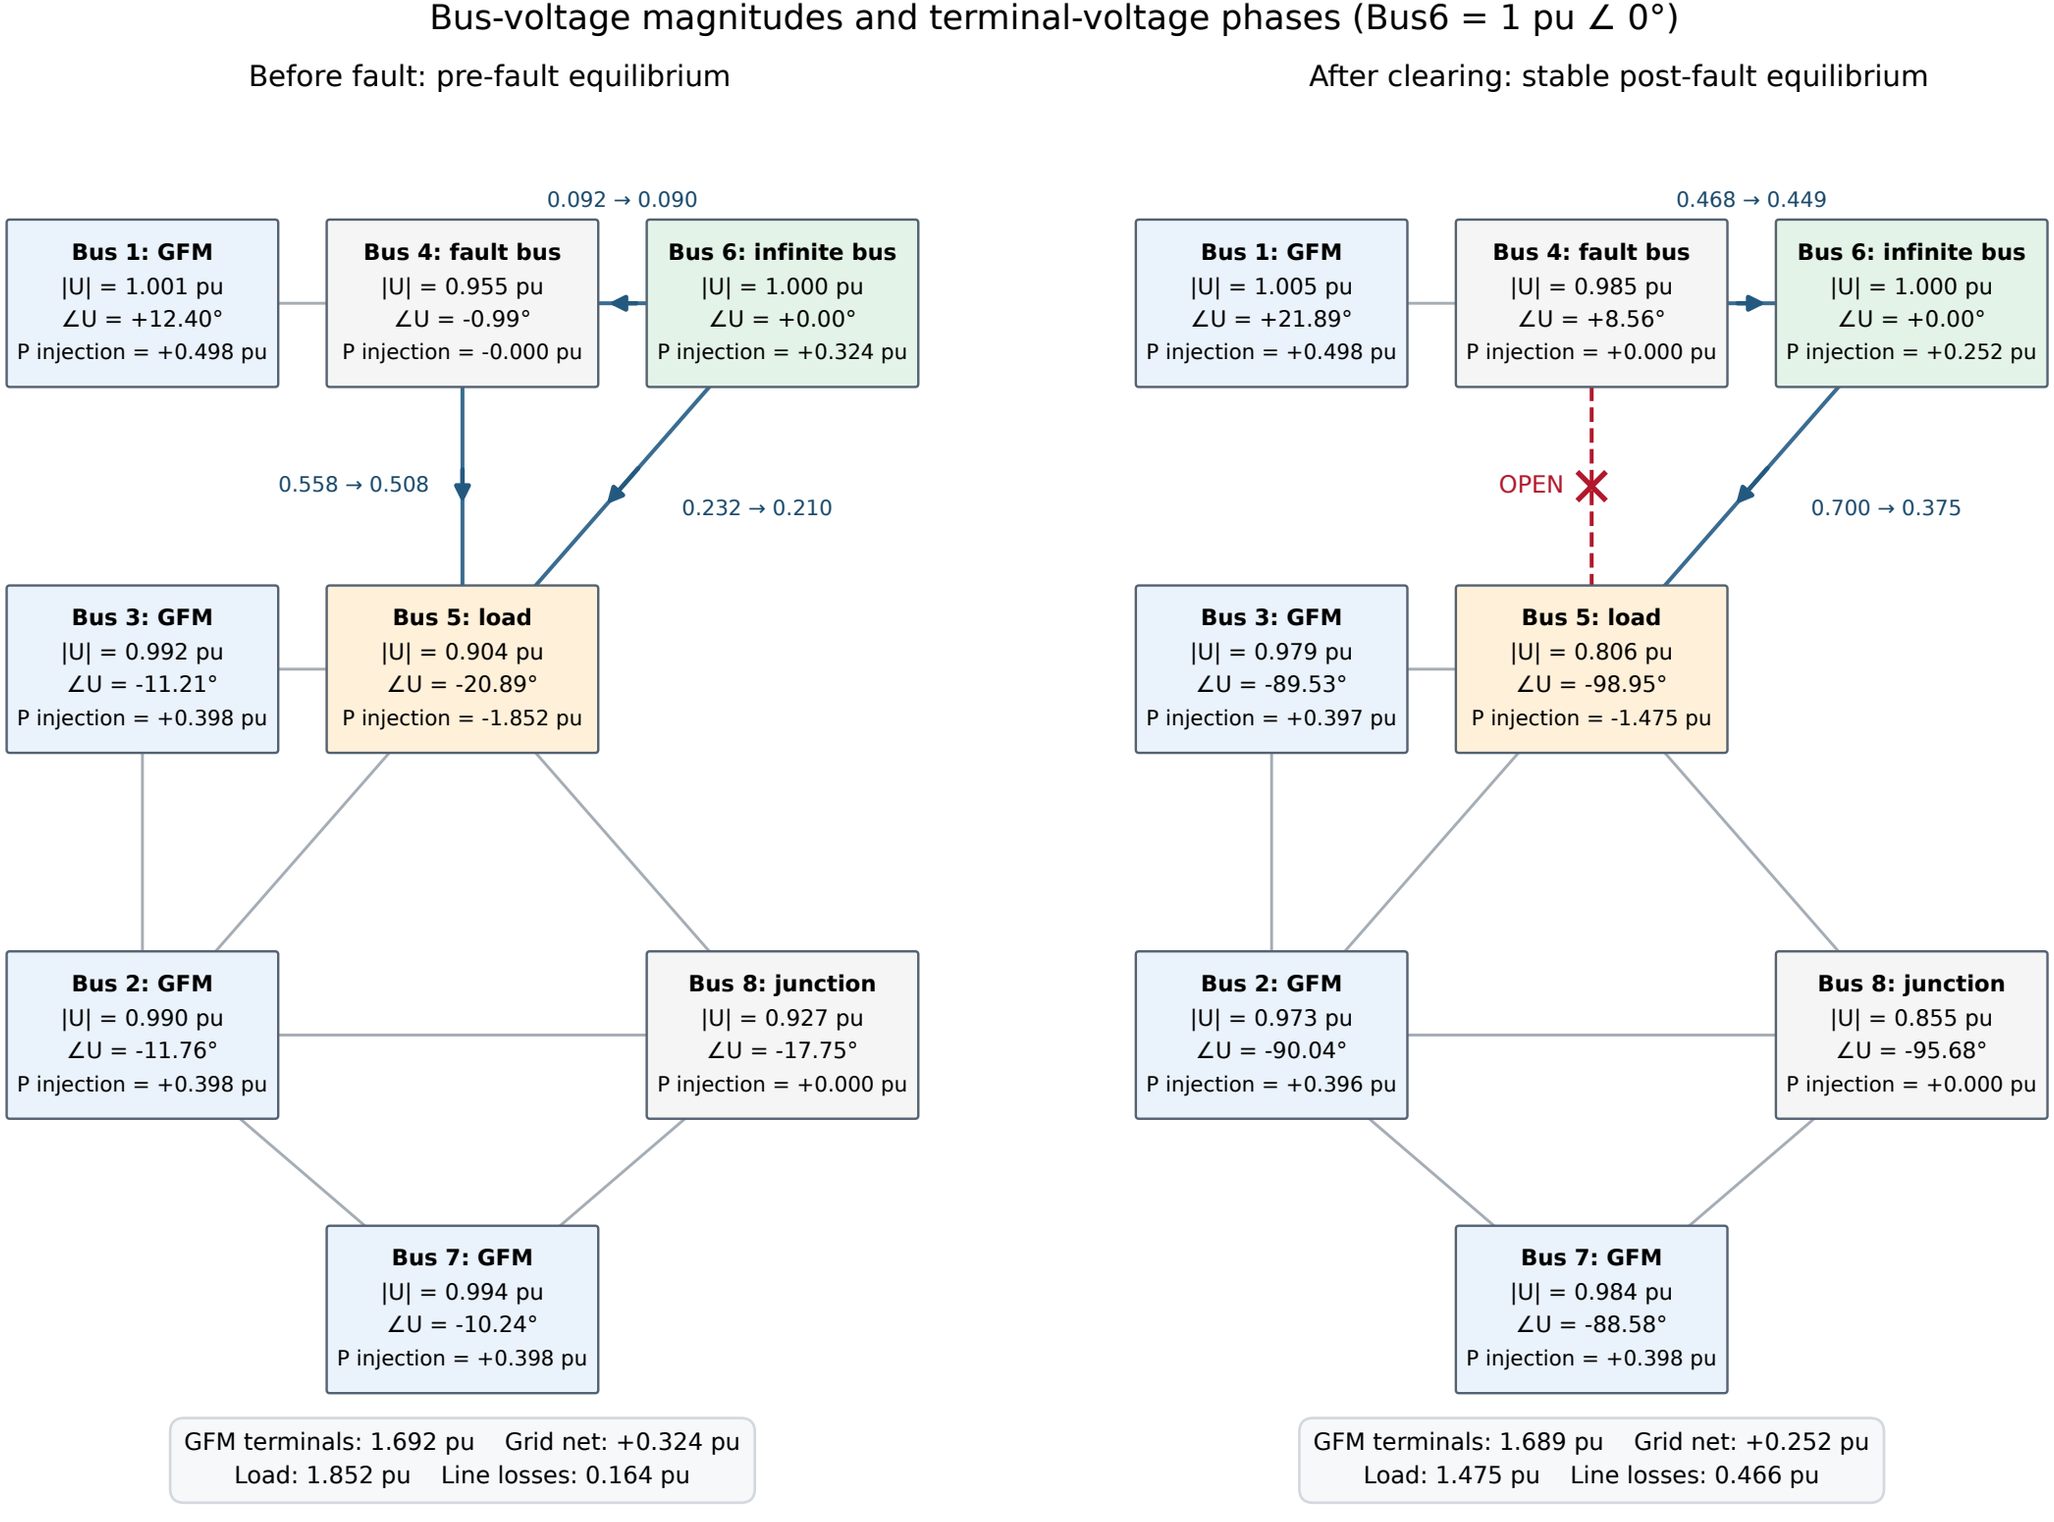
Bus-voltage magnitudes and terminal-voltage phases (Bus6 = 1 pu ∠ 0°)
Before fault: pre-fault equilibrium
After clearing: stable post-fault equilibrium
0.092 → 0.090
Bus 1: GFM
|U| = 1.001 pu
∠U = +12.40°
P injection = +0.498 pu
Bus 4: fault bus
|U| = 0.955 pu
∠U = -0.99°
P injection = -0.000 pu
Bus 6: infinite bus
|U| = 1.000 pu
∠U = +0.00°
P injection = +0.324 pu
0.558 → 0.508
0.232 → 0.210
Bus 3: GFM
|U| = 0.992 pu
∠U = -11.21°
P injection = +0.398 pu
Bus 5: load
|U| = 0.904 pu
∠U = -20.89°
P injection = -1.852 pu
Bus 2: GFM
|U| = 0.990 pu
∠U = -11.76°
P injection = +0.398 pu
Bus 8: junction
|U| = 0.927 pu
∠U = -17.75°
P injection = +0.000 pu
Bus 7: GFM
|U| = 0.994 pu
∠U = -10.24°
P injection = +0.398 pu
GFM terminals: 1.692 pu Grid net: +0.324 pu
Load: 1.852 pu Line losses: 0.164 pu
0.468 → 0.449
Bus 1: GFM
|U| = 1.005 pu
∠U = +21.89°
P injection = +0.498 pu
Bus 4: fault bus
|U| = 0.985 pu
∠U = +8.56°
P injection = +0.000 pu
Bus 6: infinite bus
|U| = 1.000 pu
∠U = +0.00°
P injection = +0.252 pu
OPEN
0.700 → 0.375
Bus 3: GFM
|U| = 0.979 pu
∠U = -89.53°
P injection = +0.397 pu
Bus 5: load
|U| = 0.806 pu
∠U = -98.95°
P injection = -1.475 pu
Bus 2: GFM
|U| = 0.973 pu
∠U = -90.04°
P injection = +0.396 pu
Bus 8: junction
|U| = 0.855 pu
∠U = -95.68°
P injection = +0.000 pu
Bus 7: GFM
|U| = 0.984 pu
∠U = -88.58°
P injection = +0.398 pu
GFM terminals: 1.689 pu Grid net: +0.252 pu
Load: 1.475 pu Line losses: 0.466 pu
Blue arrows: selected active-power paths; labels are sending-end P → received P [pu].
Bus P: net terminal injection (+ generation, − consumption). Post-fault panel is an equilibrium, not the clearing instant.