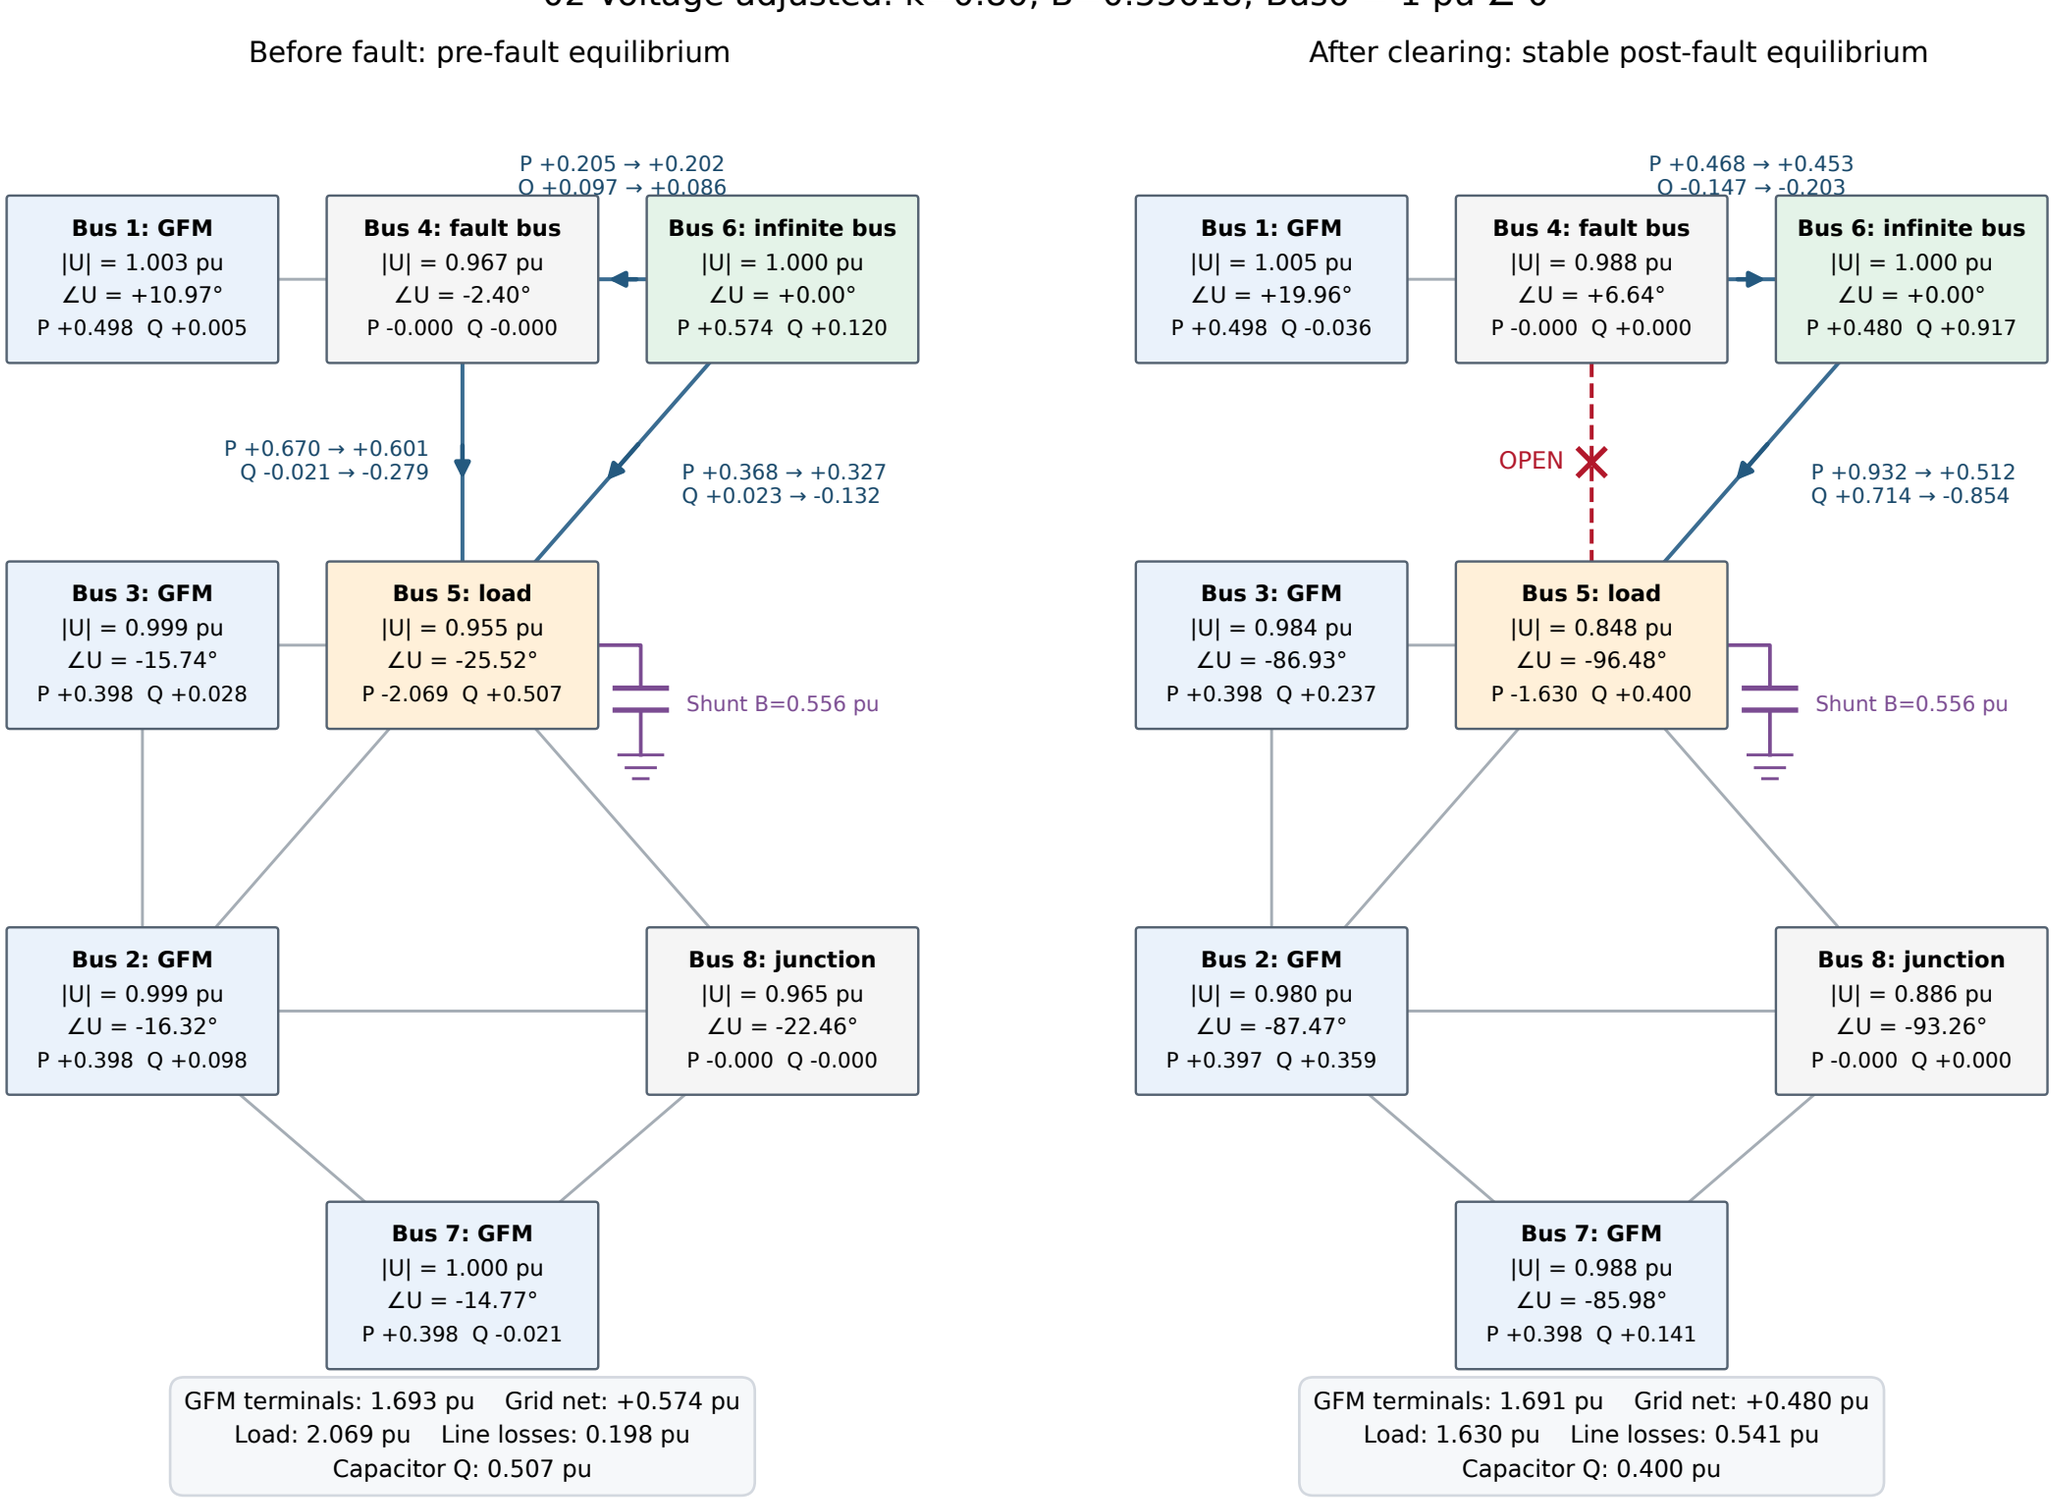
02 Voltage adjusted: k=0.80, B=0.55618; Bus6 = 1 pu ∠ 0°
Before fault: pre-fault equilibrium
After clearing: stable post-fault equilibrium
P +0.205 → +0.202
Q +0.097 → +0.086
Bus 1: GFM
|U| = 1.003 pu
∠U = +10.97°
P +0.498 Q +0.005
Bus 4: fault bus
|U| = 0.967 pu
∠U = -2.40°
P -0.000 Q -0.000
Bus 6: infinite bus
|U| = 1.000 pu
∠U = +0.00°
P +0.574 Q +0.120
P +0.670 → +0.601
Q -0.021 → -0.279
P +0.368 → +0.327
Q +0.023 → -0.132
Bus 3: GFM
|U| = 0.999 pu
∠U = -15.74°
P +0.398 Q +0.028
Bus 5: load
|U| = 0.955 pu
∠U = -25.52°
P -2.069 Q +0.507
Shunt B=0.556 pu
Bus 2: GFM
|U| = 0.999 pu
∠U = -16.32°
P +0.398 Q +0.098
Bus 8: junction
|U| = 0.965 pu
∠U = -22.46°
P -0.000 Q -0.000
Bus 7: GFM
|U| = 1.000 pu
∠U = -14.77°
P +0.398 Q -0.021
GFM terminals: 1.693 pu Grid net: +0.574 pu
Load: 2.069 pu Line losses: 0.198 pu
Capacitor Q: 0.507 pu
P +0.468 → +0.453
Q -0.147 → -0.203
Bus 1: GFM
|U| = 1.005 pu
∠U = +19.96°
P +0.498 Q -0.036
Bus 4: fault bus
|U| = 0.988 pu
∠U = +6.64°
P -0.000 Q +0.000
Bus 6: infinite bus
|U| = 1.000 pu
∠U = +0.00°
P +0.480 Q +0.917
OPEN
P +0.932 → +0.512
Q +0.714 → -0.854
Bus 3: GFM
|U| = 0.984 pu
∠U = -86.93°
P +0.398 Q +0.237
Bus 5: load
|U| = 0.848 pu
∠U = -96.48°
P -1.630 Q +0.400
Shunt B=0.556 pu
Bus 2: GFM
|U| = 0.980 pu
∠U = -87.47°
P +0.397 Q +0.359
Bus 8: junction
|U| = 0.886 pu
∠U = -93.26°
P -0.000 Q +0.000
Bus 7: GFM
|U| = 0.988 pu
∠U = -85.98°
P +0.398 Q +0.141
GFM terminals: 1.691 pu Grid net: +0.480 pu
Load: 1.630 pu Line losses: 0.541 pu
Capacitor Q: 0.400 pu
Arrows follow P; labels: signed sending-end → received P/Q [pu] along that direction.
Bus P/Q: net injections (+ supply, − consumption). Post-fault panel: stable equilibrium, not clearing instant.