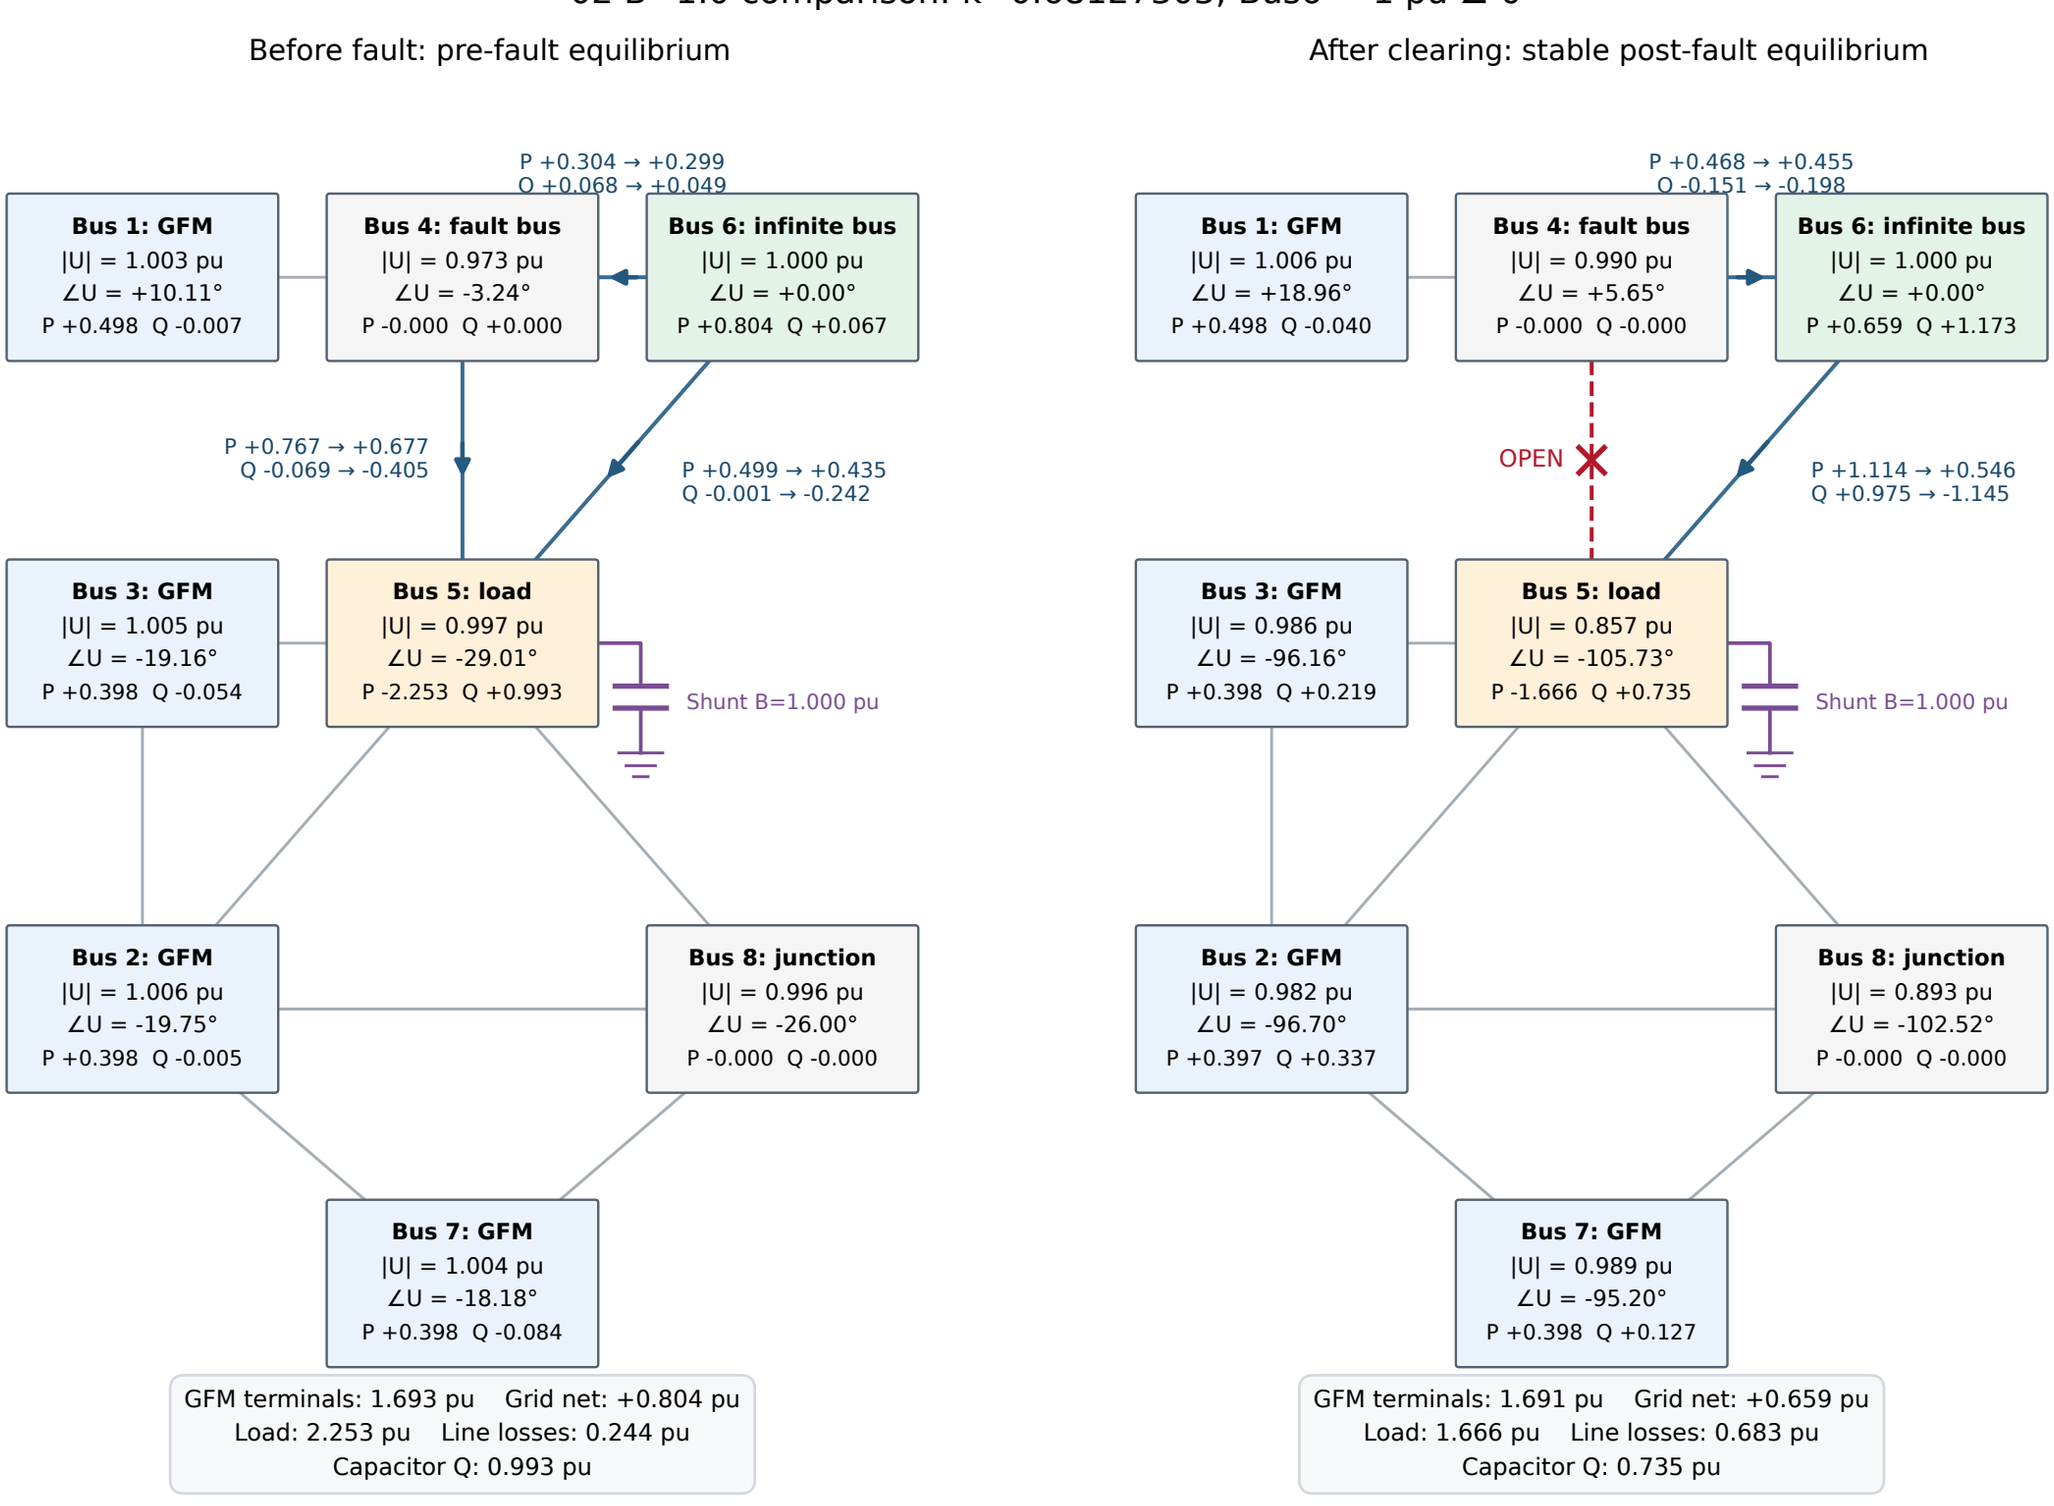
02 B=1.0 comparison: k=0.68127303; Bus6 = 1 pu ∠ 0°
Before fault: pre-fault equilibrium
After clearing: stable post-fault equilibrium
P +0.304 → +0.299
Q +0.068 → +0.049
Bus 1: GFM
|U| = 1.003 pu
∠U = +10.11°
P +0.498 Q -0.007
Bus 4: fault bus
|U| = 0.973 pu
∠U = -3.24°
P -0.000 Q +0.000
Bus 6: infinite bus
|U| = 1.000 pu
∠U = +0.00°
P +0.804 Q +0.067
P +0.767 → +0.677
Q -0.069 → -0.405
P +0.499 → +0.435
Q -0.001 → -0.242
Bus 3: GFM
|U| = 1.005 pu
∠U = -19.16°
P +0.398 Q -0.054
Bus 5: load
|U| = 0.997 pu
∠U = -29.01°
P -2.253 Q +0.993
Shunt B=1.000 pu
Bus 2: GFM
|U| = 1.006 pu
∠U = -19.75°
P +0.398 Q -0.005
Bus 8: junction
|U| = 0.996 pu
∠U = -26.00°
P -0.000 Q -0.000
Bus 7: GFM
|U| = 1.004 pu
∠U = -18.18°
P +0.398 Q -0.084
GFM terminals: 1.693 pu Grid net: +0.804 pu
Load: 2.253 pu Line losses: 0.244 pu
Capacitor Q: 0.993 pu
P +0.468 → +0.455
Q -0.151 → -0.198
Bus 1: GFM
|U| = 1.006 pu
∠U = +18.96°
P +0.498 Q -0.040
Bus 4: fault bus
|U| = 0.990 pu
∠U = +5.65°
P -0.000 Q -0.000
Bus 6: infinite bus
|U| = 1.000 pu
∠U = +0.00°
P +0.659 Q +1.173
OPEN
P +1.114 → +0.546
Q +0.975 → -1.145
Bus 3: GFM
|U| = 0.986 pu
∠U = -96.16°
P +0.398 Q +0.219
Bus 5: load
|U| = 0.857 pu
∠U = -105.73°
P -1.666 Q +0.735
Shunt B=1.000 pu
Bus 2: GFM
|U| = 0.982 pu
∠U = -96.70°
P +0.397 Q +0.337
Bus 8: junction
|U| = 0.893 pu
∠U = -102.52°
P -0.000 Q -0.000
Bus 7: GFM
|U| = 0.989 pu
∠U = -95.20°
P +0.398 Q +0.127
GFM terminals: 1.691 pu Grid net: +0.659 pu
Load: 1.666 pu Line losses: 0.683 pu
Capacitor Q: 0.735 pu
Arrows follow P; labels: signed sending-end → received P/Q [pu] along that direction.
Bus P/Q: net injections (+ supply, − consumption). Post-fault panel: stable equilibrium, not clearing instant.