

- Null-space projector

$$N_\tau = I_7 - J^\top J^+\top, \quad \tau_{\text{null}} = \tau_d + \tau_\sigma$$

Projects secondary joint torques into the kinematic null space.

J : joint $\rightarrow$ EE velocities

J^+ : pseudoinverse

I_7 : 7 $\times$ 7 identity matrix

- Damping torque

$$\tau_d = -d_{\text{null}} N_\tau \dot{q}$$

Opposes redundant joint velocity.
Zero at zero joint velocity.

d_{null} : damping coefficient [N m s/rad]

$\dot{q}$: measured joint velocity

- Conditioning torque

$$\tau_\sigma = k_\sigma N_\tau (s_\sigma v_7)$$


Seeks better local conditioning.
Can act at zero joint velocity.

k_σ : torque magnitude [N m]

v_7 : unit null-space direction

s_σ : direction choice, zero in deadband

Disturbance demonstration

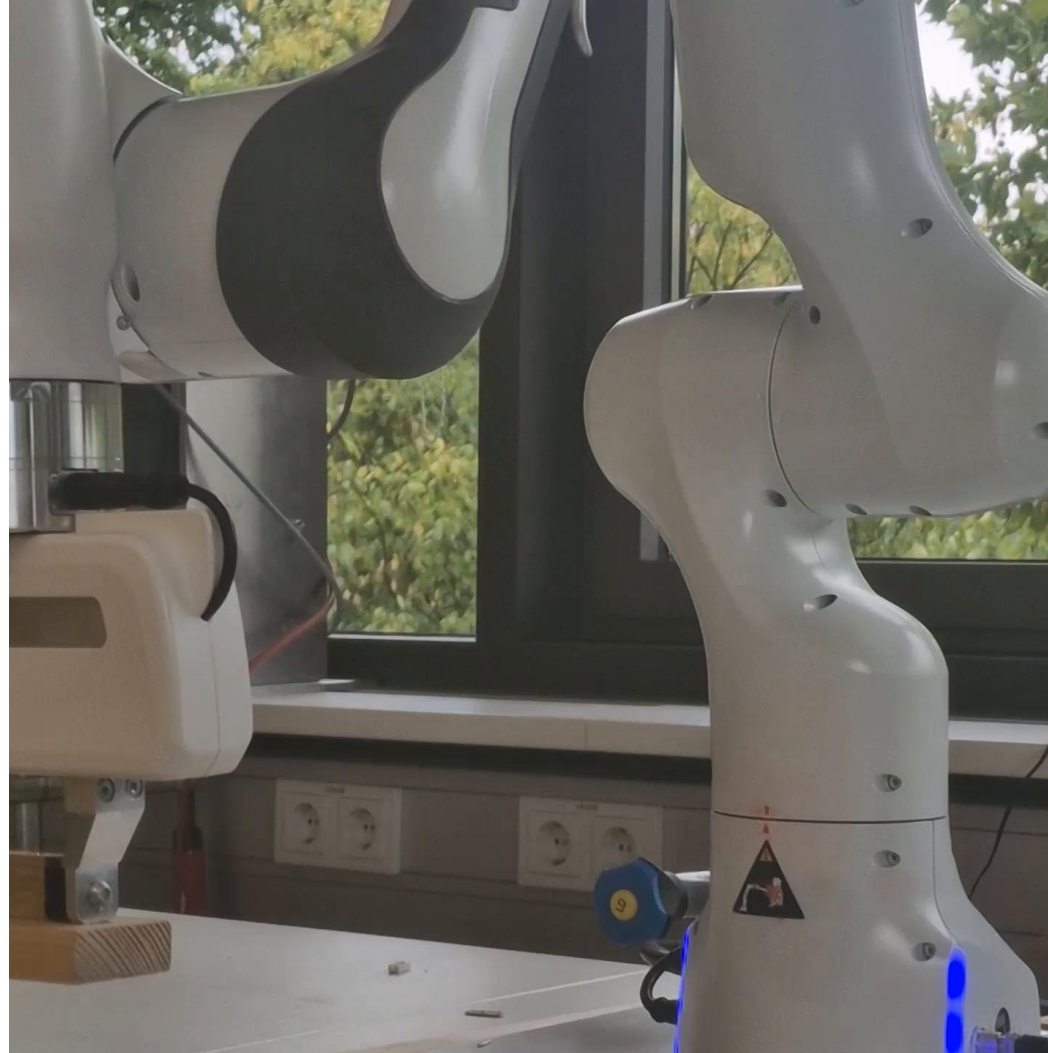

No null-space torque → Damping → Conditioning