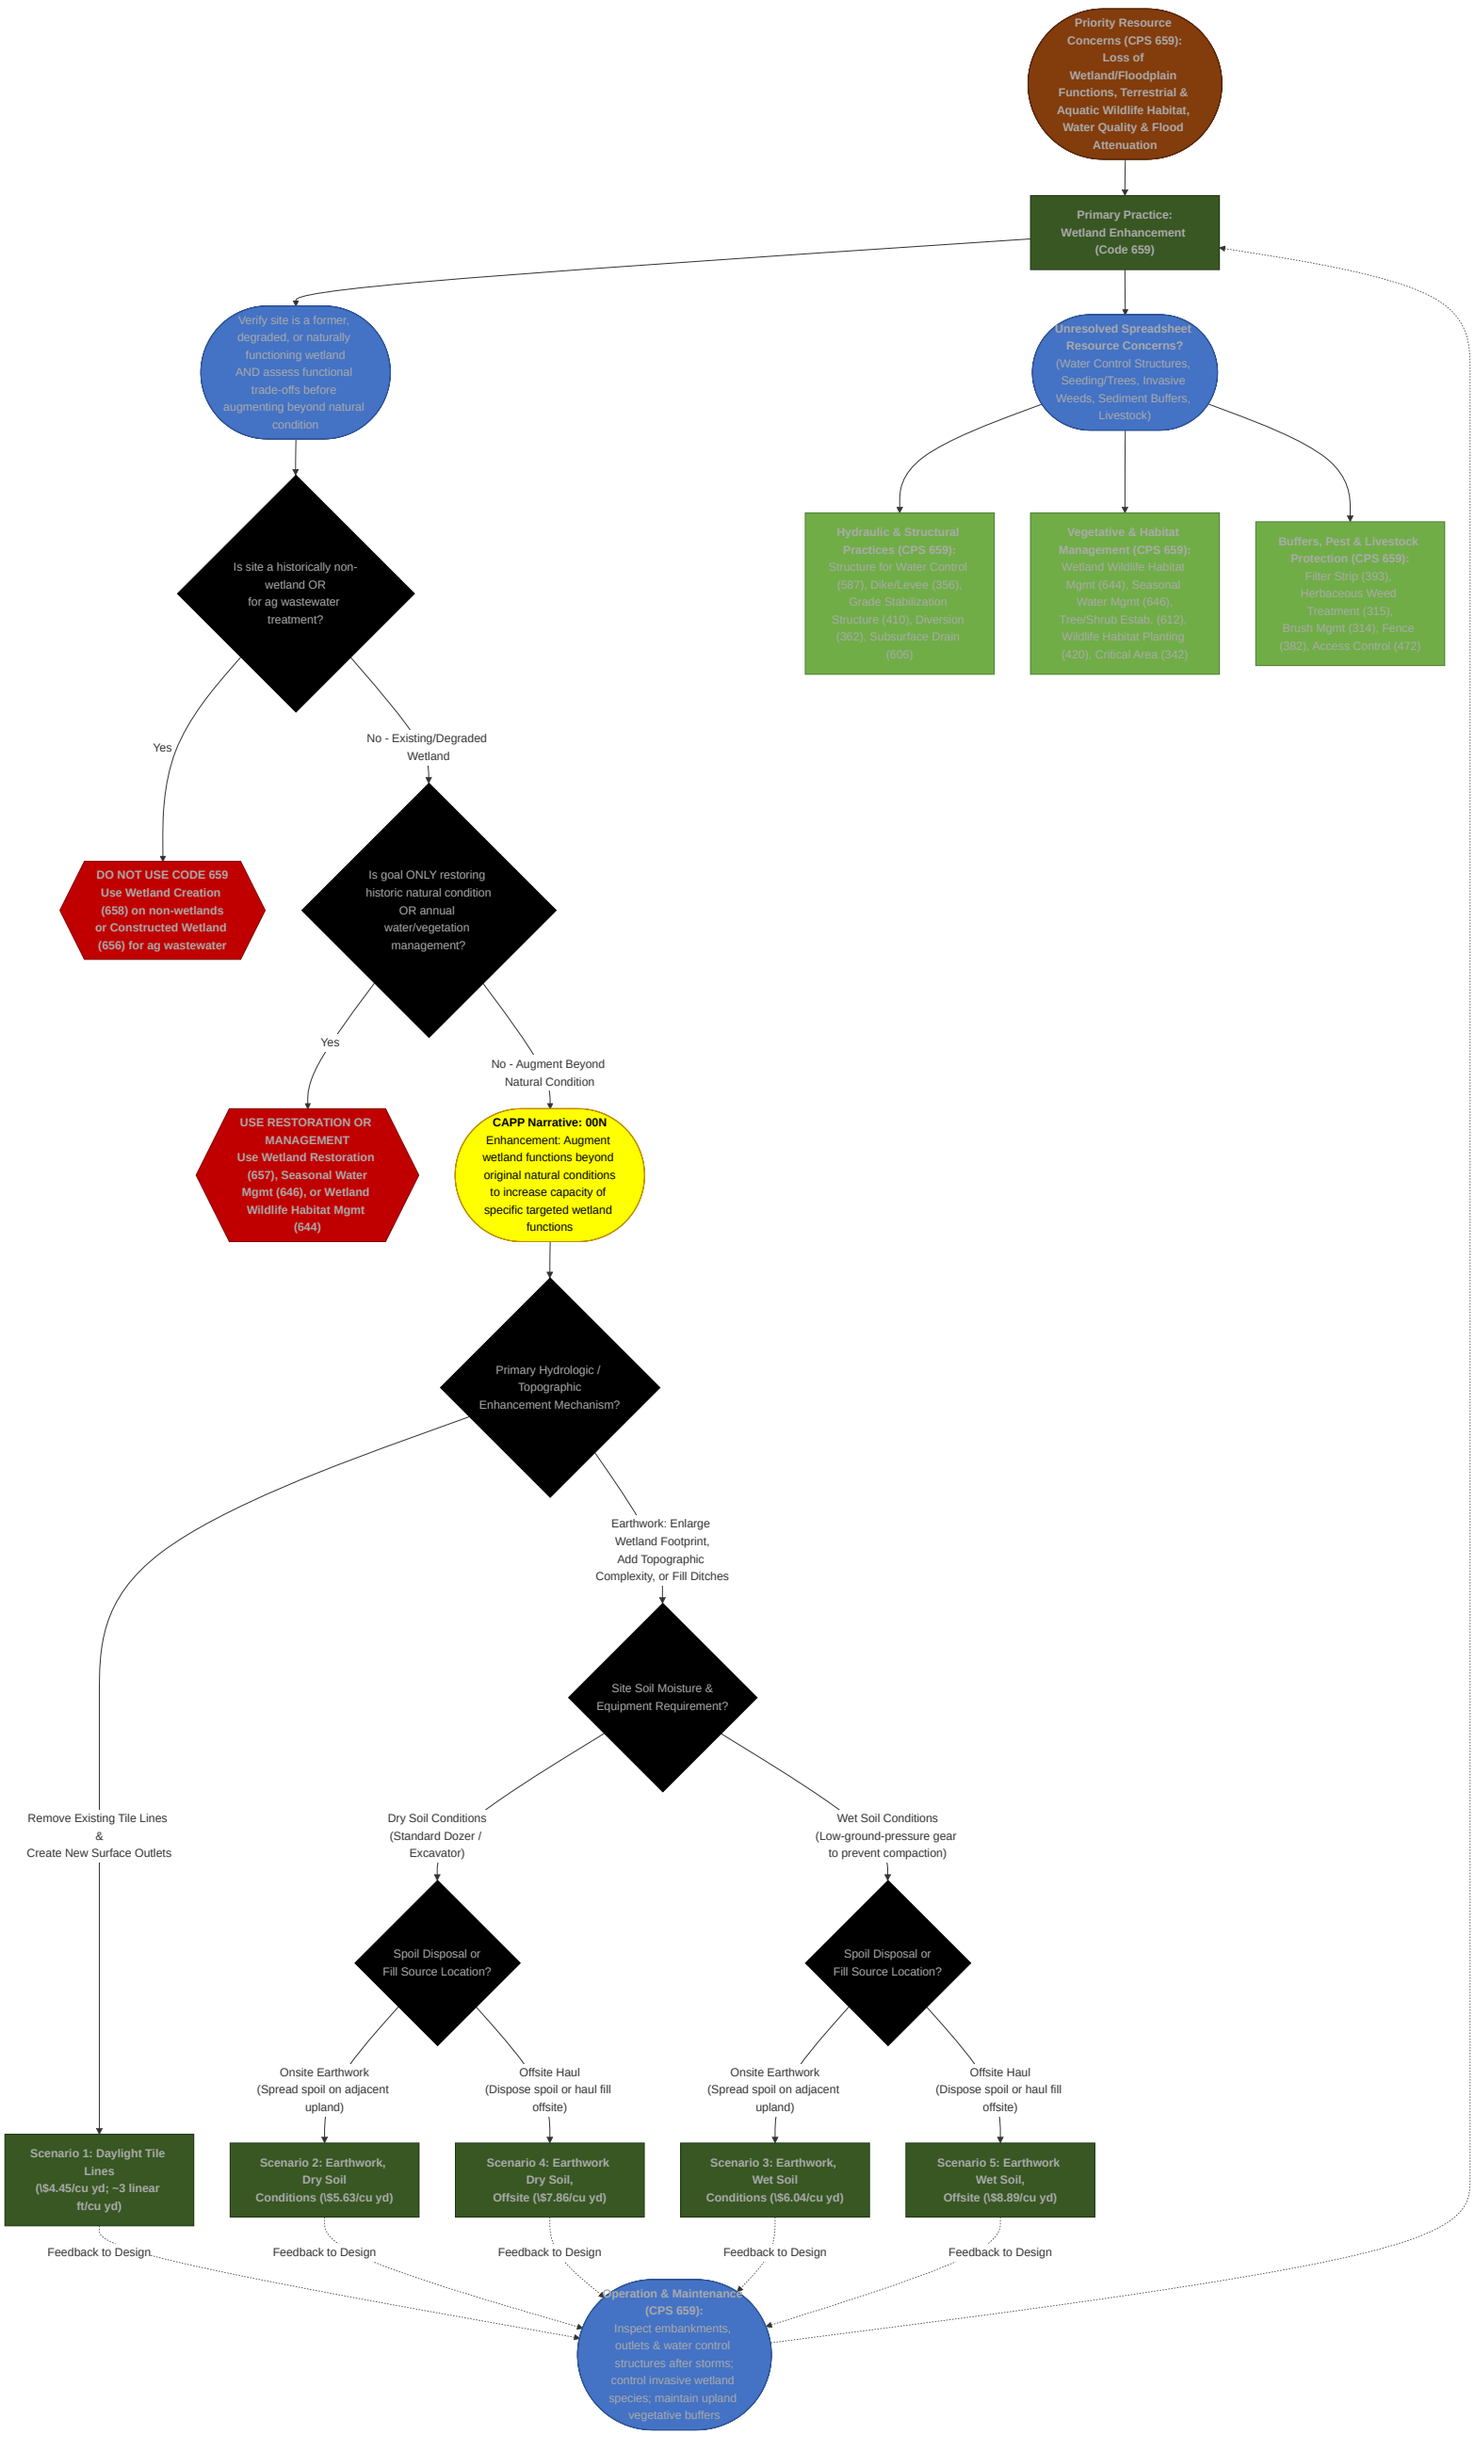

Priority Resource Concerns (CPS 659): Loss of Wetland/Floodplain Functions, Terrestrial & Aquatic Wildlife Habitat, Water Quality & Flood Attenuation
Primary Practice: Wetland Enhancement (Code 659)
Verify site is a former, degraded, or naturally functioning wetland AND assess functional trade-offs before augmenting beyond natural condition
Unresolved Spreadsheet Resource Concerns? (Water Control Structures, Seeding/Trees, Invasive Weeds, Sediment Buffers, Livestock)
Hydraulic & Structural Practices (CPS 659): Structure for Water Control (587), Dike/Levee (356), Grade Stabilization Structure (410), Diversion (362), Subsurface Drain (606)
Vegetative & Habitat Management (CPS 659): Wetland Wildlife Habitat Mgmt (644), Seasonal Water Mgmt (646), Tree/Shrub Estab. (612), Wildlife Habitat Planting (420), Critical Area (342)
Buffers, Pest & Livestock Protection (CPS 659): Filter Strip (393), Herbaceous Weed Treatment (315), Brush Mgmt (314), Fence (382), Access Control (472)
Is site a historically non-wetland OR for ag wastewater treatment?
Yes
No - Existing/Degraded Wetland
DO NOT USE CODE 659 Use Wetland Creation (658) on non-wetlands or Constructed Wetland (656) for ag wastewater
Is goal ONLY restoring historic natural condition OR annual water/vegetation management?
Yes
No - Augment Beyond Natural Condition
USE RESTORATION OR MANAGEMENT Use Wetland Restoration (657), Seasonal Water Mgmt (646), or Wetland Wildlife Habitat Mgmt (644)
CAPP Narrative: 00N Enhancement: Augment wetland functions beyond original natural conditions to increase capacity of specific targeted wetland functions
Primary Hydrologic / Topographic Enhancement Mechanism?
Remove Existing Tile Lines & Create New Surface Outlets
Earthwork: Enlarge Wetland Footprint, Add Topographic Complexity, or Fill Ditches
Site Soil Moisture & Equipment Requirement?
Dry Soil Conditions (Standard Dozer / Excavator)
Wet Soil Conditions (Low-ground-pressure gear to prevent compaction)
Spoil Disposal or Fill Source Location?
Spoil Disposal or Fill Source Location?
Onsite Earthwork (Spread spoil on adjacent upland)
Offsite Haul (Dispose spoil or haul fill offsite)
Onsite Earthwork (Spread spoil on adjacent upland)
Offsite Haul (Dispose spoil or haul fill offsite)
Scenario 1: Daylight Tile Lines (\$4.45/cu yd; ~3 linear ft/cu yd)
Scenario 2: Earthwork, Dry Soil Conditions (\$5.63/cu yd)
Scenario 4: Earthwork Dry Soil, Offsite (\$7.86/cu yd)
Scenario 3: Earthwork, Wet Soil Conditions (\$6.04/cu yd)
Scenario 5: Earthwork Wet Soil, Offsite (\$8.89/cu yd)
Feedback to Design
Feedback to Design
Feedback to Design
Feedback to Design
Feedback to Design
Operation & Maintenance (CPS 659): Inspect embankments, outlets & water control structures after storms; control invasive wetland species; maintain upland vegetative buffers