

I/O제어기 Device 정보 총6대 (기존3대, 추가3대)

- IP : **192.168.151.111 ~ 116**
- SubNet : 255.255.255.0
- Gateway : 192.168.151.1

- **Port : 502**

- **Protocol : Modbus/TCP**

※ 다중 접속 가능 Client : 3 (추가 가능)

제품(ezTCP) 검색

MAC 주소 IP 주소 시리얼


MAC 주소

00 30 f9 10 f5 08


검색 결과 (6)

192.168.151.111	(00:30:f9:10:f5:08)
192.168.151.112	(00:30:f9:10:f5:0d)
192.168.151.113	(00:30:f9:10:f5:07)
192.168.151.114	(00:30:f9:10:f8:76)
192.168.151.115	(00:30:f9:10:f8:75)
192.168.151.116	(00:30:f9:10:f8:74)

경광등박스 합체 외형

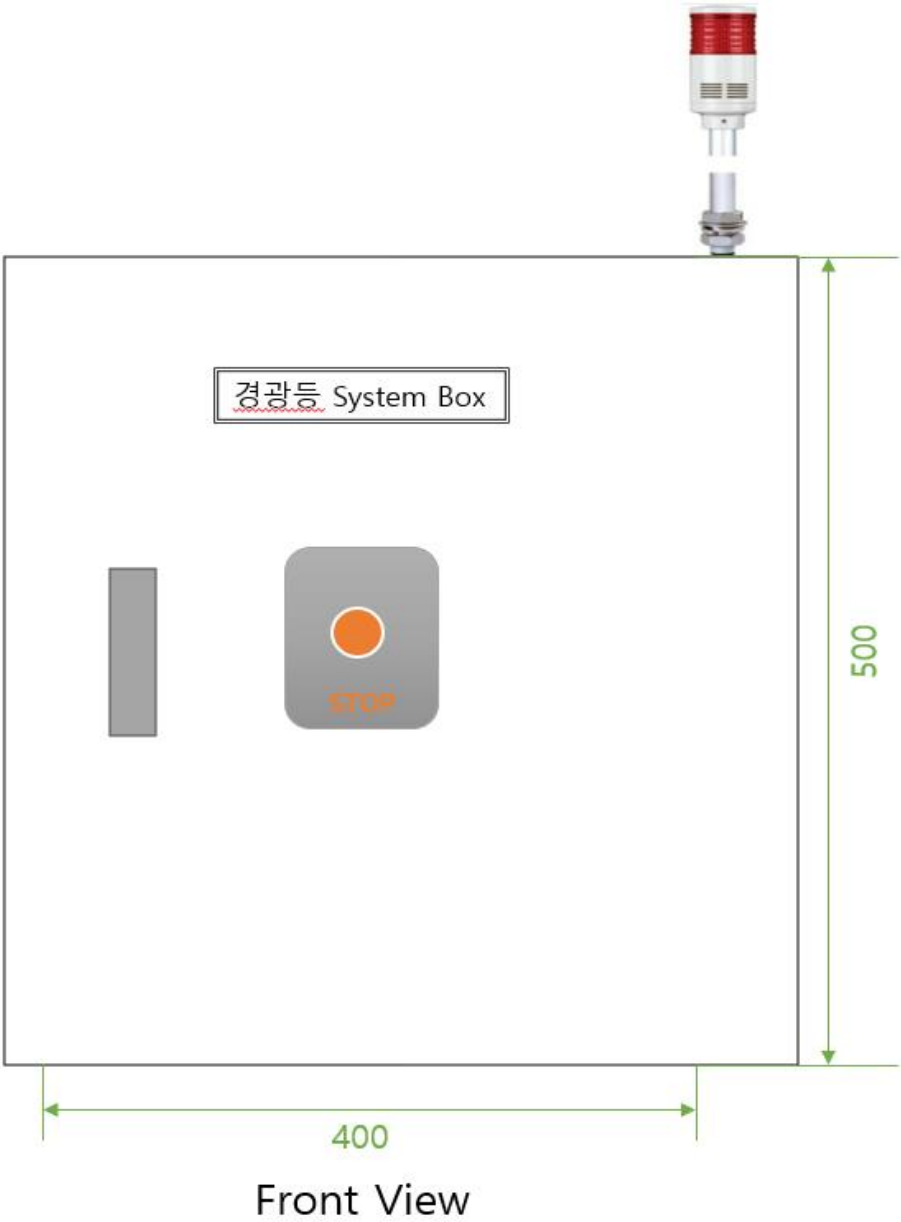

I/O 제어기 결선도

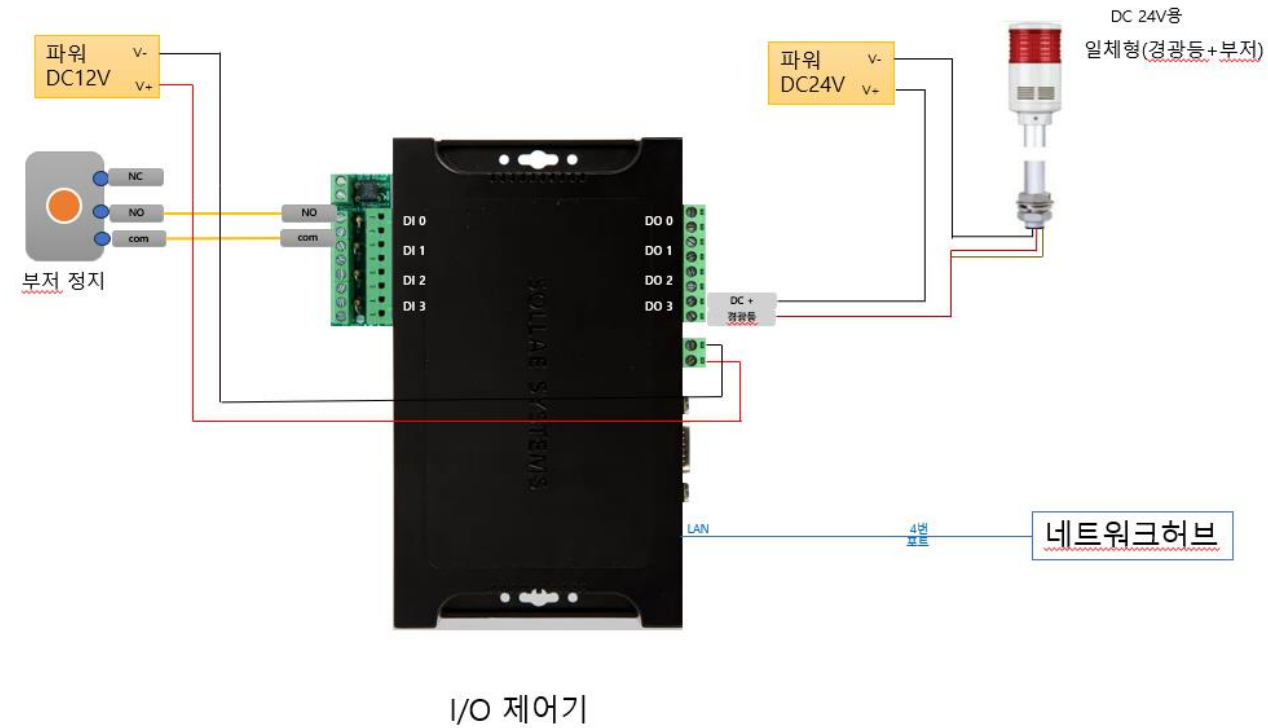

경광등 ON / OFF

Digital Output에 대하여 쓰기

FC : 05 Write Single Coil : 값 쓰기

00009 : 0 Ch

00010 : 1 Ch

00011 : 2 Ch

00012 : 3 Ch (경광등)

02 2E 00 00 00 06 01 05 00 0B FF 00 Tx **ON**
02 2E 00 00 00 06 01 05 00 0B FF 00 Rx **ON**

02 33 00 00 00 06 01 05 00 0B 00 00 Tx **OFF**
02 33 00 00 00 06 01 05 00 0B 00 00 Rx **OFF**

		Exit	Continue	Save	Copy	☐ Stop on Error
0032-Tx:01	C2 00 00 00 06 01 01 00 08 00 04					
0033-Rx:01	C2 00 00 00 04 01 01 01 00					
0034-Tx:01	C3 00 00 00 06 01 01 00 08 00 04					
0035-Rx:01	C3 00 00 00 04 01 01 01 00					
0036-Tx:01	C4 00 00 00 06 01 01 00 08 00 04					
0037-Rx:01	C4 00 00 00 04 01 01 01 00					
0038-Tx:01	C5 00 00 00 06 01 01 00 08 00 04					
0039-Rx:01	C5 00 00 00 04 01 01 01 00					
0040-Tx:01	C6 00 00 00 06 01 01 00 08 00 04					
0041-Rx:01	C6 00 00 00 04 01 01 01 00					
0042-Tx:01	C7 00 00 00 06 01 01 00 08 00 04					
0043-Rx:01	C7 00 00 00 04 01 01 01 00					
0044-Tx:01	C8 00 00 00 06 01 01 00 08 00 04					
0045-Rx:01	C8 00 00 00 04 01 01 01 00					
0046-Tx:01	C9 00 00 00 06 01 05 00 0B FF 00					
0047-Rx:01	C9 00 00 00 06 01 05 00 0B FF 00					
0048-Tx:01	CA 00 00 00 06 01 01 00 08 00 04					
0049-Rx:01	CA 00 00 00 04 01 01 01 08					
0050-Tx:01	CB 00 00 00 06 01 01 00 08 00 04					
0051-Rx:01	CB 00 00 00 04 01 01 01 08					
0052-Tx:01	CC 00 00 00 06 01 05 00 0B 00 00					
0053-Rx:01	CC 00 00 00 06 01 05 00 0B 00 00					
0054-Tx:01	CD 00 00 00 06 01 01 00 08 00 04					
0055-Rx:01	CD 00 00 00 04 01 01 01 00					
0056-Tx:01	CE 00 00 00 06 01 01 00 08 00 04					
0057-Rx:01	CE 00 00 00 04 01 01 01 00					
0058-Tx:01	CF 00 00 00 06 01 01 00 08 00 04					
0059-Rx:01	CF 00 00 00 04 01 01 01 00					
0060-Tx:01	D0 00 00 00 06 01 01 00 08 00 04					
0061-Rx:01	D0 00 00 00 04 01 01 01 00					

일반 값

경광등ON

경광등OFF

경광등 정지(부저 정지) - 부저정비스위치 누르면 경광등OFF 시키기

Digital Input에 대하여 읽기

FC : 02 Read Discrete Inputs

10001 : 0 Ch (스위치)

10002 : 1 Ch

10003 : 2 Ch

10004 : 3 Ch

공통 - 00 D6 00 00 00 06 01 02 00 00 00 01 Tx

스위치 버튼 누르기 전 - 00 CF 00 00 00 04 01 02 01 00 OFF Rx

스위치 버튼 누렸을때 - 00 D6 00 00 00 04 01 02 01 01 ON Rx

