

I/O제어기 Device 정보 총6대 (기존3대, 추가3대)

- IP : **192.168.151.111 ~ 116**
- SubNet : 255.255.255.0
- Gateway : 192.168.151.1

- **Port : 502**

- **Protocol : Modbus/TCP**

※ 다중 접속 가능 Client : 3 (추가 가능)

제품(ezTCP) 검색

MAC 주소 IP 주소 시리얼


MAC 주소

00 30 f9 10 f5 08


검색 결과 (6)

192.168.151.111	(00:30:f9:10:f5:08)
192.168.151.112	(00:30:f9:10:f5:0d)
192.168.151.113	(00:30:f9:10:f5:07)
192.168.151.114	(00:30:f9:10:f8:76)
192.168.151.115	(00:30:f9:10:f8:75)
192.168.151.116	(00:30:f9:10:f8:74)

경광등박스 합체 외형

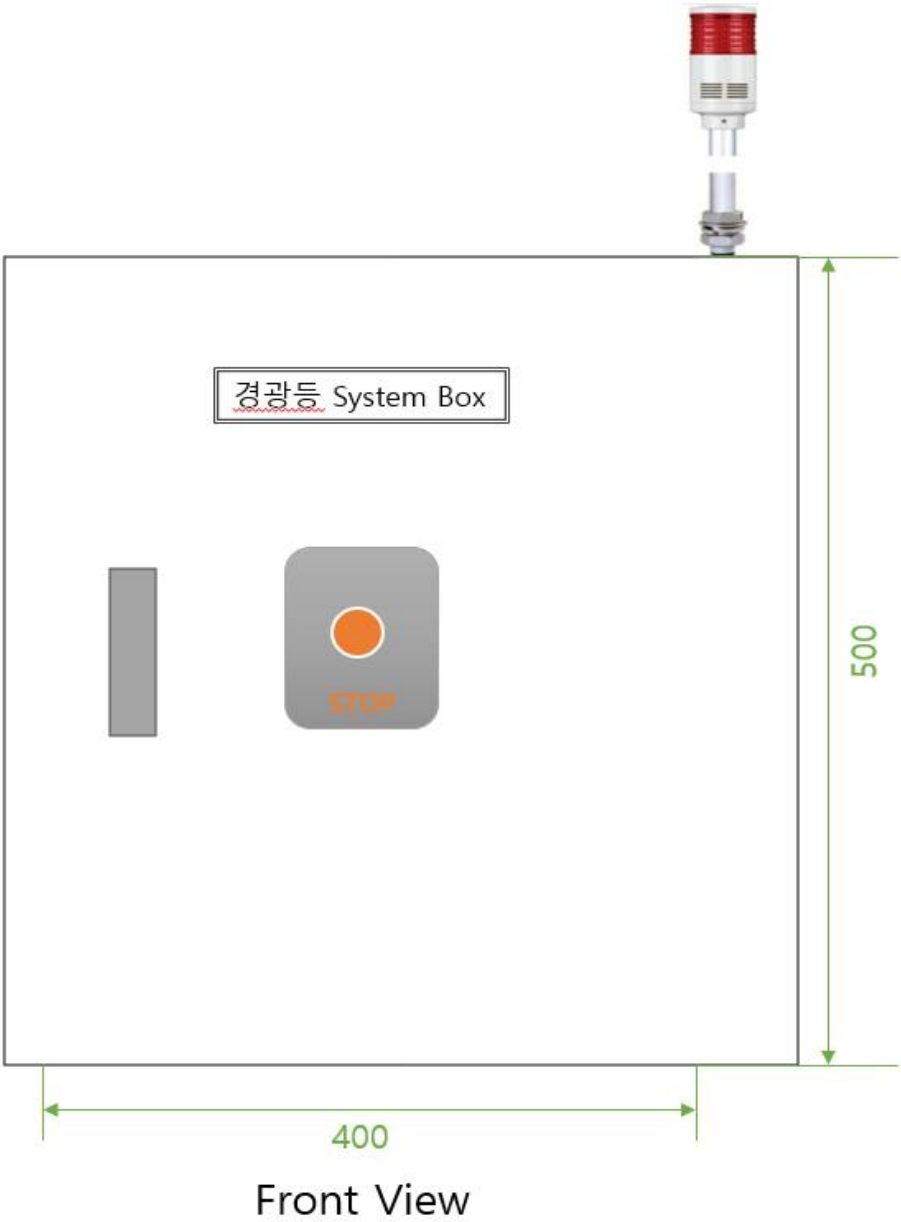

I/O 제어기 결선도

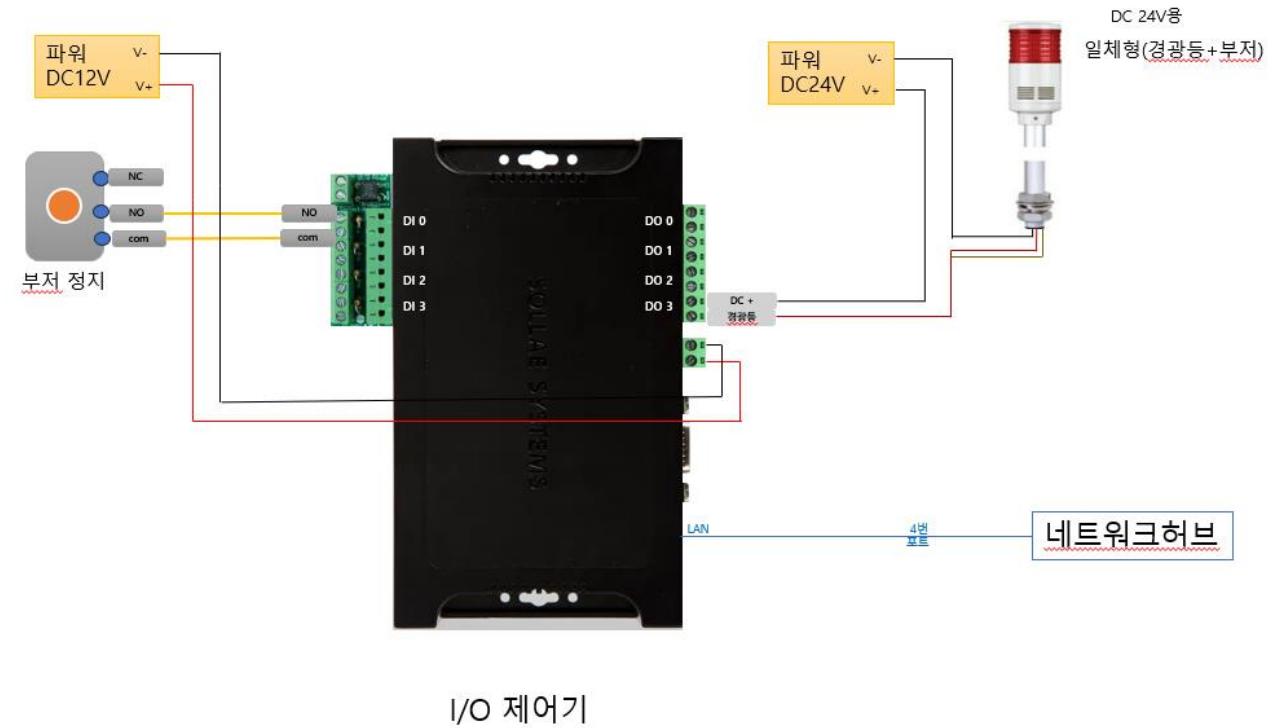

경광등 ON / OFF

Digital Output에 대하여 쓰기

FC : 05 Write Single Coil : 값 쓰기

00008 : 0 Ch

00009 : 1 Ch

00010 : 2 Ch

00011 : 3 Ch (경광등)

02 2E 00 00 00 06 01 05 00 0B FF 00 Tx **ON**

02 2E 00 00 00 06 01 05 00 0B FF 00 Rx **ON**

02 33 00 00 00 06 01 05 00 0B 00 00 Tx **OFF**

02 33 00 00 00 06 01 05 00 0B 00 00 Rx **OFF**

Exit		Continue		Save		Copy		☐ Stop on Error	
0032-Tx:01	C2	00	00	00	06	01	01	00	08 00 04
0033-Rx:01	C2	00	00	00	04	01	01	01	00
0034-Tx:01	C3	00	00	00	06	01	01	00	08 00 04
0035-Rx:01	C3	00	00	00	04	01	01	01	00
0036-Tx:01	C4	00	00	00	06	01	01	00	08 00 04
0037-Rx:01	C4	00	00	00	04	01	01	01	00
0038-Tx:01	C5	00	00	00	06	01	01	00	08 00 04
0039-Rx:01	C5	00	00	00	04	01	01	01	00
0040-Tx:01	C6	00	00	00	06	01	01	00	08 00 04
0041-Rx:01	C6	00	00	00	04	01	01	01	00
0042-Tx:01	C7	00	00	00	06	01	01	00	08 00 04
0043-Rx:01	C7	00	00	00	04	01	01	01	00
0044-Tx:01	C8	00	00	00	06	01	01	00	08 00 04
0045-Rx:01	C8	00	00	00	04	01	01	01	00
0046-Tx:01	C9	00	00	00	06	01	05	00	0B FF 00
0047-Rx:01	C9	00	00	00	06	01	05	00	0B FF 00
0048-Tx:01	CA	00	00	00	06	01	01	00	08 00 04
0049-Rx:01	CA	00	00	00	04	01	01	01	08
0050-Tx:01	CB	00	00	00	06	01	01	00	08 00 04
0051-Rx:01	CB	00	00	00	04	01	01	01	08
0052-Tx:01	CC	00	00	00	06	01	05	00	0B 00 00
0053-Rx:01	CC	00	00	00	06	01	05	00	0B 00 00
0054-Tx:01	CD	00	00	00	06	01	01	00	08 00 04
0055-Rx:01	CD	00	00	00	04	01	01	01	00
0056-Tx:01	CE	00	00	00	06	01	01	00	08 00 04
0057-Rx:01	CE	00	00	00	04	01	01	01	00
0058-Tx:01	CF	00	00	00	06	01	01	00	08 00 04
0059-Rx:01	CF	00	00	00	04	01	01	01	00
0060-Tx:01	D0	00	00	00	06	01	01	00	08 00 04
0061-Rx:01	D0	00	00	00	04	01	01	01	00

일반 값

경광등ON

경광등OFF

경광등 정지(부저 정지) - 부저정비스위치 누르면 경광등OFF 시키기

Digital Input에 대하여 읽기

FC : 02 Read Discrete Inputs

10001 : 0 Ch (스위치)

10002 : 1 Ch

10003 : 2 Ch

10004 : 3 Ch

공통 - 00 D6 00 00 00 06 01 02 00 00 00 01 Tx

스위치 버튼 누르기 전 - 00 CF 00 00 00 04 01 02 01 00 OFF Rx

스위치 버튼 누렸을때 - 00 D6 00 00 00 04 01 02 01 01 ON Rx

