Modem Host (Modem_Host) - flow chart

OpenMT - Rick KD0OSS

Mode blind: it knows no radio protocol and no modem firmware. It connects the protocol hosts (TCP port 18000 + modem number - 1) to a modem bridge through a virtual serial port. One Modem Host runs for each modem (1 to 10).

main() - start-up, then the bridge loop

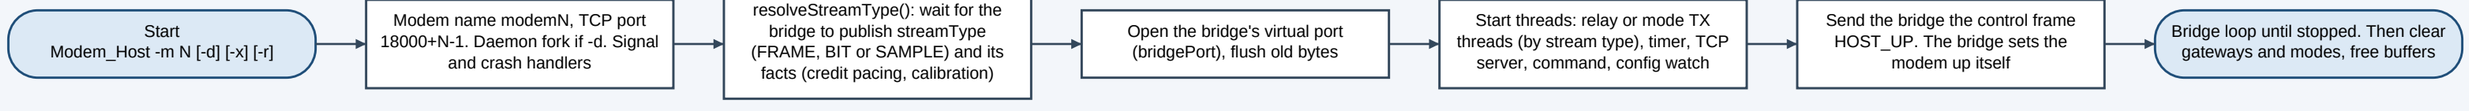

Bridge -> protocol hosts (received air traffic)

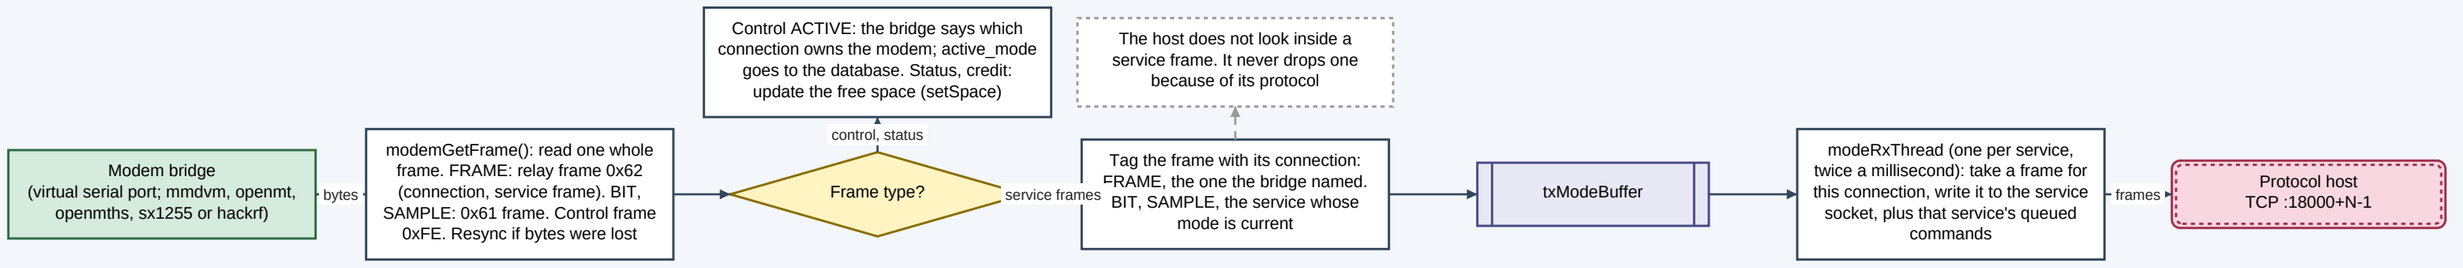

Protocol hosts -> bridge (transmit)

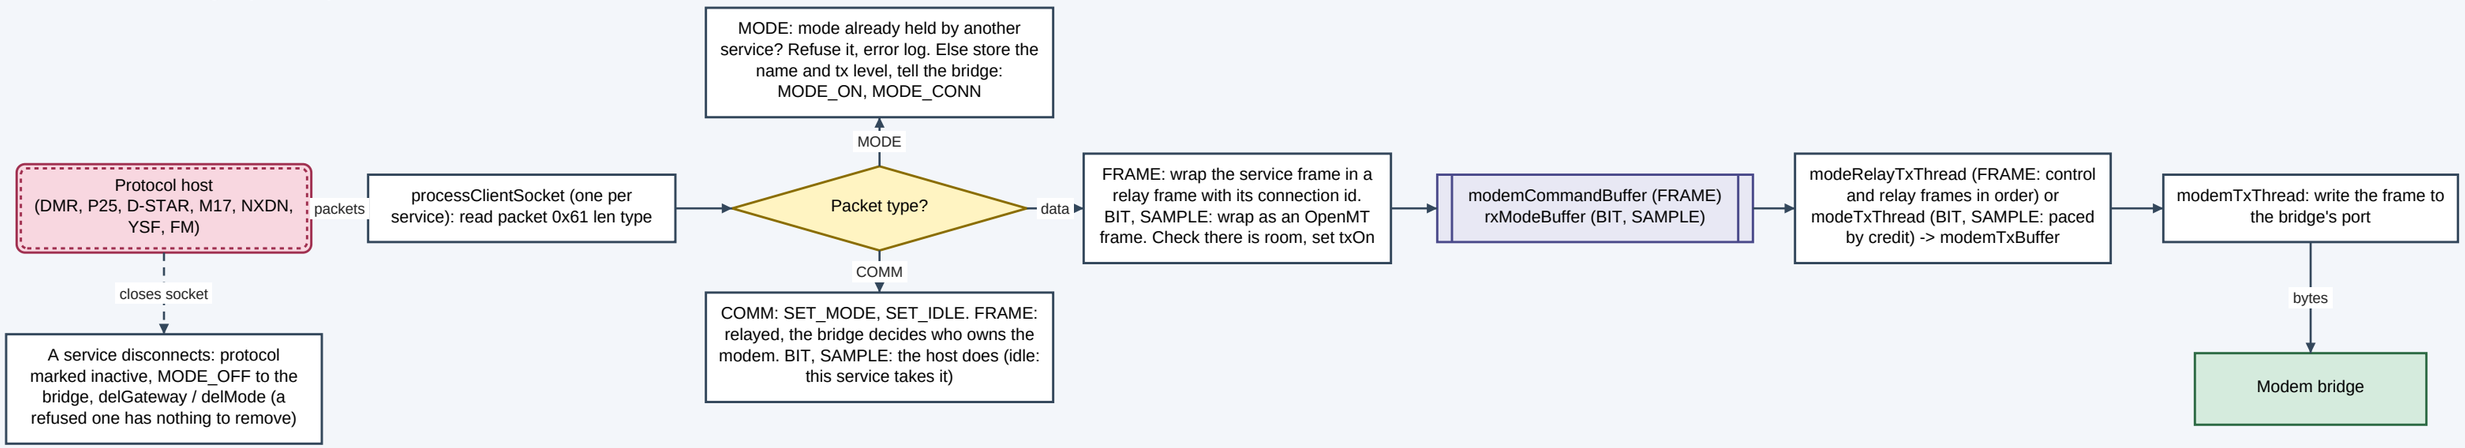

Background threads and the database

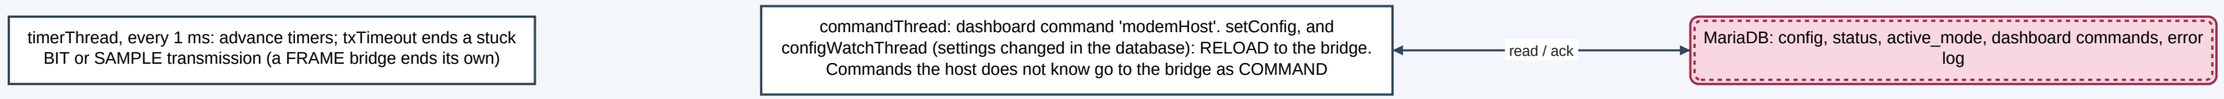

Key

Only one protocol owns the modem at a time. FRAME streams: the bridge decides (SET_MODE only while idle, SET_IDLE only from the owner) and reports it with ACTIVE. All errors go to the error log table with reportError().