

Measurement sheet - stock upper bulkhead - page 1: interfaces

Interfaces of the stock upper part that the new design must keep: shock tower (4 screws M3×8) and top brace (2 screws M3×8). Parting face = face on the lower part.


View from the outer side

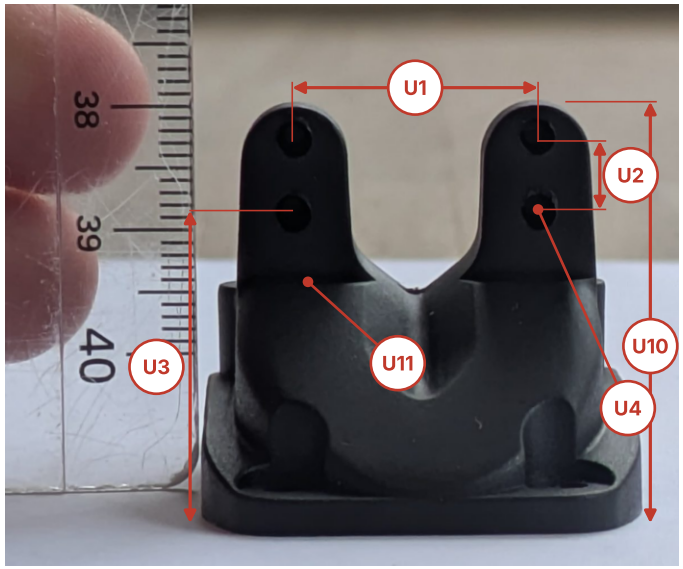

Side view (outer end on the right)

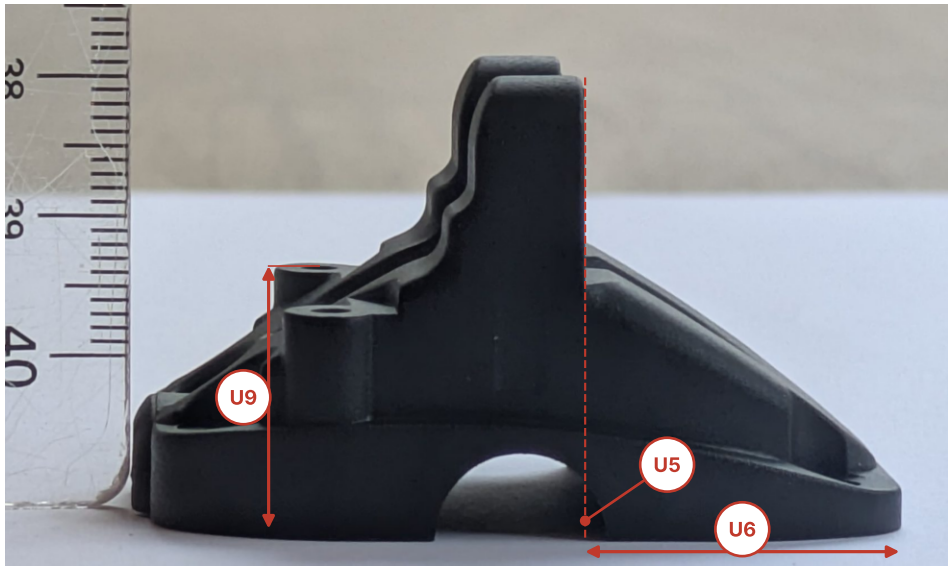

Top view (outer end on the left)

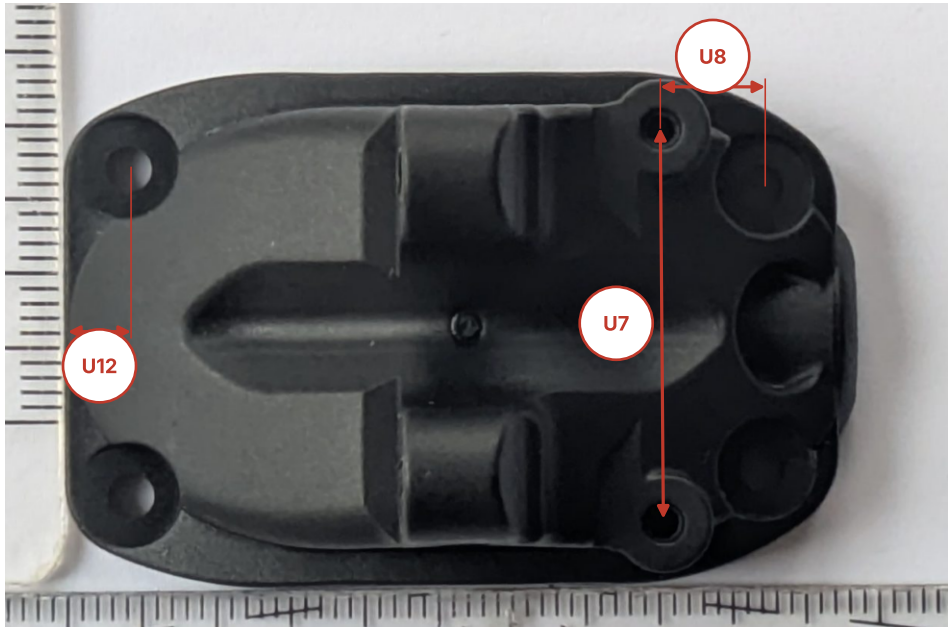

Notes

Hole spacings: inside jaws from far edge to far edge, minus the hole diameter.

Heights: part on its parting face on a flat surface, depth rod.

U5: the contact face is almost above the edge of the lip opening (side view). Write + if the face is further out than the edge, - if it is further in.

U13 (scan of the shock towers) is the most accurate source for U1, U2, U11.

U14: the manual shows 2 screws M3×18 and a block NBA201 at the rear end of the top brace (step 25).

Measurement sheet - stock upper bulkhead - page 2: values

Priority A: interfaces of the new design. Priority B: shape and checks. Rows without a caliper value are open, their model values are estimates from photos. Values in mm.

No.	Prio	Feature	How to measure	Model v1	Caliper value
U1	A	Shock tower holes: spacing across (x)	inside jaws, far edge to far edge, minus hole diameter	19.1	19.1
U2	A	Shock tower holes: spacing up/down (one ear)	as U1	6.1	6.1
U3	A	Lower shock tower holes: height of the centre above the parting face	depth rod to the lower hole edge, plus d/2	22.5	22.5
U4	B	Shock tower holes: diameter / length (through)	inside jaws / depth rod	M3: 2.5 / 6.0	2.9 / 5.8
U5	A	Contact face of the shock tower to the outer edge of the lip opening at the parting face (y)	square against the contact face, depth rod	face 0.3 inside	
U6	A	Contact face of the shock tower to the outer end face (y)	square against the face, depth rod	20.2	
U7	A	Top brace holes: spacing across (x)	as U1	25.6	25.6
U8	A	Top brace hole to the screw hole on the pinion side (y)	as U1	6.94	
U9	A	Top brace contact face (top of the 2 raised bosses): height above the parting face	part on its parting face, depth rod	15.4	15.4
U10	B	Ear tops: height above the parting face	as U9	31.5	31.5
U11	A	Shock towers (front and rear): lower hole centre to the lowest edge of the tower	on the shock tower, depth rod	4.7	
U12	B	Outer end face to the centre of the outer screw holes (y)	depth rod, plus d/2	4.2	
U13	A	Scan of both shock towers with a ruler on the glass (gives U1, U2 and U11 directly)	flatbed scanner, 600 to 1200 dpi	-	
U14	A	Rear end of the top brace: where do the 2 screws M3×18 with the block NBA201 go?	look (manual step 25)	open	