FLOW 01 // Customer Adjusts Alexa Hint Display Frequency from Screensaver Options

TIER 1: Screensaver Settings

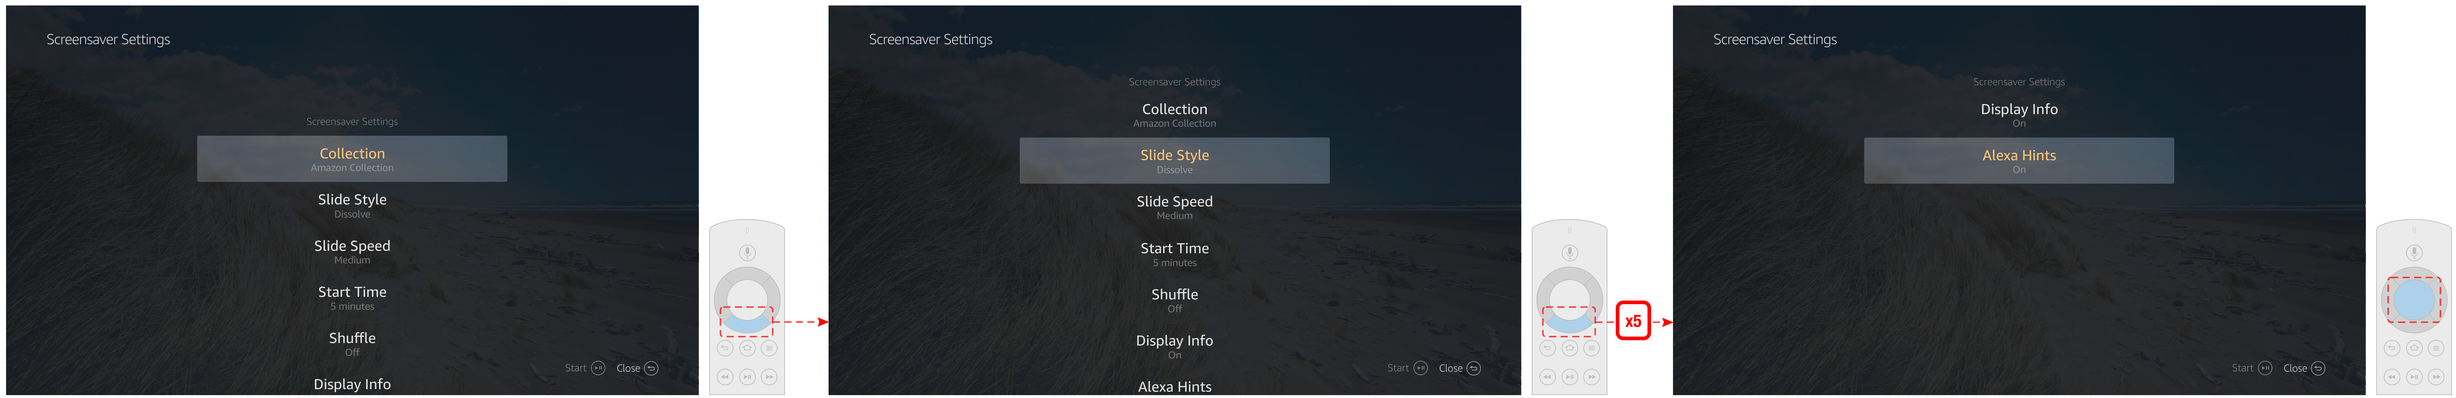

Intended Navigation Behavior per Original Spec

Entire menu should move up equivalent of one row (64dp) on the first scroll down. For remaining scroll downs, lock selected position in place while menu options are moved up. The movement between options should be animated.

SPECS

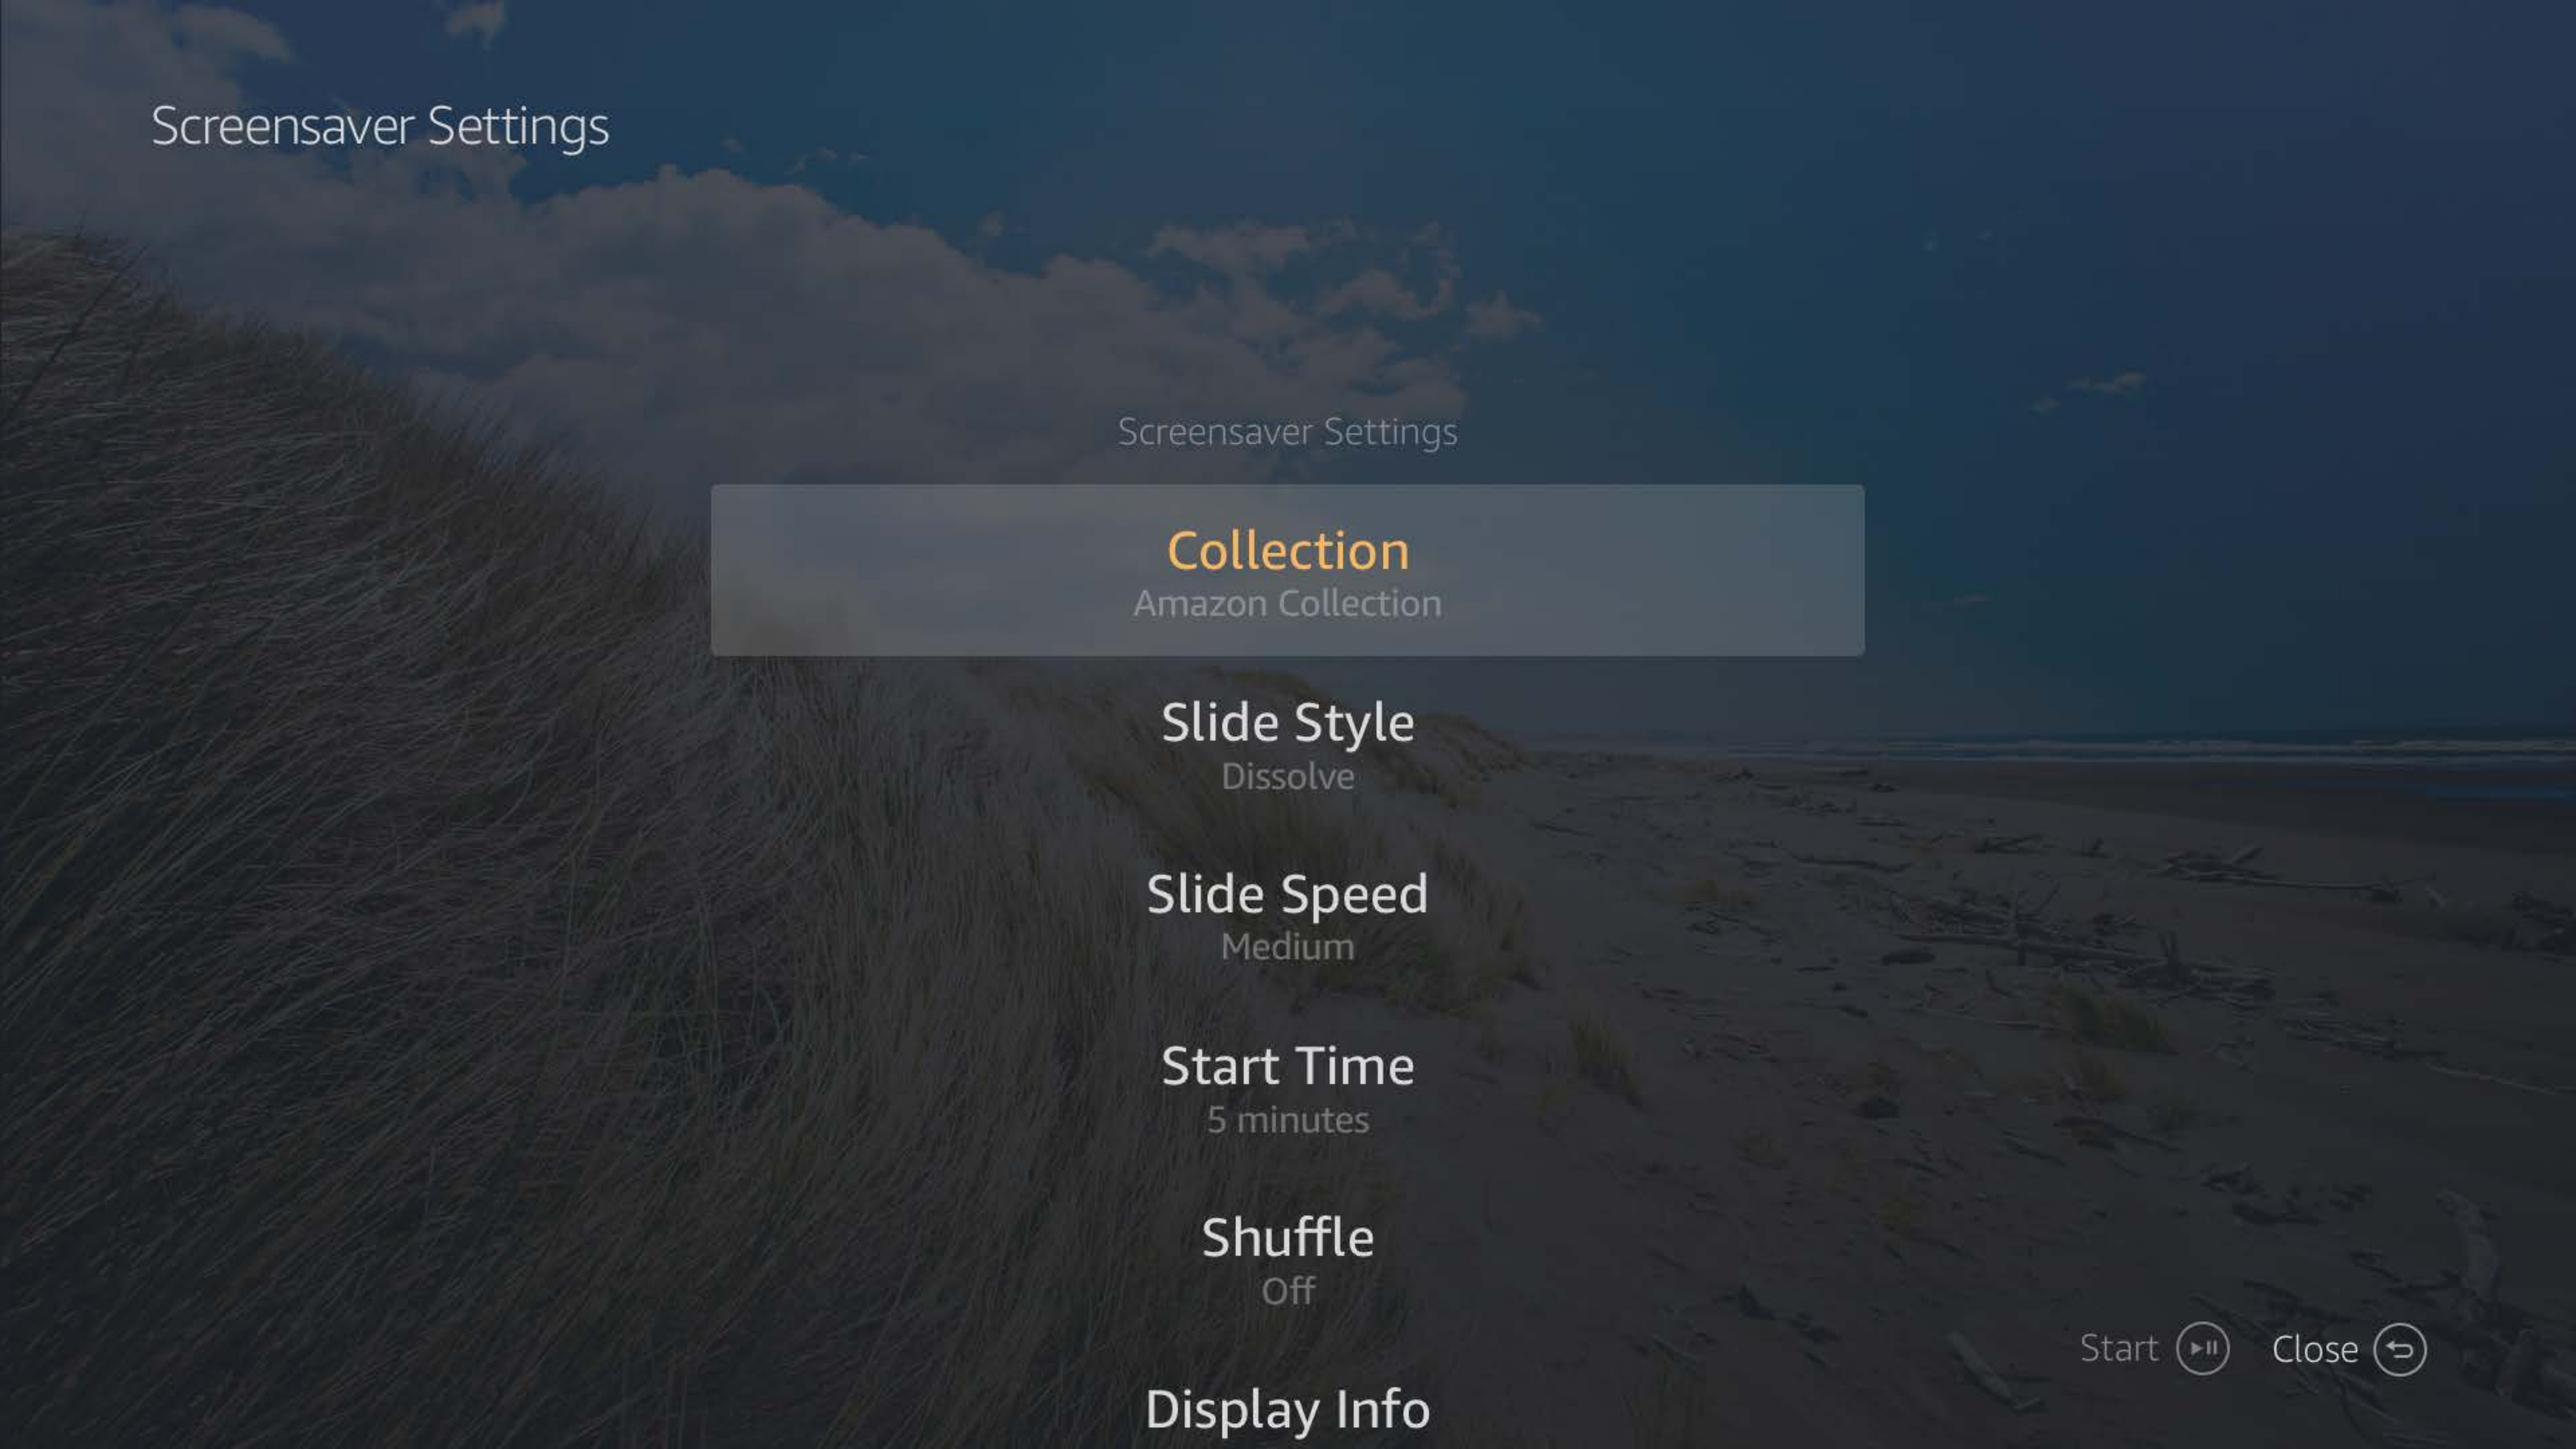
Screensaver Settings
Screensaver Settings
Collection
Amazon Collection
Slide Style
Dissolve
Slide Speed
Medium
Start Time
5 minutes
Shuffle
Off
Display Info
Start
Close

Screensaver Settings

Screensaver Settings

Collection
Amazon Collection

Slide Style
Dissolve

Slide Speed
Medium

Start Time
5 minutes

Shuffle
Off

Display Info
On

Alexa Hints

Start Close

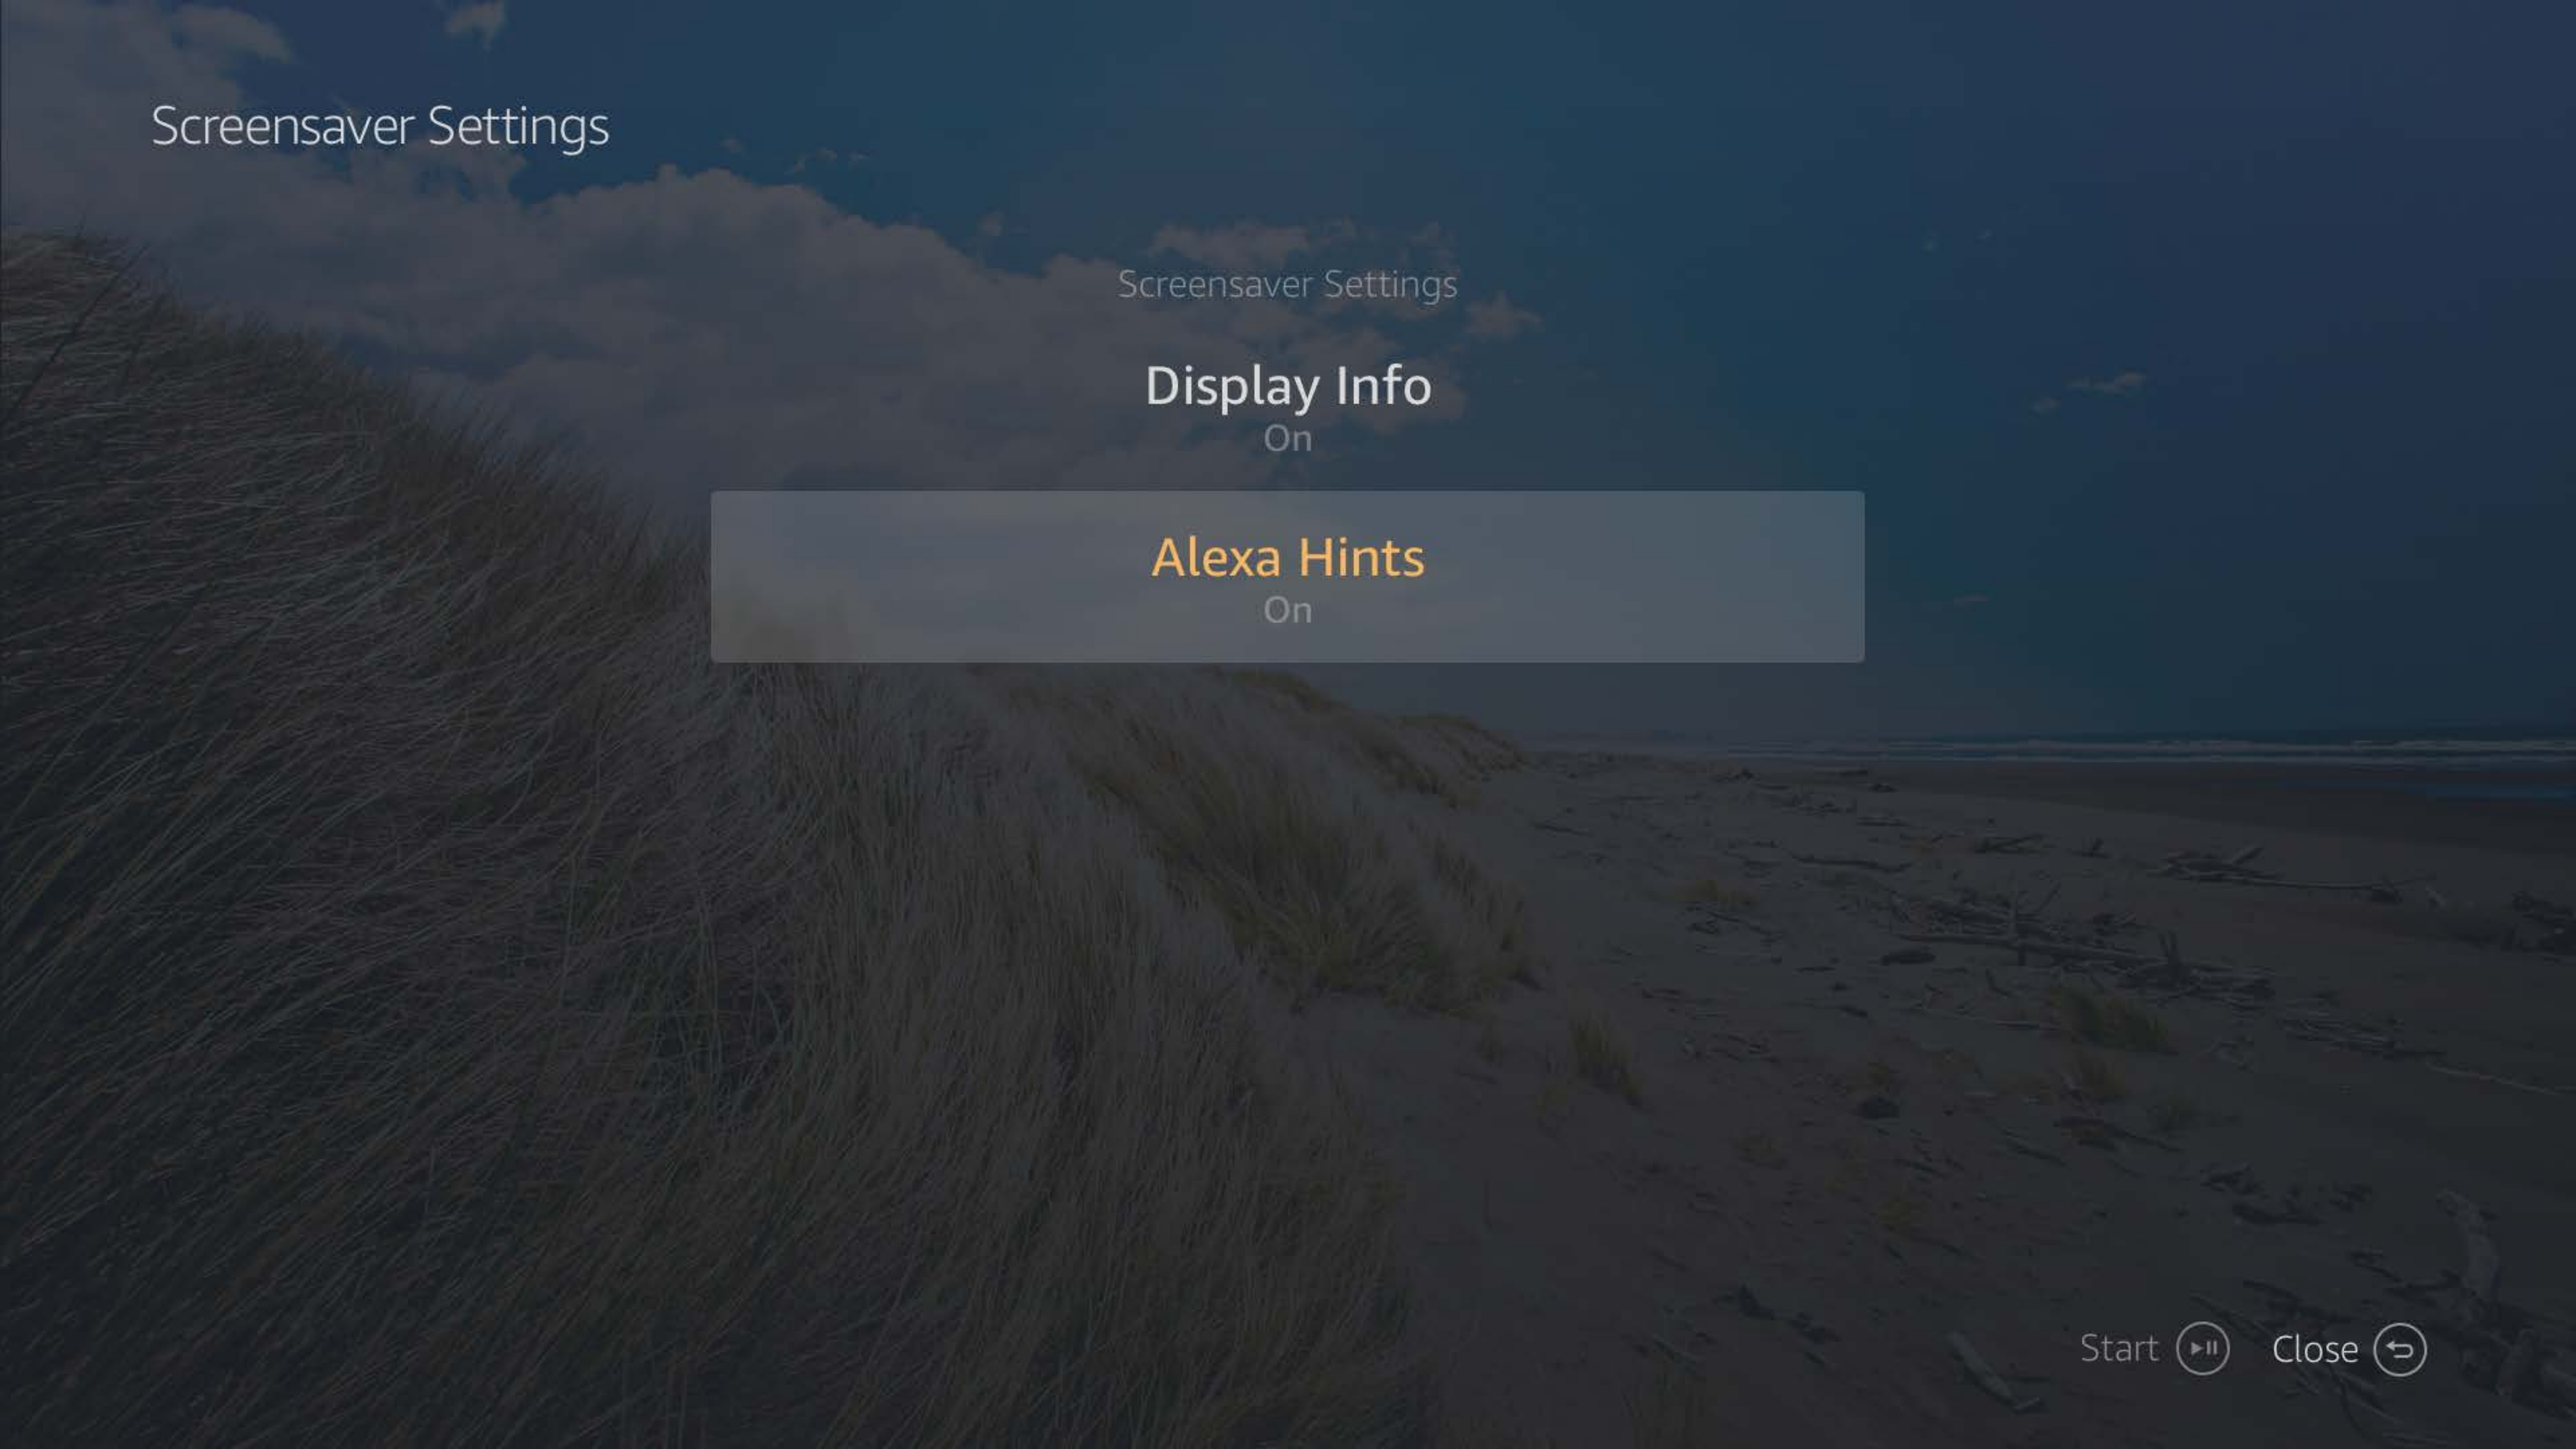
Screensaver Settings
Screensaver Settings
Display Info
On
Alexa Hints
On
Start
Close

SCREENS 01 // Screensaver Alexa Hints Display

Both On

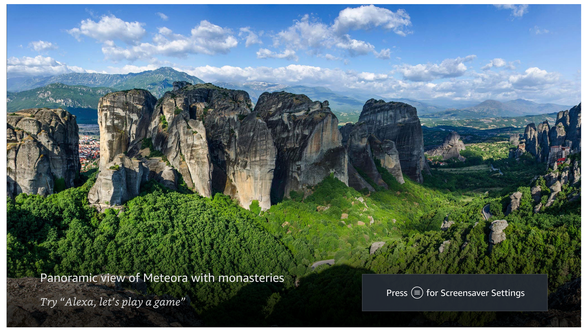

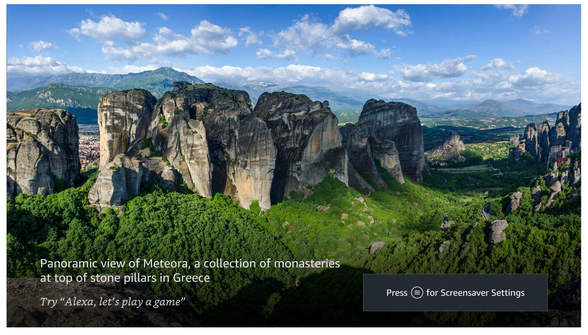

Captions On

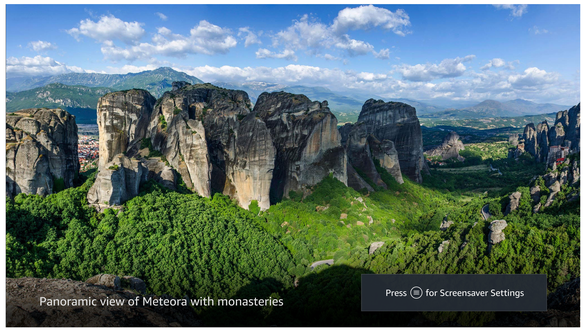

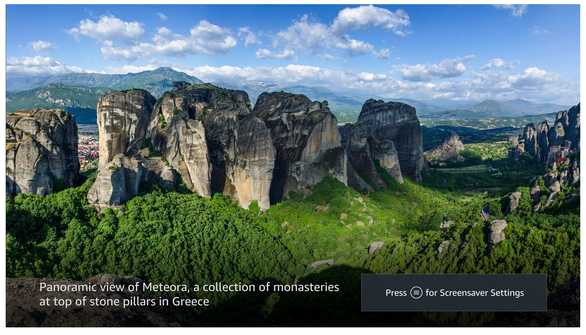

SPECS

Font: Ember
Weight: Regular
Size: 20sp
Color: DADADA
Max Line: 2
Max Characters: 90
Max Width: 520dp
Alignment: Left, Bottom
Opacity: 100%

Font: Bookerly
Style: Italic
Size: 18sp
Color: DADADA
Max Line: 1
Max Width: 520dp
Alignment: Left
Opacity: 90%

Hint Display Across Multiple Slides
After 15 seconds of showing a hint across slides, keep showing the hint until the next slide. From that point, after 15 seconds of not showing a hint across slides, keep not showing a hint until the next slide.

A hint displaying with no user interaction would be approximately:
- **Fast**: 3 slides * 6 seconds per slide = 18 seconds
- **Medium**: 2 slides * 8 seconds per slide = 16 seconds
- **Slow**: 1 slides * 16 seconds per slide = 16 seconds

No hint displaying with no user interaction would be approximately:
- **Fast**: 3 slides * 6 seconds per slide = 18 seconds
- **Medium**: 2 slides * 8 seconds per slide = 16 seconds
- **Slow**: 1 slides * 16 seconds per slide = 16 seconds

Alexa Hints Display
Alexa Hints will display at the very bottom left when shown. Captions appear above it.

Dark Gradient's Height Adjusts
The dark gradient behind the text's height should adjust according to the amount of text shown. For no text shown, no dark gradient should be shown.

Caption Copy Reduction
All of our longer captions should be reviewed and have their copy reduced.

Screensaver Animation Behavior
The image and caption have 1 second crossfade transition between slides.

Immediately after the crossfade transition finishes, fade in hint (0.5 second duration). There is no fade out.

Alexa Hints On

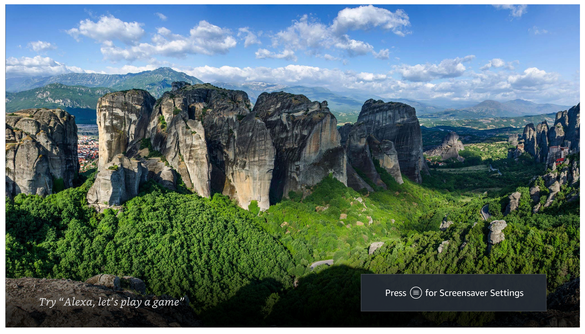

Both Off

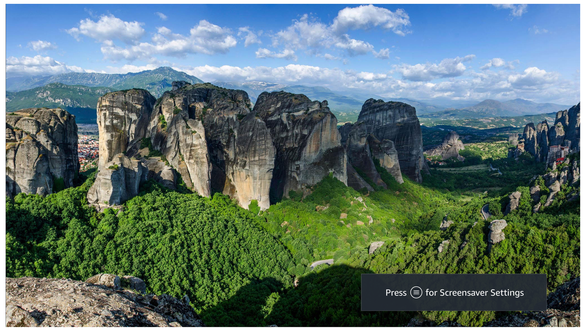

Panoramic view of Meteora with monasteries

Try "Alexa, beatbox for me"

Panoramic view of Meteora, a collection of monasteries at top of stone pillars in Greece

Try "Alexa, let's play a game"

Panoramic view of Meteora with monasteries
Try “Alexa, let’s play a game”
Press for Screensaver Settings

Panoramic view of Meteora, a collection of monasteries at top of stone pillars in Greece
Try “Alexa, let’s play a game”
Press for Screensaver Settings

Panoramic view of Meteora with monasteries

Panoramic view of Meteora, a collection of monasteries at top of stone pillars in Greece

Panoramic view of Meteora with monasteries
Press for Screensaver Settings

Panoramic view of Meteora, a collection of monasteries at top of stone pillars in Greece

Press for Screensaver Settings

Try “Alexa, let’s play a game”

Try “Alexa, let’s play a game”
Press for Screensaver Settings

Press for Screensaver Settings