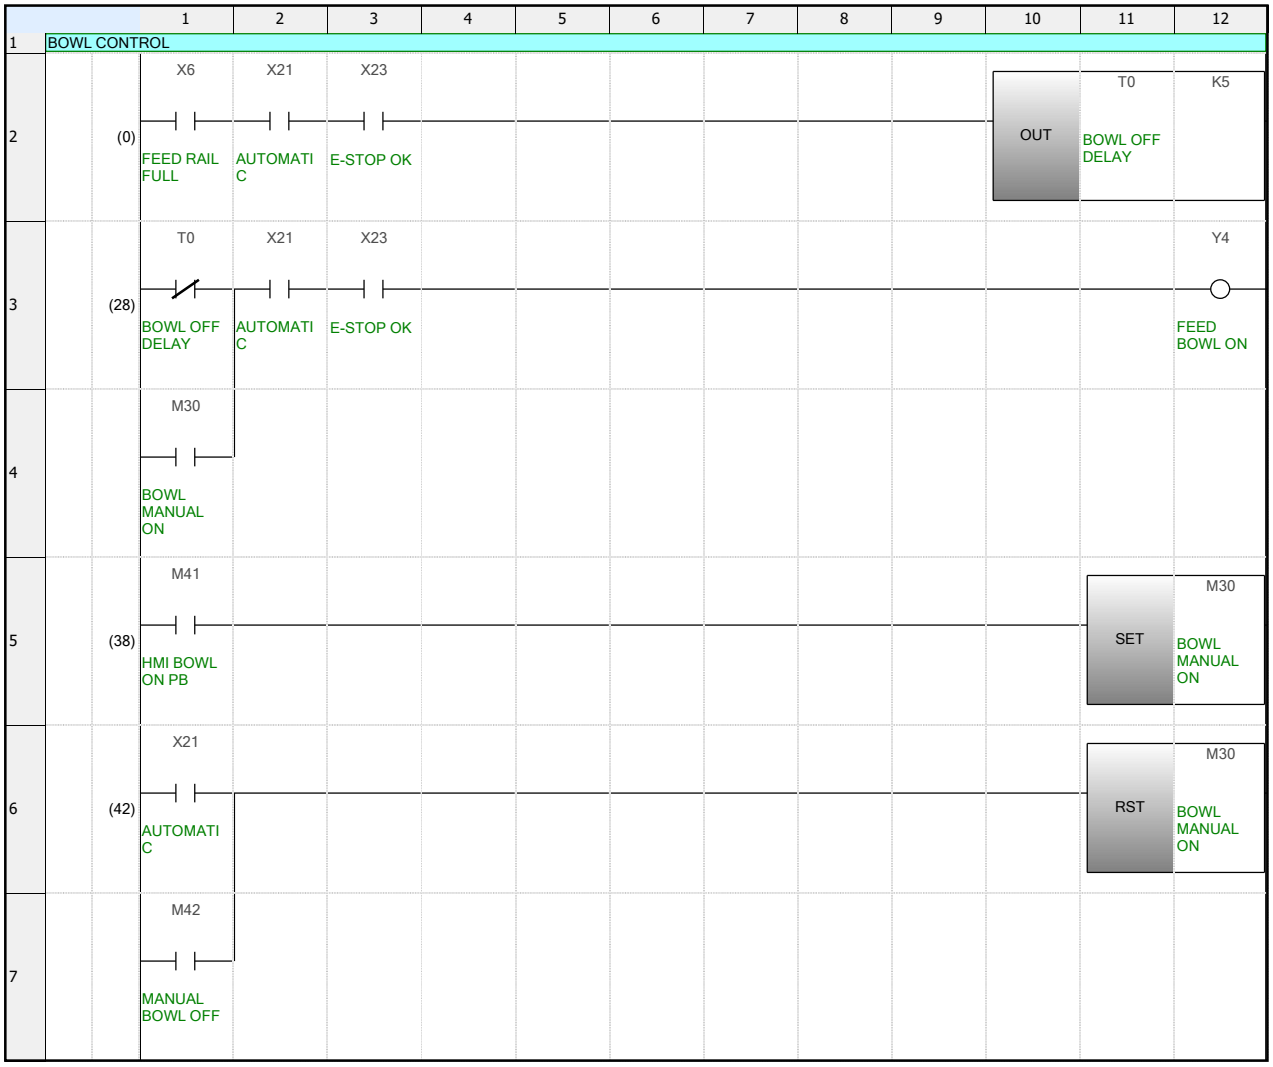
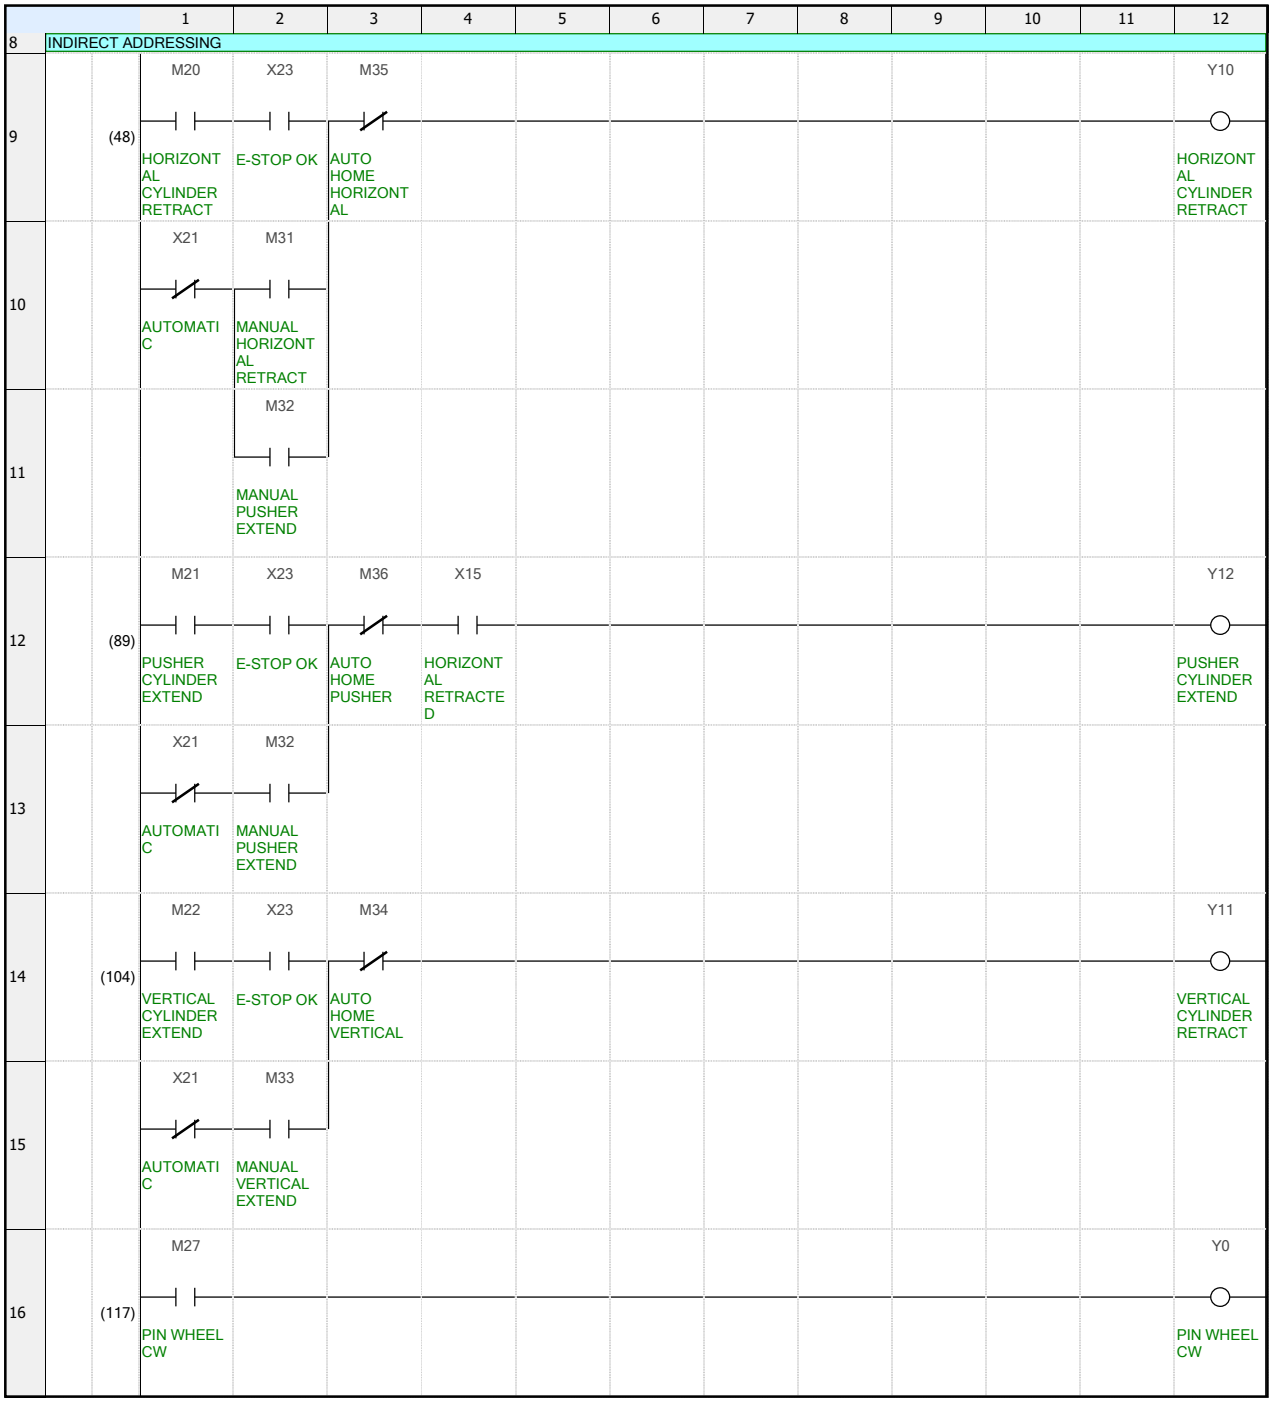
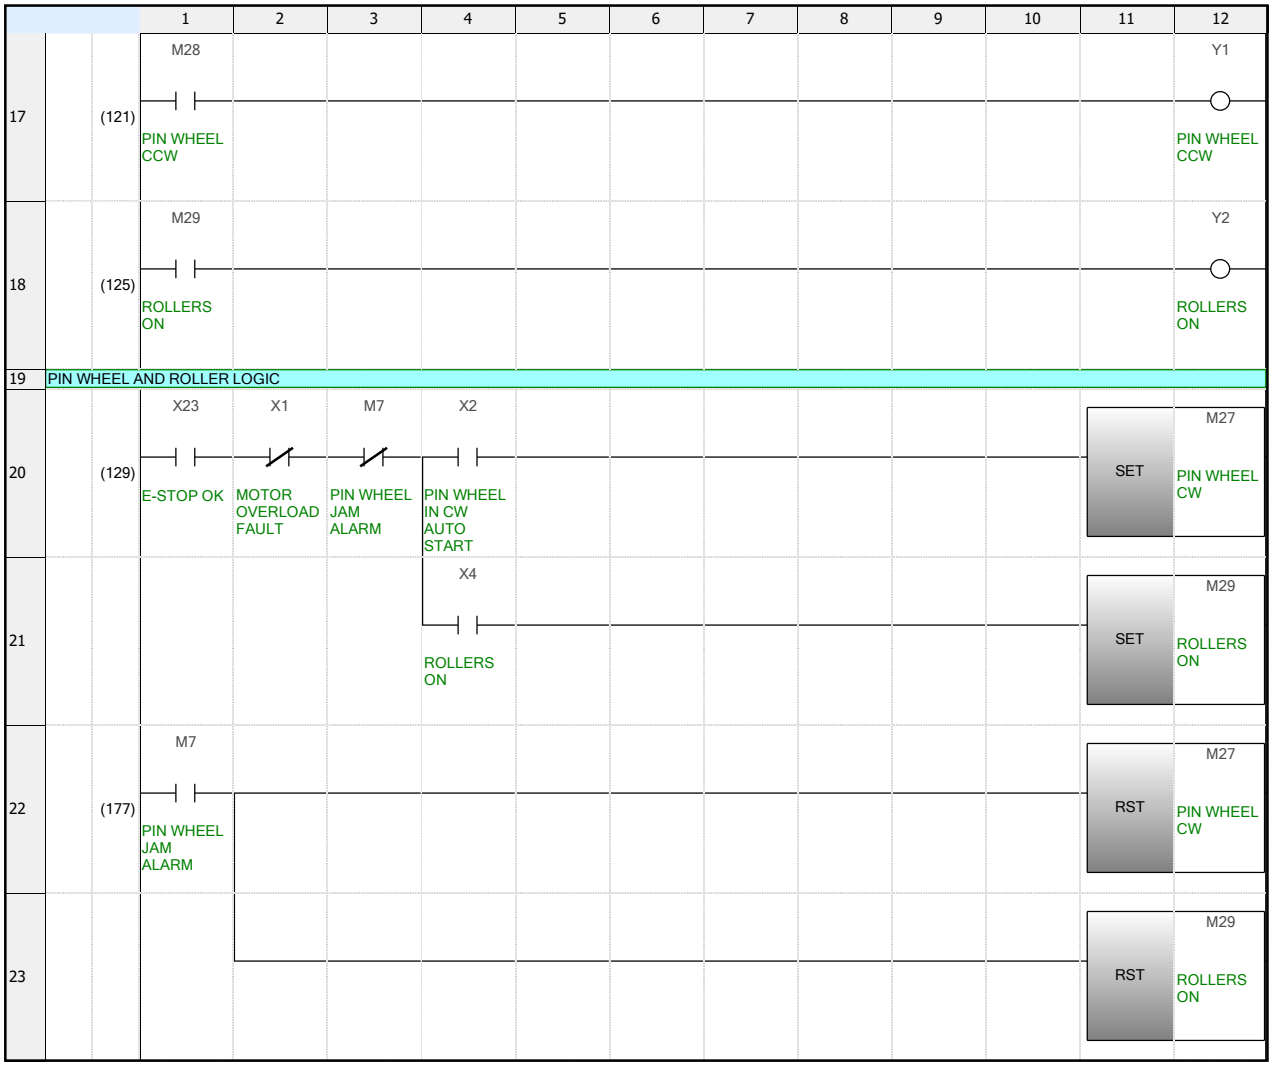
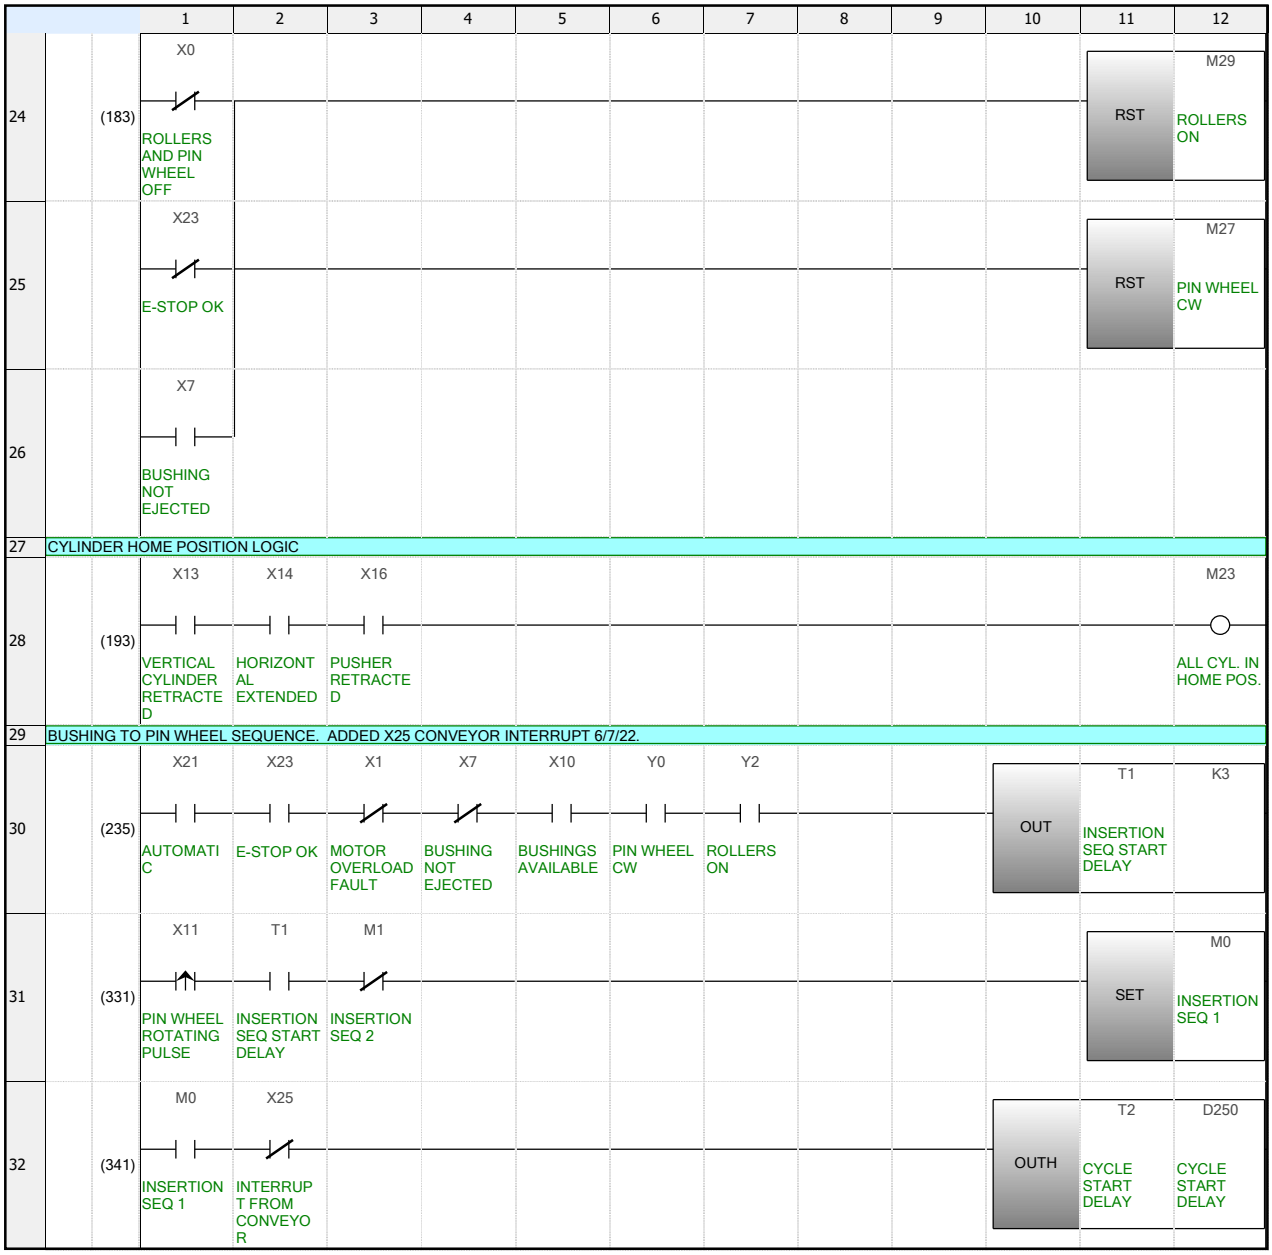
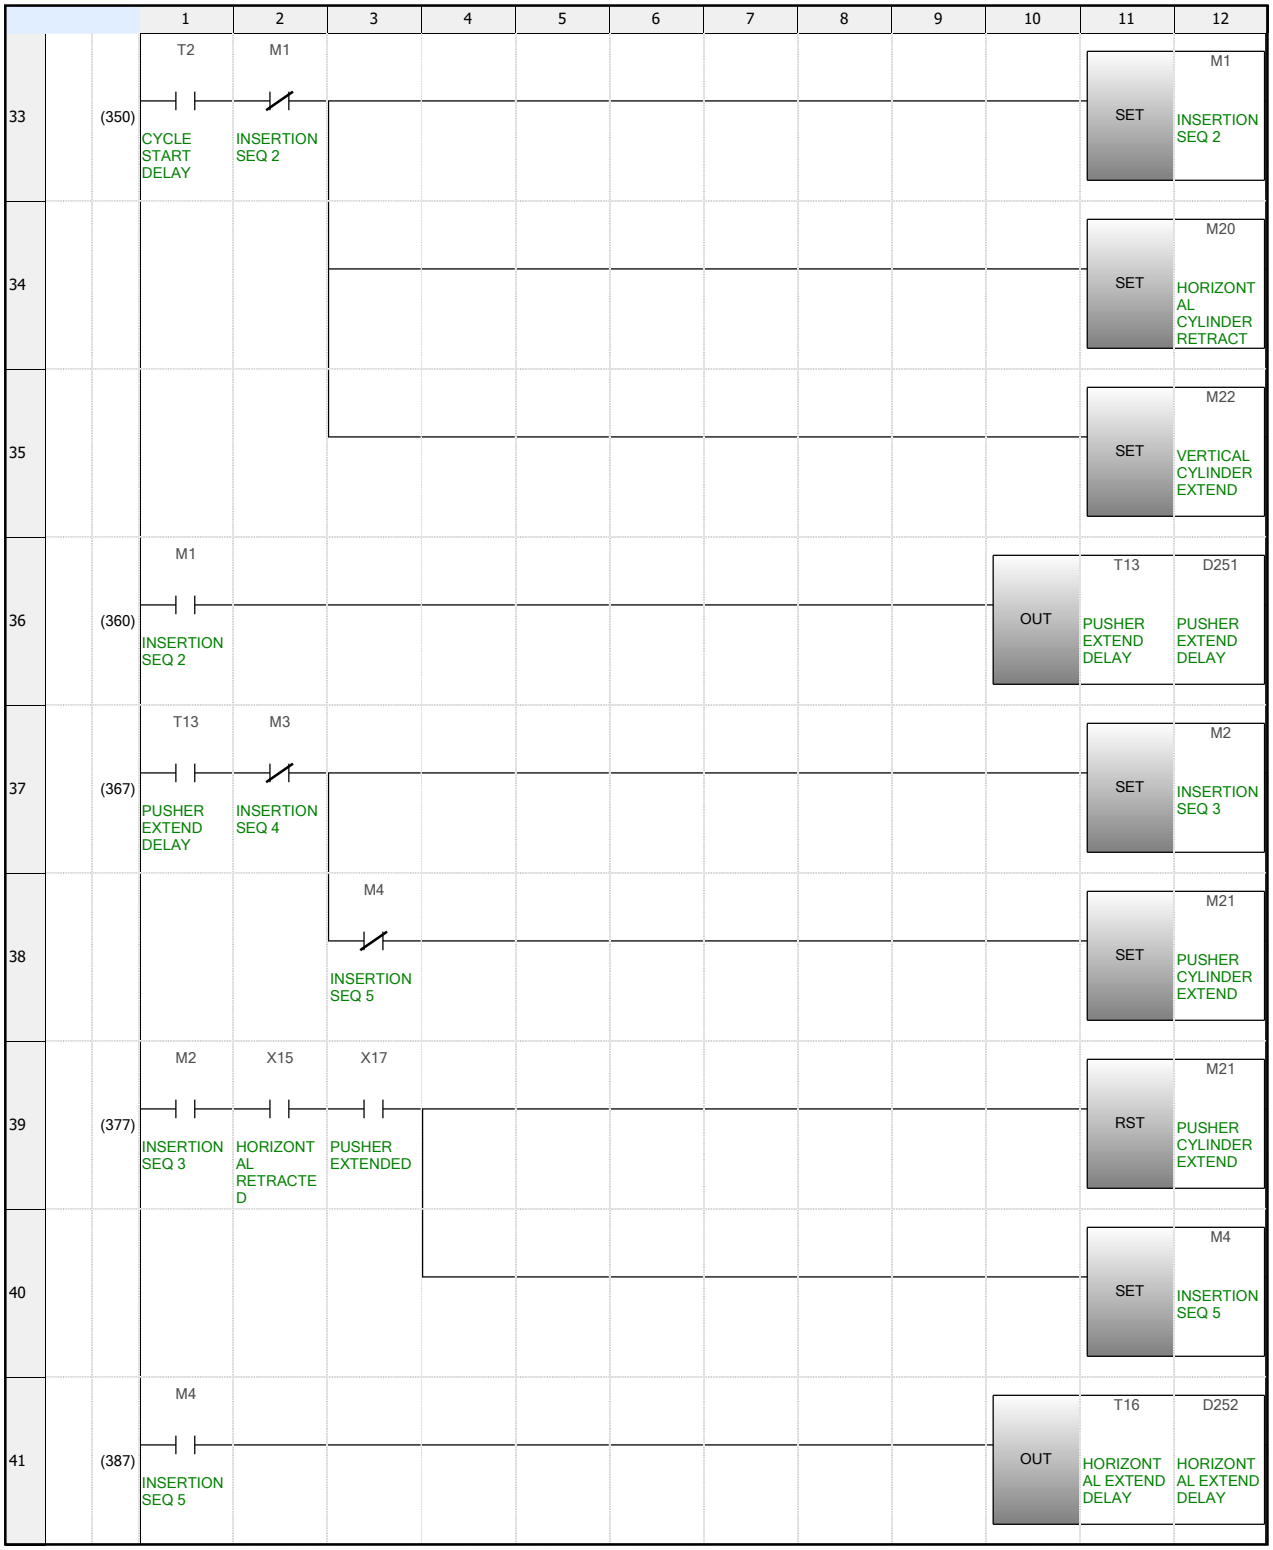
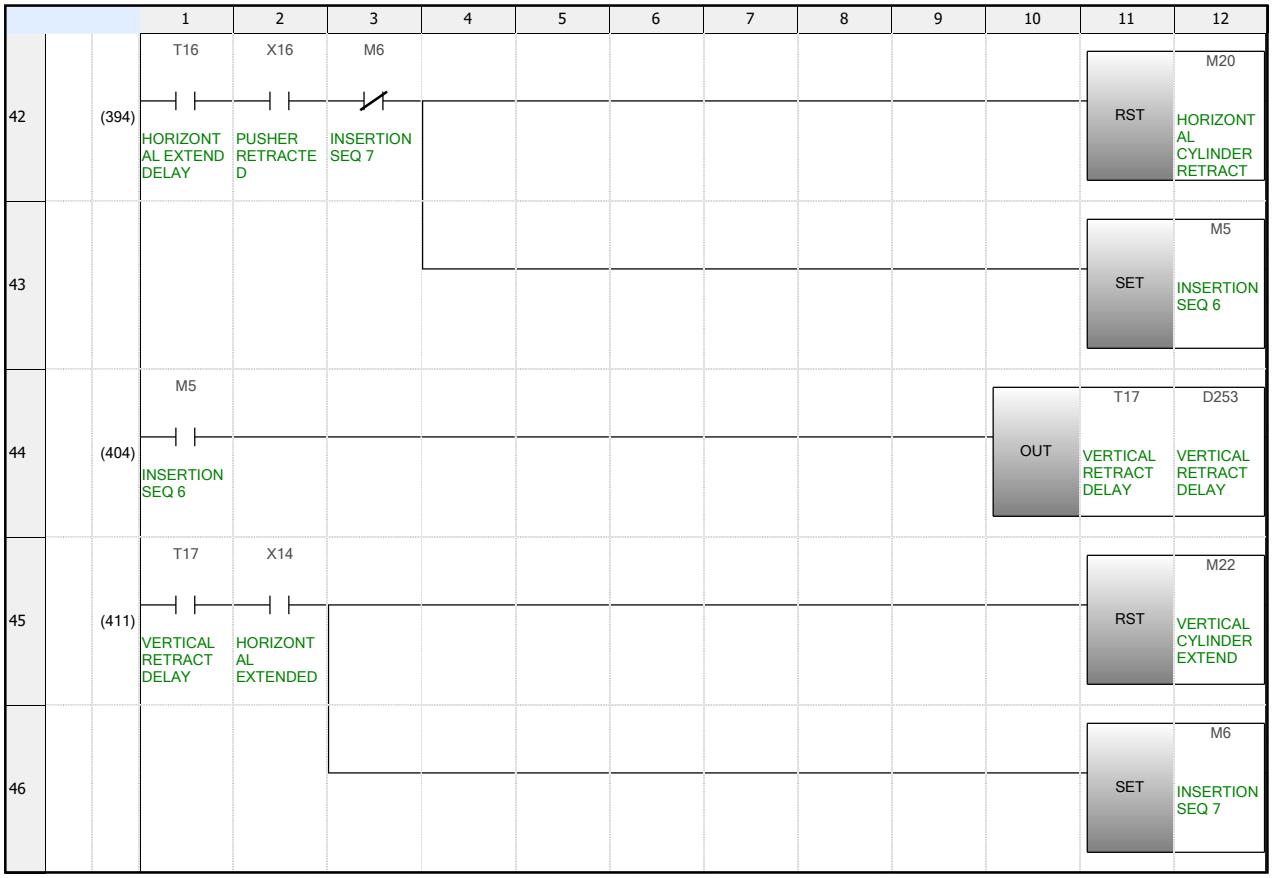

1
BOWL CONTROL
2
(0)
X6
FEED RAIL FULL
X21
AUTOMATIC
X23
E-STOP OK
OUT
T0
BOWL OFF DELAY
K5
3
(28)
T0
BOWL OFF DELAY
X21
AUTOMATIC
X23
E-STOP OK
Y4
FEED BOWL ON
4
M30
BOWL MANUAL ON
5
(38)
M41
HMI BOWL ON PB
SET
M30
BOWL MANUAL ON
6
(42)
X21
AUTOMATIC
RST
M30
BOWL MANUAL ON
7
M42
MANUAL BOWL OFF

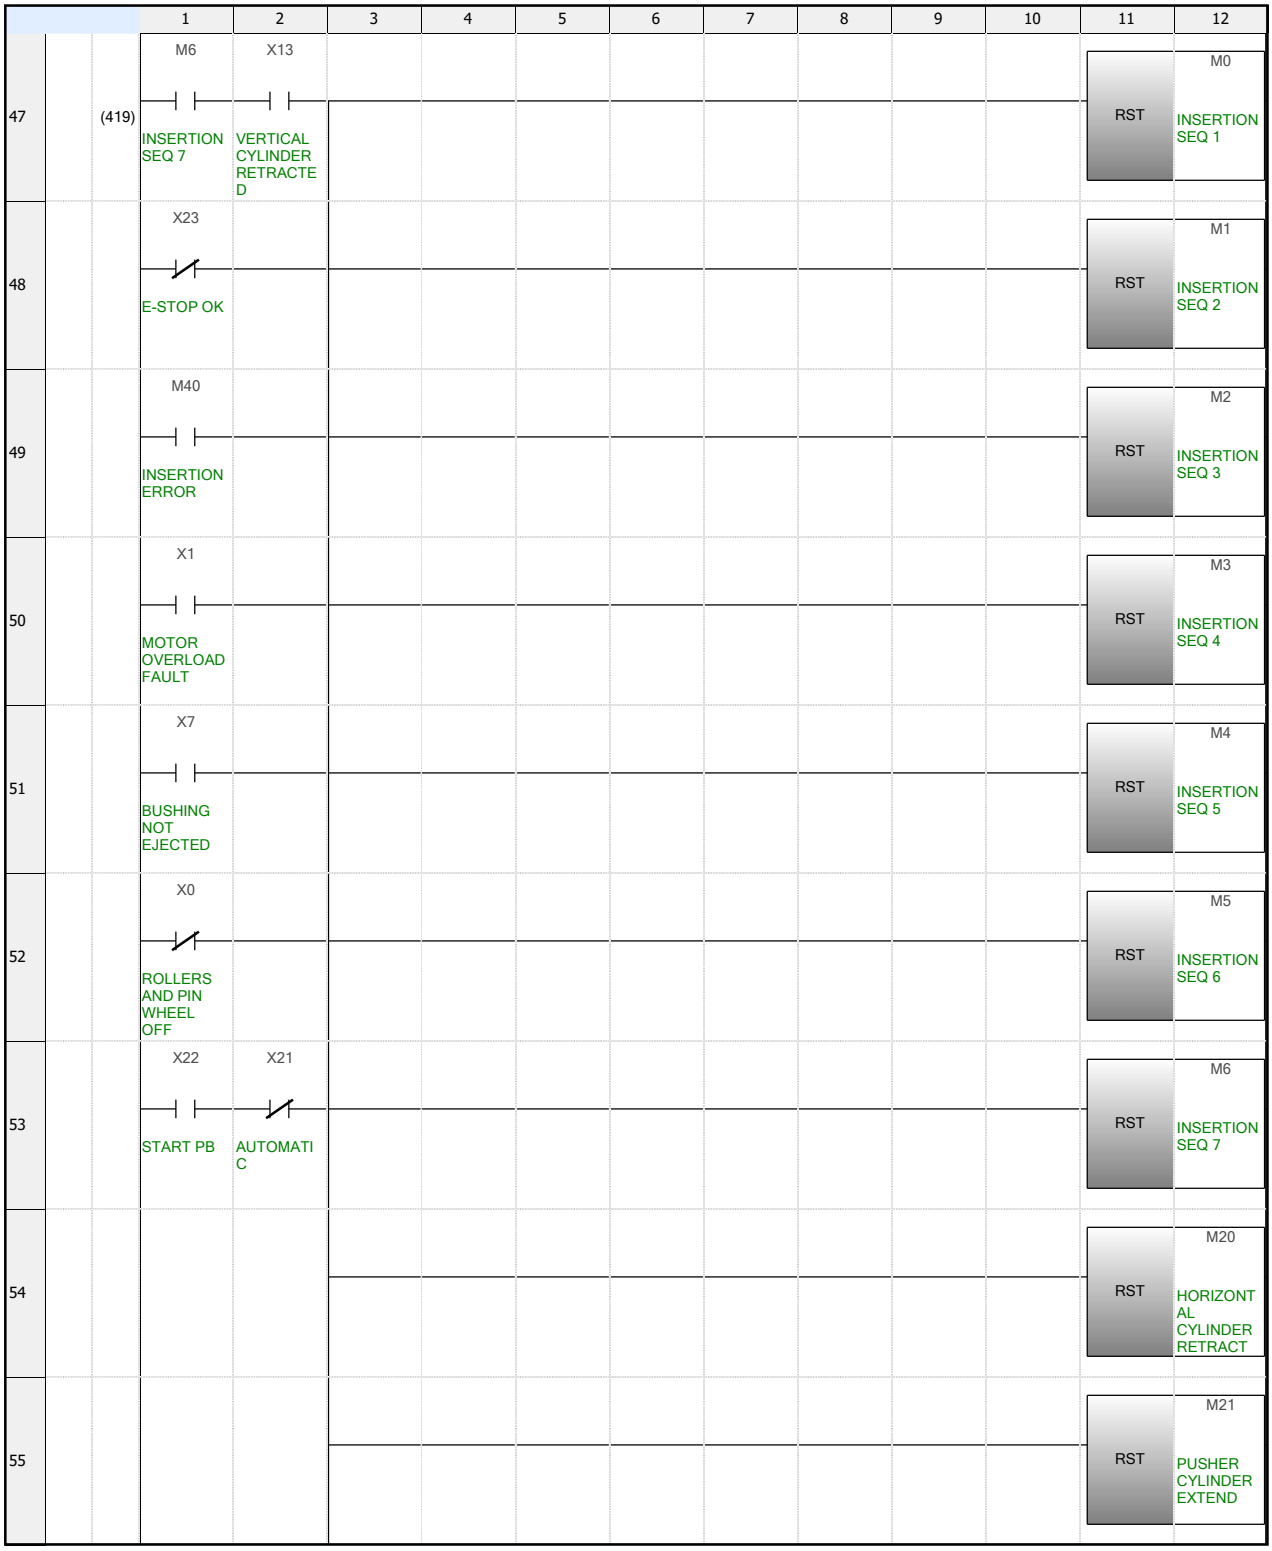

1
2
3
4
5
6
7
8
9
10
11
12
8 INDIRECT ADDRESSING
9 (48)
M20
HORIZONTAL CYLINDER RETRACT
X23
E-STOP OK
M35
AUTO HOME HORIZONTAL
Y10
HORIZONTAL CYLINDER RETRACT
10
X21
AUTOMATIC
M31
MANUAL HORIZONTAL RETRACT
11
M32
MANUAL PUSHER EXTEND
12 (89)
M21
PUSHER CYLINDER EXTEND
X23
E-STOP OK
M36
AUTO HOME PUSHER
X15
HORIZONTAL RETRACTED
Y12
PUSHER CYLINDER EXTEND
13
X21
AUTOMATIC
M32
MANUAL PUSHER EXTEND
14 (104)
M22
VERTICAL CYLINDER EXTEND
X23
E-STOP OK
M34
AUTO HOME VERTICAL
Y11
VERTICAL CYLINDER RETRACT
15
X21
AUTOMATIC
M33
MANUAL VERTICAL EXTEND
16 (117)
M27
PIN WHEEL CW
Y0
PIN WHEEL CW

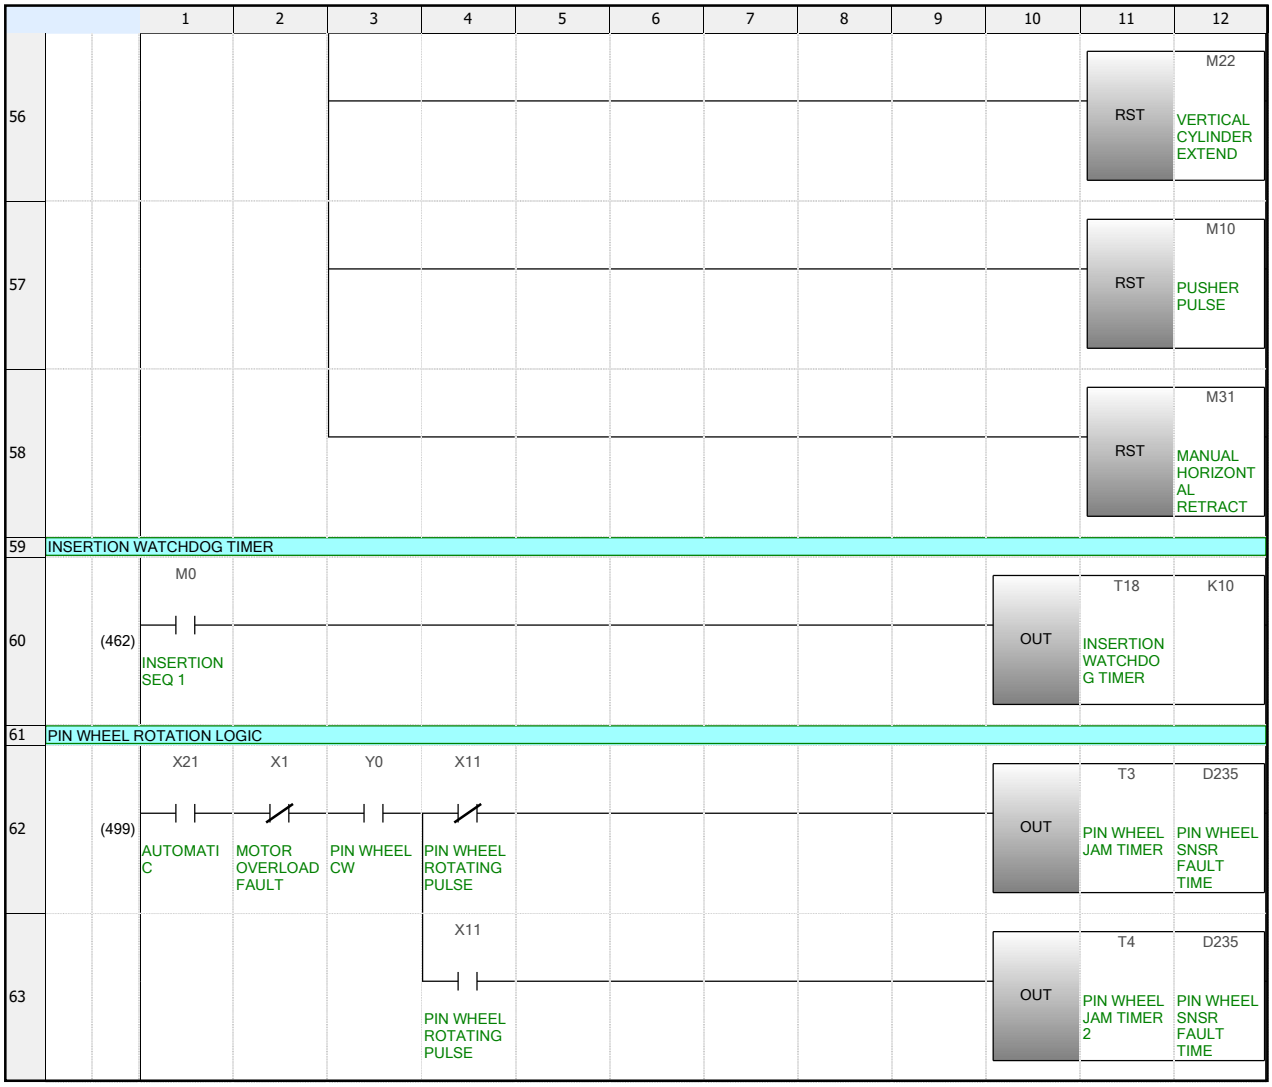

1 2 3 4 5 6 7 8 9 10 11 12
17 (121)
M28
PIN WHEEL CCW
Y1
PIN WHEEL CCW
18 (125)
M29
ROLLERS ON
Y2
ROLLERS ON
19 PIN WHEEL AND ROLLER LOGIC
20 (129)
X23
E-STOP OK
X1
MOTOR OVERLOAD FAULT
M7
PIN WHEEL JAM ALARM
X2
PIN WHEEL IN CW AUTO START
SET
M27
PIN WHEEL CW
21
X4
ROLLERS ON
SET
M29
ROLLERS ON
22 (177)
M7
PIN WHEEL JAM ALARM
RST
M27
PIN WHEEL CW
23
RST
M29
ROLLERS ON

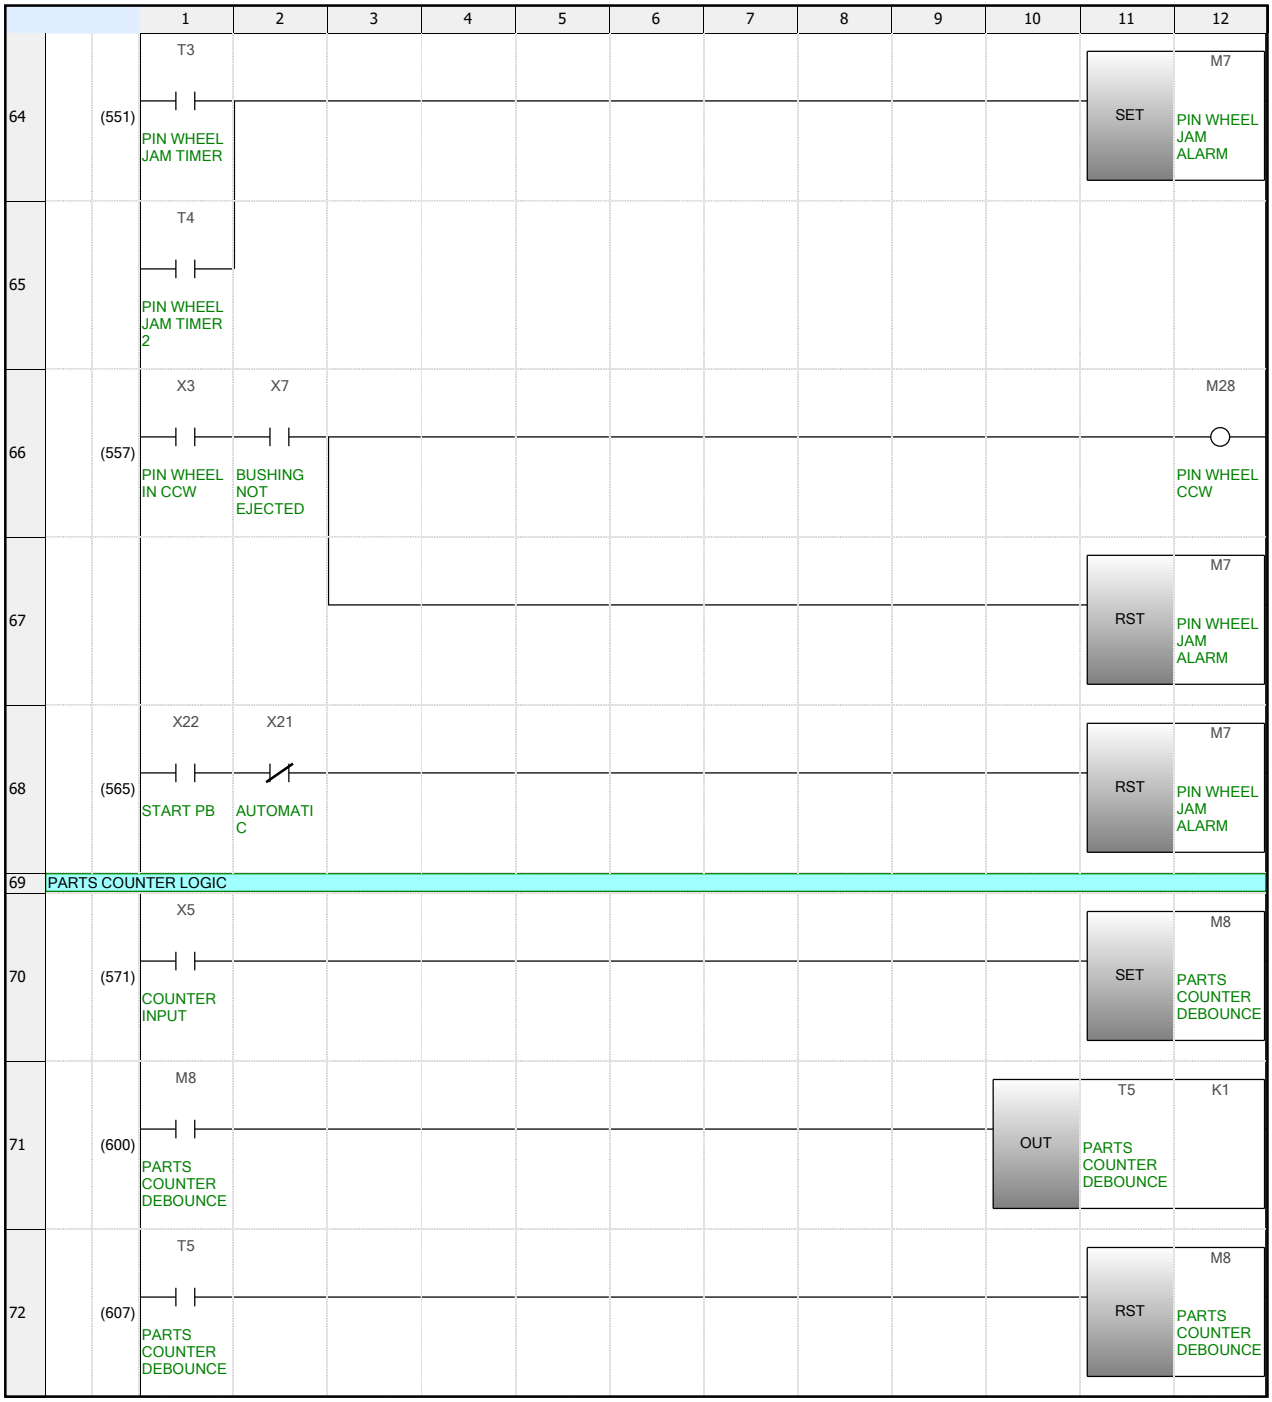

1 2 3 4 5 6 7 8 9 10 11 12
24 (183) X0 ROLLERS AND PIN WHEEL OFF RST M29 ROLLERS ON
25 X23 E-STOP OK RST M27 PIN WHEEL CW
26 X7 BUSHING NOT EJECTED
27 CYLINDER HOME POSITION LOGIC
28 (193) X13 VERTICAL CYLINDER RETRACTED X14 HORIZONTAL EXTENDED X16 PUSHER RETRACTED M23 ALL CYL. IN HOME POS.
29 BUSHING TO PIN WHEEL SEQUENCE. ADDED X25 CONVEYOR INTERRUPT 6/7/22.
30 (235) X21 AUTOMATIC X23 E-STOP OK X1 MOTOR OVERLOAD FAULT X7 BUSHING NOT EJECTED X10 BUSHINGS AVAILABLE Y0 PIN WHEEL CW Y2 ROLLERS ON OUT T1 INSERTION SEQ START DELAY K3
31 (331) X11 PIN WHEEL ROTATING PULSE T1 INSERTION SEQ START DELAY M1 INSERTION SEQ 2 SET M0 INSERTION SEQ 1
32 (341) M0 INSERTION SEQ 1 X25 INTERRUPT FROM CONVEYOR OUTH T2 CYCLE START DELAY D250 CYCLE START DELAY

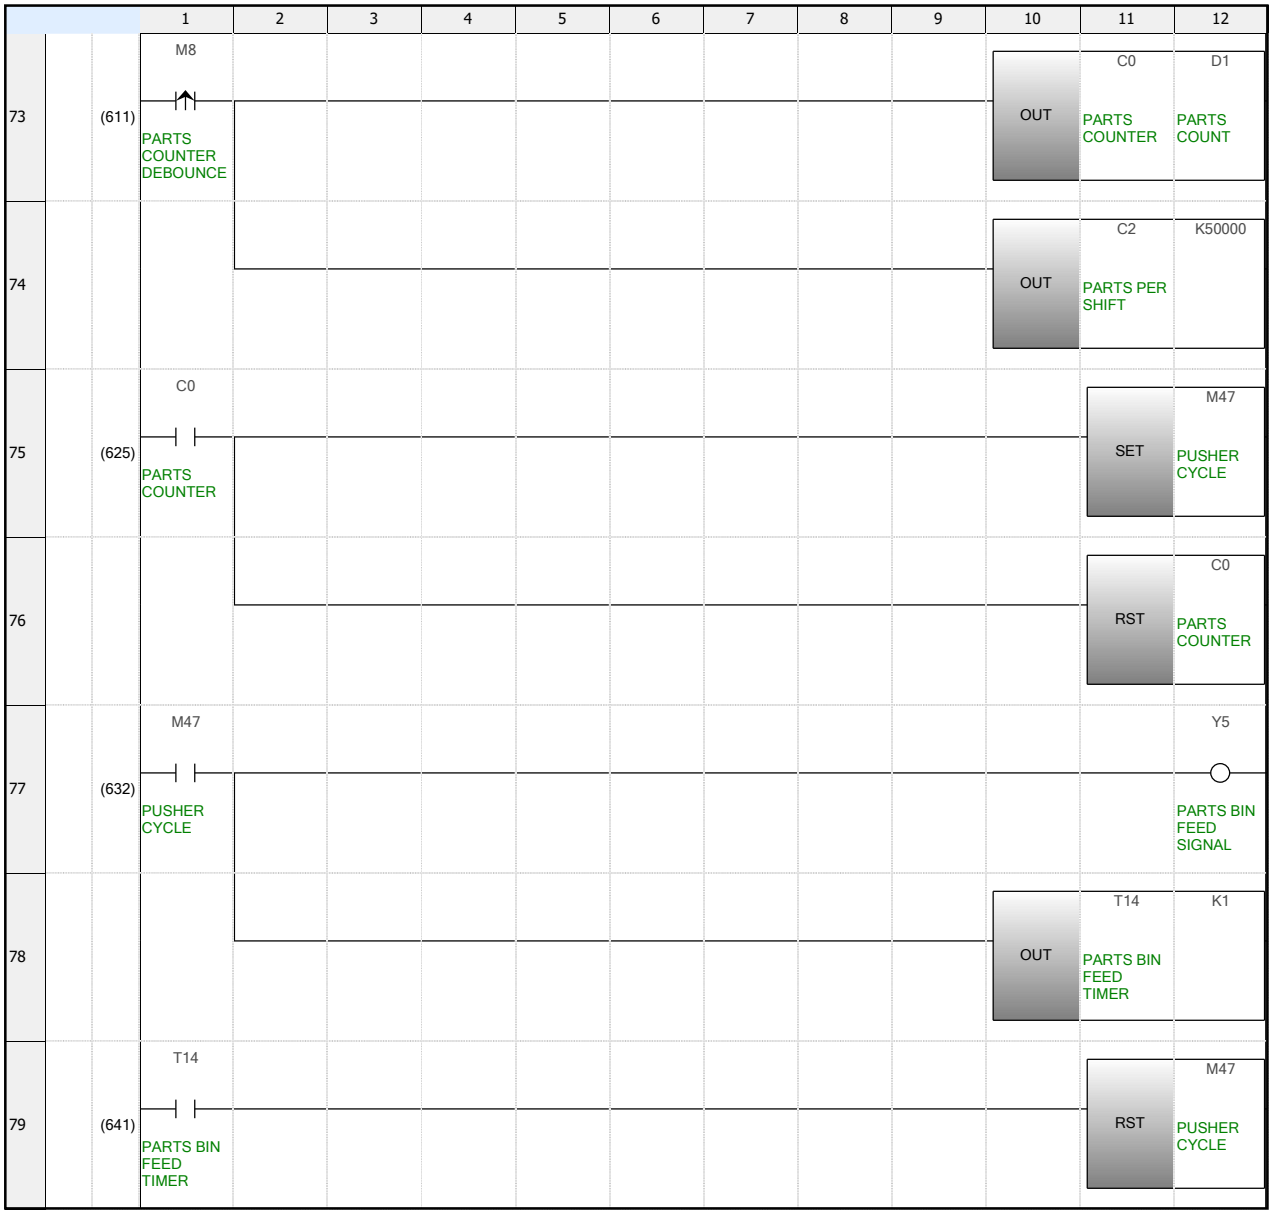

1 2 3 4 5 6 7 8 9 10 11 12
33 (350) T2 CYCLE START DELAY | M1 INSERTION SEQ 2 | SET M1 INSERTION SEQ 2
34 SET M20 HORIZONTAL CYLINDER RETRACT
35 SET M22 VERTICAL CYLINDER EXTEND
36 (360) M1 INSERTION SEQ 2 | OUT T13 PUSHER EXTEND DELAY D251 PUSHER EXTEND DELAY
37 (367) T13 PUSHER EXTEND DELAY | M3 INSERTION SEQ 4 | SET M2 INSERTION SEQ 3
38 M4 INSERTION SEQ 5 | SET M21 PUSHER CYLINDER EXTEND
39 (377) M2 INSERTION SEQ 3 | X15 HORIZONTAL RETRACTED | X17 PUSHER EXTENDED | RST M21 PUSHER CYLINDER EXTEND
40 SET M4 INSERTION SEQ 5
41 (387) M4 INSERTION SEQ 5 | OUT T16 HORIZONTAL EXTEND DELAY D252 HORIZONTAL EXTEND DELAY

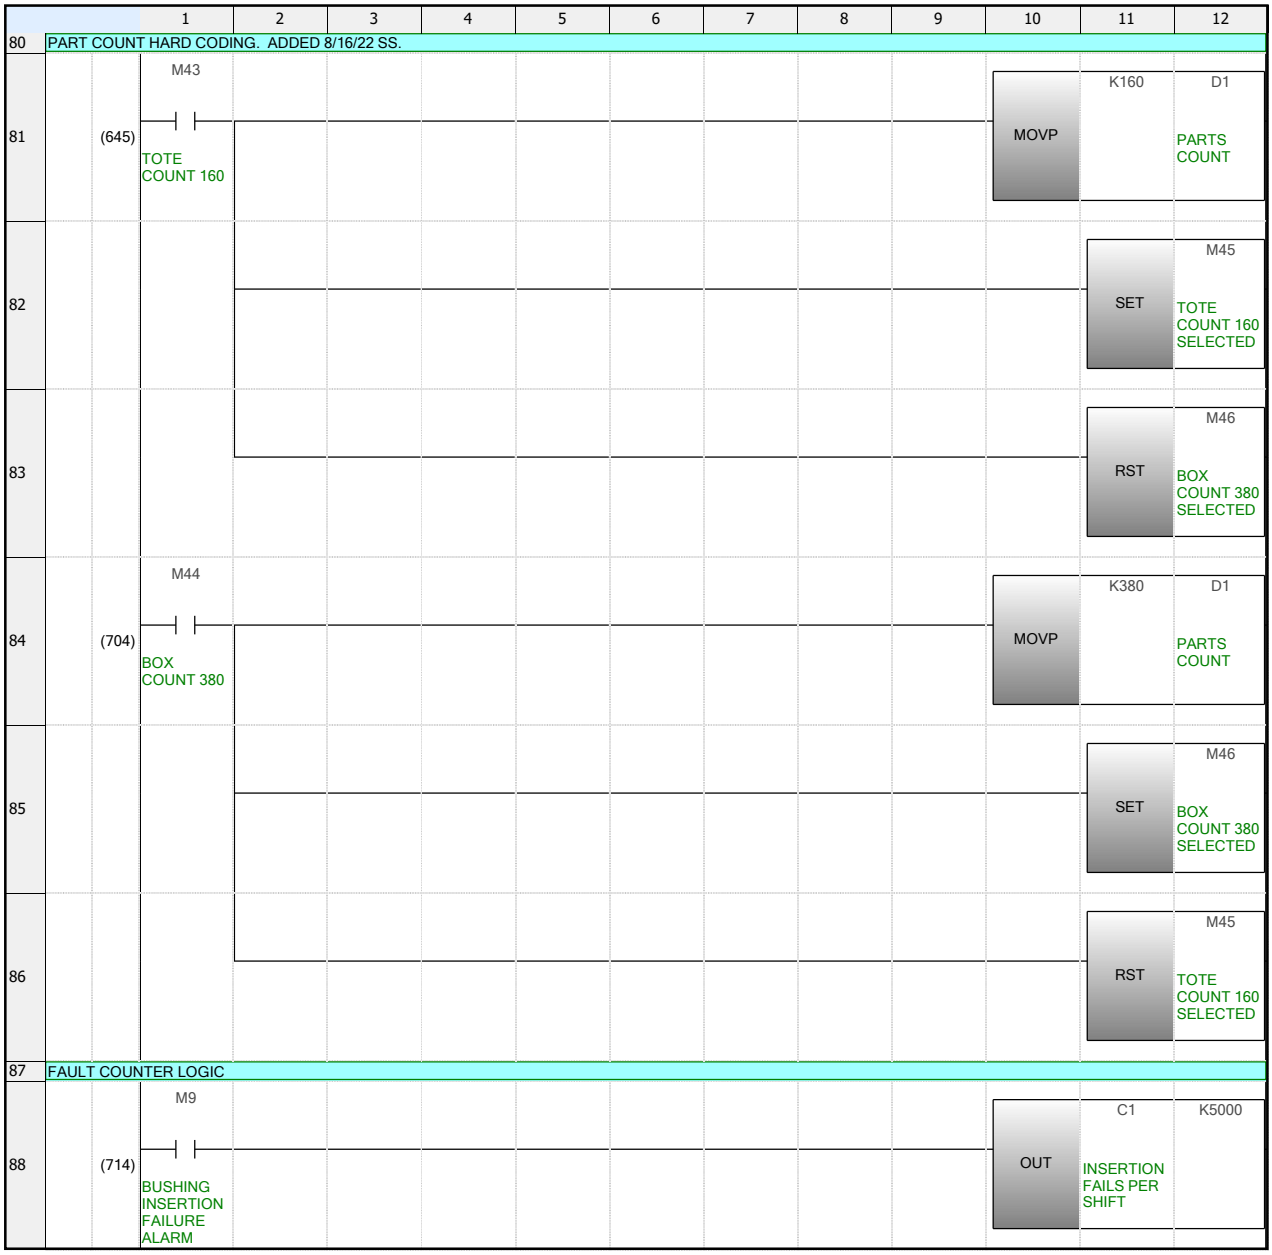

1 2 3 4 5 6 7 8 9 10 11 12
42 (394)
T16
HORIZONTAL EXTEND DELAY
X16
PUSHER RETRACTED
M6
INSERTION SEQ 7
RST
M20
HORIZONTAL CYLINDER RETRACT
43
SET
M5
INSERTION SEQ 6
44 (404)
M5
INSERTION SEQ 6
OUT
T17
VERTICAL RETRACT DELAY
D253
VERTICAL RETRACT DELAY
45 (411)
T17
VERTICAL RETRACT DELAY
X14
HORIZONTAL EXTENDED
RST
M22
VERTICAL CYLINDER EXTEND
46
SET
M6
INSERTION SEQ 7

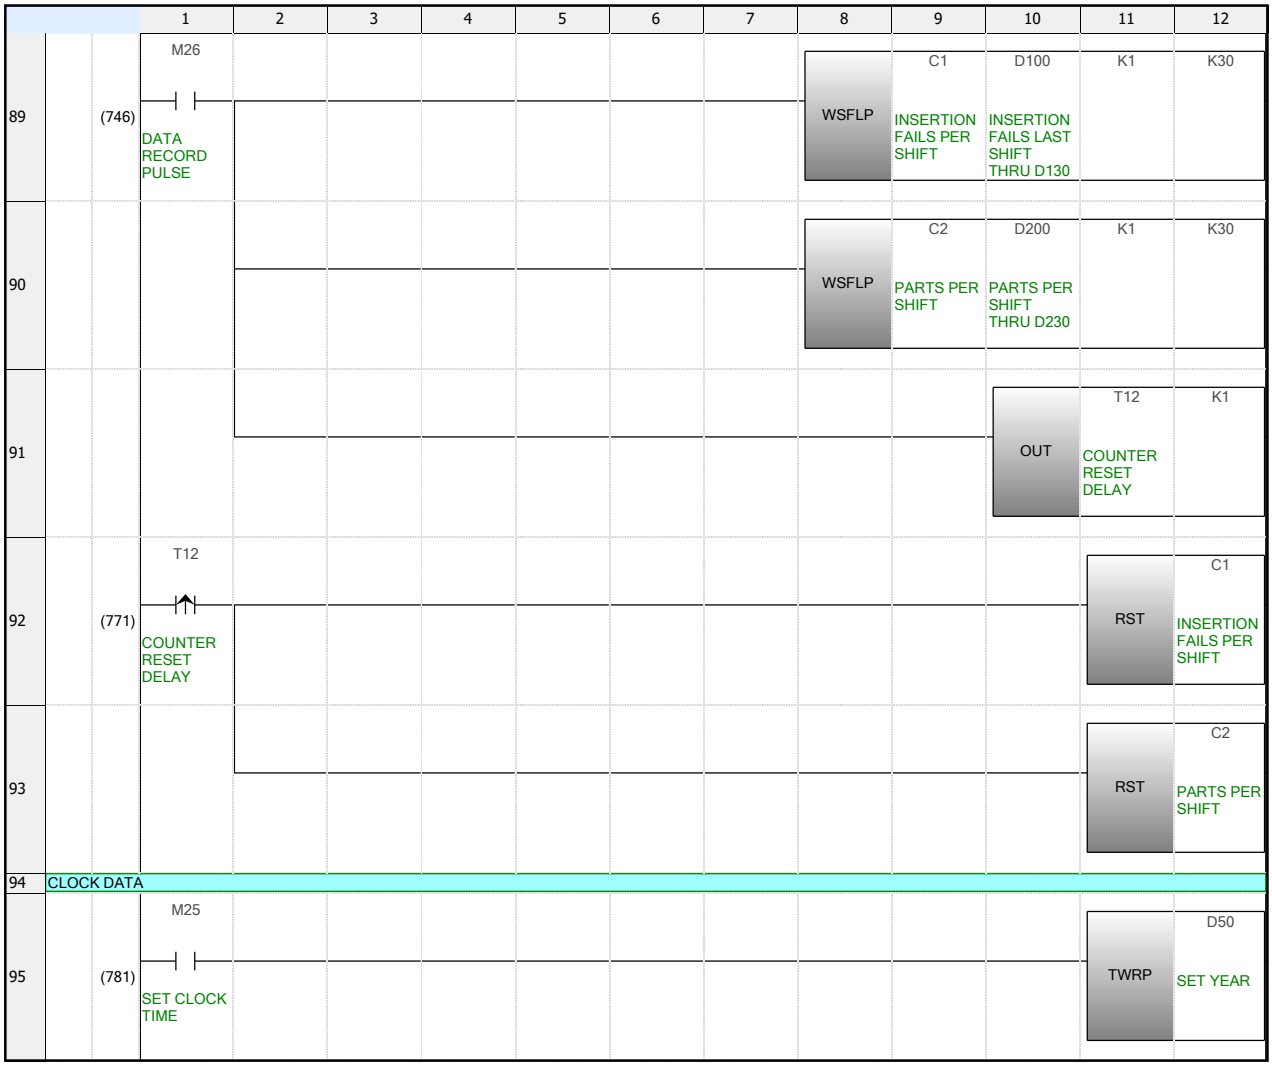

1
2
3
4
5
6
7
8
9
10
11
12
47
(419)
M6
INSERTION SEQ 7
X13
VERTICAL CYLINDER RETRACTED
RST
M0
INSERTION SEQ 1
48
X23
E-STOP OK
RST
M1
INSERTION SEQ 2
49
M40
INSERTION ERROR
RST
M2
INSERTION SEQ 3
50
X1
MOTOR OVERLOAD FAULT
RST
M3
INSERTION SEQ 4
51
X7
BUSHING NOT EJECTED
RST
M4
INSERTION SEQ 5
52
X0
ROLLERS AND PIN WHEEL OFF
RST
M5
INSERTION SEQ 6
53
X22
START PB
X21
AUTOMATIC
RST
M6
INSERTION SEQ 7
54
RST
M20
HORIZONTAL CYLINDER RETRACT
55
RST
M21
PUSHER CYLINDER EXTEND

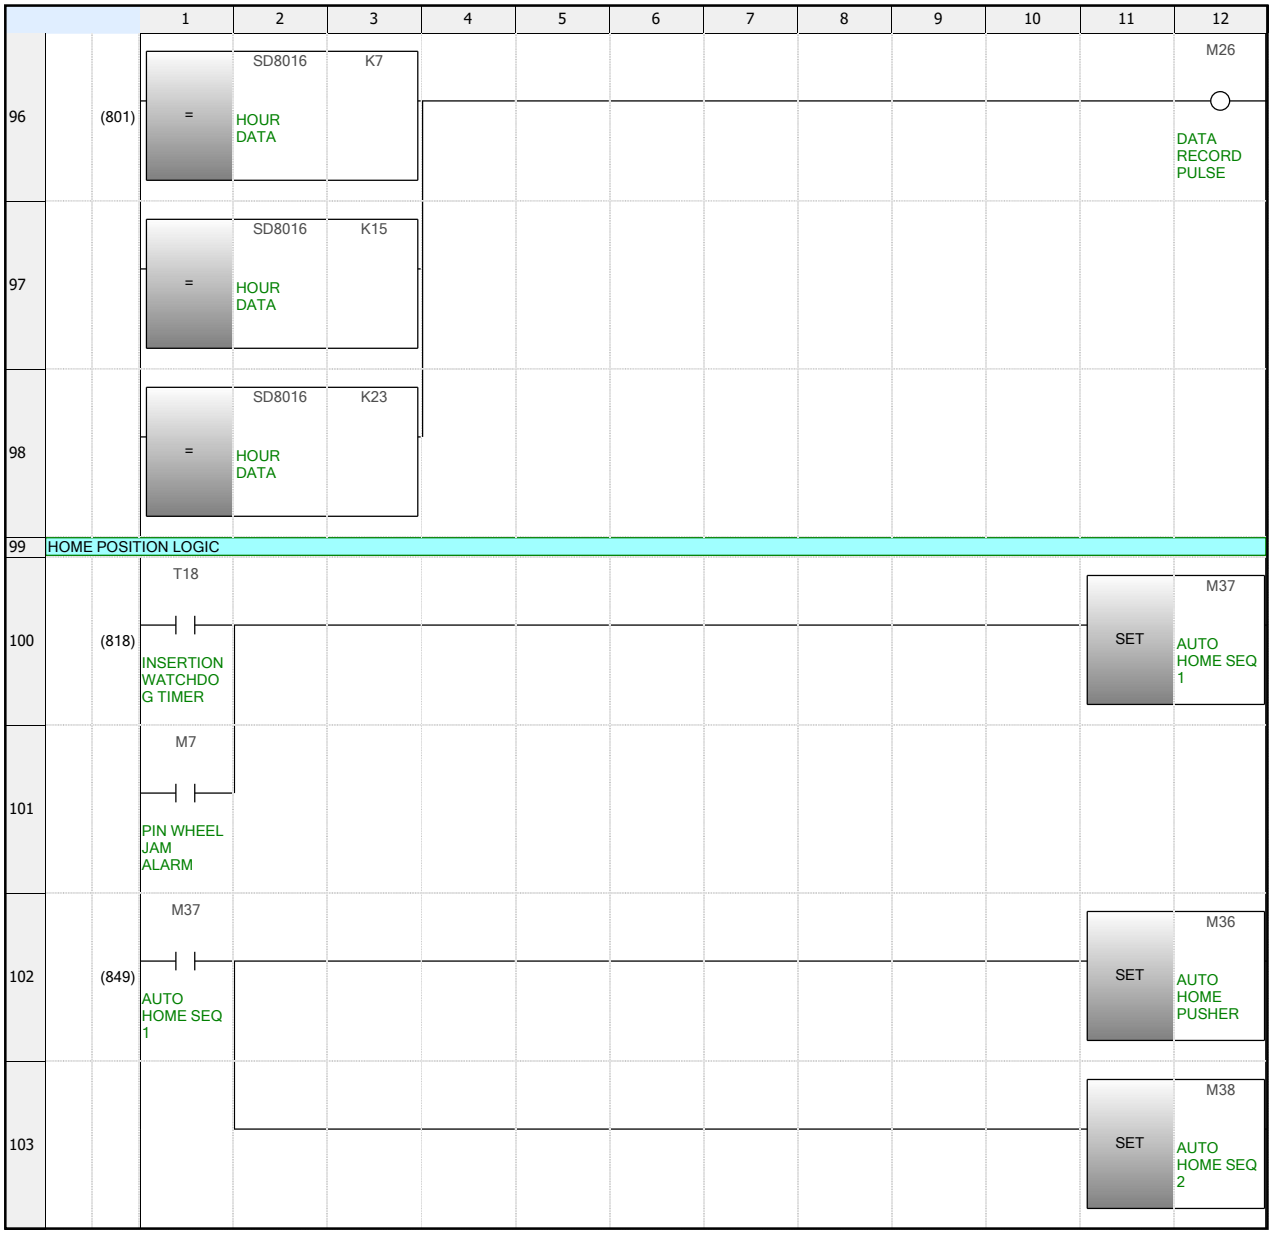

1 2 3 4 5 6 7 8 9 10 11 12
56
RST
M22
VERTICAL CYLINDER EXTEND
57
RST
M10
PUSHER PULSE
58
RST
M31
MANUAL HORIZONTAL RETRACT
59
INSERTION WATCHDOG TIMER
60
(462)
M0
INSERTION SEQ 1
OUT
T18
INSERTION WATCHDOG TIMER
K10
61
PIN WHEEL ROTATION LOGIC
62
(499)
X21
AUTOMATIC
X1
MOTOR OVERLOAD FAULT
Y0
PIN WHEEL CW
X11
PIN WHEEL ROTATING PULSE
OUT
T3
PIN WHEEL JAM TIMER
D235
PIN WHEEL SNSR FAULT TIME
63
X11
PIN WHEEL ROTATING PULSE
OUT
T4
PIN WHEEL JAM TIMER 2
D235
PIN WHEEL SNSR FAULT TIME

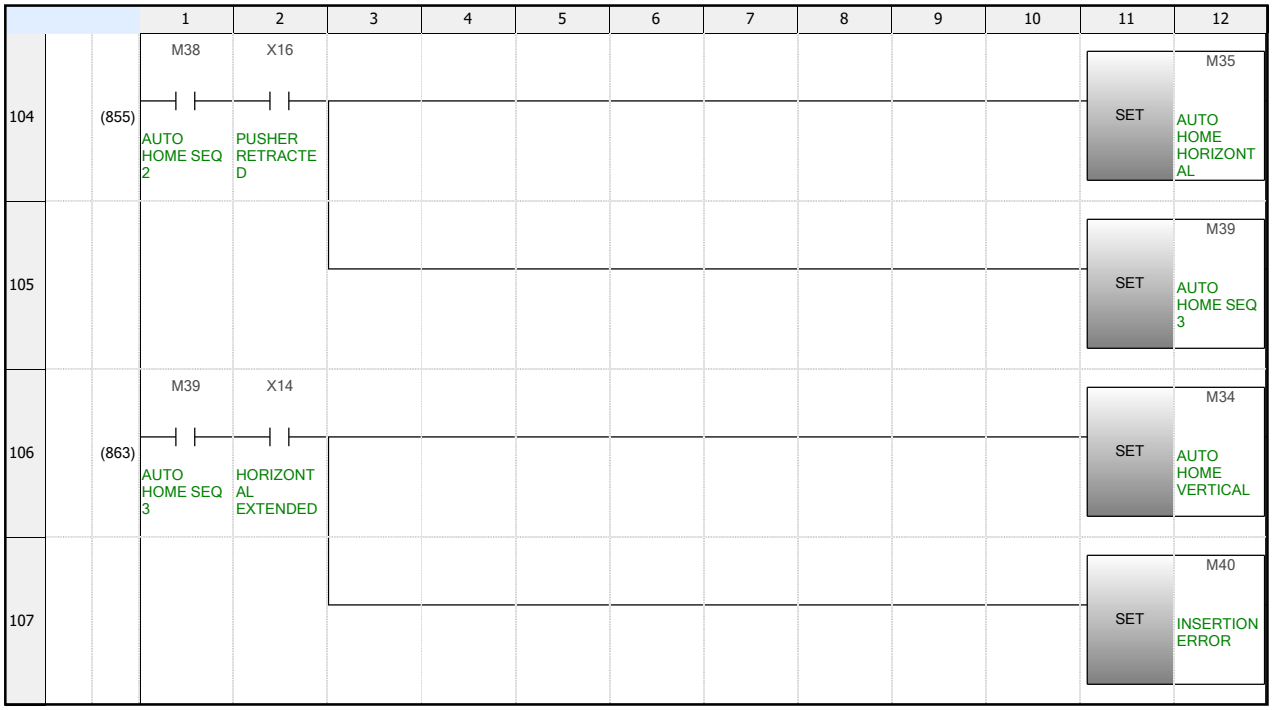

1
2
3
4
5
6
7
8
9
10
11
12
64
(551)
T3
PIN WHEEL JAM TIMER
SET
M7
PIN WHEEL JAM ALARM
65
T4
PIN WHEEL JAM TIMER 2
66
(557)
X3
PIN WHEEL IN CCW
X7
BUSHING NOT EJECTED
M28
PIN WHEEL CCW
67
RST
M7
PIN WHEEL JAM ALARM
68
(565)
X22
START PB
X21
AUTOMATIC
RST
M7
PIN WHEEL JAM ALARM
69
PARTS COUNTER LOGIC
70
(571)
X5
COUNTER INPUT
SET
M8
PARTS COUNTER DEBOUNCE
71
(600)
M8
PARTS COUNTER DEBOUNCE
OUT
T5
PARTS COUNTER DEBOUNCE
K1
72
(607)
T5
PARTS COUNTER DEBOUNCE
RST
M8
PARTS COUNTER DEBOUNCE

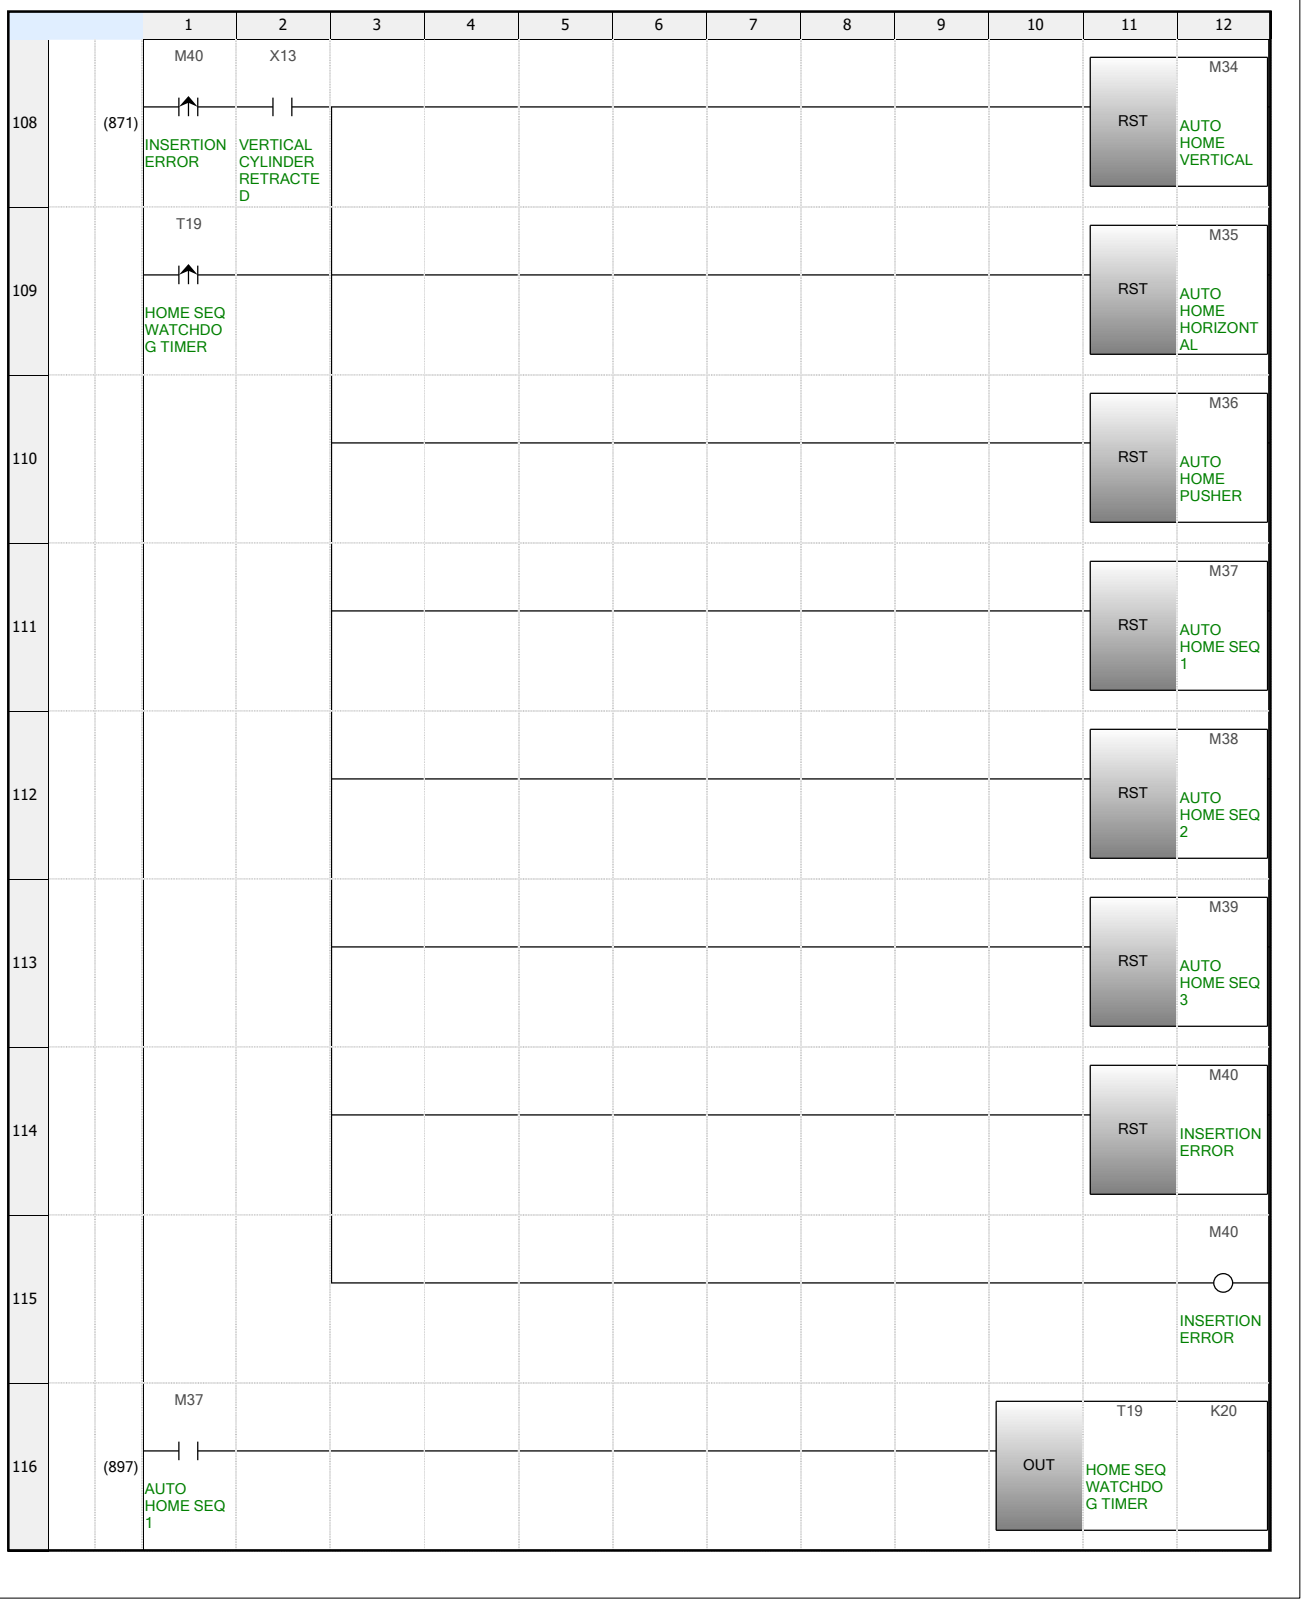

1
2
3
4
5
6
7
8
9
10
11
12
73
(611)
M8
PARTS COUNTER DEBOUNCE
OUT
C0
PARTS COUNTER
D1
PARTS COUNT
74
OUT
C2
PARTS PER SHIFT
K50000
75
(625)
C0
PARTS COUNTER
SET
M47
PUSHER CYCLE
76
RST
C0
PARTS COUNTER
77
(632)
M47
PUSHER CYCLE
Y5
PARTS BIN FEED SIGNAL
78
OUT
T14
PARTS BIN FEED TIMER
K1
79
(641)
T14
PARTS BIN FEED TIMER
RST
M47
PUSHER CYCLE

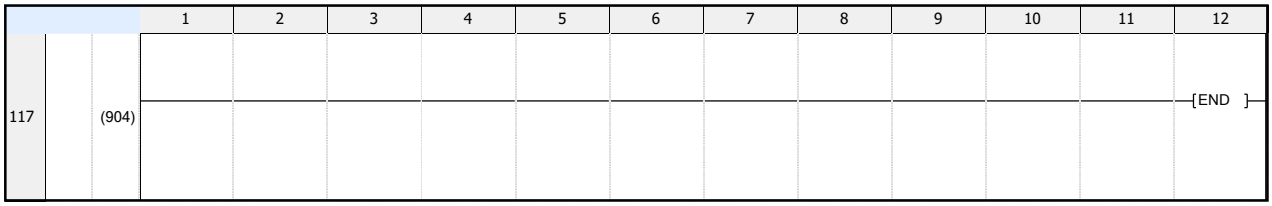

1 2 3 4 5 6 7 8 9 10 11 12
80 PART COUNT HARD CODING. ADDED 8/16/22 SS.
81 (645) M43 TOTE COUNT 160 MOVP K160 D1 PARTS COUNT
82 SET M45 TOTE COUNT 160 SELECTED
83 RST M46 BOX COUNT 380 SELECTED
84 (704) M44 BOX COUNT 380 MOVP K380 D1 PARTS COUNT
85 SET M46 BOX COUNT 380 SELECTED
86 RST M45 TOTE COUNT 160 SELECTED
87 FAULT COUNTER LOGIC
88 (714) M9 BUSHING INSERTION FAILURE ALARM OUT C1 INSERTION FAILS PER SHIFT K5000


1 2 3 4 5 6 7 8 9 10 11 12
89
(746)
M26
DATA RECORD PULSE
WSFLP
C1
INSERTION FAILS PER SHIFT
D100
INSERTION FAILS LAST SHIFT THRU D130
K1
K30
90
WSFLP
C2
PARTS PER SHIFT
D200
PARTS PER SHIFT THRU D230
K1
K30
91
OUT
T12
COUNTER RESET DELAY
K1
92
(771)
T12
COUNTER RESET DELAY
RST
C1
INSERTION FAILS PER SHIFT
93
RST
C2
PARTS PER SHIFT
94
CLOCK DATA
95
(781)
M25
SET CLOCK TIME
TWRP
D50
SET YEAR


1 2 3 4 5 6 7 8 9 10 11 12
96 (801) = SD8016 K7 HOUR DATA
M26 DATA RECORD PULSE
97 = SD8016 K15 HOUR DATA
98 = SD8016 K23 HOUR DATA
99 HOME POSITION LOGIC
100 (818) T18 INSERTION WATCHDO G TIMER
SET M37 AUTO HOME SEQ 1
101 M7 PIN WHEEL JAM ALARM
102 (849) M37 AUTO HOME SEQ 1
SET M36 AUTO HOME PUSHER
103
SET M38 AUTO HOME SEQ 2


1
2
3
4
5
6
7
8
9
10
11
12
104
(855)
M38
AUTO HOME SEQ 2
X16
PUSHER RETRACTED
SET
M35
AUTO HOME HORIZONTAL
105
SET
M39
AUTO HOME SEQ 3
106
(863)
M39
AUTO HOME SEQ 3
X14
HORIZONTAL EXTENDED
SET
M34
AUTO HOME VERTICAL
107
SET
M40
INSERTION ERROR


1 2 3 4 5 6 7 8 9 10 11 12
108 (871)
M40
INSERTION ERROR
X13
VERTICAL CYLINDER RETRACTED
RST
M34
AUTO HOME VERTICAL
109
T19
HOME SEQ WATCHDOG TIMER
RST
M35
AUTO HOME HORIZONTAL
110
RST
M36
AUTO HOME PUSHER
111
RST
M37
AUTO HOME SEQ 1
112
RST
M38
AUTO HOME SEQ 2
113
RST
M39
AUTO HOME SEQ 3
114
RST
M40
INSERTION ERROR
115
M40
INSERTION ERROR
116 (897)
M37
AUTO HOME SEQ 1
OUT
T19
HOME SEQ WATCHDOG TIMER
K20


1
2
3
4
5
6
7
8
9
10
11
12
117
(904)
[END]

Device Name	Comment
M0	INSERTION SEQ 1
M1	INSERTION SEQ 2
M2	INSERTION SEQ 3
M3	INSERTION SEQ 4
M4	INSERTION SEQ 5
M5	INSERTION SEQ 6
M6	INSERTION SEQ 7
M7	PIN WHEEL JAM ALARM
M8	PARTS COUNTER DEBOUNCE
M9	BUSHING INSERTION FAILURE ALARM
M10	PUSHER PULSE
M11	PUSHER ON
M12	INSERTION FAIL PULSE BIT
M13	INS FAIL SEQ 1
M14	INS FAIL SEQ 2
M15	REPEATED INS FAIL
M16	INS FAIL SEQ 3
M17	INS FAIL PULSE 2
M18	INS FAIL SEQ 4
M19	INS FAILURE MANUAL RST
M20	HORIZONTAL CYLINDER RETRACT
M21	PUSHER CYLINDER EXTEND
M22	VERTICAL CYLINDER EXTEND
M23	ALL CYL. IN HOME POS.
M24	HORIZONTAL CYL EXT OVERRIDE
M25	SET CLOCK TIME
M26	DATA RECORD PULSE
M27	PIN WHEEL CW
M28	PIN WHEEL CCW
M29	ROLLERS ON
M30	BOWL MANUAL ON
M31	MANUAL HORIZONTAL RETRACT
M32	MANUAL PUSHER EXTEND
M33	MANUAL VERTICAL EXTEND
M34	AUTO HOME VERTICAL
M35	AUTO HOME HORIZONTAL
M36	AUTO HOME PUSHER
M37	AUTO HOME SEQ 1
M38	AUTO HOME SEQ 2
M39	AUTO HOME SEQ 3
M40	INSERTION ERROR
M41	HMI BOWL ON PB
M42	MANUAL BOWL OFF
M43	TOTE COUNT 160
M44	BOX COUNT 380
M45	TOTE COUNT 160 SELECTED
M46	BOX COUNT 380 SELECTED
M47	PUSHER CYCLE
X0	ROLLERS AND PIN WHEEL OFF

Device Name	Comment
X1	MOTOR OVERLOAD FAULT
X2	PIN WHEEL IN CW AUTO START
X3	PIN WHEEL IN CCW
X4	ROLLERS ON
X5	COUNTER INPUT
X6	FEED RAIL FULL
X7	BUSHING NOT EJECTED
X10	BUSHINGS AVAILABLE
X11	PIN WHEEL ROTATING PULSE
X12	VERTICAL EXTENDED
X13	VERTICAL CYLINDER RETRACTED
X14	HORIZONTAL EXTENDED
X15	HORIZONTAL RETRACTED
X16	PUSHER RETRACTED
X17	PUSHER EXTENDED
X21	AUTOMATIC
X22	START PB
X23	E-STOP OK
X25	INTERRUPT FROM CONVEYOR
Y0	PIN WHEEL CW
Y1	PIN WHEEL CCW
Y2	ROLLERS ON
Y4	FEED BOWL ON
Y5	PARTS BIN FEED SIGNAL
Y10	HORIZONTAL CYLINDER RETRACT
Y11	VERTICAL CYLINDER RETRACT
Y12	PUSHER CYLINDER EXTEND
D0	PUSHER EXT DELAY
D1	PARTS COUNT
D2	INSERTION FAILURE TIMER
D50	SET YEAR
D51	SET MONTH
D52	SET DAY
D53	SET HOUR
D54	SET MINUTE
D55	SET SECOND
D56	SET DAY OF WEEK
D100	INSERTION FAILS LAST SHIFT THRU D130
D130	INSERTION FAILS PER SHIFT
D200	PARTS PER SHIFT THRU D230
D235	PIN WHEEL SNSR FAULT TIME
D250	CYCLE START DELAY
D251	PUSHER EXTEND DELAY
D252	HORIZONTAL EXTEND DELAY
D253	VERTICAL RETRACT DELAY
SD8016	HOUR DATA
T0	BOWL OFF DELAY
T1	INSERTION SEQ START DELAY
T2	CYCLE START DELAY

Device Name	Comment
T3	PIN WHEEL JAM TIMER
T4	PIN WHEEL JAM TIMER 2
T5	PARTS COUNTER DEBOUNCE
T6	INSERTION FAILURE TIMER
T7	PUSHER DELAY
T8	INS FAIL PUSHER DELAY
T9	INSERTION FAILURE TIMER 2
T10	INS FAIL PUSHER DELAY 2
T11	INSERTION FAILURE TIMER 3
T12	COUNTER RESET DELAY
T13	PUSHER EXTEND DELAY
T14	PARTS BIN FEED TIMER
T16	HORIZONTAL EXTEND DELAY
T17	VERTICAL RETRACT DELAY
T18	INSERTION WATCHDOG TIMER
T19	HOME SEQ WATCHDOG TIMER
C0	PARTS COUNTER
C1	INSERTION FAILS PER SHIFT
C2	PARTS PER SHIFT

I/O Assignment Setting

Mounting Position	Model Name	Intelligent Module No.	Serial Communication ch	Number of Input Points	Number of Output Points	CPU Module Operation Setting at Error Detection
Module						
CPU	FX5UC-32MR/DS-TS					
1	FX5-C32ET/DSS-TS			16 Points	16 Points	
2						
3						
4						
5						
6						
7						
8						
9						
10						
11						
12						
13						
14						
15						
16						
17						
18						
Adapter						
ADP1						
ADP2						
ADP3						
ADP4						
ADP5						
ADP6						

Name Setting

Item	Setting
Title Setting	
Title	Rolling Machine PLC Program
Comment Setting	
Comment	V1.01

Operation Related Setting

Item	Setting
RUN Contact Setting	
RUN	
Contact Operation	RUN at Contacts ON
Remote Reset Setting	
Remote Reset	Enable
Clock Related Setting	
Time Zone	UTC+9
Comment	

Interrupt Settings

Item	Setting
Fixed Scan Interval Setting	
Interrupt Setting from Internal Timer	
I28	100 ms
I29	40 ms
I30	20 ms
I31	10 ms
Fixed Scan Execution Mode Setting	
Fixed Scan Execution Mode	Precede Fixed Scan
Interrupt Priority Setting from Module	
Multiple Interruptions	Disable
Interrupt Priority	<Detailed Setting>
Index Register. Save/Restore Setting	Not Saved/Recovered

Service Processing Setting

Item	Setting
Device/Label Access Service Processing Setting	
Specifying Method	No Setting
Counts	1 Times

File Setting

Item	Setting
Initial Value Setting	
Setting of Device Initial Value Use Or Not	Not Use
Target Memory	Data Memory
Global Device Initial Value File Name	

Memory/Device Setting

Item	Setting
Device/Label Memory Area Setting	
Option Battery Setting	Not Mounted
Device/Label Memory Area Capacity Setting	
Device Area	
Device (high speed) Area Capacity	12 K Word
Device (standard) Area Capacity	35 K Word
Label Area	
Label/Latch Label Use Device Area Setting	Standard Area
Label Area Capacity	12 K Word
Latch Label Area Capacity	1 K Word
Device/Label Memory Configuration Confirmation	<Confirmation>
Check the Latch Configuration	<Confirmation>
Device/Label Memory Area Detailed Setting	
Device (high speed) Setting	<Detailed Setting>
Device (Standard) Setting	<Detailed Setting>
Latch type setting of the latch relay (L)	Latch (1)
Latch Type Setting of Latch Type Label	Latch (1)
Latch area of the latch label	Standard Latch Area
To use or not use the routine timer of timer (T)	Not Use
Start device No. of routine timer of timer (T)	0
Index Register Setting	
Points Setting	
Total Points	24 Word
Index Register (Z)	20 Points
Long Index Register (LZ)	2 Points
Pointer Setting	
Total Points	4096 Points
Global Pointer	2048 Points
Pointer Type Label	2048 Points
Internal Buffer Capacity Setting	
Total Capacity	320 K Byte
Function to Use Internal Buffer	Data Logging Function
Data Logging Function	
Total Capacity	320 K Byte
Setting No.1	80 K Byte
Setting No.2	80 K Byte
Setting No.3	80 K Byte
Setting No.4	80 K Byte
Memory Dump Function	0 K Byte

Memory/Device Setting
Device (high speed) Setting

Item	Symbol	Device		Latch (1)	Latch (2)
		Points	Range		
Input	X	1024	0 to 1777		
Output	Y	1024	0 to 1777		
Internal Relay	M	7680	0 to 7679	500 to 7679	No Setting
Link Relay	B	256	0 to FF	No Setting	No Setting
Link Special Relay	SB	512	0 to 1FF		
Annunciator	F	128	0 to 127	No Setting	No Setting
Step Relay	S	4096	0 to 4095	500 to 4095	
Timer	T	512	0 to 511	No Setting	No Setting
Retentive Timer	ST	16	0 to 15	0 to 15	No Setting
Counter	C	256	0 to 255	100 to 199	No Setting
Long Counter	LC	64	0 to 63	20 to 63	No Setting
Data Register	D	8000	0 to 7999	200 to 7999	No Setting
Latch Relay	L	7680	0 to 7679		
Area Capacity			12.0K Word		11.0K Word
Total Device			11.2K Word		9.6K Word
Total Word Device			10.2K Word		8.1K Word
Total Bit Device			15.9K Bit		25.1K Bit

Memory/Device Setting
Device (high speed) Setting
Latch (1)

No.	Device	Points (Decimal)	Start	End
1	M	7180	500	7679
2	S	3596	500	4095
3	D	7800	200	7999
4	C	100	100	199
5	ST	16	0	15
6	LC	44	20	63

Memory/Device Setting
Device (high speed) Setting
Latch (2)

No.	Device	Points (Decimal)	Start	End

Memory/Device Setting
Device (Standard) Setting

Item	Symbol	Device		Latch (1)	Latch (2)
		Points	Range		
File Register	R	32768	0 to 32767	No Setting	No Setting
Link Register	W	512	0 to 1FF	No Setting	No Setting
Link Special Register	SW	512	0 to 1FF		
Area Capacity			35.0K Word		----
Total Device			33.0K Word		0.0K Word
Total Word Device			33.0K Word		0.0K Word
Total Bit Device			0.0K Bit		0.0K Bit

Memory/Device Setting
Device (Standard) Setting
Latch (1)

No.	Device	Points (Decimal)	Start	End

Memory/Device Setting
Device (Standard) Setting
Latch (2)

No.	Device	Points (Decimal)	Start	End

RAS Setting

Item	Setting
Scan Time Monitoring Time (WDT) Setting	
Initial Scan	2000 ms
After 2nd Scan	200 ms
Constant Scan Setting	
Constant Scan	
Error Detection Setting	
Battery Error	Detect
Module Verification Error	Detect
CPU Module Operation Setting at Error Detection	
Instruction Execution Error	
Invalid module No.	Continue
Operation Error	Continue
Memory Card Error	Continue
Module Verification Error	Stop
System Configuration Error	Continue
LED Display Setting	
ERROR LED	
Minor Error (Continue Error)	Display
BATTERY LED	
Battery Error	Display
Event History Setting	
Save Destination	Data Memory
Storage Capacity Setting per File	1.5 K Byte

Program Setting

Item	Setting
Program Setting	
Program Setting	<Detailed Setting>
FB/FUN File Setting	
FB/FUN File Setting	<Detailed Setting>
Program Capacity Setting	
Program Capacity Setting	64000 Steps

Program Setting
Program Setting

Execute Order	Program Name	Execution Type	
		Type	Detailed Setting Information
1	MAIN	Scan	

Program Setting
FB/FUN File Setting

No.	FB/FUN File Name

SFC Setting

Item	Setting
SFC Program Setting	
To Use or Not to Use SFC	Not to Use
SFC Program Start Mode Setting	
SFC Program Start Mode	Initial Start
Start Conditions Setting	
Start Conditions	Auto-start block 0
Output Mode Setting at Block Stop	
Output Mode at Block Stop	Turn OFF
FX3 Compatible Transition Operation Mode Setting	
FX3 Compatible Transition Operation Mode	Disable

PID Control Setting

Item	Setting
PID Control Setting	
Heating/Cooling PID Control Setting	<Detailed Setting>

PID Control Setting
Heating/Cooling PID Control
Basic Settings

Item	Setting No.1		Setting No.2		Setting No.3		Setting No.4	
	Setting Value	Device Indirect Specification	Setting Value	Device Indirect Specification	Setting Value	Device Indirect Specification	Setting Value	Device Indirect Specification
To Use or Not to Use PID Control Function								
To Use or Not to Use PID Control Function	Not Use		Not Use		Not Use		Not Use	
Control Mode Selection								
Control Mode Selection	Standard PID Control		Standard PID Control		Standard PID Control		Standard PID Control	
Direct Action/Reverse Action Selection								
Direct Action/Reverse Action Selection	Reverse Action		Reverse Action		Reverse Action		Reverse Action	
Target Value (SV)								
Target Value (SV)								
Process Value (PV)								
Process Value (PV)								
Output Value (MV)								
Output Value (MV)								
Heating Output Value (MVh)								
Cooling Output Value (MVc)								
Control Parameter								
Proportional Gain (KP)								
Heating Proportional Gain (KPh)								
Cooling Proportional Gain (KPc)								
Integral Time (TI)								
Derivative Time (TD)								
Sampling Time (Ts)								
Sampling Time (Ts)	100 ×10ms		100 ×10ms		100 ×10ms		100 ×10ms	
Operation Cycle								
Control Output Cycle	100 ×100ms		100 ×100ms		100 ×100ms		100 ×100ms	
Heating Control Output Cycle	100 ×100ms		100 ×100ms		100 ×100ms		100 ×100ms	
Cooling Control Output Cycle	100 ×100ms		100 ×100ms		100 ×100ms		100 ×100ms	
Control Output								
Control Output								
Control Output (for Cooling Control)								
PID Control Execution Command								
PID Control Execution Command								
To Use or Not to Use Auto-tuning								
To Use or Not to Use Auto-tuning								
PID Control Execution Status								
PID Control Execution Status								
Auto-tuning Execution Status								
Auto-tuning Execution Status								
PID Control Function Error Display								
PID Control Function Error Display								
PID Control Function Error Code								
PID Control Function Error Code								

PID Control Setting
Heating/Cooling PID Control
Application Settings

Item	Setting No.1		Setting No.2		Setting No.3		Setting No.4	
	Setting Value	Device Indirect Specification	Setting Value	Device Indirect Specification	Setting Value	Device Indirect Specification	Setting Value	Device Indirect Specification
2-position Control Function								
Adjustment Sensitivity (Dead Band)	10		10		10		10	
Overlap/Dead Band Setting								
Overlap/Dead Band Setting	0		0		0		0	
Output Limiter Function								
Upper Limit Output Limiter	1000 ×0.1%		1000 ×0.1%		1000 ×0.1%		1000 ×0.1%	
Lower Limit Output Limiter	0 ×0.1%		0 ×0.1%		0 ×0.1%		0 ×0.1%	
Heating Upper Limit Output Limiter	1000 ×0.1%		1000 ×0.1%		1000 ×0.1%		1000 ×0.1%	
Cooling Upper Limit Output Limiter	1000 ×0.1%		1000 ×0.1%		1000 ×0.1%		1000 ×0.1%	
Output Variation Rate Limiter Function								
Output Variation Rate Limiter	0 ×0.1%/s		0 ×0.1%/s		0 ×0.1%/s		0 ×0.1%/s	
Temperature Rise Completion Judgement Function								
Temperature Rise Judgment Flag								
Temperature Rise Completion Range								
Temperature Rise Completion Soak Time								
Ambient Temperature Setting								
Ambient Temperature Setting								

Basic Settings

Item	Setting
Own Node Settings	
IP Address	
IP Address	192 . 168 . 3 . 250
Subnet Mask	255 . 255 . 255 . 0
Default Gateway	. . .
Communication Data Code	Binary
CC-Link IEF Basic Settings	
To Use or Not to Use CC-Link IEF Basic Setting	Not to Use
Network Configuration Settings	<Detailed Setting>
Refresh Settings	<Detailed Setting>
MODBUS/TCP Settings	
To Use or Not to Use MODBUS/TCP Setting	Not Used
Device Assignment	<Detailed Setting>
External Device Configuration	
External Device Configuration	<Detailed Setting>
Transmission Port Settings	
MELSOFT Transmission Port UDP/IP	Use
MELSOFT Transmission Port TCP/IP	Use

Basic Settings

External Device Configuration

No.	Model Name	Communication Measure	Protocol	Fixed Buffer Send/Receive Setting	PLC		Sensor/Device						Existence Confirmation
					IP Address	Port No.	MAC Address	Host Name	IP Address	Port No.	Subnet Mask	Default Gateway	
	Host Station				192.168.3.250								
1	Module with No Profile Found	SLMP	TCP		192.168.3.250	45237	58:52:8A:F4:DF:1E		192.168.3.18		255.255.255.0		KeepAlive
2	MELSOFT Connection Module	MELSOFT Connection	TCP		192.168.3.250								KeepAlive
3	MELSOFT Connection Module	MELSOFT Connection	TCP		192.168.3.250								KeepAlive
4	MELSOFT Connection Module	MELSOFT Connection	TCP		192.168.3.250								KeepAlive
5	MELSOFT Connection Module	MELSOFT Connection	TCP		192.168.3.250								KeepAlive

Application Settings

Item	Setting
FTP Server Settings	
FTP Server	Not to Use
Login Name	FXCPU
Advanced Settings	
Password Setting	
Current Password	
New Password	
Confirm New Password	
FTP Timer Settings	
Command Input Monitoring Timer	900
Unit	s
Response Monitoring Timer	5
Unit	s
Allow Online Change	Disable
FTP Client Settings	
To Use or Not to Use FTP Client Settings	Not to Use
FTP Server Specification	FTP Server Address
FTP Server IP Address	0 . 0 . 0 . 1
Login Name	
Password	
Connection Method	PORT Mode
Port No.	21
Web Server Settings	
To Use or Not to Use Web Server Settings	Not to Use
Host Station Port No.	80
Account Settings	<Detailed Setting>
Simple CPU Communication Setting	
To Use or Not to Use Simple CPU Communication	Not to Use
Simple CPU Communication Setting	<Detailed Setting>
Time Setting	
Time Setting (SNTP Client)	Not Use
SNTP Server IP Address	0 . 0 . 0 . 1
Timer Setting After Power-on and Reset	Disable
Execution Timing	Fixed Time
Time Intervals	1 Minute
Specified Time (Hour, Minute, Day of Week)	
Clock Time (Hour, Minute)	
Hour	12
Minute	0
Day of Week	
Sun	Set
Mon	Set

Application Settings

Item	Setting
Tue	Set
Wed	Set
Thu	Set
Fri	Set
Sat	Set
Security	
IP Filter Settings	
IP Filter	Disable
IP Filter Settings	<Detailed Setting>
Disable Direct Connection with MELSOFT	
Disable Direct Connection with MELSOFT	Enable
Do Not Respond to CPU Module Search	
Do Not Respond to CPU Module Search	Respond
iQ Sensor Solution Settings	
Use iQ Sensor Solution	Use
SLMPSND Instruction Settings	
Use SLMPSND Instruction	Use

Basic Settings

Item	Setting
Communication Protocol Type	Set communication protocol type.
Communication Protocol Type	MELSOFT Connection

Input Function

Item	Setting
General/Interrupt/Pulse Catch	Set the general/interrupt/pulse catch of input terminal.
General/Interrupt/Pulse Catch	<Detailed Setting>
High Speed Counter	Set high speed counter.
High Speed Counter	<Detailed Setting>
Pulse Width Measurement	Set pulse width measurement.
Pulse Width Measurement	<Detailed Setting>

Input Function
General/Interrupt/Pulse Catch
General/Interrupt/Pulse Catch

No.	XY Signal	General/Interrupt/Pulse Catch
1	X0	General-purpose Input
2	X1	General-purpose Input
3	X2	General-purpose Input
4	X3	General-purpose Input
5	X4	General-purpose Input
6	X5	General-purpose Input
7	X6	General-purpose Input
8	X7	General-purpose Input
9	X10	General-purpose Input
10	X11	General-purpose Input
11	X12	General-purpose Input
12	X13	General-purpose Input
13	X14	General-purpose Input
14	X15	General-purpose Input
15	X16	General-purpose Input
16	X17	General-purpose Input

Input Function
High Speed Counter
Basic Settings

Item	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Use/Do Not Use Counter	Set whether to use counter or not.							
Use/Not Use	Not Use	Not Use	Not Use	Not Use	Not Use	Not Use	Not Use	Not Use
Operation Mode	Set operation mode.							
Operation Mode	Normal Mode	Normal Mode	Normal Mode	Normal Mode	Normal Mode	Normal Mode	Normal Mode	Normal Mode
Pulse Input Mode	Set pulse input mode.							
Pulse Input Mode	1-Phase 1 Input (S/W Up/Down Switch)	1-Phase 1 Input (S/W Up/Down Switch)	1-Phase 1 Input (S/W Up/Down Switch)	1-Phase 1 Input (S/W Up/Down Switch)	1-Phase 1 Input (S/W Up/Down Switch)	1-Phase 1 Input (S/W Up/Down Switch)	1-Phase 1 Input (S/W Up/Down Switch)	1-Phase 1 Input (S/W Up/Down Switch)
Preset Input	Set preset input.							
Preset Input Enable/Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
Input logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic
Input Comparison Enable/Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
Control Switch	Rising	Rising	Rising	Rising	Rising	Rising	Rising	Rising
Preset Value	Set the preset value.							
Preset Value	0	0	0	0	0	0	0	0
Enable Input	Set enable input.							
Enable Input Enable/Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
Input logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic
Ring Length Setting	Set ring length.							
Ring Length Enable/Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable	Disable
Ring Length								
Measurement Unit Time	Set the measurement unit time (ms) for the pulse density measurement mode and rotation speed measurement mode.							
Measurement Unit Time								
Number of Pulses per Rotation	Set the number of pulses per rotation when using the rotation speed measurement mode.							
Number of Pulses per Rotation								

Input Function
High Speed Counter
High Speed Compare Table

NO.	Counter CH	Comparison Type	Output Destination Device	Comparison Value 1 Specification Method	Comparison Value 1 Direct	Comparison Value 1 Indirect	Comparison Value 2 Specification Method	Comparison Value 2 Direct	Comparison Value 2 Indirect
1	Disable	Set		Direct Specification	0		Direct Specification	0	
2	Disable	Set		Direct Specification	0		Direct Specification	0	
3	Disable	Set		Direct Specification	0		Direct Specification	0	
4	Disable	Set		Direct Specification	0		Direct Specification	0	
5	Disable	Set		Direct Specification	0		Direct Specification	0	
6	Disable	Set		Direct Specification	0		Direct Specification	0	
7	Disable	Set		Direct Specification	0		Direct Specification	0	
8	Disable	Set		Direct Specification	0		Direct Specification	0	
9	Disable	Set		Direct Specification	0		Direct Specification	0	
10	Disable	Set		Direct Specification	0		Direct Specification	0	
11	Disable	Set		Direct Specification	0		Direct Specification	0	
12	Disable	Set		Direct Specification	0		Direct Specification	0	
13	Disable	Set		Direct Specification	0		Direct Specification	0	
14	Disable	Set		Direct Specification	0		Direct Specification	0	
15	Disable	Set		Direct Specification	0		Direct Specification	0	
16	Disable	Set		Direct Specification	0		Direct Specification	0	
17	Disable	Set		Direct Specification	0		Direct Specification	0	
18	Disable	Set		Direct Specification	0		Direct Specification	0	
19	Disable	Set		Direct Specification	0		Direct Specification	0	
20	Disable	Set		Direct Specification	0		Direct Specification	0	
21	Disable	Set		Direct Specification	0		Direct Specification	0	
22	Disable	Set		Direct Specification	0		Direct Specification	0	
23	Disable	Set		Direct Specification	0		Direct Specification	0	
24	Disable	Set		Direct Specification	0		Direct Specification	0	
25	Disable	Set		Direct Specification	0		Direct Specification	0	
26	Disable	Set		Direct Specification	0		Direct Specification	0	
27	Disable	Set		Direct Specification	0		Direct Specification	0	
28	Disable	Set		Direct Specification	0		Direct Specification	0	
29	Disable	Set		Direct Specification	0		Direct Specification	0	
30	Disable	Set		Direct Specification	0		Direct Specification	0	
31	Disable	Set		Direct Specification	0		Direct Specification	0	
32	Disable	Set		Direct Specification	0		Direct Specification	0	

Input Function
High Speed Counter
Multi-point Output High Speed Compare Table
[Table Data Not Use Device]
[Counter CH CH1]
[Output Data Bit Output]
[Points 1]

NO.	Enable/Disable	Device	Comparison Value	Output Device	Output Data (HEX)
1	Disable	-	0		
2	Disable	-	0		
3	Disable	-	0		
4	Disable	-	0		
5	Disable	-	0		
6	Disable	-	0		
7	Disable	-	0		
8	Disable	-	0		
9	Disable	-	0		
10	Disable	-	0		
11	Disable	-	0		
12	Disable	-	0		
13	Disable	-	0		
14	Disable	-	0		
15	Disable	-	0		
16	Disable	-	0		
17	Disable	-	0		
18	Disable	-	0		
19	Disable	-	0		
20	Disable	-	0		
21	Disable	-	0		
22	Disable	-	0		
23	Disable	-	0		
24	Disable	-	0		
25	Disable	-	0		
26	Disable	-	0		
27	Disable	-	0		
28	Disable	-	0		
29	Disable	-	0		
30	Disable	-	0		
31	Disable	-	0		
32	Disable	-	0		
33	Disable	-	0		
34	Disable	-	0		
35	Disable	-	0		
36	Disable	-	0		
37	Disable	-	0		
38	Disable	-	0		

Input Function
High Speed Counter
Multi-point Output High Speed Compare Table

NO.	Enable/Disable	Device	Comparison Value	Output Device	Output Data (HEX)
39	Disable	-	0		
40	Disable	-	0		
41	Disable	-	0		
42	Disable	-	0		
43	Disable	-	0		
44	Disable	-	0		
45	Disable	-	0		
46	Disable	-	0		
47	Disable	-	0		
48	Disable	-	0		
49	Disable	-	0		
50	Disable	-	0		
51	Disable	-	0		
52	Disable	-	0		
53	Disable	-	0		
54	Disable	-	0		
55	Disable	-	0		
56	Disable	-	0		
57	Disable	-	0		
58	Disable	-	0		
59	Disable	-	0		
60	Disable	-	0		
61	Disable	-	0		
62	Disable	-	0		
63	Disable	-	0		
64	Disable	-	0		
65	Disable	-	0		
66	Disable	-	0		
67	Disable	-	0		
68	Disable	-	0		
69	Disable	-	0		
70	Disable	-	0		
71	Disable	-	0		
72	Disable	-	0		
73	Disable	-	0		
74	Disable	-	0		
75	Disable	-	0		
76	Disable	-	0		

Input Function
High Speed Counter
Multi-point Output High Speed Compare Table

NO.	Enable/Disable	Device	Comparison Value	Output Device	Output Data (HEX)
77	Disable	-	0		
78	Disable	-	0		
79	Disable	-	0		
80	Disable	-	0		
81	Disable	-	0		
82	Disable	-	0		
83	Disable	-	0		
84	Disable	-	0		
85	Disable	-	0		
86	Disable	-	0		
87	Disable	-	0		
88	Disable	-	0		
89	Disable	-	0		
90	Disable	-	0		
91	Disable	-	0		
92	Disable	-	0		
93	Disable	-	0		
94	Disable	-	0		
95	Disable	-	0		
96	Disable	-	0		
97	Disable	-	0		
98	Disable	-	0		
99	Disable	-	0		
100	Disable	-	0		
101	Disable	-	0		
102	Disable	-	0		
103	Disable	-	0		
104	Disable	-	0		
105	Disable	-	0		
106	Disable	-	0		
107	Disable	-	0		
108	Disable	-	0		
109	Disable	-	0		
110	Disable	-	0		
111	Disable	-	0		
112	Disable	-	0		
113	Disable	-	0		
114	Disable	-	0		

Input Function
High Speed Counter
Multi-point Output High Speed Compare Table

NO.	Enable/Disable	Device	Comparison Value	Output Device	Output Data (HEX)
115	Disable	-	0		
116	Disable	-	0		
117	Disable	-	0		
118	Disable	-	0		
119	Disable	-	0		
120	Disable	-	0		
121	Disable	-	0		
122	Disable	-	0		
123	Disable	-	0		
124	Disable	-	0		
125	Disable	-	0		
126	Disable	-	0		
127	Disable	-	0		
128	Disable	-	0		

Input Function
High Speed Counter
Other

Item	CH
Specification method for high speed counter	Select the high-speed counter for the FX3 series compatible input assignment.
Specification method for high speed counter	Normal

Input Function
Pulse Width Measurement
Basic Settings

Item	CH1	CH2	CH3	CH4
Use Pulse Width Measurement	Set whether to use pulse width measurement or not.			
Use/Not Use	Not Use	Not Use	Not Use	Not Use
Input Signal	Set input signal.			
Input Signal	X0	X0	X0	X0
Switch Logic	Set switching logic.			
Switch Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic
Measurement Mode	Set measurement mode.			
Measurement Mode	Always Measurement Mode	Always Measurement Mode	Always Measurement Mode	Always Measurement Mode

Output Function

Item	Setting
Positioning	Set positioning function.
Positioning	<Detailed Setting>
PWM	Set PWM.
PWM	<Detailed Setting>

Output Function
Positioning
Basic Settings

Item	Axis1	Axis2	Axis3	Axis4
Basic Parameter 1	Set basic parameter 1.			
Pulse Output Mode	0: Not Use	0: Not Use	0: Not Use	0: Not Use
Output Device (PULSE/CW)				
Output Device (SIGN/CCW)				
Rotation Direction Setting	0: Current Address Increment with Forward Run Pulse Output	0: Current Address Increment with Forward Run Pulse Output	0: Current Address Increment with Forward Run Pulse Output	0: Current Address Increment with Forward Run Pulse Output
Unit Setting	0: Motor System (pulse, pps)	0: Motor System (pulse, pps)	0: Motor System (pulse, pps)	0: Motor System (pulse, pps)
Number of Pulses per Rotation	2000 pulse	2000 pulse	2000 pulse	2000 pulse
Movement Amount per Rotation	1000 pulse	1000 pulse	1000 pulse	1000 pulse
Position Data Magnification	1: X Single	1: X Single	1: X Single	1: X Single
Basic Parameter 2	Set basic parameter 2.			
Interpolation Speed Specification Method	0: Composite Speed	0: Composite Speed	0: Composite Speed	0: Composite Speed
Max. Speed	100000 pps	100000 pps	100000 pps	100000 pps
Bias Speed	0 pps	0 pps	0 pps	0 pps
Acceleration Time	100 ms	100 ms	100 ms	100 ms
Deceleration Time	100 ms	100 ms	100 ms	100 ms
Detailed Setting Parameter	Set the detailed setting parameter.			
External Start Signal Enable/Disable	0: Invalid	0: Invalid	0: Invalid	0: Invalid
External Start Signal Device No.	X0	X0	X0	X0
External Start Signal Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic
Interrupt Input Signal 1 Enable/Disable	0: Invalid	0: Invalid	0: Invalid	0: Invalid
Interrupt Input Signal 1 Mode	0: High Speed Mode	0: High Speed Mode	0: High Speed Mode	0: High Speed Mode
Interrupt Input Signal 1 Device No.	X0	X0	X0	X0
Interrupt Input Signal 1 Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic
Interrupt Input Signal 2 Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic
OPR Parameter	Set the OPR parameter.			
OPR Enable/Disable	0: Invalid	0: Invalid	0: Invalid	0: Invalid
OPR Direction	0: Negative Direction (Address Decrement Direction)	0: Negative Direction (Address Decrement Direction)	0: Negative Direction (Address Decrement Direction)	0: Negative Direction (Address Decrement Direction)
Starting Point Address	0 pulse	0 pulse	0 pulse	0 pulse
Clear Signal Output Enable/Disable	1: Valid	1: Valid	1: Valid	1: Valid
Clear Signal Output Device No.	Y0	Y0	Y0	Y0
OPR Dwell Time	0 ms	0 ms	0 ms	0 ms
Near-point Dog Signal Device No.	X0	X0	X0	X0
Near-point Dog Signal Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic
Zero Signal Device No.	X0	X0	X0	X0
Zero Signal Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic	0: Positive Logic
Zero Signal OPR Zero Signal Counts	1	1	1	1
Zero Signal Count Start Time	0: Near-point Dog Latter Part	0: Near-point Dog Latter Part	0: Near-point Dog Latter Part	0: Near-point Dog Latter Part

Output Function
Positioning
Axis #1 Positioning Data
[Table Data Not Use Device(Axis 1 to Axis 4 Common)]
[Not to Use an Initialization Invalid SM(Initialization of table data can be invalid by SM)]

NO.	Device	Control Method	Axis to be Interpolated	Positioning Address	Command Speed	Dwell Time	Interrupt Counts	Interrupt Input Signal 2 Device No.	Jump Destination Table No.	M No. for Jump Condition
1	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
2	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
3	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
4	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
5	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
6	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
7	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
8	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
9	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
10	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
11	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
12	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
13	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
14	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
15	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
16	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
17	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
18	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
19	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
20	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
21	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
22	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
23	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
24	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
25	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
26	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
27	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
28	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
29	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
30	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
31	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
32	-	0: No Positioning	Axis 2 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0

Output Function
Positioning
Axis #2 Positioning Data
[Table Data Not Use Device(Axis 1 to Axis 4 Common)]
[Not to Use an Initialization Invalid SM(Initialization of table data can be invalid by SM)]

NO.	Device	Control Method	Axis to be Interpolated	Positioning Address	Command Speed	Dwell Time	Interrupt Counts	Interrupt Input Signal 2 Device No.	Jump Destination Table No.	M No. for Jump Condition
1	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
2	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
3	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
4	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
5	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
6	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
7	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
8	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
9	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
10	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
11	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
12	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
13	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
14	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
15	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
16	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
17	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
18	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
19	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
20	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
21	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
22	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
23	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
24	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
25	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
26	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
27	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
28	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
29	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
30	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
31	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
32	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0

Output Function
Positioning
Axis #3 Positioning Data
[Table Data Not Use Device(Axis 1 to Axis 4 Common)]
[Not to Use an Initialization Invalid SM(Initialization of table data can be invalid by SM)]

NO.	Device	Control Method	Axis to be Interpolated	Positioning Address	Command Speed	Dwell Time	Interrupt Counts	Interrupt Input Signal 2 Device No.	Jump Destination Table No.	M No. for Jump Condition
1	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
2	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
3	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
4	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
5	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
6	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
7	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
8	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
9	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
10	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
11	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
12	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
13	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
14	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
15	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
16	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
17	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
18	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
19	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
20	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
21	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
22	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
23	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
24	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
25	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
26	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
27	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
28	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
29	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
30	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
31	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
32	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0

Output Function
Positioning
Axis #4 Positioning Data
[Table Data Not Use Device(Axis 1 to Axis 4 Common)]
[Not to Use an Initialization Invalid SM(Initialization of table data can be invalid by SM)]

NO.	Device	Control Method	Axis to be Interpolated	Positioning Address	Command Speed	Dwell Time	Interrupt Counts	Interrupt Input Signal 2 Device No.	Jump Destination Table No.	M No. for Jump Condition
1	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
2	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
3	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
4	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
5	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
6	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
7	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
8	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
9	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
10	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
11	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
12	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
13	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
14	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
15	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
16	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
17	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
18	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
19	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
20	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
21	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
22	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
23	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
24	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
25	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
26	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
27	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
28	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
29	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
30	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
31	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0
32	-	0: No Positioning	Axis 1 Specification	0 pulse	1 pps	0 ms	1 Times	X0	1	0

Output Function
PWM
Basic Settings

Item	CH1	CH2	CH3	CH4
Use PWM Output	Set whether to use PWM output or not.			
Use/Not Use	Not Use	Not Use	Not Use	Not Use
Output Signal	Set the output destination device.			
Output Signal	Y0	Y0	Y0	Y0
Pulse Width/Cycle Unit	Set pulse width/cycle unit.			
Pulse Width/Cycle Unit	1ms	1ms	1ms	1ms
Output Pulse Logic	Set output pulse logic.			
Output Pulse Logic	Positive Logic	Positive Logic	Positive Logic	Positive Logic
Pulse Width	Set pulse width.			
Pulse Width	1 ms	1 ms	1 ms	1 ms
Cycle	Set cycle.			
Cycle	1 ms	1 ms	1 ms	1 ms

Input Response Time

Item	Setting
X0-X7	Specify the input response time of X0 to X7.
Response Type	High-Speed
X0	10ms
X1	10ms
X2	10ms
X3	10ms
X4	10ms
X5	10ms
X6	10ms
X7	10ms
X10-X17	Specify the input response time of X10 to X17.
Response Type	Normal
X10	10ms
X11	10ms
X12	10ms
X13	10ms
X14	10ms
X15	10ms
X16	10ms
X17	10ms
X20-X27	Specify the input response time of X20 to X27.
Response Type	Normal
X20	10ms
X21	10ms
X22	10ms
X23	10ms
X24	10ms
X25	10ms
X26	10ms
X27	10ms
X30-X37	Specify the input response time of X30 to X37.
Response Type	Normal
X30	10ms
X31	10ms
X32	10ms
X33	10ms
X34	10ms
X35	10ms
X36	10ms
X37	10ms
X40-X47	Specify the input response time of X40 to X47.
Response Type	Normal

Input Response Time

Item	Setting
X40	10ms
X41	10ms
X42	10ms
X43	10ms
X44	10ms
X45	10ms
X46	10ms
X47	10ms
X50-X57	Specify the input response time of X50 to X57.
Response Type	Normal
X50	10ms
X51	10ms
X52	10ms
X53	10ms
X54	10ms
X55	10ms
X56	10ms
X57	10ms
X60-X67	Specify the input response time of X60 to X67.
Response Type	Normal
X60	10ms
X61	10ms
X62	10ms
X63	10ms
X64	10ms
X65	10ms
X66	10ms
X67	10ms
X70-X77	Specify the input response time of X70 to X77.
Response Type	Normal
X70	10ms
X71	10ms
X72	10ms
X73	10ms
X74	10ms
X75	10ms
X76	10ms
X77	10ms
X100-X107	Specify the input response time of X100 to X107.
Response Type	Normal
X100	10ms
X101	10ms

Input Response Time

Item	Setting
X102	10ms
X103	10ms
X104	10ms
X105	10ms
X106	10ms
X107	10ms
X110-X117	Specify the input response time of X110 to X117.
Response Type	Normal
X110	10ms
X111	10ms
X112	10ms
X113	10ms
X114	10ms
X115	10ms
X116	10ms
X117	10ms
X120-X127	Specify the input response time of X120 to X127.
Response Type	Normal
X120	10ms
X121	10ms
X122	10ms
X123	10ms
X124	10ms
X125	10ms
X126	10ms
X127	10ms
X130-X137	Specify the input response time of X130 to X137.
Response Type	Normal
X130	10ms
X131	10ms
X132	10ms
X133	10ms
X134	10ms
X135	10ms
X136	10ms
X137	10ms
X140-X147	Specify the input response time of X140 to X147.
Response Type	Normal
X140	10ms
X141	10ms
X142	10ms
X143	10ms

Input Response Time

Item	Setting
X144	10ms
X145	10ms
X146	10ms
X147	10ms
X150-X157	Specify the input response time of X150 to X157.
Response Type	Normal
X150	10ms
X151	10ms
X152	10ms
X153	10ms
X154	10ms
X155	10ms
X156	10ms
X157	10ms
X160-X167	Specify the input response time of X160 to X167.
Response Type	Normal
X160	10ms
X161	10ms
X162	10ms
X163	10ms
X164	10ms
X165	10ms
X166	10ms
X167	10ms
X170-X177	Specify the input response time of X170 to X177.
Response Type	Normal
X170	10ms
X171	10ms
X172	10ms
X173	10ms
X174	10ms
X175	10ms
X176	10ms
X177	10ms
X200-X207	Specify the input response time of X200 to X207.
Response Type	Normal
X200	10ms
X201	10ms
X202	10ms
X203	10ms
X204	10ms
X205	10ms

Input Response Time

Item	Setting
X206	10ms
X207	10ms
X210-X217	Specify the input response time of X210 to X217.
Response Type	Normal
X210	10ms
X211	10ms
X212	10ms
X213	10ms
X214	10ms
X215	10ms
X216	10ms
X217	10ms
X220-X227	Specify the input response time of X220 to X227.
Response Type	Normal
X220	10ms
X221	10ms
X222	10ms
X223	10ms
X224	10ms
X225	10ms
X226	10ms
X227	10ms
X230-X237	Specify the input response time of X230 to X237.
Response Type	Normal
X230	10ms
X231	10ms
X232	10ms
X233	10ms
X234	10ms
X235	10ms
X236	10ms
X237	10ms
X240-X247	Specify the input response time of X240 to X247.
Response Type	Normal
X240	10ms
X241	10ms
X242	10ms
X243	10ms
X244	10ms
X245	10ms
X246	10ms
X247	10ms

Input Response Time

Item	Setting
X250-X257	Specify the input response time of X250 to X257.
Response Type	Normal
X250	10ms
X251	10ms
X252	10ms
X253	10ms
X254	10ms
X255	10ms
X256	10ms
X257	10ms
X260-X267	Specify the input response time of X260 to X267.
Response Type	Normal
X260	10ms
X261	10ms
X262	10ms
X263	10ms
X264	10ms
X265	10ms
X266	10ms
X267	10ms
X270-X277	Specify the input response time of X270 to X277.
Response Type	Normal
X270	10ms
X271	10ms
X272	10ms
X273	10ms
X274	10ms
X275	10ms
X276	10ms
X277	10ms
X300-X307	Specify the input response time of X300 to X307.
Response Type	Normal
X300	10ms
X301	10ms
X302	10ms
X303	10ms
X304	10ms
X305	10ms
X306	10ms
X307	10ms
X310-X317	Specify the input response time of X310 to X317.
Response Type	Normal

Input Response Time

Item	Setting
X310	10ms
X311	10ms
X312	10ms
X313	10ms
X314	10ms
X315	10ms
X316	10ms
X317	10ms
X320-X327	Specify the input response time of X320 to X327.
Response Type	Normal
X320	10ms
X321	10ms
X322	10ms
X323	10ms
X324	10ms
X325	10ms
X326	10ms
X327	10ms
X330-X337	Specify the input response time of X330 to X337.
Response Type	Normal
X330	10ms
X331	10ms
X332	10ms
X333	10ms
X334	10ms
X335	10ms
X336	10ms
X337	10ms
X340-X347	Specify the input response time of X340 to X347.
Response Type	Normal
X340	10ms
X341	10ms
X342	10ms
X343	10ms
X344	10ms
X345	10ms
X346	10ms
X347	10ms
X350-X357	Specify the input response time of X350 to X357.
Response Type	Normal
X350	10ms
X351	10ms

Input Response Time

Item	Setting
X352	10ms
X353	10ms
X354	10ms
X355	10ms
X356	10ms
X357	10ms
X360-X367	Specify the input response time of X360 to X367.
Response Type	Normal
X360	10ms
X361	10ms
X362	10ms
X363	10ms
X364	10ms
X365	10ms
X366	10ms
X367	10ms
X370-X377	Specify the input response time of X370 to X377.
Response Type	Normal
X370	10ms
X371	10ms
X372	10ms
X373	10ms
X374	10ms
X375	10ms
X376	10ms
X377	10ms
X400-X407	Specify the input response time of X400 to X407.
Response Type	Normal
X400	10ms
X401	10ms
X402	10ms
X403	10ms
X404	10ms
X405	10ms
X406	10ms
X407	10ms
X410-X417	Specify the input response time of X410 to X417.
Response Type	Normal
X410	10ms
X411	10ms
X412	10ms
X413	10ms

Input Response Time

Item	Setting
X414	10ms
X415	10ms
X416	10ms
X417	10ms
X420-X427	Specify the input response time of X420 to X427.
Response Type	Normal
X420	10ms
X421	10ms
X422	10ms
X423	10ms
X424	10ms
X425	10ms
X426	10ms
X427	10ms
X430-X437	Specify the input response time of X430 to X437.
Response Type	Normal
X430	10ms
X431	10ms
X432	10ms
X433	10ms
X434	10ms
X435	10ms
X436	10ms
X437	10ms
X440-X447	Specify the input response time of X440 to X447.
Response Type	Normal
X440	10ms
X441	10ms
X442	10ms
X443	10ms
X444	10ms
X445	10ms
X446	10ms
X447	10ms
X450-X457	Specify the input response time of X450 to X457.
Response Type	Normal
X450	10ms
X451	10ms
X452	10ms
X453	10ms
X454	10ms
X455	10ms

Input Response Time

Item	Setting
X456	10ms
X457	10ms
X460-X467	Specify the input response time of X460 to X467.
Response Type	Normal
X460	10ms
X461	10ms
X462	10ms
X463	10ms
X464	10ms
X465	10ms
X466	10ms
X467	10ms
X470-X477	Specify the input response time of X470 to X477.
Response Type	Normal
X470	10ms
X471	10ms
X472	10ms
X473	10ms
X474	10ms
X475	10ms
X476	10ms
X477	10ms
X500-X507	Specify the input response time of X500 to X507.
Response Type	Normal
X500	10ms
X501	10ms
X502	10ms
X503	10ms
X504	10ms
X505	10ms
X506	10ms
X507	10ms
X510-X517	Specify the input response time of X510 to X517.
Response Type	Normal
X510	10ms
X511	10ms
X512	10ms
X513	10ms
X514	10ms
X515	10ms
X516	10ms
X517	10ms

Input Response Time

Item	Setting
X520-X527	Specify the input response time of X520 to X527.
Response Type	Normal
X520	10ms
X521	10ms
X522	10ms
X523	10ms
X524	10ms
X525	10ms
X526	10ms
X527	10ms
X530-X537	Specify the input response time of X530 to X537.
Response Type	Normal
X530	10ms
X531	10ms
X532	10ms
X533	10ms
X534	10ms
X535	10ms
X536	10ms
X537	10ms
X540-X547	Specify the input response time of X540 to X547.
Response Type	Normal
X540	10ms
X541	10ms
X542	10ms
X543	10ms
X544	10ms
X545	10ms
X546	10ms
X547	10ms
X550-X557	Specify the input response time of X550 to X557.
Response Type	Normal
X550	10ms
X551	10ms
X552	10ms
X553	10ms
X554	10ms
X555	10ms
X556	10ms
X557	10ms
X560-X567	Specify the input response time of X560 to X567.
Response Type	Normal

Input Response Time

Item	Setting
X560	10ms
X561	10ms
X562	10ms
X563	10ms
X564	10ms
X565	10ms
X566	10ms
X567	10ms
X570-X577	Specify the input response time of X570 to X577.
Response Type	Normal
X570	10ms
X571	10ms
X572	10ms
X573	10ms
X574	10ms
X575	10ms
X576	10ms
X577	10ms

Basic Settings

Item	CH1	CH2
A/D Conversion Enable/Disable Setting Function	Set A/D conversion method.	
A/D Conversion Enable/Disable Setting	Disable	Disable
A/D Conversion Method	Set A/D conversion method.	
Average Processing Specification	Sampling Processing	Sampling Processing
Time Average Counts Average Moving Average	0 Times	0 Times

Application Settings

Item	CH1	CH2
Warning Output Function	Execute the setting related to A/D conversion warning.	
Process Alarm Warning Setting	Disable	Disable
Process Alarm Upper Upper Limit Value	0	0
Process Alarm Upper Lower Limit Value	0	0
Process Alarm Lower Upper Limit Value	0	0
Process Alarm Lower Lower Limit Value	0	0
Over Scale Detection	Execute the setting related to detection of analog input exceeding the setting range.	
Over Scale Detection Enable/Disable	Enable	Enable
Scaling Setting	Execute the setting related to A/D conversion scaling.	
Scaling Enable/Disable	Disable	Disable
Scaling Upper Limit Value	0	0
Scaling Lower Limit Value	0	0
Shift Function	Execute the setting related to A/D conversion shift function.	
Shifting Amount	0	0
Digital Clip Setting	Execute the setting related to A/D conversion digital clip function.	
Digital Clip Enable/Disable	Disable	Disable

Basic Settings

Item	CH
D/A Conversion Enable/Disable Setting	Set D/A conversion method.
D/A Conversion Enable/Disable Setting	Disable
D/A Output Enable/Disable Setting	Set D/A output method.
D/A Output Enable/Disable Setting	Disable

Application Settings

Item	CH
Warning Output Function	Execute the setting related to D/A conversion warning.
Warning Output Setting	Disable
Warning Upper Limit Value	0
Warning Lower Limit Value	0
Scaling Setting	Execute the setting related to D/A conversion scaling.
Scaling Enable/Disable	Disable
Scaling Upper Limit Value	0
Scaling Lower Limit Value	0
Shift Function	Execute the setting related to D/A conversion shift function.
Shifting Amount	0
Analog Output HOLD/CLEAR Setting	Set whether to HOLD the last value or setting value, or to CLEAR the digital value to be converted to analog value.
HOLD/CLEAR Setting	CLEAR
HOLD Setting Value	0

Basic Settings

Item	Setting
Expansion Board	Set the extension board type.
Expansion Board	None
Communication Protocol Type	Set communication protocol type.
Communication Protocol Type	MELSOFT Connection

Boot Setting

Item	Setting
Boot Setting	
Operation Setting at CPU Built-in Memory Boot	Do Not Clear
Boot File Setting	<Detailed Setting>

Boot Setting
Boot File Setting

No.	Type	Data Name

Setting of File/Data Use or Not in Memory Card

Item	Setting
Setting of File/Data Use or Not in Memory Card	
Module Extended Parameter	Not Use
Device Station Parameter	Not Use

Workspace Name :
Project Name : Rolling_Machine_PLC_V1.01
Title :

Data Name	Last Change	Title
Project	7/15/2025 11:45:49 AM	
Module Configuration		
Program		
Initial		
Scan		
MAIN	8/16/2022 11:13:17 AM	
ProgPou	8/16/2022 11:13:17 AM	
Local Label	12/10/2020 1:10:00 PM	
ProgramBody	8/16/2022 11:13:17 AM	
Fixed Scan		
Event		
Standby		
No Execution Type		
Unregistered Program		
FB/FUN	12/10/2020 1:09:59 PM	
Label		
Global Label	12/10/2020 1:10:00 PM	
Global	12/10/2020 1:10:00 PM	
Structured Data Types	12/10/2020 1:09:59 PM	
Device		
Device Comment		
Each Program Device Comment		
Common Device Comment	8/16/2022 11:12:42 AM	
Device Memory	12/10/2020 1:10:00 PM	
MAIN	12/10/2020 1:10:00 PM	
Device Initial Value	12/10/2020 1:09:59 PM	
Parameter		
System Parameter		
FX5UCPU		
CPU Parameter	7/15/2025 11:45:49 AM	
Module Parameter		
Ethernet Port		
485 Serial Port		
High Speed I/O		
Input Response Time		
Analog Input		
Analog Output		
Expansion Board		

Workspace Name :
Project Name : Rolling_Machine_PLC_V1.01
Title :

Data Name	Last Change	Title
Memory Card Parameter		
Module Information		
1:FX5-C32ET/DSS-TS	7/8/2025 1:41:13 PM	
Remote Password		

[Line Statement List]

Step	Line Statement
(0)	BOWL CONTROL
(48)	INDIRECT ADDRESSING
(129)	PIN WHEEL AND ROLLER LOGIC
(193)	CYLINDER HOME POSITION LOGIC
(235)	BUSHING TO PIN WHEEL SEQUENCE. ADDED X25 CONVEYOR INTERRUPT 6/7/22.
(462)	INSERTION WATCHDOG TIMER
(499)	PIN WHEEL ROTATION LOGIC
(571)	PARTS COUNTER LOGIC
(645)	PART COUNT HARD CODING. ADDED 8/16/22 SS.
(714)	FAULT COUNTER LOGIC
(781)	CLOCK DATA
(818)	HOME POSITION LOGIC

Find In:(Entire project)
Display Target:Used Devices - Contact || Used Device - Coil || Used Device - Parameter
Print Range:Whole Range

Device	Contact Count	Coil Count	Parameter Count	Comment
M0	2	2		INSERTION SEQ 1
M1	3	2		INSERTION SEQ 2
M2	1	2		INSERTION SEQ 3
M3	1	1		INSERTION SEQ 4
M4	2	2		INSERTION SEQ 5
M5	1	2		INSERTION SEQ 6
M6	2	2		INSERTION SEQ 7
M7	3	3		PIN WHEEL JAM ALARM
M8	2	2		PARTS COUNTER DEBOUNCE
M9	1			BUSHING INSERTION FAILURE ALARM
M10		1		PUSHER PULSE
M20	1	3		HORIZONTAL CYLINDER RETRACT
M21	1	3		PUSHER CYLINDER EXTEND
M22	1	3		VERTICAL CYLINDER EXTEND
M23		1		ALL CYL. IN HOME POS.
M25	1			SET CLOCK TIME
M26	1	1		DATA RECORD PULSE
M27	1	3		PIN WHEEL CW
M28	1	1		PIN WHEEL CCW
M29	1	3		ROLLERS ON
M30	1	2		BOWL MANUAL ON
M31	1	1		MANUAL HORIZONTAL RETRACT
M32	2			MANUAL PUSHER EXTEND
M33	1			MANUAL VERTICAL EXTEND
M34	1	2		AUTO HOME VERTICAL
M35	1	2		AUTO HOME HORIZONTAL
M36	1	2		AUTO HOME PUSHER
M37	2	2		AUTO HOME SEQ 1
M38	1	2		AUTO HOME SEQ 2
M39	1	2		AUTO HOME SEQ 3
M40	2	3		INSERTION ERROR
M41	1			HMI BOWL ON PB
M42	1			MANUAL BOWL OFF
M43	1			TOTE COUNT 160
M44	1			BOX COUNT 380
M45		2		TOTE COUNT 160 SELECTED
M46		2		BOX COUNT 380 SELECTED
M47	1	2		PUSHER CYCLE
X0	2			ROLLERS AND PIN WHEEL OFF
X1	4			MOTOR OVERLOAD FAULT
X2	1			PIN WHEEL IN CW AUTO START
X3	1			PIN WHEEL IN CCW
X4	1			ROLLERS ON
X5	1			COUNTER INPUT

Find In:(Entire project)
Display Target:Used Devices - Contact || Used Device - Coil || Used Device - Parameter
Print Range:Whole Range

Device	Contact Count	Coil Count	Parameter Count	Comment
X6	1			FEED RAIL FULL
X7	4			BUSHING NOT EJECTED
X10	1			BUSHINGS AVAILABLE
X11	3			PIN WHEEL ROTATING PULSE
X13	3			VERTICAL CYLINDER RETRACTED
X14	3			HORIZONTAL EXTENDED
X15	2			HORIZONTAL RETRACTED
X16	3			PUSHER RETRACTED
X17	1			PUSHER EXTENDED
X21	10			AUTOMATIC
X22	2			START PB
X23	9			E-STOP OK
X25	1			INTERRUPT FROM CONVEYOR
Y0	2	1		PIN WHEEL CW
Y1		1		PIN WHEEL CCW
Y2	1	1		ROLLERS ON
Y4		1		FEED BOWL ON
Y5		1		PARTS BIN FEED SIGNAL
Y10		1		HORIZONTAL CYLINDER RETRACT
Y11		1		VERTICAL CYLINDER RETRACT
Y12		1		PUSHER CYLINDER EXTEND
D1	1	2		PARTS COUNT
D50	1			SET YEAR
D51	1			SET MONTH
D52	1			SET DAY
D53	1			SET HOUR
D54	1			SET MINUTE
D55	1			SET SECOND
D56	1			SET DAY OF WEEK
D100		1		INSERTION FAILS LAST SHIFT THRU D130
D200		1		PARTS PER SHIFT THRU D230
D235	2			PIN WHEEL SNSR FAULT TIME
D250	1			CYCLE START DELAY
D251	1			PUSHER EXTEND DELAY
D252	1			HORIZONTAL EXTEND DELAY
D253	1			VERTICAL RETRACT DELAY
SD8016	3			HOUR DATA
T0	1	1		BOWL OFF DELAY
T1	1	1		INSERTION SEQ START DELAY
T2	1	1		CYCLE START DELAY
T3	1	1		PIN WHEEL JAM TIMER
T4	1	1		PIN WHEEL JAM TIMER 2
T5	1	1		PARTS COUNTER DEBOUNCE
T12	1	1		COUNTER RESET DELAY

Find In:(Entire project)
Display Target:Used Devices - Contact || Used Device - Coil || Used Device - Parameter
Print Range:Whole Range

Device	Contact Count	Coil Count	Parameter Count	Comment
T13	1	1		PUSHER EXTEND DELAY
T14	1	1		PARTS BIN FEED TIMER
T16	1	1		HORIZONTAL EXTEND DELAY
T17	1	1		VERTICAL RETRACT DELAY
T18	1	1		INSERTION WATCHDOG TIMER
T19	1	1		HOME SEQ WATCHDOG TIMER
C0	1	2		PARTS COUNTER
C1	1	2		INSERTION FAILS PER SHIFT
C2	2	2		PARTS PER SHIFT
C3	2			
C4	2			
C5	2			
C6	2			
C7	2			
C8	2			
C9	2			
C10	2			
C11	2			
C12	2			
C13	2			
C14	2			
C15	2			
C16	2			
C17	2			
C18	2			
C19	2			
C20	2			
C21	2			
C22	2			
C23	2			
C24	2			
C25	2			
C26	2			
C27	2			
C28	2			
C29	2			
C30	2			
C31	1			