


Exterior arrangement

Single rear cover. Screen-only front. Upper left-to-right sampling flow. Left and right are defined while looking at the screen.


ENGINEERING CONCEPT REVIEW
NOT TO SCALE / FIT PROTOTYPE

01 / FRONT

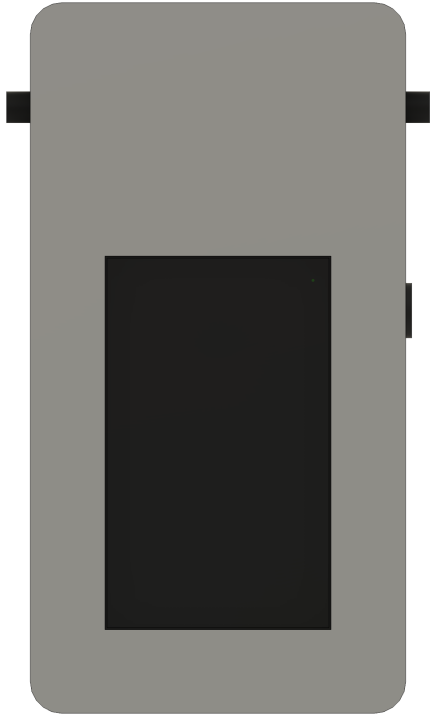


4.3-inch portrait screen and bezel only.

02 / REAR

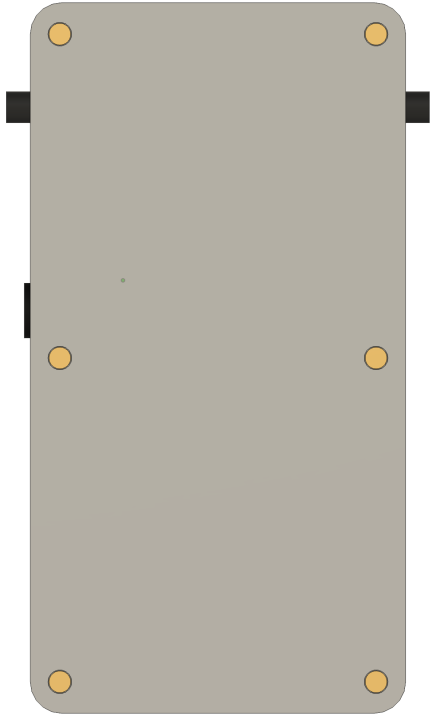


One cover opens access to the complete assembly.

03 / LEFT SIDE

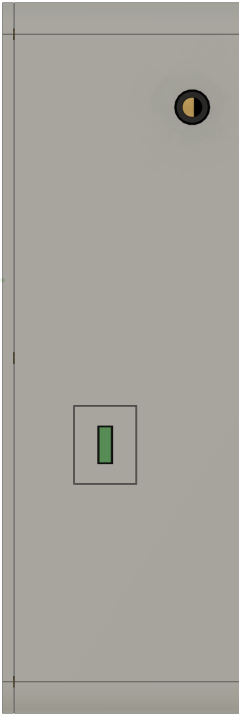

USB-C below the upper gas inlet.

04 / RIGHT SIDE

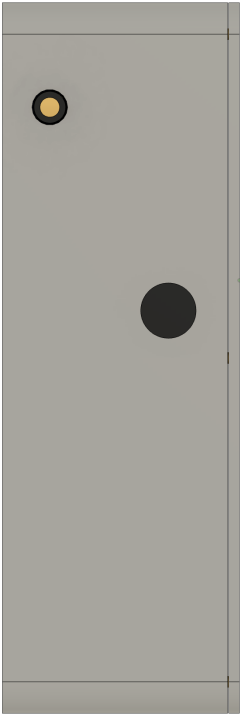

Power button below the upper gas exhaust.

PARAMETER REFERENCES / ALL DIMENSIONS IN MILLIMETRES

DESIGN REFERENCE	NOMINAL DIMENSION	BASIS / REVIEW NOTE
Housing envelope	180 H x 95 W x 60 D mm	Current complete model width is 107 mm including side projections. Physical fit remains unconfirmed.
Walls / single rear cover	3 mm wall / 2.75 mm cover	Cover Z = 57.25-60 mm: nominal 3 mm allocation includes a 0.25 mm seating gap.
Portrait display envelope	69.41 W x 117.01 H mm	Guition published larger assembly. Confirm bare/shell variant and complete depth.
Active display area	56.16 W x 93.60 H mm	4.3-inch diagonal, 480 x 800 portrait. Mounting offsets require physical confirmation.


Sources: [Guition module specification](#) and [GCT USB4720 drawing](#). Detailed component references and unmeasured features: MEASUREMENTS.md. View images are resized independently; do not measure this sheet.

Assembly and service review

The upper chamber remains separate from the battery and electronics. Clearance bodies represent unmeasured parts; they are not qualified production geometry.


ENGINEERING CONCEPT REVIEW
NOT TO SCALE / FIT PROTOTYPE

05 / SECTION REVIEW

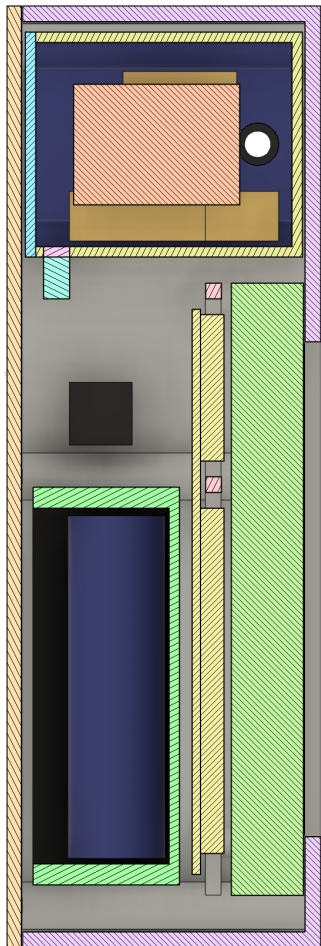

Section at X = 0; front is on the right. Inspect the display stack and chamber separation.

06 / REAR OPEN

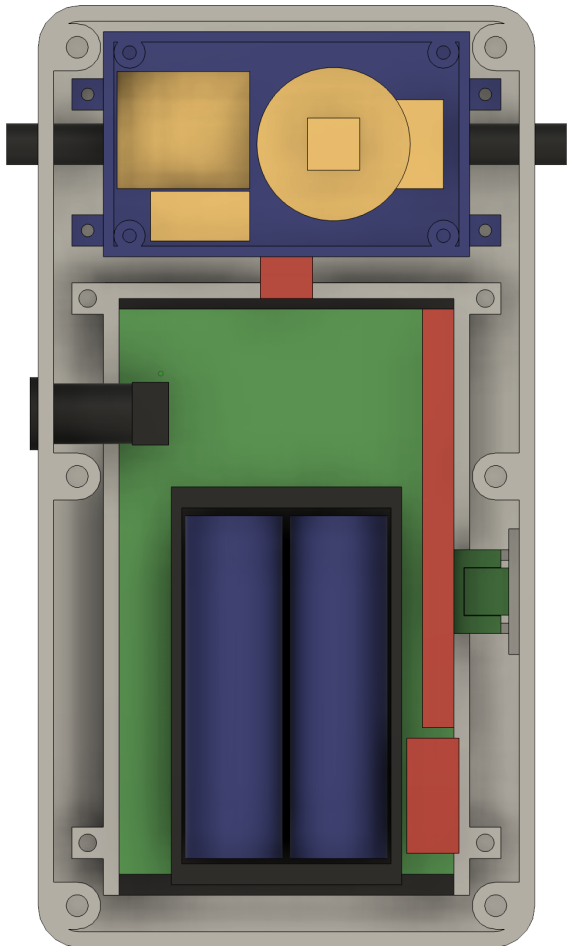

Rear cover and internal chamber lid hidden for review of sensors and service access.

FIT AND ACCESS CHECKLIST

- ☐ **One rear access cover**
Confirm screw engagement in the selected M3 inserts and clear screwdriver access.
- ☐ **Rearward service sequence**
Disconnect battery first. Remove pack, USB insert and button before carrier/display; remove gas stubs before chamber. See README for the tested sequence.
- ☐ **Controls and connections**
Verify right-side button barrel, nut and terminals; left-side USB plug and supported daughterboard clearances.
- ☐ **Upper cross-flow chamber**
Maintain an open inlet-to-exhaust passage, sealed wire feedthroughs and separation from the electrical compartment.
- ☐ **Actual component fit**
Measure the display variant, protected holder and plug, sensors, BME280 board, wiring and installed inserts.
- ☐ **Prototype release**
Review interference, cable bends and removal paths in Fusion. PLA fit prototype only; final seals and material remain open.

REVIEW INTENT

Front Z = 0. X points left as viewed from the front, Y points up, Z points rearward. All internal parts need a feasible removal sequence through the rear opening. The gas connections and button must not trap the chamber or carrier.

These views document the current concept; they do not establish manufacturing tolerances, pressure containment, weather sealing or validated sensor performance. Confirm outstanding dimensions in MEASUREMENTS.md before preparing the Bambu H2D PLA fit print.