

VD Detector Protection System

Status and work towards a DPS conceptual design

Manuel Arroyave

I&I meeting — November 2026

The hardware connection list is still growing

Known starting points

Rack power distribution units (PDUs).

The TPC electronics / Bottom Drift Electronics (BDE) protection design and its test work.

Work still needed

A complete list of hardware inputs, outputs and feedback between the equipment and the DPS Programable Logic Controller.

A conceptual design covering all VD DPS connections.

Approach: extend the existing TPC/BDE protection schema based on a central PLC.

Agree a deadline for the consortia and LBNF to return their connection information.

DPS protects equipment; SC operates and records

DPS	Detector Protection System: arbitrates protection, applies permits and inhibits, and checks the response.
DSCS	DUNE Detector Slow Controls System (SC): operates and monitors equipment, coordinates requests and keeps the logs.
DAQ	Data acquisition: configures readout and records detector data.
BMS / Cryo / SCADA	Building management, SCADA Controls and Cryogenics: operate their systems and report their state to SC.
Consortia	Define operating limits, protection actions and allowed response times.
Local interlocks	Can trip equipment without SC or the central DPS.

Protection trips take priority over operating requests.

SDSTA issues personnel-safety alarms.

Facility inputs reach DPS through slow controls


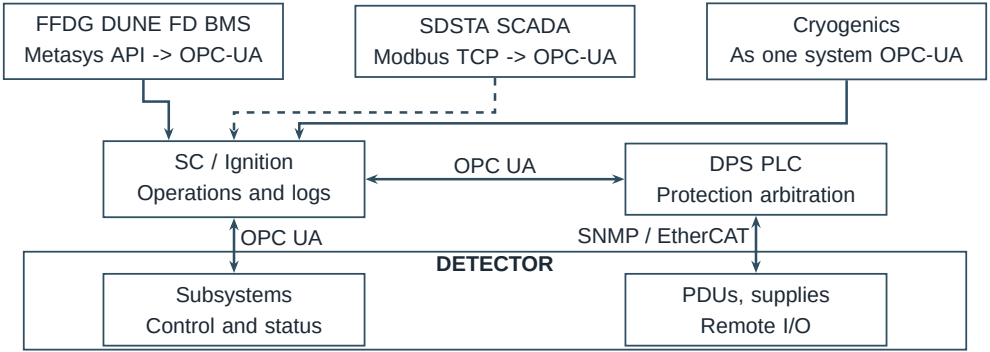


Diagram. Logical interfaces. The dashed SDSTA connection is under study; two-way arrows carry status and requests.

OPC UA carries status and requests. DPS uses SNMP for power distribution units (PDUs) and supplies, and EtherCAT for remote I/O.

The FFDG BMS connection needs an API licence

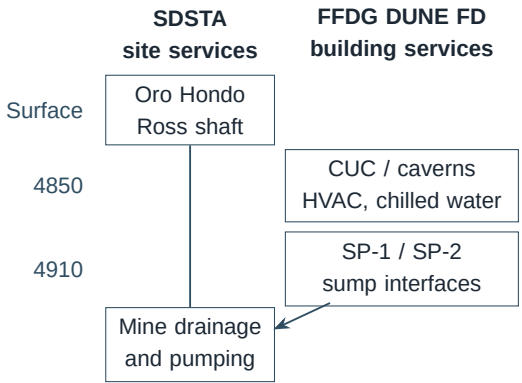

Proposed connection

ISD proposes a Metasys API in Batavia to connect the FFDG DUNE FD BMS to SC.

Tested with SBN building data

The API and OPC UA publication have been exercised.

Needed for live data

The Metasys API licence.


Diagram. Service boundaries at SURF. The map shows the scope of the systems, not individual controllers.

How FFDG BSI status can support detector protection

Reported in discussion	What we need to resolve
No 24-hour support; issues attended next business day	Decide a schema of human informed decisions using this and what happens when it is unavailable.
Dedicated sensors recommended for critical equipment protection	Identify where detector-owned sensors are needed.

BMS access alone does not establish a protection interface.

The SDSTA SCADA interface needs a hardware survey

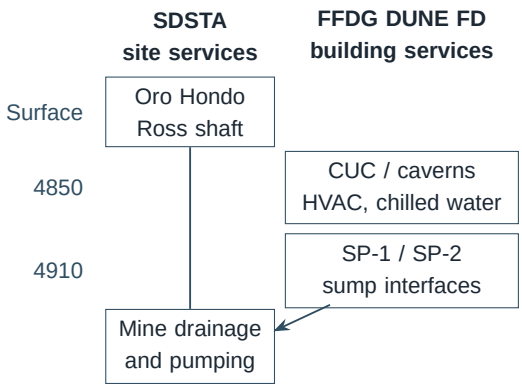

Hardware survey underway

Controller, connection and network ports at the Ross Dry.

Protocols under investigation

Modbus TCP or OPC-UA could be options.

Agreement under discussion

Set of signals to use, faults and maintenance.

Diagram. SDSTA services extend beyond the detector caverns. The survey will establish the available points.

SDSTA proposes a restricted SCADA status interface

Topic	Reported proposal / next input
Interface	Modbus TCP, exposing a set of variables on selected ports. SDSTA retains control of its systems.
Write access	Status-only intent. Agree and check that the interface rejects writes and commands.
Variables	A list is pending, including Oro Hondo status and driver variables + HVAC.

Still to agree: variable meaning, data quality, loss-of-data behaviour and network access.

Cryogenics presents one system to DUNE

The cryogenic controls are in the Central Utility Cavern (CUC). Their internal divisions appear as one system to DUNE FD DSCS.

Function	Detector interface
Process control	Cryogenics operates and protects its own process.
Protection inputs	Liquid-argon level, relief-valve state and boiling-risk conditions can affect HV and bias permits.
Information path	Cryogenics ↔ SC ↔ DPS. Trace each measurement to its actual sensor.
Before operation	Agree readiness states, limits and the response to missing or invalid data.

The detector running conditions are still being agreed.

Trace each interlock from its source to the response




Diagram. Review each interlock from its source and physical input through the decision, action and equipment response.

Start with the interlocks proposed by the consortia in their interface documents (ICDs).

For each one, identify the existing hardware, missing connections and required additions. Check the time from detection to completed shutdown.

Use the rack lists, drawings, parts lists and power calculations.

Each group must identify its hardware connections

For every connection	Record
Source and destination	Equipment, rack / panel, connector, channel and drawing revision
Signal and interface	Measurement or state; units, normal / fault values; wired I/O or network protocol
Protection action	Condition, affected load, permit / inhibit and allowed response time
Feedback and recovery	Equipment response; lost-signal behaviour; reset and re-enable
Responsibility and gaps	Consortium or LBNF contact; evidence, missing items and next action

Use one common register for the consortia and the LBNF facility. Each group confirms that its list covers its hardware.

A trip removes the permit; recovery needs a new request



Allow: the request is valid, required conditions are met and no trip is active.

Trip: remove the permit, retain the cause and check the equipment response. SC logs the event.

Recover: reset the trip, then request a separate re-enable.

Diagram. Proposed controller: a commercial programmable logic controller (PLC) based on BDE, located in the CUC. Loss-of-signal behaviour is set for each protected load.

Build on the Batavia and SD DPS test setups

Batavia — HEERC G271

Reported progress

Initial BDE demonstrator design completed and reviewed with the WIEC team at BNL.

Next steps

Apply BNL feedback, test fan tachometer readout, then assemble and install the demonstrator.

SD — Nevada room

`dune-fd-test01`

Available

PDU, smoke sensors, relay and GIZMo.

Ignition, OPC UA bridges and emulators.

Next step

Expand the setup along the Batavia model.

Goal: exercise protection inputs, trips, feedback, reset and recovery.



Detector

Ten BDE groups use the existing bottom-drift design

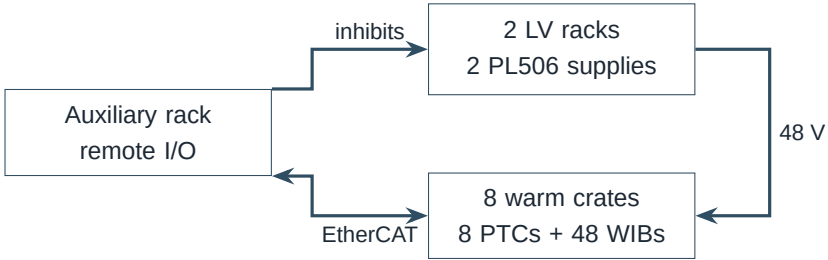


Diagram. One documented BDE group. The supply inhibit and 48 V path are separate from the two-way EtherCAT I/O link.

Ten groups: 10 auxiliary racks, 20 low-voltage racks and 20 PL506 supplies; 80 warm interface electronics crates (WIECs), containing 480 interface boards (WIBs).

Each crate has a power and timing card (PTC). Ten bias racks provide the separate charge-readout-plane and field-cage interfaces.

Available: panel drawings, parts lists, power calculations and Ignition screens.

Extend the BDE approach into a full DPS concept




Diagram. Proposed extension of the existing TPC/BDE protection approach. Controller and I/O sizing follow the complete connection list.

Reuse the PLC, remote-I/O and protection-rule approach where it fits. Map the additional subsystem and facility interfaces.

SC carries operating requests and records equipment states and trips.

Test each added path from the fault input to confirmed equipment response.

A cooling fault removes power from the affected crate

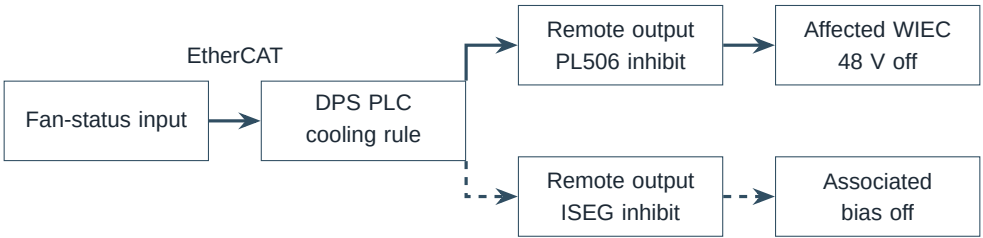


Diagram. Solid: documented fan-to-supply inhibit. Dashed: associated bias shutdown, if required by the VD rule.

A cooling fault removes power from the affected crate. DPS checks the supply state and voltage; SC records the trip.

The dependency and shutdown order for associated bias are still being agreed.

SC and DAQ use distinct DAPHNE service paths

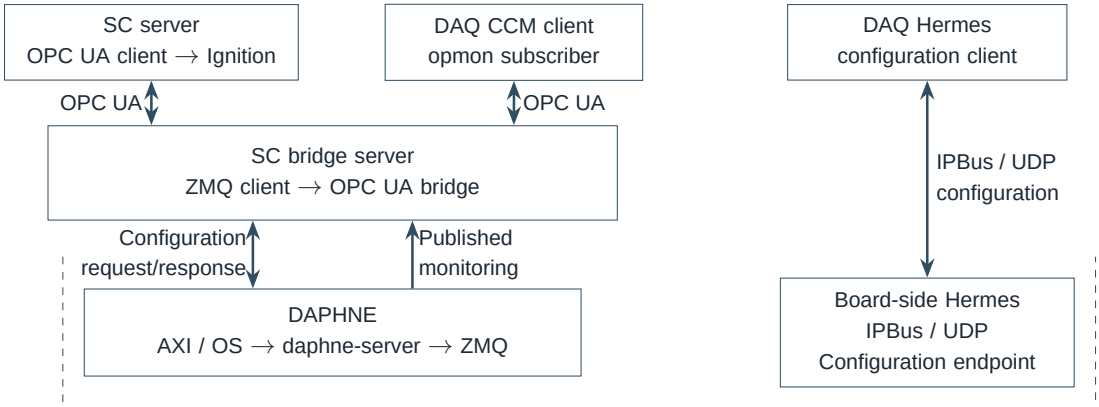


Diagram. Working SC–PDS–DPS ICD, Fig. 1. PDS: 34 LV feeds; cathode devices use PoF (next slide).

Proposed SiPM bias inhibit: DPS → SC → DAPHNE; SC returns bias status and informs DAQ.

DPS switches PoF power through the PDU

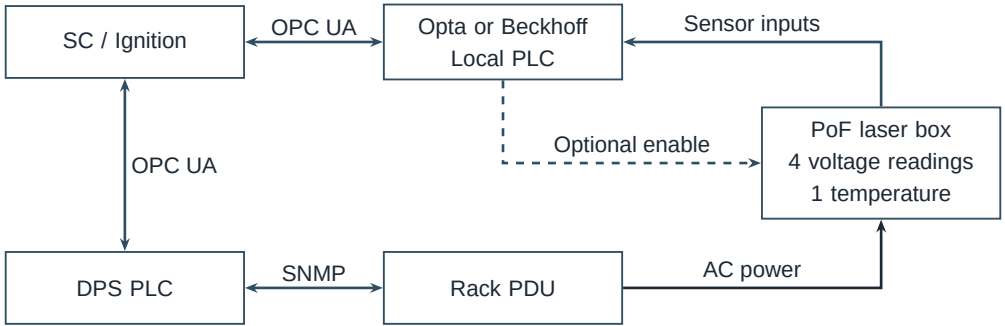


Diagram. Sensor inputs reach the local PLC. The dashed box-enable path is optional; the PDU supplies AC power.

80 boxes: 320 voltage + 80 temperature readings = 400 readings.

DPS inhibits power over fibre (PoF) through the PDU. A separate box-enable signal would provide another control option, if available.

LV supplies power DAPHNE and PDS calibration boxes

Working PDS LV scope: 34 feeds.

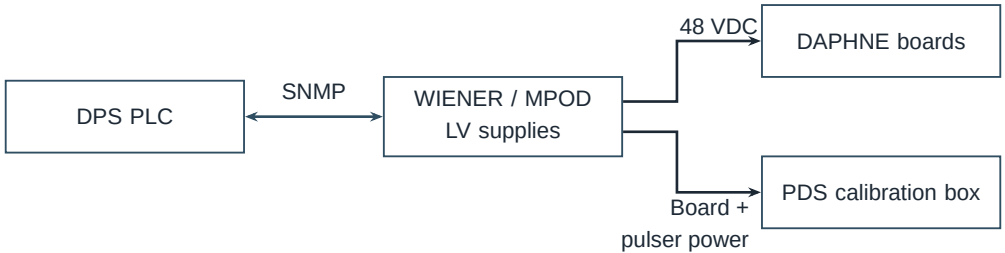


Diagram. Proposed SNMP control/status path. Power arrows group LV feeds; hardware-inhibit wiring remains open.

To complete: map loads to channels and inhibit groups; agree trip conditions and recovery.

Check supply state, voltage and current after each trip.

Drift HV and bias supplies have separate inhibit paths

One drift-HV supply; ten bias crates with 576 channels.

480 channels serve the charge readout planes (CRPs); 96 serve the field cage.

Equipment	Control and monitoring	Protection
Heinzinger drift-HV supply	SC / OPC UA through LabVIEW and cRIO; analog control and readback	DPS remote I/O operates the wired interlock
ISEG bias supplies	DPS uses SNMP; SC receives status and logs	DPS remote I/O operates wired channel inhibits

Example: low liquid-argon level removes the drift-HV permit. A drift-HV trip also shuts down the associated field-cage termination supplies.

Trace each protection input to a temperature sensor

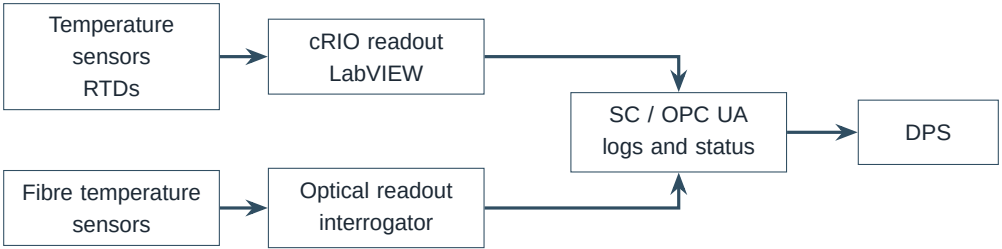


Diagram. RTD and fibre-sensor measurements reach SC through separate readout systems. Logical interfaces only.

Calibration and Cryogenic Instrumentation (CalCI) measures conditions inside the detector. Temperature profiles guide cooldown and operation.

For protection, each measurement needs a location, a limit, an allowed response time and a named piece of equipment to shut down.

Proposed laser rules block conflicting PDS requests

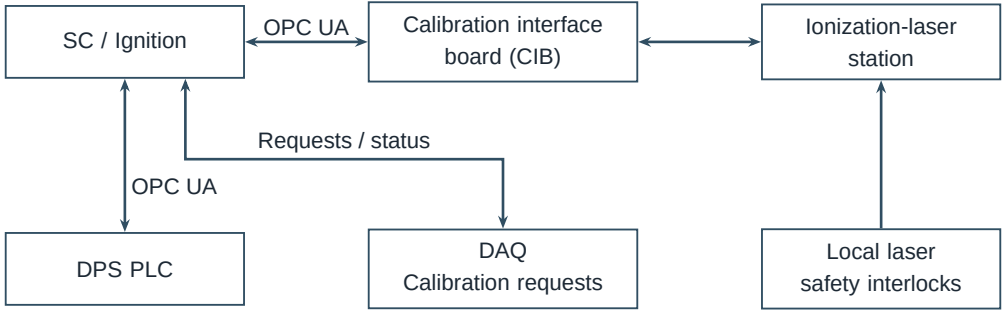


Diagram. SC exchanges requests and status with DPS, DAQ and the CIB. The local laser-safety path remains independent.

Four laser stations. Proposed rule: block conflicting laser and PDS requests. Restore PDS after confirmed emission-off or shutter closure.

Local laser-safety interlocks remain independent.

The purity-monitor inhibit rule still needs agreement



Diagram. Two-way links carry monitor control and status; SC sends activity tags to DAQ. The inhibit rule remains open.

Proposed approach: keep taking data and mark the intervals when the flash lamp is active.

Decision still needed: the older PDS interface document requires SiPM bias to be off during purity-monitor activity. Agree the rule before implementing the inhibit.

Use rack sensors and PDUs for shared protection

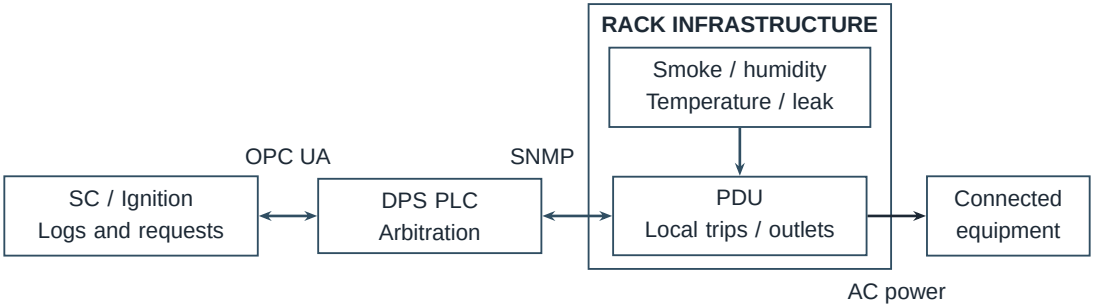


Diagram. Sensors feed the PDU; the outgoing line supplies AC power. Two-way links carry control and status.

Local PDU rules switch off affected outlets. Humidity is monitored; a humidity trip needs a separate requirement.

TDE + DAQ/timing: 336 microTCA crates. TDE uses 20 mezzanine racks. DPS controls their PDUs; crate-status and external-inhibit interfaces remain possible additions.

Measure the full path from fault to confirmed shutdown

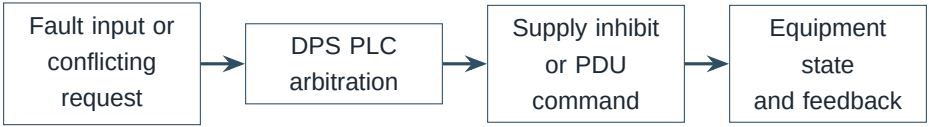


Diagram. Measure detection, arbitration, the output action and equipment feedback as one protection path.

Use the existing BDE test setup to measure detection through completed shutdown.

Test local trips, lost communications, reset and re-enable. Check that SC logs the cause, decision and final equipment state.

No critical function requiring less than 1 ms has been identified so far. The consortium review and hardware tests will check this assumption.

Collect the inputs, then review the full DPS concept

Milestones for discussion; dates to be agreed

Milestone	What closes it
Collect hardware connections	Every consortium and LBNF return their lists, confirm coverage and identify remaining gaps and owners.
Review the full DPS concept	Review the architecture, controller / I/O allocation, interfaces, fault response and test plan. Record open choices.

Next step: agree a contact for each contributor.

Set the schedule with the consortia and LBNF once the scope and available resources are clear.

Prepare the hardware review

Work before review	Result
Trace each inhibit	Existing hardware, additions, cable routes and quantities
Test representative paths	Measured trip times, recovery and SC logging
Prepare purchases	Panel space, power, drawings, parts, licences, costs and spares

Order after the readiness review; install to match the site schedule.

Agree the facility-interface and full VD response-matrix review schedule with the consortia and LBNF.



Backups


Agree responsibility and control-engineering support

Proposed responsibility	Work
Manuel + control engineer	VD hardware design, SURF interfaces and procurement
Terri and Trevor	BDE panels, PLC and I/O implementation, bench tests
Geoff + Manuel	SC commands, DPS arbitration and recovery
Vivian + consortia / DPS	Equipment requirements and interface-document updates

Support needed: control-engineering time and access to the existing test stands.


Existing panels and screens provide the BDE reference

TPC protection panel designs

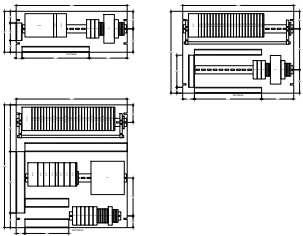

Central PLC, bias I/O and LV/fan/heater reference panels.

BDE Ignition screens

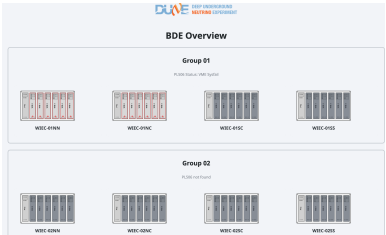

Existing Ignition display of the BDE crate groups.

Parts list: CX5140 PLC, EK1100 couplers, EK1521 fibre links and EL2124 inhibit outputs.

Diagram. Reference panel design and existing operator screen. The VD group contains eight warm crates.

The fan trip removes the PL506 channel permit

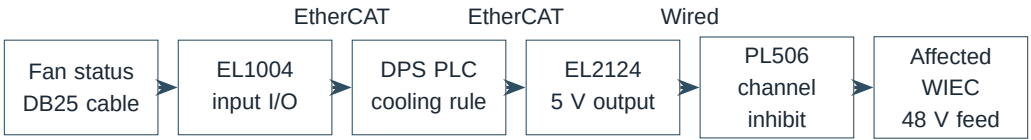


Diagram. Cooling fault → withdraw the permit for the affected PL506 channel.

Feedback: PL506 state and voltage/current → SNMP → DPS; OPC UA carries the result to SC for logging.

VD allocation check: six fan-status signals per WIEC means 48 per eight-WIEC group. Match these to the populated VD inputs and cables.

Six fans per crate is the design case used here. These are existing input requirements, not additional I/O.

DAQ CCM and Hermes use distinct DAPHNE services

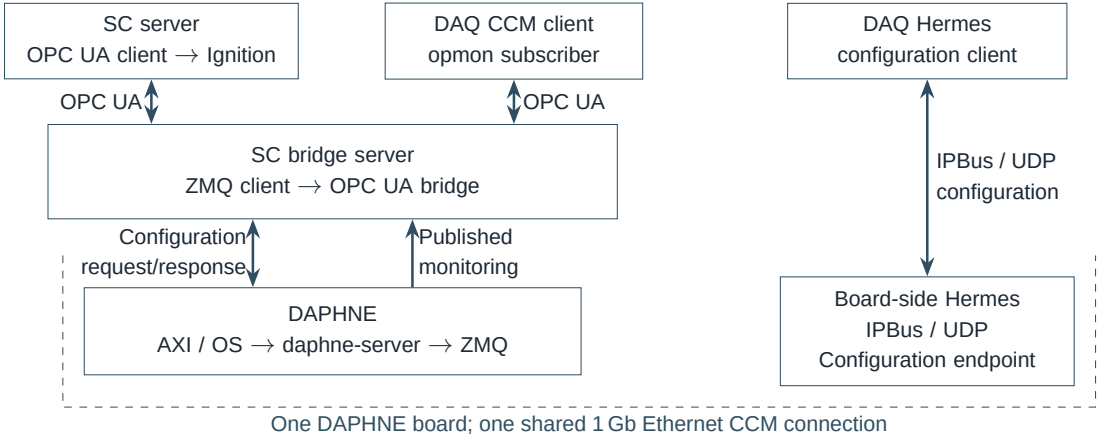


Diagram. Working SC–PDS–DPS ICD, Figure 1. DAQ CCM/opmon and Hermes remain distinct clients. The dashed bracket groups the board-side services.

Rack space is not a count of spare I/O terminals

Rack type	Count	DPS allocation and workbook space
BDE auxiliary	10	12U DPS; U3–U21 marked Space (19U); eight WIECs per rack
BDE low voltage	20	One PL506 per rack; four WIECs per supply
Bias high voltage	10	12U DPS; U3–U12 marked Space (10U)

Space marked in the rack workbook is not a new DPS reservation. Free DIN-rail length and I/O capacity depend on the populated VD panel.

U denotes rack height. The marked space is not an allocation of free PLC terminals.

The bias draft provides 1,440 outputs for review

Component	Per rail	10 racks
EK1100 EtherCAT coupler	1	20
EL9410 supply terminal	1	20
EL2124: four 5 V outputs	18	360
EL9011 end cap	1	20
24 V power supply	1	20

Each rail occupies 337 mm. The draft provides 1,440 output channels; the working VD inventory lists 576 bias channels.

Draft layout: the difference between 1,440 outputs and 576 bias channels is not verified spare capacity.

Supply capacity differs from expected power use

Equipment	Power / capacity	Basis and limit
PL506 input	2.25 kW each	20 supplies: about 45.1 kW expected AC input
WIEC fans only	380 W per group	$8 \times 6 \times 0.33\,\text{A} \times 24\,\text{V}$; excludes heaters and I/O
Bias DPS supply allowance	24 V, 40 A	960 W DC capacity per rack in the workbook

The inherited 831 W auxiliary figure needs a VD component budget covering fans, heaters and populated I/O.

Fan power assumes six fans per crate. Supply capacity is distinct from expected consumption.

Map each rack package against the existing allowance

Rack component	Reference hardware / allocation
PDU	Raritan PX3; inlet and outlet allocation for the connected loads
Smoke detector	4WTAR-B and EOLR-1 end-of-line relay
Contact interface	DX-PD2C5; 12 V supply to the smoke detector
Humidity	Record the probe and peripheral interface for each rack
Temperature / water leak	PDU peripheral sensors where fitted

The May workbook includes a 76-entry rack-protection/PDU allowance. Map the actual rack packages against this existing allowance.

Smoke/contact parts are retained as reference hardware; fire systems are outside DPS scope. Humidity-trip requirements remain open.

Local PDU trips need deliberate power restoration

PX3 setup guide	Local behaviour documented
Smoke, water, temperature	Local event rules and scripts can switch off the protected outlets
Network-switch outlet	Kept powered during the guide’s fallback shutdown
After a local trip	Power is restored deliberately; no automatic restoration

The VD control chain is Ignition → DPS PLC → PDU. Local trip status returns to the PLC and to SC for logging.

The reference prototype used direct Ignition control and included smoke contacts. Fire systems remain outside DPS scope; the VD PLC path needs its own communication-loss and recovery tests.

Keep subsystem quantities separate from crate totals

Subsystem	Working inventory and interfaces
PDS readout / calibration	34 LV feeds in the current presentation scope; supply status and control interfaces
Power over fibre (PoF)	80 boxes; 320 voltage and 80 temperature readings; Opta PLC or Beckhoff PLC alternative
TDE	20 mezzanine racks; DPS controls PDUs; crate-status and external-inhibit interfaces remain options
Calibration / cryogenic instrumentation	Level and temperature readout, purity monitors, ionization laser and neutron source

TDE and DAQ/timing contain 336 microTCA crates in total. Crate totals do not establish the number of PDUs or network switches.

Survey the 20 panel references to find installed hardware

Drawing area	Interfaces on the inspection maps
CUC, level 4850	Eight panel references: air handling, chilled water, power and associated equipment
Level 4910	North and south sump interfaces, SP-1 and SP-2
4850-08-ES group	Spare panel for future equipment; mapped to the access-drift inspection area
Other 4850 areas	Chillers, pumps, ventilation and generator interfaces

Marked inspection maps cover the 4850 and 4910 levels.

These are drawing references. The underground survey will establish what is installed.

The workbook allocates 76 mezzanine rack positions

Rack type	Count	Rack type	Count
BDE low voltage	20	PDS low voltage	4
BDE auxiliary	10	Drift HV	2
TDE	20	Reserved drift HV	2
Bias HV	10	Spare / CalCI	8

76 numbered mezzanine positions: SEDM-01 to SEDM-76.

The worksheet also has a separate concept for 40 top-plate mini-racks.

May 2025 workbook. Rack positions include reserved and spare allocations; they are not counts of PLCs or I/O stations.

Count shared controls and rack devices once

SC and network
- Ignition and logging services
- Operator / engineering stations
- Switches, routers and firewalls

DPS
- Central PLC and 24 V supplies
- EtherCAT couplers / fibre links
- Digital / analog / temperature I/O
- Fan/heater power outputs
- Wired permit / inhibit outputs

Facility interfaces to SC

FFDG BMS
- Metasys / Batavia API
- Building controllers

SDSTA SCADA
- Controllers and I/O: survey

Cryogenics
- Process and safety PLCs
- Operator stations / instruments

Rack infrastructure
- Raritan PX3 PDUs
- Smoke detectors and relays
- Contact interfaces / supplies
- Humidity / temperature probes
- Water-leak sensors

PDU-connected equipment
- Subsystem supplies and crates
- PoF boxes
- Computers and other rack loads

Facility systems keep their own controls. Rack protection and shared I/O are counted once.

The 336-crate total spans TDE and DAQ/timing

336 microTCA crates in total across TDE and DAQ/timing.

Bottom Drift Electronics
- 10 groups; 20 PL506 supplies
- 80 warm crates
  - 80 power/timing cards; 480 WIBs
  - Fans, heaters and temperature inputs

High voltage
- 1 Heinzinger supply; cRIO / LabVIEW
- 10 ISEG bias crates
  - 576 channels: 480 CRP + 96 field cage
- 10 bias racks with remote I/O

microTCA crate equipment
- Carrier hubs (MCHs)
- Readout / timing modules
- Power units and cooling fans

Top Drift Electronics
- 20 mezzanine racks
- 20 LV supplies and distribution units
- Front-end boards / calibration units
- White Rabbit timing switches

DPS control of TDE is through the PDUs.

Keep PDS control and DAQ data links distinct

Photon Detection System
- 42 DAPHNE boards in the working inventory
- WIENER supplies: 34 LV feeds

Power over fibre
- 80 laser boxes
  - 320 voltage + 80 temperature readings
- Opta or Beckhoff monitoring PLCs
- PDU power; optional box-enable input

Light calibration and timing
- 8 light-calibration boxes
- Local optical timing fanouts

DAQ and timing
- DAQ computers and readout switches
- Timing / readout microTCA crates
  - Included in the 336-crate total
- GPS interface boards (GIBs)
- GPS-disciplined oscillator
- Timing masters and fanouts

DAQ data and timing use separate links. SC receives the agreed status and activity information.

Instrument counts and interfaces still need allocation

Temperature
- RTDs; readout crates / cards
- cRIO and LabVIEW stations
- Fibre sensors and interrogators

Liquid level
- CRP / field-cage sensors and readout boards
- Level transmitter and controller

Other instrument interfaces
- Cold cameras; GIZMO; impedance monitor
- Berghof / Siemens instrument controllers

Ionization lasers: 4 stations
- CIB and station controllers
- Power electronics and computers
- Shutters and local safety interlocks

Purity monitors
- HV/LV supplies and front-end electronics
- Flash lamps, lamp supplies and triggers
- Digitizers and LabVIEW computers

Pulsed neutron source
- Generator, controller and permit interface

The device list records the interfaces and quantities still awaiting allocation.