



| GROSS BUILDING AREA |           |
|---------------------|-----------|
| LEVEL               | AREA      |
| LEVEL 1             | 15,394 SF |
| Grand total: 1      | 15,394 SF |

| OCCUPANT LOAD SCHEDULE (BY AREA) |           |                  |           |          |
|----------------------------------|-----------|------------------|-----------|----------|
| AREA NAME                        | AREA      | OCC. LOAD FACTOR | OCC. LOAD | MAX OCC. |
| LEVEL 1                          |           |                  |           |          |
| BREAKROOM                        | 382 SF    | 15 SF            | 26        | 26       |
| COMMAND CENTER                   | 3,517 SF  | 100 SF           | 36        | 100      |
| JANITOR                          | 44 SF     | 0 SF             | 0         | 0        |
| MECHANICAL                       | 913 SF    | 300 SF           | 5         | 5        |
| OFFICE                           | 8,729 SF  | 100 SF           | 88        | 88       |
| RESTROOMS                        | 612 SF    | 0 SF             | 0         | 0        |
| STORAGE                          | 5,116 SF  | 300 SF           | 3         | 3        |
|                                  | 14,713 SF |                  | 158       | 222      |

NOTE:  
THE COMMAND CENTER MAXIMUM OCCUPANCY HAS BEEN  
INCREASE BASED ON IBC 1004.2 THIS INCREASE WILL BE  
NECESSARY ONLY DURING TIMES WHEN A TEAM IS  
COORDINATING DISASTER RESPONSE EFFORTS.

| PLUMBING FIXTURE SCHEDULE |       |
|---------------------------|-------|
| FIXTURE                   | COUNT |
| LEVEL 1                   |       |
| LAVATORIES                | 10    |
| TOILETS                   | 8     |
| URINALS                   | 2     |

CODE ANALYSIS:

DESCRIPTION

THIS IS A NEW ONE-STORY OFFICE BUILDING.

APPLICABLE CODES:

ADOPTED & AMENDED CODES:

2003 INTERNATIONAL BUILDING CODE (IBC)  
2003 INTERNATIONAL MECHANICAL CODE (IMC)  
2003 INTERNATIONAL PLUMBING CODE (IPC)  
2005 NATIONAL ELECTRICAL CODE (NEC)  
2003 INTERNATIONAL FIRE CODE (IFC)  
2003 ANSI/AC 117-1 ACCESSIBLE AND USABLE BUILDINGS AND FACILITIES  
2003 INTERNATIONAL FUEL GAS CODE (IFGC)

SPECIAL PROVISIONS:

NONE

OCCUPANCY CLASSIFICATION:

GROUP B (OFFICES)

(SECTION 304.1)

TYPE OF CONSTRUCTION:

TYPE I-B

(0.1 NON-COMBUSTIBLE MATERIALS)

BUILDING HEIGHT:

1 STORY, APPROX. 16 FEET

BUILDING AREA:

FIRST FLOOR, APPROX. 16,000 SF

ALLOWABLE HEIGHT:

5 STORIES, 75 FEET

(TABLE 502A MODIFIED BY SECTION 506)

ALLOWABLE AREA:

(GROUP B OCCUPANCY)

23,000 + 23,000 (0.75) + 23,000 (3) = 109,250 SF

(IBC SECTION 508.1)

PASSIVE FIRE RESISTIVE REQUIREMENTS:

ALL SECTIONS ARE FROM IBC

REQUIRED HOURS

EXT. BEARING WALLS

0 HR

(TABLE 601)

INT. BEARING WALLS

0 HR

(TABLE 601)

EXT. NON-BEARING WALLS

0 HR

(TABLE 601)

OPENING PROTECTIVES AT EXT. WALL

0 HR

(1) 20 FEET FROM P.L. OR C.L. OF STREET, TABLE 703.1  
(2) 20 FEET FROM PROPERTY LINE, TABLE 704.1

STRUCTURAL FRAME  
(PRIMARY COLUMNS AND GIRDERS)

0 HR

(TABLE 601)

PERMANENT PARTITIONS

0 HR

(TABLE 601)

FLOORS

0 HR

(TABLE 601)

ROOF

0 HR

(TABLE 601)

CORRIDORS

0 HR

(TABLE 601)

STORAGE ROOMS

0 HR

(TABLE 1017.1)  
(TABLE 206.2)

EXITING:

ALL EXITING WIDTHS ARE PROVIDED FROM NFPA 101, AS IT IS GENERALLY MORE RESTRICTIVE THAN THE IBC.

EXIT WIDTHS DOOR, RAMPS, ETC.

1.00 PEOPLE PER FOOT

(0.3 INCHES PER PERSON, NFPA TABLE 7.3.1.1)

STAIRS:

40 PEOPLE PER FOOT

(0.4 INCHES PER PERSON, NFPA TABLE 7.3.1.1)

TRAVEL DISTANCE:

100 FT MAX. (1) 100 FEET FROM THE EXTERIOR EXIT (SECTION 1010.1)  
(2) 100 FEET FROM THE EXTERIOR EXIT (SECTION 1010.1)

COMMON PATH OF TRAVEL RETAIL/RESIDENTIAL:

100 FT MAX. (1) 100 FEET FROM THE EXTERIOR EXIT (SECTION 1010.1)  
(2) 100 FEET FROM THE EXTERIOR EXIT (SECTION 1010.1)

NUMBER OF EXITS REQUIRED:

2 FROM EACH SPACE, 50 PEOPLE.  
SEPARATED BY ONE (1) 100 FEET FROM THE EXTERIOR EXIT (SECTION 1010.1)  
SEPARATED BY ONE (1) 100 FEET FROM THE EXTERIOR EXIT (SECTION 1010.1)

PANIC HARDWARE:

NOT REQUIRED

(SECTION 1010.1.1)

DEAD ENDS:

50 FEET

(NFPA SECTION 10.2.2)

ACCESSIBILITY:

ACCESSIBLE ROUTE IS REQUIRED AND PROVIDED THROUGHOUT THE BUILDING.

AREAS OR REFUGE NOT REQUIRED IN SINGLE STORY BUILDING WITH DIRECT ACCESSIBLE EXITS TO EXTERIOR.

ACTIVE FIRE PROTECTION:

AUTOMATIC SPRINK

NOT REQUIRED, BUT PROVIDED

(SECTION 903.3)

STANDPIPS:

NOT REQUIRED

FIRE ALARM SYSTEM:

NOT REQUIRED

(IBC SECTION 907 AND NFPA 363.1.4)

EXIT SIGNS:

WHERE TWO OR MORE EXITS ARE REQUIRED

REQUIRED

(SECTION 1010.1.1)

EMERGENCY LIGHTING:

REQUIRED

A MINIMUM AVERAGE OF 1 FOOT-CANDLE ALONG EGRESS PATH INCLUDING AREA IMMEDIATELY ADJACENT TO EXIT DOORS (IBC SECTION 1006.4)

PORTABLE FIRE EXTINGUISHERS:

REQUIRED

(NFPA SECTION 201.2)

OCCUPANT LOAD FACTORS:

OCCUPANT LOAD BASED ON (IBC TABLE 1004.1.1 AND NFPA TABLE 7.3.1.2)

ASSEMBLY:

15 SF NET PER PERSON

BUSINESS:

100 SF GROSS PER PERSON

ENTERTAINMENT/MECHANICAL:

300 SF GROSS PER PERSON

BREAK ROOMS:

15 SF NET PER PERSON

PLUMBING FIXTURE COUNTS:

B OCCUPANCY

(BASED ON IBC TABLE 2902.1)

WATER CLOSETS:

MALE/FEMALE:

1.25 (FIRST 50)  
1:50 +50

LAVATORIES:

MALE/FEMALE:

1.40 (FIRST 80)  
1:80 + 80

DRINKING FOUNTAINS:

1:100

SERVICE SINKS:

1 PER FLOOR

BASED ON AN OCCUPANT LOAD OF 222  
(111 MALE, AND 111 FEMALE)

WATER CLOSETS:

REQUIRED

PROVIDE

LAVATORIES:

4 M, 3 F

5 M, 5 F

DRINKING FOUNTAINS:

3

4\*

SERVICE SINKS:

1

1

\* 2 DRINKING FOUNTAINS AND 2 BREAK ROOMS

AREA SCHEDULE (NET)

LEVEL 1

14,713.78

UNLESS A PROFESSIONAL SEAL WITH SIGNATURE AND DATE  
IS AFFIXED, THIS DOCUMENT IS PRELIMINARY AND IS NOT  
INTENDED FOR CONSTRUCTION, RECORDING PURPOSES OR  
IMPLEMENTATION



Prime Consultant - MEP FP Engineer:  
**GDS Engineering**  
9201 E. 63rd Street, Suite 100  
Raytown, MO 64133  
Tel. 816-358-1790  
Fax. 816-358-2367

Architect of Record:  
**Gould Evans Associates, LC**  
4041 Mill Street  
Kansas City, Missouri 64111  
P: 816-931-6655  
F: 816 931 9640

Civil/Structural Engineer:  
**TranSystems**  
2400 Pershing Road, Suite 400  
Kansas City, MO 64108  
P: 816.329.8600  
F: 816.329.8602



NOAA - Gulf of  
Mexico Disaster  
Response Center

Zeigler Boulevard  
Mobile, Alabama 36608

| Number | Revision Description | Date       |
|--------|----------------------|------------|
|        | AS BUILT             | 01-26-2015 |


Project No 0208-8030  
Date: 15 June 2009  
Sheet:

## CODE PLAN

G101

## CONSTRUCTION DOCUMENTS



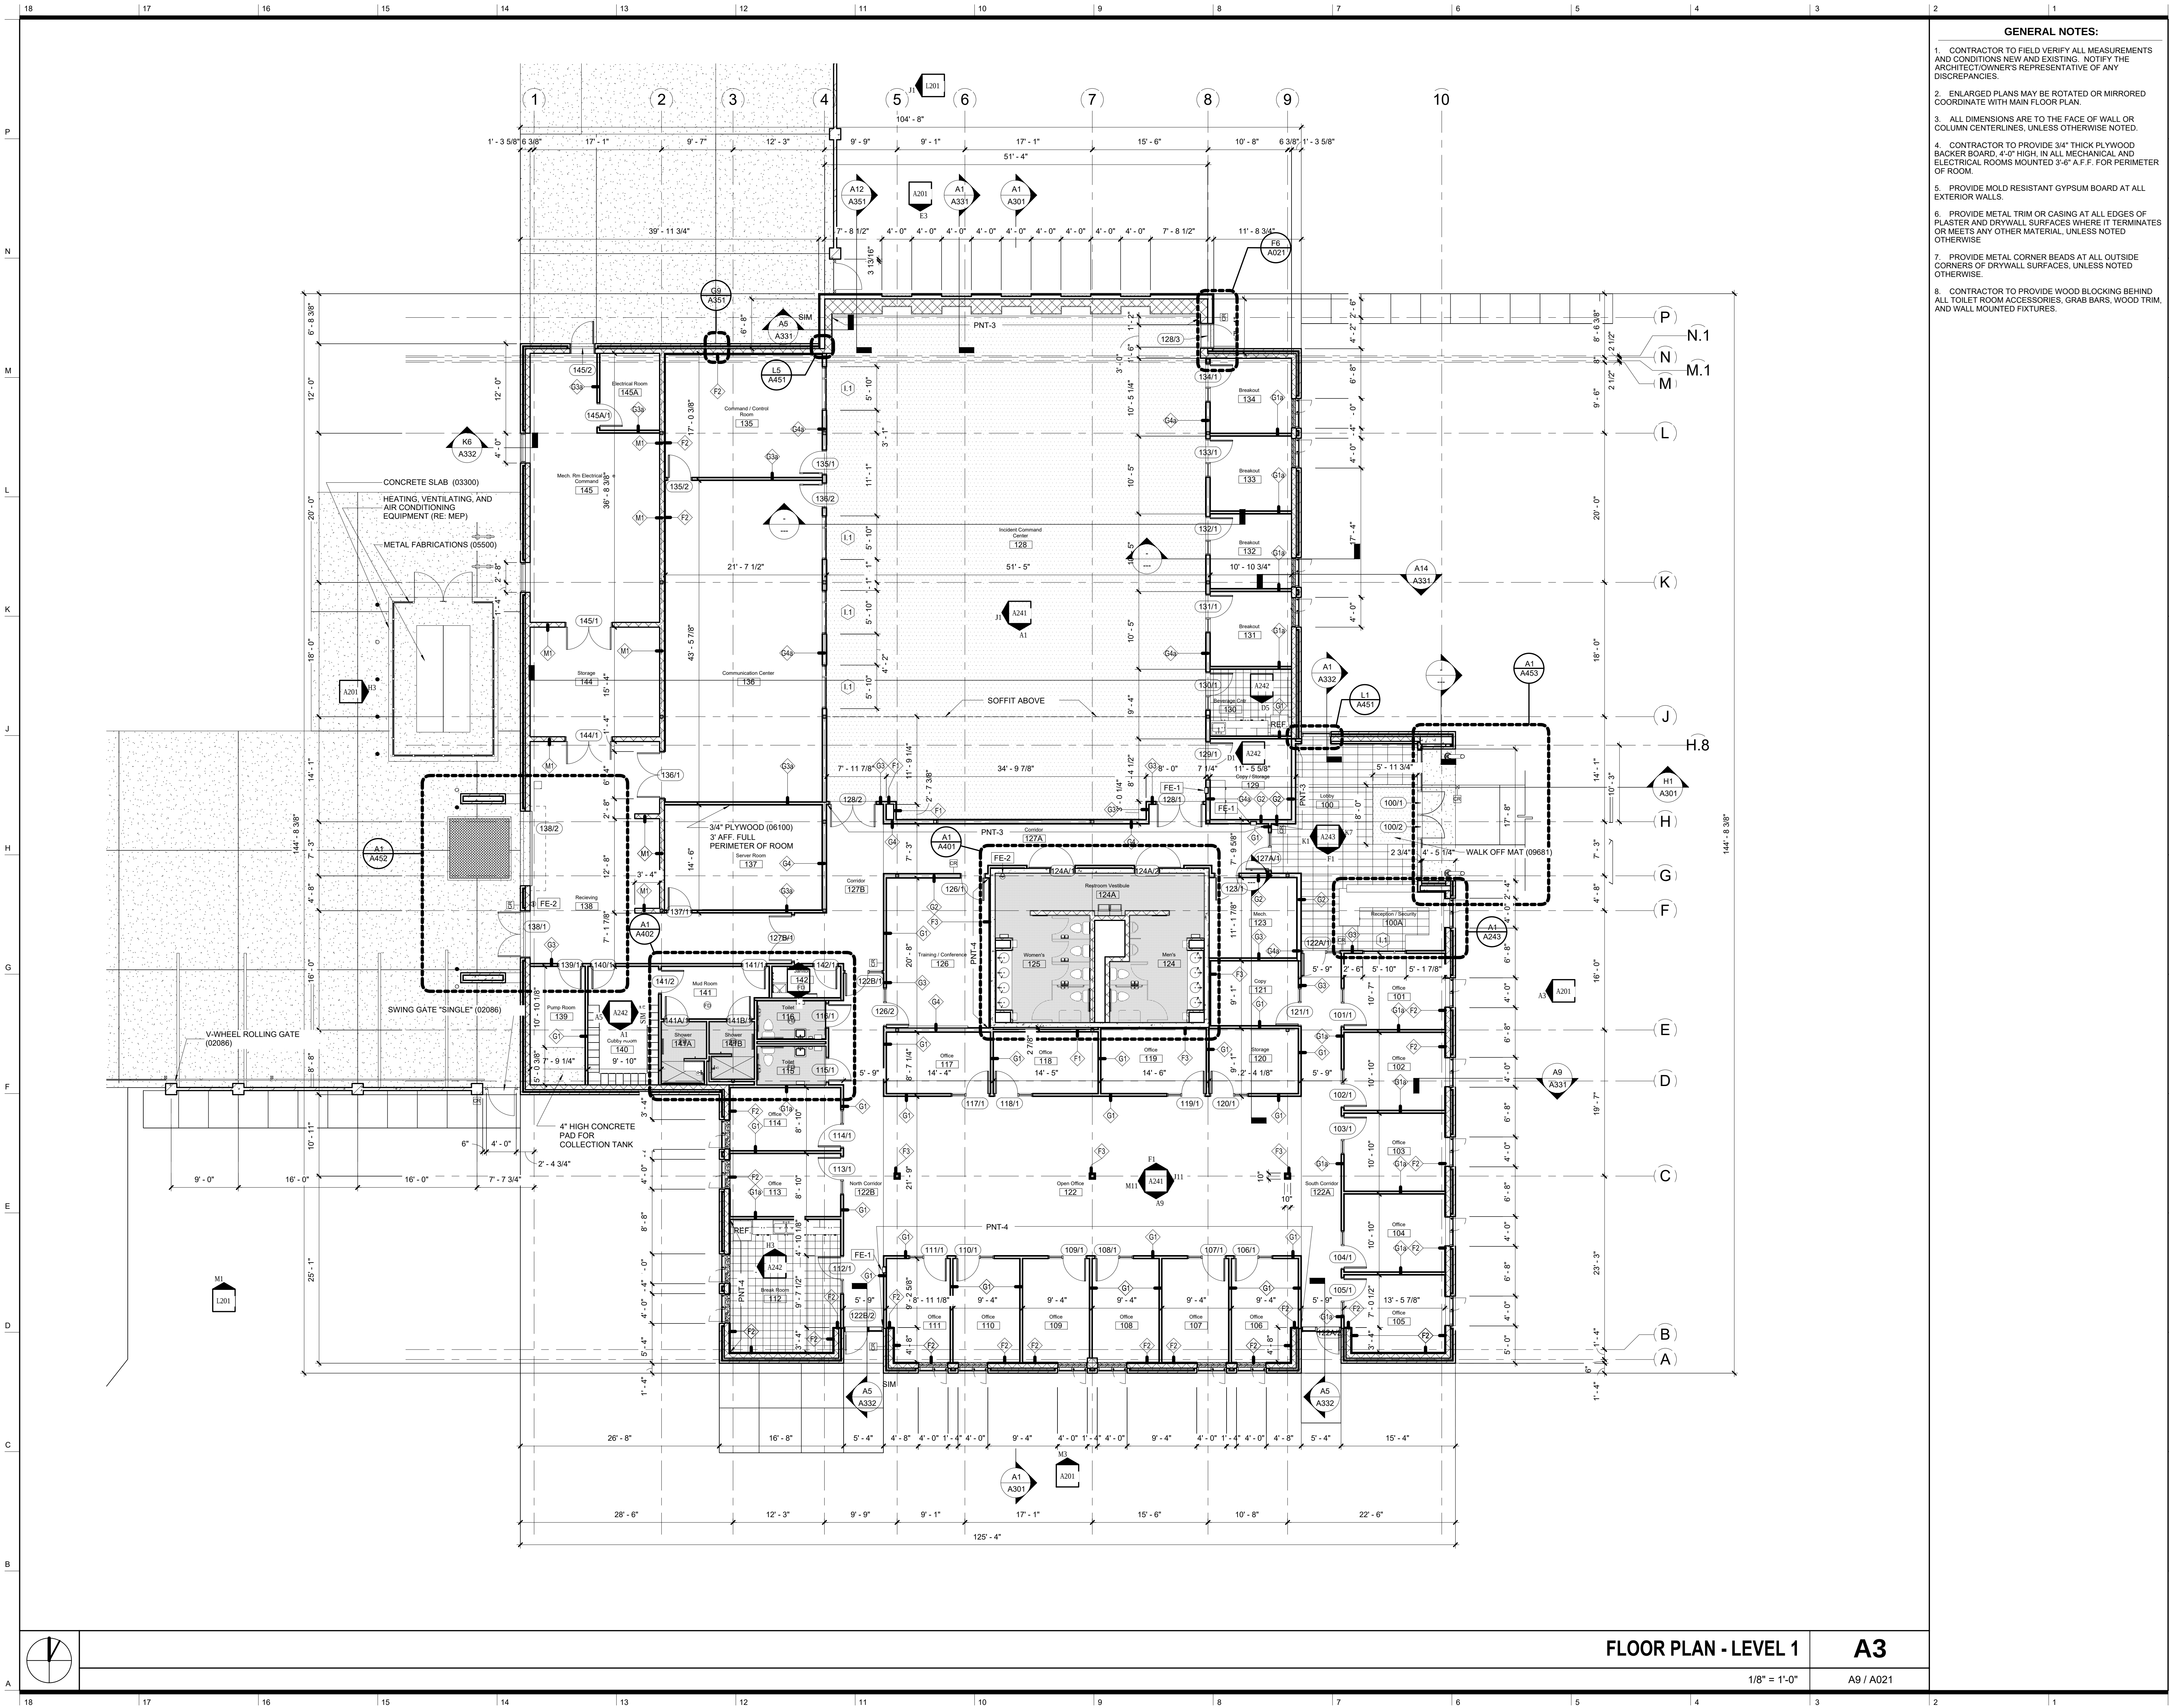

GENERAL NOTES:

1. CONTRACTOR TO FIELD VERIFY ALL MEASUREMENTS AND CONDITIONS NEW AND EXISTING. NOTIFY THE ARCHITECT/OWNER'S REPRESENTATIVE OF ANY DISCREPANCIES.
2. ENLARGED PLANS MAY BE ROTATED OR MIRRORED COORDINATE WITH MAIN FLOOR PLAN.
3. ALL DIMENSIONS ARE TO THE FACE OF WALL OR COLUMN CENTERLINES, UNLESS OTHERWISE NOTED.
4. CONTRACTOR TO PROVIDE 3/4" THICK PLYWOOD BACKER BOARD, 4'-0" HIGH, IN ALL MECHANICAL AND ELECTRICAL ROOMS MOUNTED 3'-6" A.F.F. FOR PERIMETER OF ROOM.
5. PROVIDE MOLD RESISTANT GYPSUM BOARD AT ALL EXTERIOR WALLS.
6. PROVIDE METAL TRIM OR CASING AT ALL EDGES OF PLASTER AND DRYWALL SURFACES WHERE IT TERMINATES OR MEETS ANY OTHER MATERIAL, UNLESS NOTED OTHERWISE.
7. PROVIDE METAL CORNER BEADS AT ALL OUTSIDE CORNERS OF DRYWALL SURFACES, UNLESS NOTED OTHERWISE.
8. CONTRACTOR TO PROVIDE WOOD BLOCKING BEHIND ALL TOILET ROOM ACCESSORIES, GRAB BARS, WOOD TRIM, AND WALL MOUNTED FIXTURES.

UNLESS A PROFESSIONAL SEAL WITH SIGNATURE AND DATE IS AFFIXED, THIS DOCUMENT IS PRELIMINARY AND IS NOT INTENDED FOR CONSTRUCTION, RECORDING PURPOSES OR IMPLEMENTATION.



Prime Consultant - MEP FP Engineer:  
**GDS Engineering**  
9201 E. 63rd Street, Suite 100  
Raytown, MO 64133  
Tel. 816-358-1790  
Fax. 816-358-2367

Architect of Record:  
**Gould Evans Associates, LC**  
4041 Mill Street  
Kansas City, Missouri 64111  
P: 816-931-6655  
F: 816-931-9640

Civil/Structural Engineer:  
**TranSystems**  
2400 Pershing Road, Suite 400  
Kansas City, MO 64108  
P: 816-329-8600  
F: 816-329-8602

U.S. Department of Commerce, NOAA



**NOAA - Gulf of Mexico Disaster Response Center**

Zeigler Boulevard  
Mobile, Alabama 36608

| Number   | Revision Description | Date       |
|----------|----------------------|------------|
| AS BUILT |                      | 01-26-2015 |

Project No 0208-8030  
Date: 15 June 2009  
Sheet:

FLOOR PLAN - LEVEL 1

**A101**

CONSTRUCTION DOCUMENTS



FLOOR PLAN - LEVEL 1

**A3**

1/8" = 1'-0"

A9 / A021



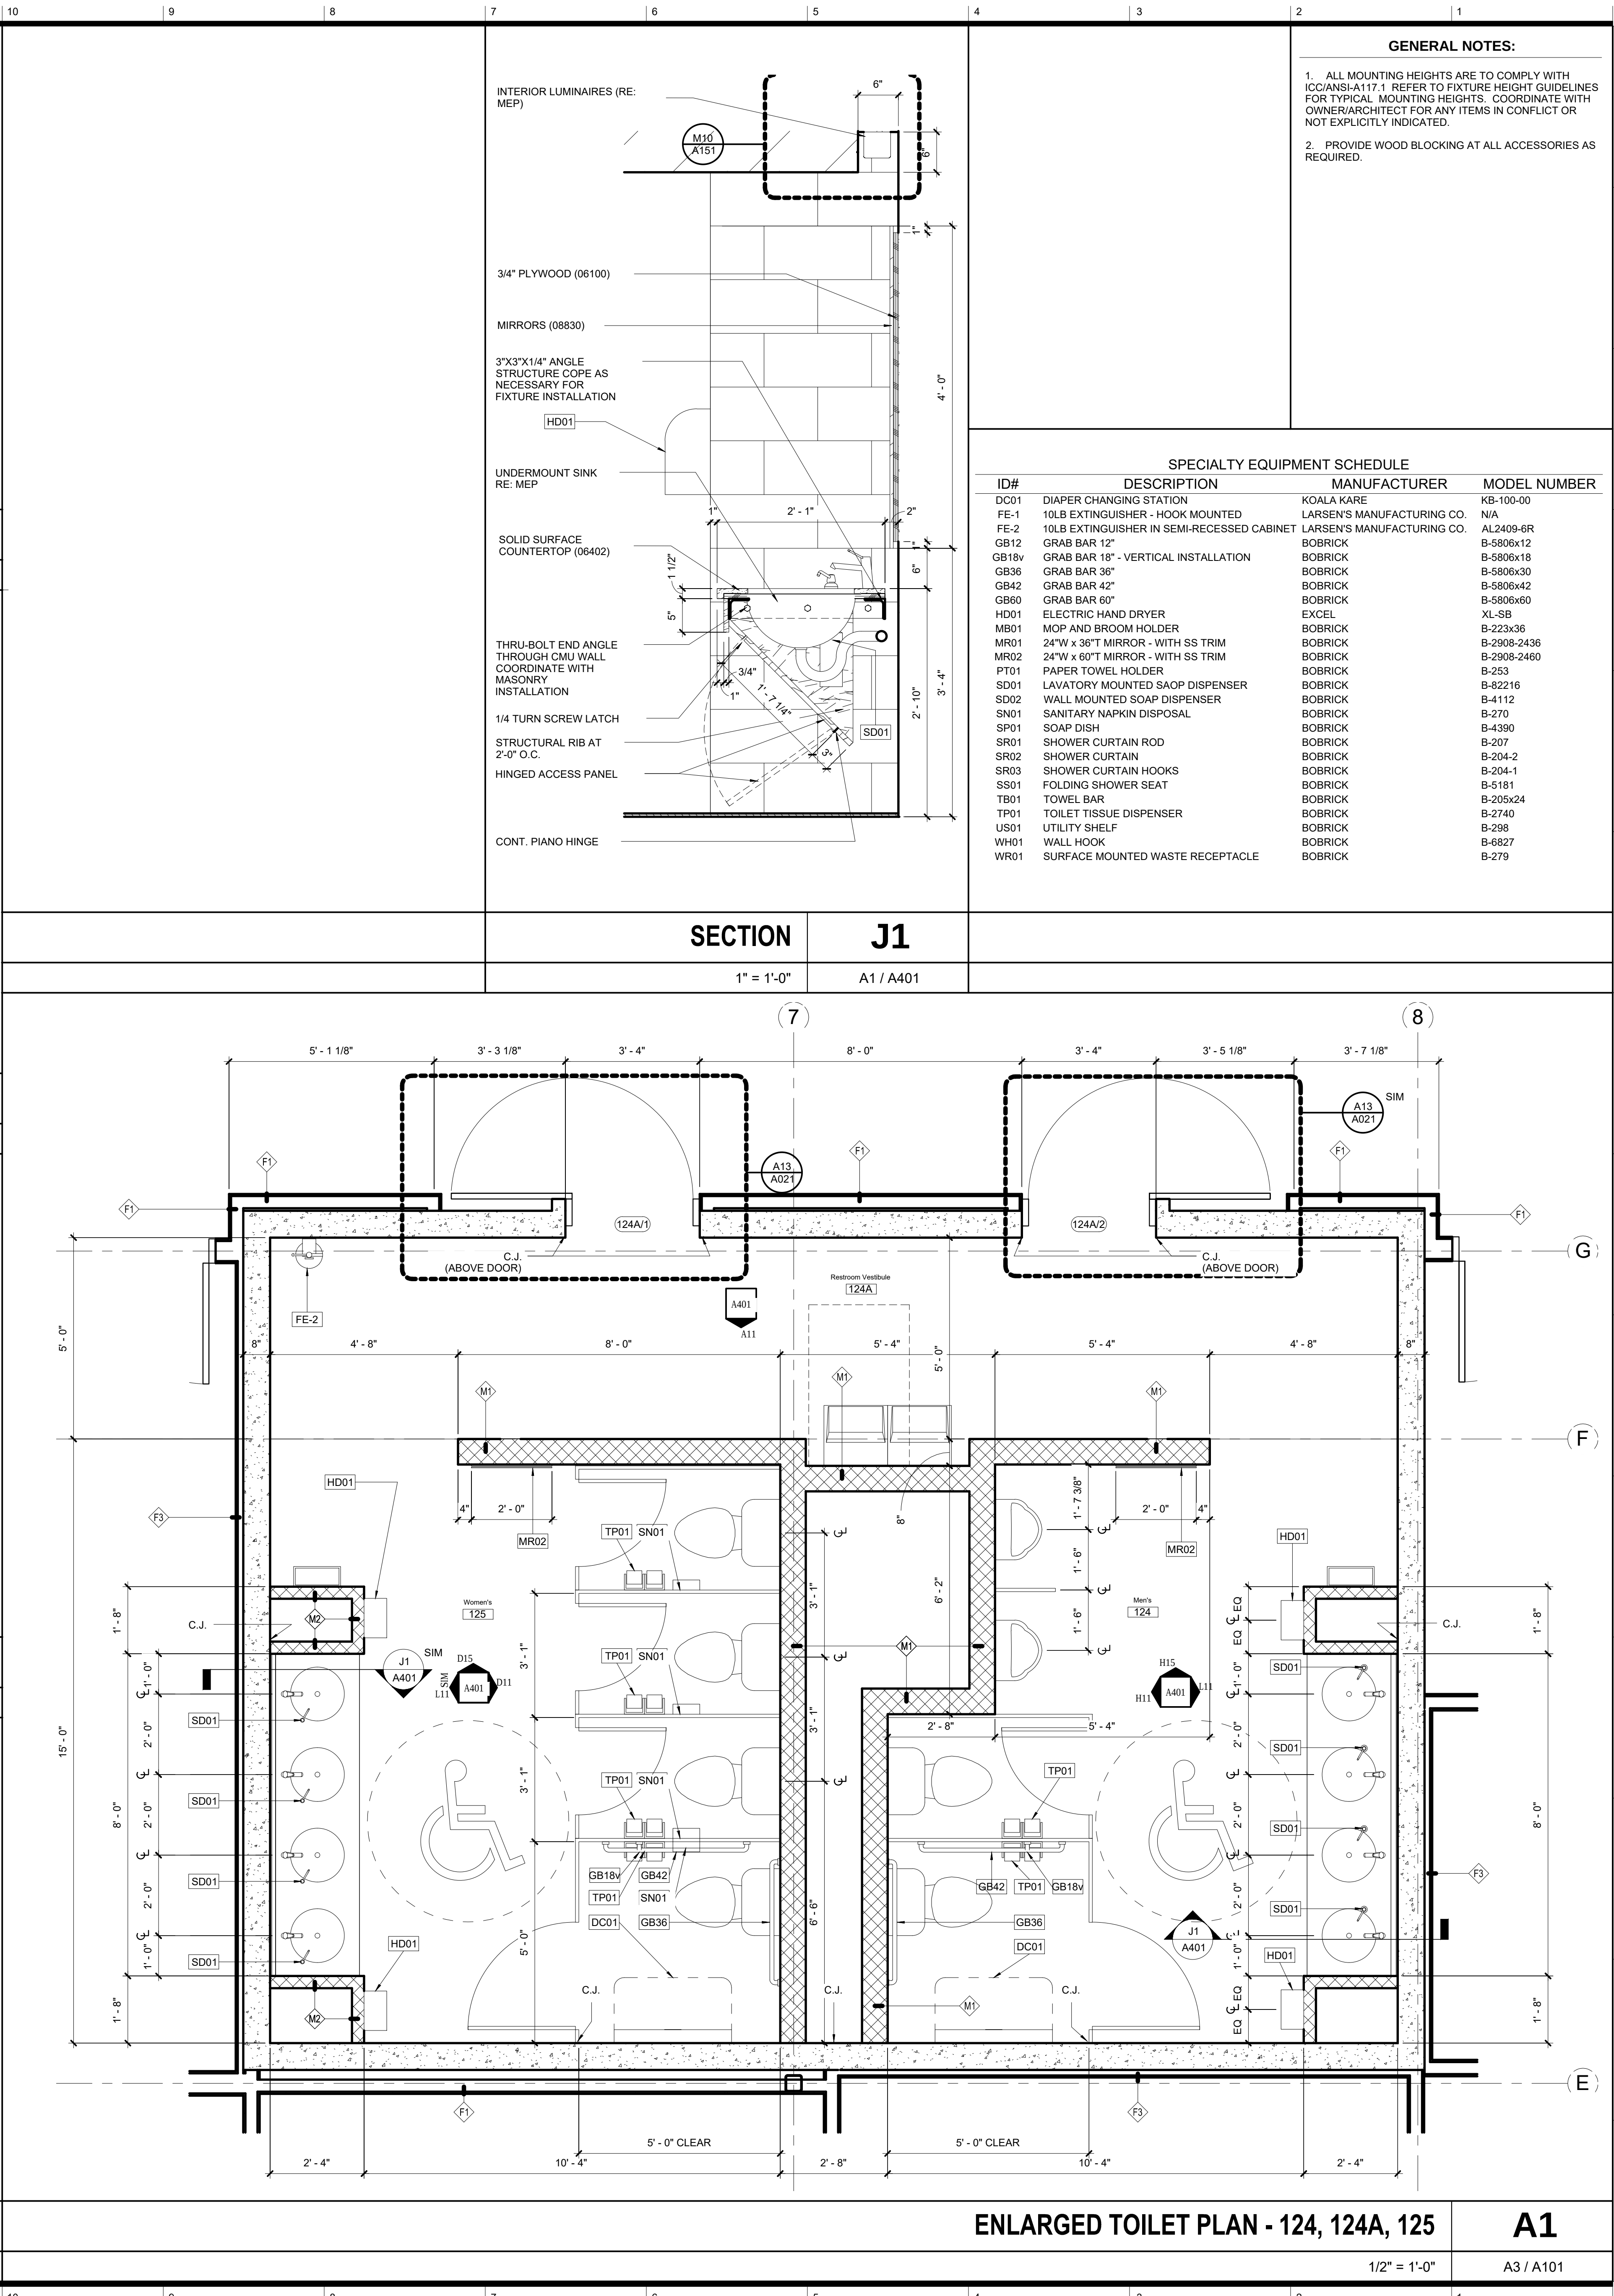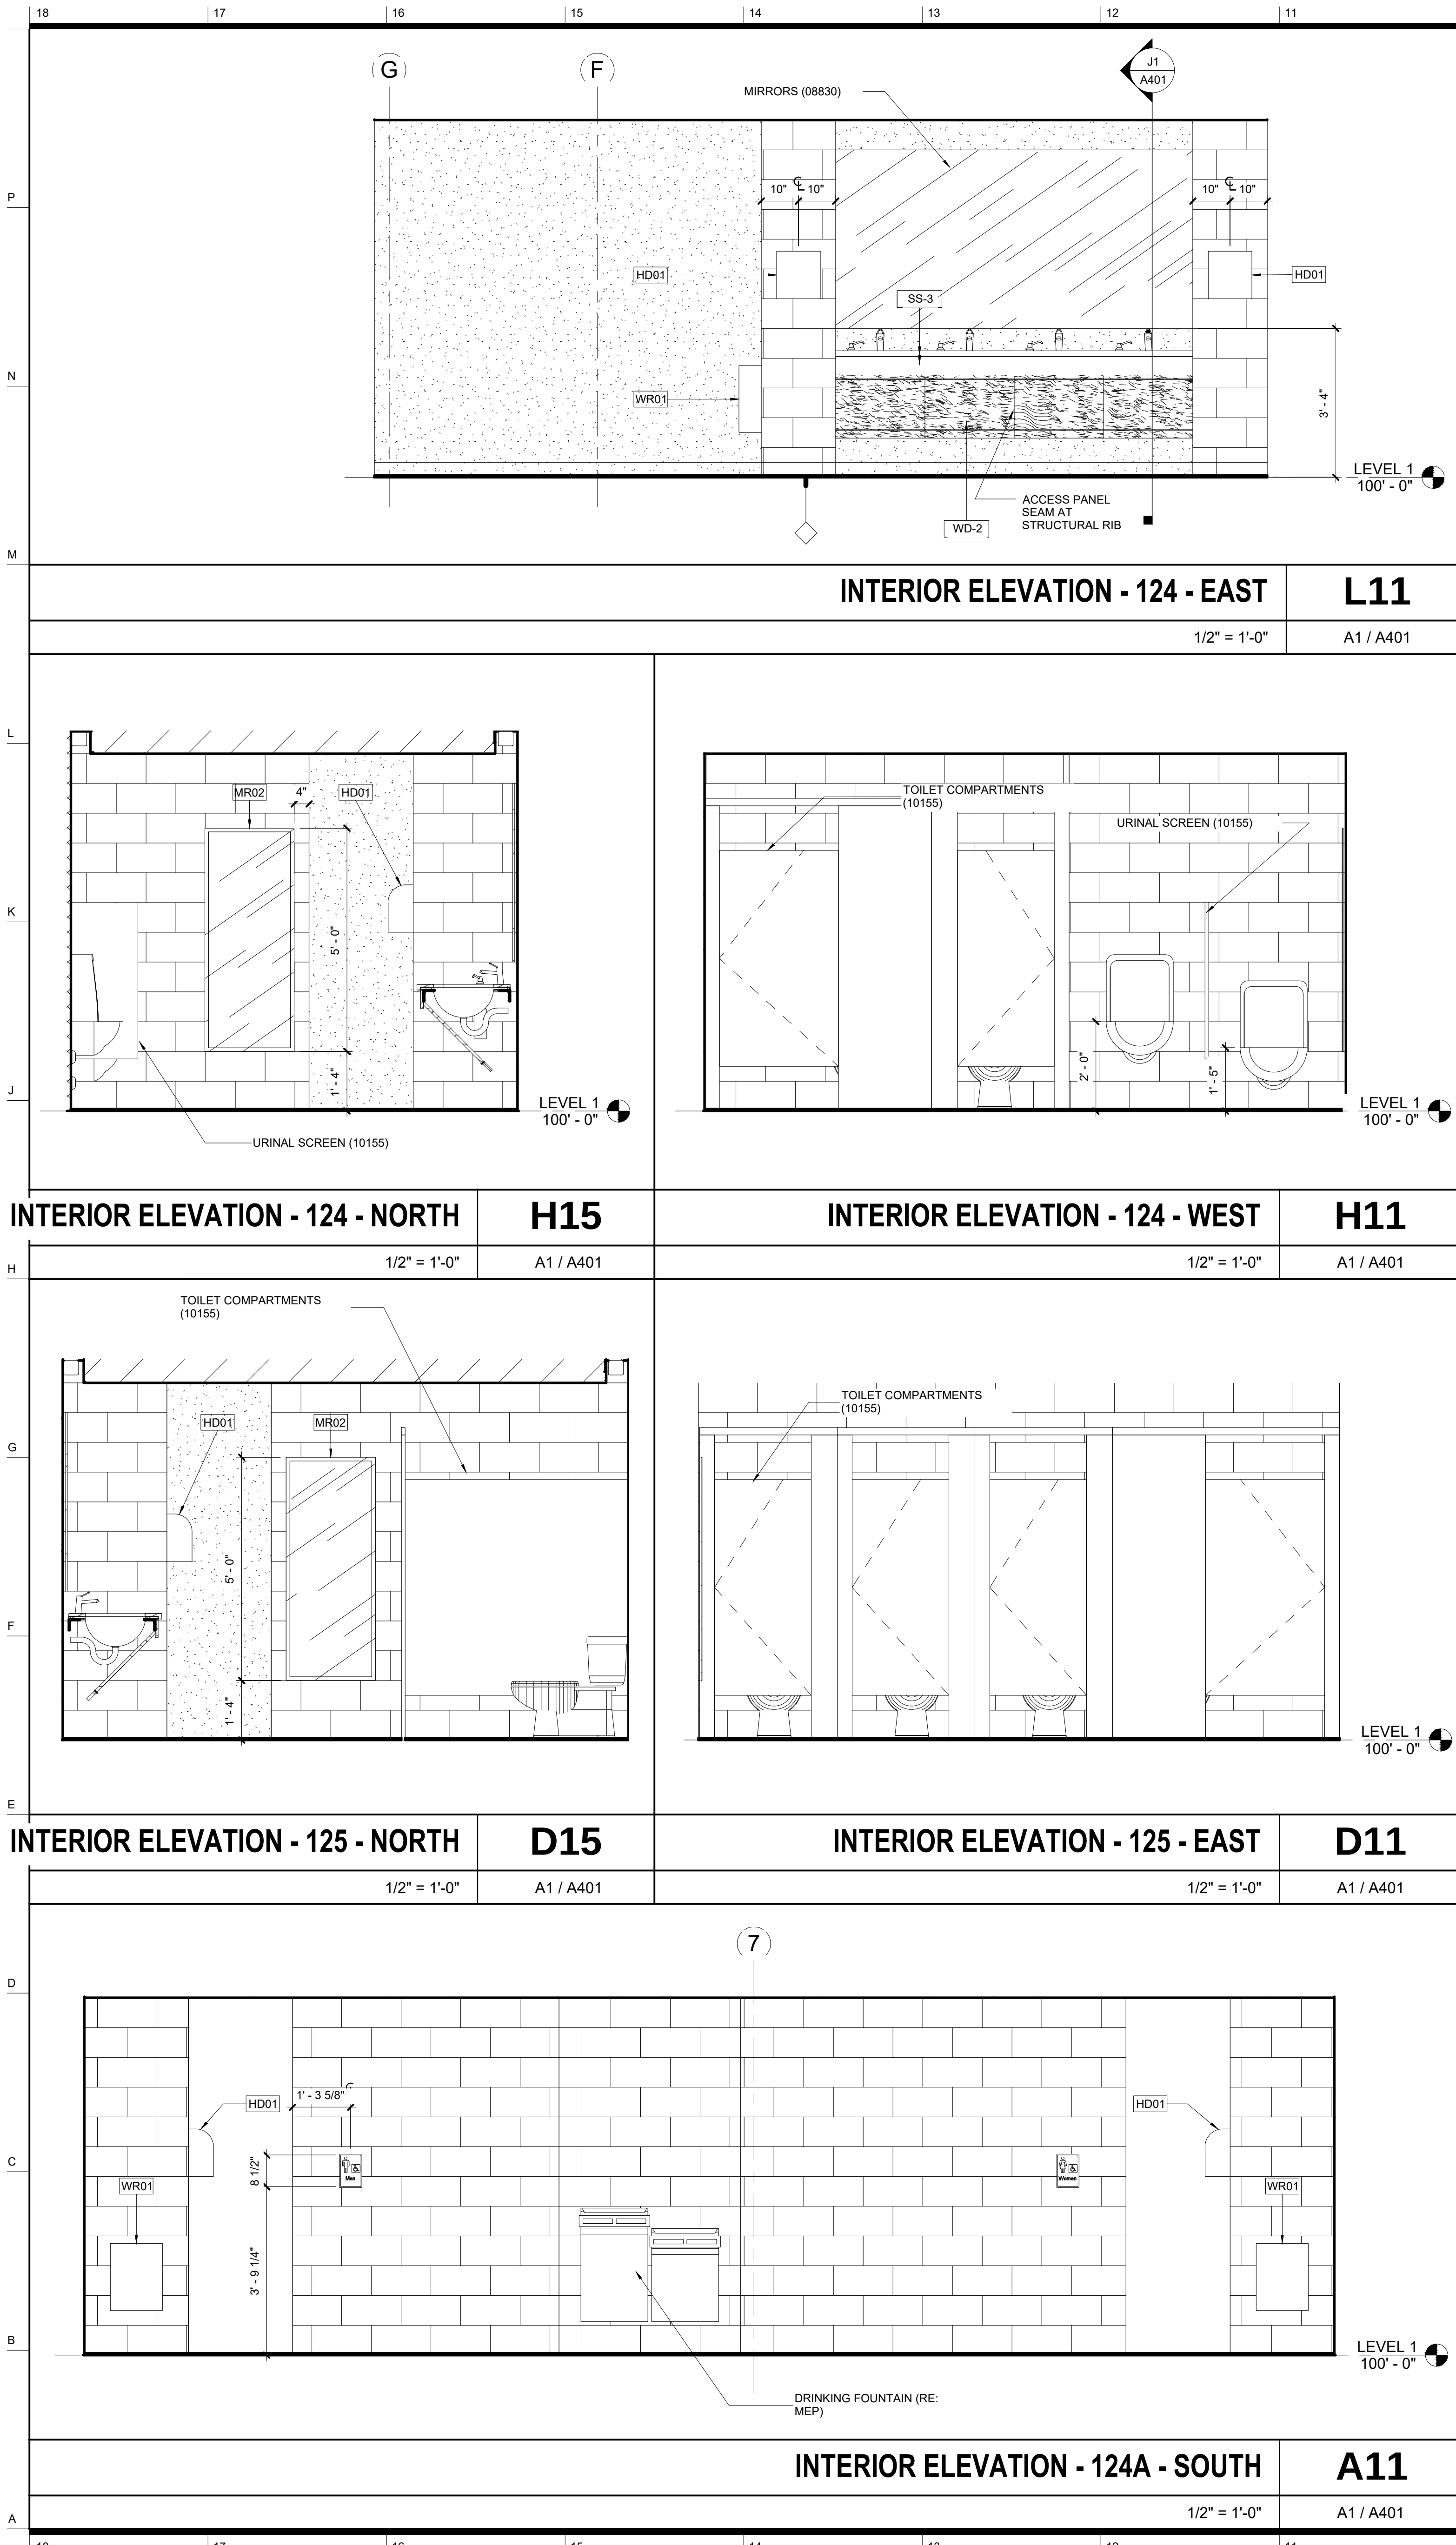


**GENERAL NOTES:**

1. ALL MOUNTING HEIGHTS ARE TO COMPLY WITH ICC/ANSI-A117.1 REFER TO FIXTURE HEIGHT GUIDELINES FOR TYPICAL MOUNTING HEIGHTS. COORDINATE WITH OWNER/ARCHITECT FOR ANY ITEMS IN CONFLICT OR NOT EXPLICITLY INDICATED.

2. PROVIDE WOOD BLOCKING AT ALL ACCESSORIES AS REQUIRED.

| ID#   | DESCRIPTION                                | MANUFACTURER               | MODEL NUMBER |
|-------|--------------------------------------------|----------------------------|--------------|
| DC01  | DIAPER CHANGING STATION                    | KOALA KARE                 | KB-100-00    |
| FE-1  | 10LB EXTINGUISHER - HOOK MOUNTED           | LARSEN'S MANUFACTURING CO. | N/A          |
| FE-2  | 10LB EXTINGUISHER IN SEMI-RECESSED CABINET | LARSEN'S MANUFACTURING CO. | AL2409-6R    |
| GB12  | GRAB BAR 12"                               | BOBRICK                    | B-5806x12    |
| GB18v | GRAB BAR 18" - VERTICAL INSTALLATION       | BOBRICK                    | B-5806x18    |
| GB36  | GRAB BAR 36"                               | BOBRICK                    | B-5806x30    |
| GB42  | GRAB BAR 42"                               | BOBRICK                    | B-5806x42    |
| GB60  | GRAB BAR 60"                               | BOBRICK                    | B-5806x60    |
| HD01  | ELECTRIC HAND DRYER                        | EXCEL                      | XL-SB        |
| MB01  | MOP AND BROOM HOLDER                       | BOBRICK                    | B-223x36     |
| MR01  | 24"W x 36" MIRROR - WITH SS TRIM           | BOBRICK                    | B-2508-2436  |
| MR02  | 24"W x 80" MIRROR - WITH SS TRIM           | BOBRICK                    | B-2508-2460  |
| PT01  | PAPER TOWEL HOLDER                         | BOBRICK                    | B-253        |
| SD01  | LAVATORY MOUNTED SAOP DISPENSER            | BOBRICK                    | B-82216      |
| SD02  | WALL MOUNTED SOAP DISPENSER                | BOBRICK                    | B-4112       |
| SN01  | SANITARY NAPKIN DISPOSAL                   | BOBRICK                    | B-270        |
| SP01  | SOAP DISH                                  | BOBRICK                    | B-4390       |
| SR01  | SHOWER CURTAIN ROD                         | BOBRICK                    | B-207        |
| SR02  | SHOWER CURTAIN                             | BOBRICK                    | B-204-2      |
| SR03  | SHOWER CURTAIN HOOKS                       | BOBRICK                    | B-204-1      |
| SS01  | FOLDING SHOWER SEAT                        | BOBRICK                    | B-5181       |
| TB01  | TOWEL BAR                                  | BOBRICK                    | B-205x24     |
| TP01  | TOILET TISSUE DISPENSER                    | BOBRICK                    | B-2740       |
| US01  | UTILITY SHELF                              | BOBRICK                    | B-298        |
| WH01  | WALL HOOK                                  | BOBRICK                    | B-6827       |
| WR01  | SURFACE MOUNTED WASTE RECEPTACLE           | BOBRICK                    | B-279        |

UNLESS A PROFESSIONAL SEAL WITH SIGNATURE AND DATE IS AFFIXED, THIS DOCUMENT IS PRELIMINARY AND IS NOT INTENDED FOR CONSTRUCTION, RECORDING PURPOSES OR IMPLEMENTATION.

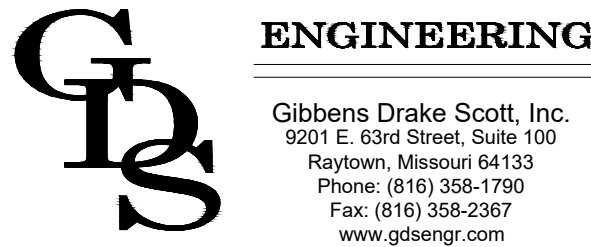

Prime Consultant - MEP FP Engineer:  
**GDS Engineering**  
9201 E. 63rd Street, Suite 100  
Raytown, MO 64133  
Tel. 816-358-1790  
Fax. 816-358-2367

Architect of Record:  
**Gould Evans Associates, LC**  
4041 Mill Street  
Kansas City, Missouri 64111  
P: 816-931-6655  
F: 816-931-9640

Civil/Structural Engineer:  
**TranSystems**  
2400 Pershing Road, Suite 400  
Kansas City, MO 64108  
F: 816.329.8602

U.S. Department of Commerce, NOAA



**NOAA - Gulf of Mexico Disaster Response Center**

Zeigler Boulevard  
Mobile, Alabama 36608

| Number | Revision | Description | Date       |
|--------|----------|-------------|------------|
|        | AS BUILT |             | 01-26-2015 |


Project No 0208-8030  
Date: 15 June 2009  
Sheet:

TOILET ROOMS  
**A401**  
CONSTRUCTION DOCUMENTS





UNLESS A PROFESSIONAL SEAL WITH SIGNATURE AND DATE IS AFFIXED, THIS DOCUMENT IS PRELIMINARY AND IS NOT INTENDED FOR CONSTRUCTION, RECORDING PURPOSES OR IMPLEMENTATION.

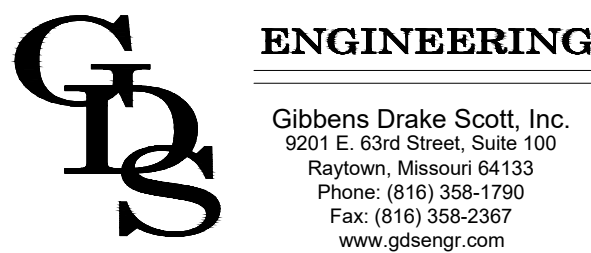


Prime Consultant - MEP FP Engineer:  
**GDS Engineering**  
9201 E. 63rd Street, Suite 100  
Raytown, MO 64133  
Tel. 816-358-1790  
Fax. 816-358-2367

Architect of Record:  
**Could Evans Associates, LC**  
4041 Mill Street  
Kansas City, Missouri 64111  
P: 816-931-6655  
F: 816-931-9640

Civil/Structural Engineer:  
**TranSystems**  
2400 Pershing Road, Suite 400  
Kansas City, MO 64108  
P: 816.329.8600  
F: 816.329.8602

U.S. Department of Commerce, NOAA

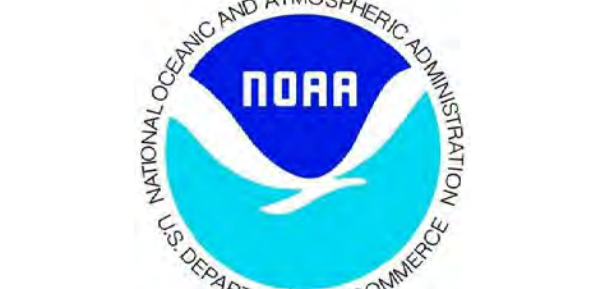

**NOAA - Gulf of Mexico Disaster Response Center**

Zeigler Boulevard  
Mobile, Alabama 36608

| Number   | Revision Description | Date       |
|----------|----------------------|------------|
| AS BUILT |                      | 01-26-2015 |

Project No: 0208-8030  
Date: 15 June 2009  
Sheet:

TOILET ROOMS

**A402**

CONSTRUCTION DOCUMENTS




[Home](#) [Kitchen](#) [Kitchen Resources](#) [Care & Cleaning](#)
[Share](#)
[Print](#)

## Vitreous China Toilets & Bidets

 Kitchen : [Kitchen Resources](#)

[English](#)
[RESET](#)

- Soft abrasive cleaners may be used when necessary to clean KOHLER® vitreous china products. Strong abrasive cleaners will scratch and dull the surface.
- Most toilet bowl cleaners are safe to use on vitreous china. Follow label directions and use toilet bowl cleaners on the inside of the bowl only.
- Do not use in-tank toilet cleaners as they can damage the flush valve or other working parts.
- Wipe any splashes of cleaner solutions from plastic or plated surfaces immediately.

Success with cleaners and procedures is dependent upon such factors as the hardness and temperature of the water, using exact measurements of ingredients, changes in cleaning formulas and the condition of the product being cleaned. Since there are variations within these factors, Kohler cannot guarantee the effectiveness of the formulas mentioned.

### Care Tip

Over time, hard water deposits may clog toilet rim holes and trapways. To clean, purchase a commercial cleaner that's recommended for the removal of hard water deposits. Follow all instructions on the package.


### Products to Consider

- |                                         |                              |                                     |
|-----------------------------------------|------------------------------|-------------------------------------|
| • Clorox Disinfecting Bathroom Cleaner  | • Lysol Bathroom Cleaner     | <b>For rust removal:</b>            |
| • Comet Bathroom Cleaner                | • Soft Scrub Gel with Bleach | • Super Iron Out Rust Stain Remover |
| • Fantastik Antibacterial Heavy Duty    | • Soft Scrub Lemon Cleanser  | • Bar Keepers Friend                |
| • Formula 409 Antibacterial All Purpose | • Tilex Bathroom Cleaner     |                                     |
| • Green Works All-Purpose               |                              |                                     |


# Homeowners Guide

## Waterless Urinal


K-4917

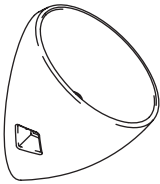

K-4918

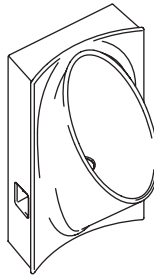

K-4919

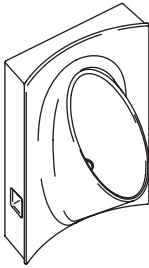

**M** product numbers are for Mexico (i.e. K-12345**M**)  
Los números de productos seguidos de  
**M** corresponden a México (e.j.  
K-12345**M**)  
Français, page "Français-1"  
Español, pagina "Español-1"

THE BOLD LOOK  
OF **KOHLER**®

1048744-5-D



## Care and Cleaning

To keep this KOHLER urinal looking and performing its best, it is important to follow these care and cleaning procedures.

Use the KOHLER products listed below for optimum care and cleaning results. Purchase these products from a KOHLER distributor or call 1-800-4KOHLER for ordering information.

|                                |         |
|--------------------------------|---------|
| 128 oz. (3.8 L) sealing liquid | 1048656 |
| 32 oz. (946 ml) cleaner        | 1174866 |
| Urinal ball                    | 1173387 |

### Daily Cleaning

- ☐ Spray the KOHLER cleaner over the outer surfaces of the urinal. Allow some cleaner to run down the drain.
- ☐ Allow the cleaner to stand for approximately one minute.
- ☐ Wipe the outer surfaces with a clean, non-abrasive cloth.
- ☐ If necessary, repeat this procedure for heavier soils still present on the urinal.

To minimize odor and avoid sediment build-up in the trapway, it is important to flush out your waterless urinal every two weeks. Please follow the "Required Two-Week Flush-out Cleaning" procedure below.

### Required Two-Week Flush-Out Cleaning

**IMPORTANT!** Do not set the urinal ball directly into the drain or force it through the strainer, as this may cause blockage.

**IMPORTANT!** Always keep the strainer in place over the urinal drain to prevent debris from entering the drain.

**IMPORTANT!** Do not use cleaners containing anti-bacterial agents, or any other urinal puck or mat, as these may reduce the effectiveness of the urinal ball.

**IMPORTANT!** Failure to perform flush-out cleaning may eventually result in a clogged urinal. If the urinal becomes clogged, use a plunger, urinal auger, or non-KOHLER brand strong acid cleaner. If you use a non-KOHLER brand strong acid cleaner, thoroughly rinse the urinal with water after application to minimize acid corrosion on the seal gasket and downstream piping.

- ☐ Repeat the daily cleaning procedure.
- ☐ Remove the used urinal ball and discard.

### Care and Cleaning (cont.)

- ❑ Using a small screwdriver or bent wire, carefully lift the strainer vertically from the drain. Clean the strainer and set it aside.
- ❑ Quickly pour one gallon of water directly into the drain. Do not let the urinal overflow. This will purge the residual urine and sealing liquid.
- ❑ Unscrew the spray nozzle from the cleaner bottle. Pour 1 oz. (30 ml) or 2 tablespoons of cleaner directly into the drain.
- ❑ Allow the cleaner to stand for 5 to 10 minutes.
- ❑ Pour two gallons of water directly into the drain as quickly as possible. Do not let the urinal overflow.
- ❑ Pour 3 oz. (90 ml) or approximately 1/3 cup of sealing liquid directly into the drain.
- ❑ Reinstall the strainer.
- ❑ Set a fresh urinal ball in the urinal.

### Winterizing the Urinal

- ❑ Repeat the daily and flush-out cleaning procedures, but do not replace the sealing liquid or urinal ball after the flush-out.

**NOTE:** Use recreational-use antifreeze only. Recreational-use antifreeze is specifically formulated for winterizing all types of potable water supply systems, preventing rust, and protecting metal pipes.

- ❑ Pour recreational-use antifreeze directly into the drain.
- ❑ Reinstall the strainer.

**IMPORTANT!** Before using the urinal again, remove the strainer and flush out the antifreeze with 1 gallon (3.79 L) of water. Pour 3 oz. (90 ml) or approximately 1/3 cup of sealing liquid directly into the drain, then reinstall the strainer. Set a fresh urinal ball in the urinal. The urinal is now ready for use.

### Warranty

#### ONE-YEAR LIMITED WARRANTY

KOHLER plumbing products are warranted to be free of defects in material and workmanship for one year from date of installation.

Kohler Co. will, at its election, repair, replace or make appropriate adjustment where Kohler Co. inspection discloses any such defects occurring in normal usage within one (1) year after installation. Kohler




**Warranty (cont.)**

Co. is not responsible for removal or installation costs. **Use of in-tank toilet cleaners will void the warranty.**

To obtain warranty service contact Kohler Co. either through your Dealer, Plumbing Contractor, Home Center or E-tailer, or by writing Kohler Co., Attn.: Customer Care Center, 444 Highland Drive, Kohler, WI 53044, USA, or by calling 1-800-4-KOHLER (1-800-456-4537) from within the USA and Canada, and 001-800-456-4537 from within Mexico, or visit [www.kohler.com](http://www.kohler.com) within the USA, [www.ca.kohler.com](http://www.ca.kohler.com) from within Canada, or [www.mx.kohler.com](http://www.mx.kohler.com) in Mexico.

**IMPLIED WARRANTIES INCLUDING THAT OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. KOHLER CO. AND/OR SELLER DISCLAIM ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states/provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of special, incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state/province to state/province.


**This is Kohler Co.'s exclusive written warranty.**

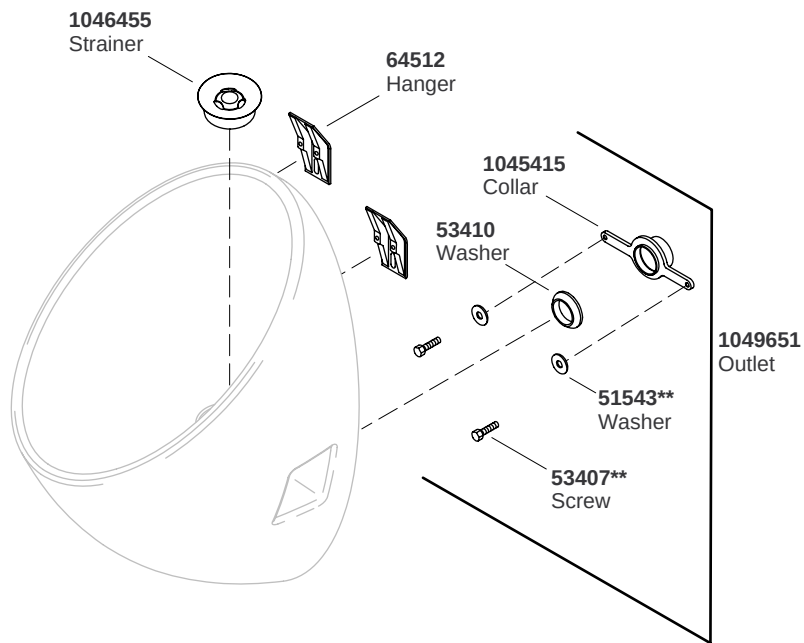


**1048656** 128 oz (3.8 L)  
Sealing Liquid



**1173387**  
Urinal Ball

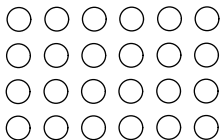


**1174866** 32 oz (946 ml)  
Cleaner

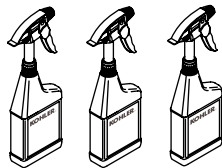

**\*\*Finish/color code must be specified when ordering.**

## Service Parts




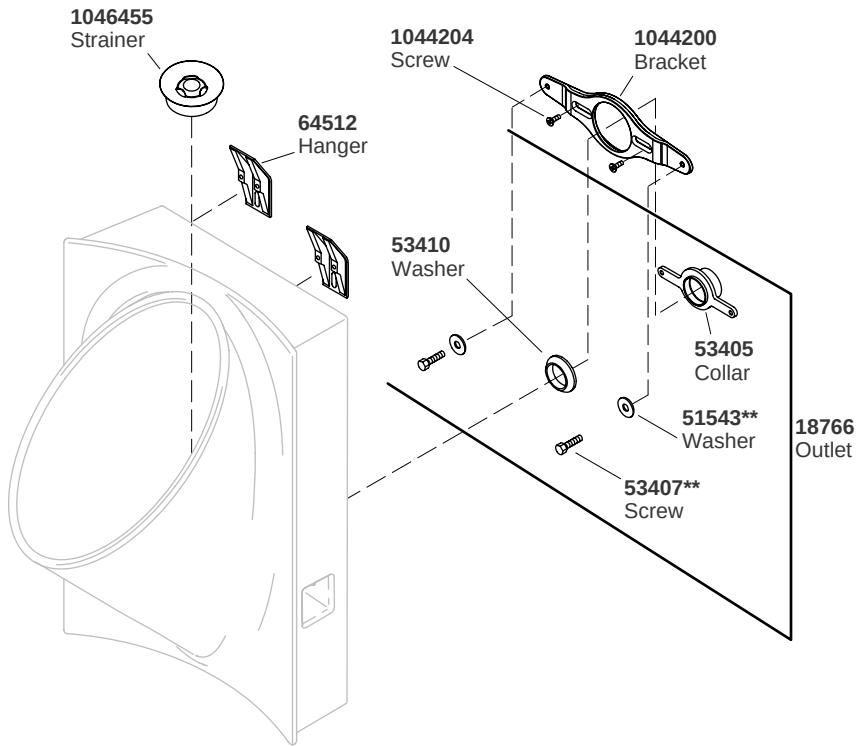


**1048656** 128 oz (3.8 L)  
Sealing Liquid




**1173387**  
Urinal Ball

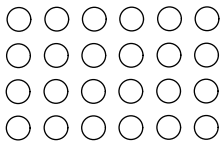

**1174866** 32 oz (946 ml)  
Cleaner

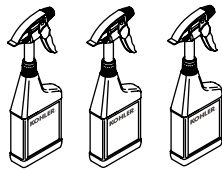


**\*\*Finish/color code must be specified when ordering.**

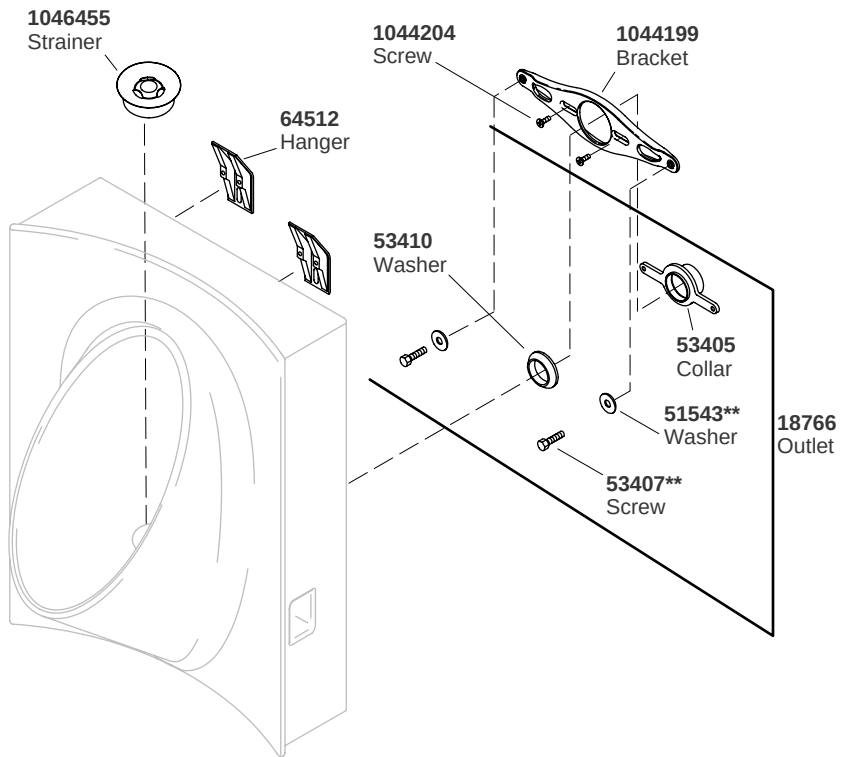


**1048656** 128 oz (3.8 L)  
Sealing Liquid



**1173387**  
Urinal Ball

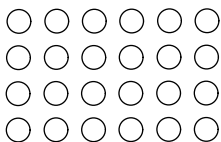

**1174866** 32 oz (946 ml)  
Cleaner

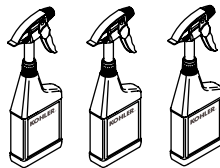

**\*\*Finish/color code must be specified when ordering.**



1-3-1



**CRANE**

A Crane Co. Company

Composites

**TECHNICAL DATA**

**6218**

Rev. 9 | 09/2009

## **FRP CLEANING INSTRUCTIONS**

### **FREQUENCY:**

Clean weekly or on a regular schedule with a mild cleaner so soil and dirt will not build up.

### **MATERIAL:**

A 5% to 10% trisodium phosphate water solution not to exceed 130°F can be used. If trisodium phosphate is not available in your area, use a 5% to 10% solution of household automatic dishwasher detergent. If a USDA/FSIS or FDA approved cleaner is required, a neutral cleaner (PH range 6.5-7.5) is preferred. Follow the manufacturer's directions. Do not use a cleaner or stain remover that contains chlorinated hydrocarbons or aromatic hydrocarbons. Do not use abrasive cleaners.

### **METHOD:**

The embossed surface of frp panels can best be cleaned with a sponge or soft brush. Apply the cleaner, working it across the surface in a scrubbing or circular motion. Rinse very thoroughly to remove all traces of the trisodium phosphate, otherwise a film will build up giving the wall a dull, dirty appearance. When using a specialty cleaner, follow the manufacturer's instructions. Test a small area before applying over the entire surface.

#### **Removing Normal Grime or Dirt:**

Steam-cleaning procedures normally employed on ceramic wall surfaces in USDA/FSIS inspected facilities may be used on frp wall and ceiling panels. A 10% solution of trisodium phosphate in warm water (not to exceed 130°F), may be applied in a scrubbing motion, using sponge, brush, or cloth. Rinse thoroughly after cleaning.


#### **Removing Hard Water Deposits:**

A 10% solution of acetic acid in cold water may be applied in a scrubbing motion, using sponge, brush, or cloth. Rinse thoroughly after cleaning.

#### **Removing Oil Residues or Difficult Substances:**

Mineral spirits, applied with a clean cloth, will aid in removing most oily residues or substances.

**NONWARRANTY** - We believe all information given is accurate. It is offered in good faith, but without guarantee. Since conditions of use are beyond our control, all risks are assumed by the user. Nothing herein shall be construed as a recommendation for uses which infringe on valid patents or as extending a license under valid patents.



**CRANE**

Composites

A Crane Co. Company

1.800.435.0080 | 1.815.467.0080 | 1.815.467.8666 fax

Form 6218 | Rev 9 | (5320)



## Restroom Partition Maintenance Instructions

Preventative maintenance will keep these partitions looking beautiful and keep your maintenance costs at a minimum.

### Baked Enamel Partitions

Mills® Baked Enamel Partitions have a factory-baked finish formulated and applied to give durability and lasting resistance to ordinary cleaning, abrasion and scuffing.

#### Methods for Cleaning Baked Enamel

Periodic routine cleaning is required using a damp, soft cloth. Stubborn dirt should be washed with a mild soap and lukewarm water.

When washing, always use two containers; one with lukewarm water and a mild soap, and the other with clear water. Let the soap do the work. Never rub the finish in one area excessively. Never use harsh detergents or chemical cleaners.

#### General cleaning rules:

1. Use the mildest cleaning procedure that will do the job efficiently.
2. Use only soft cloth or sponge for cleaning.
3. Rinse thoroughly with fresh water after every cleaning.
4. Always wipe dry with a clean, dry cloth to avoid water marks.

### Stainless Steel Partitions

Mills Stainless Steel Partitions are shipped with a protective plastic coating, which is to be removed after installation. Any residue from the plastic coating may be removed with mild soap and water or mild solvents, such as mineral spirits. Proper maintenance of stainless steel finishes will provide years of superior performance.

The use of severe chemicals in the washroom area, such as muriatic acid or other caustic chemicals, may cause permanent damage to all stainless steel surfaces and chrome-plated hardware. Muriatic acid (for cleaning masonry) or similar hydrochloric acid-type cleaners must immediately be neutralized and scrubbed off with clean water if splashed, sprayed, spilled or otherwise in contact with a stainless steel component.

#### Methods for Cleaning Stainless Steel

Routine cleaning is required using soap or mild detergent and water. Apply with sponge or soft cloth, rinse with clear water and wipe dry.

#### General cleaning rules:

1. Use the mildest cleaning procedure that will do the job efficiently.
2. Always rub in the direction of polish lines for maximum effectiveness and to avoid marring the surface.
3. Use only soft cloth, sponge, fibrous brushes, plastic or stainless steel pads.
4. Rinse thoroughly with fresh water after every cleaning operation.
5. Always wipe dry to avoid water marks.

### Plastic Laminate Partitions

#### General cleaning rules:

1. Use a clean, damp, non-abrasive cotton cloth to wipe down all surfaces.
2. Do not flood the components because water may penetrate, causing swelling.
3. Rooms should be properly ventilated.
4. Occasional application of standard furniture wax will keep the partitions looking new.

### Solid Phenolic Core Partitions

#### General cleaning rules:

1. Use a clean, damp, non-abrasive cotton cloth to wipe down all surfaces.
2. Rooms should be properly ventilated.
3. Occasional application of standard furniture wax will keep the partitions looking new.

Verify all rough-in dimensions prior to installation.

Consult local and national codes. Conformity and compliance to local and national codes is the responsibility of the installer.

Mills Partitions  
Document No. 9535

Page 1 of 1  
This information is subject to change without notice.  
10/26/2009

### Chrome Care

Chrome wall brackets and hinges can be cleaned with a damp soft cloth. Never use abrasive cleaners or steel wool pads on chrome finishes. Use only soap and water for spot cleaning. Rinse with clear water and dry. Any good chrome polish may be used to remove remaining dirt.

### Bradmar™ Partitions

Bradmar partitions are shipped with a protective plastic coating. This coating is to be removed after installation. Any residue remaining from the plastic coating may be removed with mild soap and water or mild solvents such as mineral spirits.

#### Methods for Cleaning Bradmar

Routine cleaning should be performed with a soft wet cloth.

#### General cleaning rules:

1. Stubborn dirt and grease can be removed with a mild cleaning solution and cloth or soft bristled brush.
2. Graffiti can usually be removed with industrial graffiti remover. Make sure to test in an inconspicuous area as some of these products can damage the plastic surface or cause a haze.
3. DO NOT use abrasive pads (Scotch-Brite™ or steel wool) or abrasive cleaners. They may leave scratch marks in the plastic.

#### Repairing Scratches:

1. Small scratches can be smoothed out by pushing the raised material down with the back of a spoon or a blunt screwdriver.
2. Matted areas can be reduced by lightly passing the flame from an acetylene torch over the area. This must be done quickly and at a distance of about six inches to avoid melting the plastic. NOTE: The textured finish will disappear when using this method.

### Fusion™ Granite Partitions

Mills Fusion Granite Partitions owe their density and hardness to extreme geological pressures that create natural granite. Not only will granite enhance your building space with its beauty, it is the most durable material available for restroom partitions and requires the least maintenance.

#### Methods for Cleaning Granite

Daily cleaning, if required, should be done with Ivory® dish soap and water.

#### Repairing Stains and Scratches:

Granite is extremely resistant to stains and scratches. Most blemishes can be removed with mild soap and water. Light, surface, scratches can be buffed with dry steel wool. Deeper scratches and nicks should be repaired and repolished by a professional.

#### General cleaning rules:

1. Use only mild dish soap that is free of dyes and animal fats. Animal fats may darken the stone and leave a residue which in time can build up and turn lighter stones yellow.
2. Never use Windex® on granite. Ammonia reacts differently to different stones can cause permanent streaking.
3. Avoid using detergents that can be abrasive and contain chemicals that are highly acidic or alkaline.
4. Oil-based, organic, biological, ink and paint stains have different removal techniques that can be found at <http://www.natural-stone-interiors.com/granite-stain-removal.html>.


© 2009 Bradley Corporation  
P.O. Box 309, Menomonie Falls, WI 53552-0309  
Phone: 800.BRADLEY (800.272.3539) Fax: 262.251.5817  
[bradleycorp.com](http://bradleycorp.com)



Item 348  
CPT-1



TOTAL SOLUTION  
**CARPET**  
CARE GUIDE

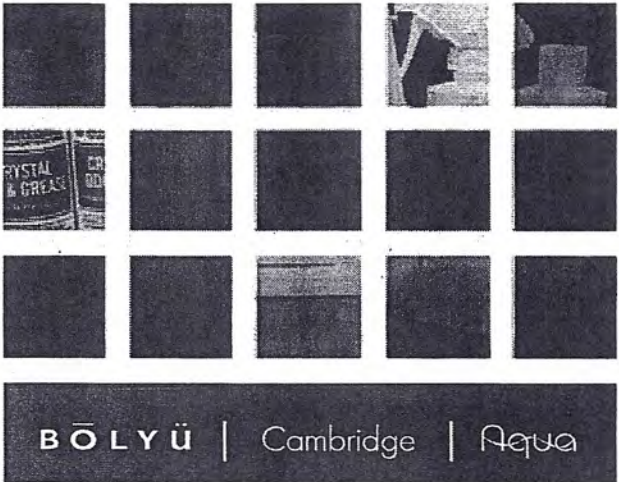

BÖLYÜ | Cambridge | Aqua



## PROACTIVE CLEANING FOR THE HEALTH OF THE CARPET AND END USER

Without regular removal, dirt and soil accumulates to grind and permanently damage fibers, so carpets "ugly out" before their time. Carpet by its very nature, will mask soil, stains and abrasion to a certain degree, unlike hard flooring surfaces that readily reveal these symptoms

Proactive cleaning is preventive maintenance before the carpet looks dirty, instead of reactive cleaning after the carpet is visibly soiled.

indicating the need for immediate maintenance. It is for this reason carpet must be proactively maintained before soiling becomes noticeable to prolong the appearance and life of your carpet.

Proactive cleaning is preventive maintenance before the carpet looks dirty, instead of reactive cleaning after the carpet is visibly soiled. It is the foundation of Beaulieu Commercial Total Solution Carpet Care Guide that proactive daily, interim and scheduled maintenance can reduce or eliminate the cost and time of reactive restoration required for extreme cases of badly soiled or damaged carpet while extending the life and appearance of the carpet itself.

Reactive restoration involves water extraction with aggressive agitation followed by thorough rinsing and pile grooming. This procedure may need to be performed several times before any improvement is noticeable. Proactive cleaning provides the best possible carpet appearance day after day, extending replacement due to appearance.

Not only is the proactive nature of cleaning important, so is the overall environmental friendliness of the process. Beaulieu Commercial is committed to environmental. We only recommend cleaning systems that are environmentally friendly which is described as containing minimal to no VOC's, biodegradable, non-toxic, non-flammable, non-hazardous and safe for carpet and environment.

Carpet can act as a filter that traps and keeps dust and dirt out of the air. This can be a significant health benefit since most people spend a great deal of their time indoors. When removing contaminants from carpet, it's important to use equipment that will prevent re-circulation of dust back into the air.

This guide is organized by cleaning frequency (daily, interim, and scheduled). Depending on frequency and traffic, there are different techniques and tools recommended for best results in your particular facility. All chemicals used must have a pH level of less than nine. Do not use chemicals containing optical brighteners or deliminene (orange terpenes).

### DAILY CLEANING


Daily cleaning is necessary for heavy, medium, and light traffic areas, and includes the following:

- Daily vacuuming of walk-off mats.
- Daily vacuuming of track-off, funnel, and main traffic lanes. In some instances, frequency may be greater.
- Immediate spot removal with emulsification and agitation, extraction, or blotting to guard against permanent staining.
- Recommended Spotters: R.E. Whitaker Co. (Crystal Dry spotter & Roamer) or Windsor Ind. (Pro Spotting Kit) See spot removal section for more details.



## Cleaning Walk-off Mats As Front Line Carpet Protection

The first step toward a clean carpet is preventing dirt from getting to the carpet. Since 80% of all carpet soil is brought from outside on the bottom of shoes, Beaulieu Commercial strongly recommends walk-off mats at all entry ways and transition areas where soiling is likely. Mats trap or localize dirt, and the longer the mat, the more dirt trapped. Daily vacuuming and frequent cleaning of mats will optimize mat efficiency and provide front line protection to keep carpets cleaner longer.

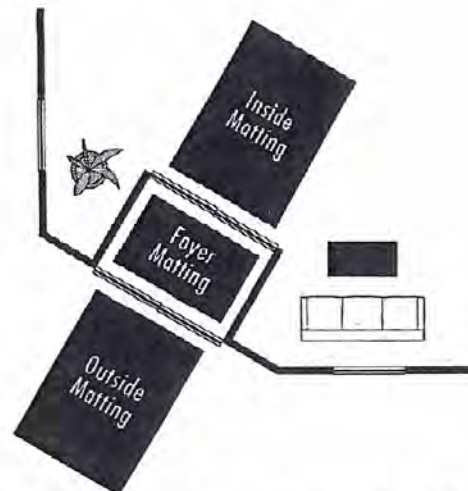

**Recommended Vacuum: ProTeam (ProForce 1500XP) or Windsor Industries (Versamatic Plus)**

### Vacuuming Efficiently And Effectively

Vacuuming - removes 90% of dry soils that accelerates wear and fiber abrasion.

Vacuuming is a powerful method for preserving carpet life and appearance. The first step in vacuuming is selecting the equipment best suited to your requirements and preferences.

### Two-motor Vacuum


In a two-motor vacuum, there is a separate motor for vacuuming and beater brush drive. Each motor is sized and configured to optimize the specific function. Operation is generally quieter and dirt pick-up more effective than single-motor vacuums. We recommend a two-motor vacuum for all traffic levels.

## INTERIM CLEANING

Interim cleaning is a key part of a good maintenance program that most often gets overlooked or is not properly performed. Interim cleaning is designed to eliminate the "sticky stuff" resulting from the deposit of normal oils and soil that hold foreign matter in the carpet while simultaneously performing low moisture pile lifting. Low moisture pile lifting actually retards the tendency for contaminants to become airborne due to the action of the

pile lifter. This procedure enhances the ability of the vacuum cleaner to remove loosened foreign matter from the carpet. The graphs below compare carpet appearance & levels of a reactive or corrective maintenance program to a well-rounded maintenance program that incorporates a good interim cleaning plan.

Interim cleaning is a fast, light, easy and safe method to retain a high level of appearance. By cleaning the carpet before soiling becomes noticeable, you will retain high appearance levels and improve upon the wearability of the floor covering. Interim cleaning will make your daily and scheduled maintenance that much easier to perform giving your carpet the fresh, clean appearance enhancing effect you are looking for.

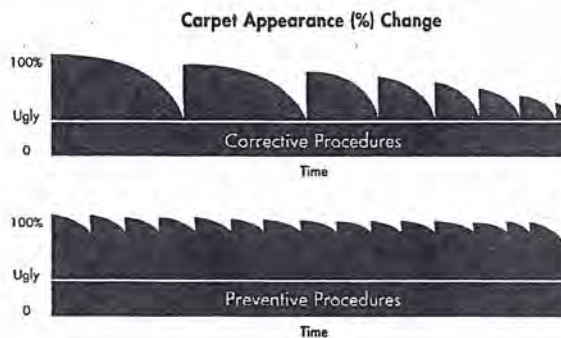

### Interim Low Moisture Pile Lifting

The interim cleaning process approved by Beaulieu Commercial is "low moisture pile-lifting with chemical cleaning." The approved chemical for this system is sprayed into the carpet, applying about one diluted gallon per 1000 square feet. Agitation of the floor covering is accomplished using a machine that



powers dual cylindrical brushes that will lift the carpet fibers as the brushes turn. The solution is allowed to dry (usually about 30-90 minutes) and the crystalline residue removed with the recommended type of vacuum. Productivity rates from 3,000 to 6,500 square feet per hour are attainable depending on machine size and spraying method.

Beaulieu Commercial does not recommend the use of any type of "bonnet" or rotary shampoo cleaning method for the BOLYU, Cambridge or Aqua carpet brands. *Use of the "bonnet" method may void all warranties.*



The Crystal Dry chemical action breaks down the sticky and oily residue that attracts soil on contact. The GLS machine works the Crystal Dry deep into the pile and loosens foreign solid materials, lifting the carpet pile at the same time. As the Crystal Dry chemicals dries, it encapsulates the soil in crystals that are then dry extracted by vacuum. The entire interim cleaning process is pictured below



Spraying

Scrubbing

Vacuuming

## SCHEDULED CLEANING

Scheduled periodic overall deep cleaning with hot water extraction cleans to the base of the fiber. It is our recommendation that on new carpet installations hot water extraction be performed only with clean, clear water and when necessary, a pH adjusted rinse (depending on pH of carpet fibers) for best long-term results.

**Recommended Equipment & Chemicals:** R.E. Whittaker Company (GLS Crystal Dry, pictured on the left)

**Recommended Vacuum:** ProTeam (Proforce 1500XP) Windsor Industries (Versamatic Plus) or comparable two-motor vacuum

## Scheduled Deep Cleaning Method - Hot Water Extraction

Beaulieu Commercial and other major fiber producers recommend hot water extraction for the periodic deep cleaning maintenance process.

Water extraction cleans to the base of the carpet fibers when performed properly; removing any residual dirt and debris. If left uncleaned, fungus, mold, and bacteria could form causing unpleasant odors.

For productivity, hot water extraction simultaneously washes, rinses, and vacuums your carpet. A combination of hot water, and agitation cleans and rinses the carpet, while a vacuum carries away the soiled water.

## Selecting Self-contained, Truck-mounted, Or Portable Equipment (See Specifics For Carpet Tile Products)

The variety of equipment ranges from truck-mounted high-powered machines to portable machines that use a hose and wand or self contained extractors. The self-contained extractor can use a hose and wand, but is usually operated using the self-contained spray jets, agitating brush, and vacuum shoe.

Self-contained machines use hot tap water. The temperature is cooler than truck-mounts or portables, which also apply the water at higher pressure. Brush agitation in the self-contained unit makes up for the cooler water and lower pressure so that cleaning commercial carpet is very effective since the temperature of the water should not exceed 120° at the sprayer head.



The following is an average productivity level for each type of extraction method. Truck-mounts or portables can typically clean 1000-2000 sq. ft. per hour. A mid-sized self-contained extractor can clean between 2000 and 4000 sq. ft. per hour. A large walk-behind wide-area extractor can clean up to 10,000 sq. ft. per hour.

### **Carpet Tile Extraction Requirements**

Nexterra tile & iLoc Cushion tile must only be extracted using 100 psi. max and not to exceed 100° at wand. Exceeding these limits may disrupt adhesive bond on perimeter of tiles.

### **Recommended Hot Water Extraction Methods**

A pre-spray and neutralizing rinse combination is the most effective method because it allows more time for the chemical action. It also permits the harsh alkalinity of the cleaning chemical to be neutralized in the rinse, leaving the carpet looking brighter and more lustrous. For new installations we recommend following these procedures and extracting with clear, plain water only using a pH adjusting rinse only when necessary. Beaulieu Commercial does not recommend the use of any type of optical brighteners.

**Step 1:** Pump spray a diluted solution of pre-spray chemical onto the area of carpet to be cleaned about 10-15 minutes before extracting that area.

**Step 2:** In the solution tank of the extractor, dilute the hot water with a proper amount of neutralizing rinse. Extract the pre-sprayed carpet with this solution. In the machine extraction cleaner is a little quicker and requires just one simple step: dilute the hot water in the solution tank with the proper amount of carpet extraction cleaner. Extract the carpet using this solution. With either method, you can cut dry time in half by making extra dry passed with extractors and directing an air blower on the wet carpet.

Do not over wet carpet. Over wetting carpet causes wick back, which will allow the spots to reappear. Carpet must also be 100% dry before foot traffic commences to prevent rapid re-soiling.

### **When To Use Defoamers**

If foaming occurs, put a small amount of defoamer into the recovery tank of the extractor. Spraying defoamer onto the inner wall of the recovery tank can give faster contact with foam as it enters the tank.

**Warning:** Never put defoamer into the solution tank. This can clog the spray jets. Also, defoamer residue on the carpet will cause rapid resoiling.

**Recommended Equipment & Chemicals:** U.S. Products (Cobra Plus Series)

**Recommended Equipment & Chemicals:** Windor Industries (Commodor or Dominata series.)





# SPOT REMOVAL — 7 RULES FOR BEST RESULTS

Spot removal can be one of the most confusing and frustrating aspects of carpet care. Improperly treated or ignored spots can destroy expensive carpet. The following seven rules can help simplify the challenge.

## Seven Rules Of Spot Removal:


1. The faster you get to a spot the better for removal. At the minimum, spot removal must be a daily routine.
2. Know the fiber make-up of your carpet. Most commercial carpets use either nylon or olefin (polypropylene) fibers, or a blend of both. IICRC certified professional carpet cleaners have simple tests that can determine fiber type for you. Nylon carpets will usually contain stain-blocking chemicals, which if properly maintained, can facilitate removal of serious stains.
3. Know and recognize the common spots in your facility. Keep a spotting kit on hand with a general purpose spotter and specialty spotters for spots specific to your area of responsibility. Offices, for example, often have coffee or copier toner spots. Hospitals commonly have blood or betadine spots. You can expect coffee, tea, and red food dye spots in retail or hospitality facilities. Nursing homes commonly have urine stains. Gum stains are common in public facilities.
4. Many spots are concentrated areas of general soil tracked into an area. A general purpose water-based spotter will remove these.
5. Greasy spots and tar are best removed by an oil or solvent-based spotter.
6. Protein or fatty soils such as vomit, feces, or blood can be effectively removed with an enzyme-based spotter.
7. When applying a spotter, never rub the spotted area. Always carefully blot the spot with a cloth. To help prevent resoiling, use a spotting water extractor to thoroughly clean the spotted area after blotting.

## Recommended Spotting Kits:

R.E. Whittaker Co. (Crystal Dry Spotter & Carpet Roamer)

## Recommended Spotting Kits:

Windsor Industries (Pro Spotting Kit & Presto spotting extractor)

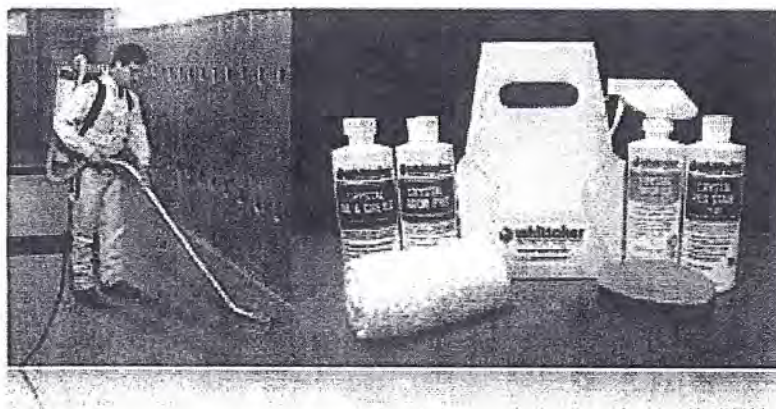



# YOUR MAP TO TOTAL SOLUTION CARPET CARE

There are many ways to clean commercial carpeting. To determine the best for your requirements, you should map out the types of traffic in your facility's carpeted areas. Using a copy of your building's floor plan, categorize and label traffic areas as heavy, medium, or light.

| AMOUNT OF TRAFFIC | TRAFFIC                   | VACUUM FREQUENCIES | INTERIM CLEANING FREQUENCIES | DEEP CLEANING FREQUENCIES |
|-------------------|---------------------------|--------------------|------------------------------|---------------------------|
| Light             | Office area with 1 worker | 2-3 Times per week | Two to Four times a Year     | None (Only when required) |
| Moderate          | Up to 500                 | Daily              | Quarterly                    | None (Only when required) |
| Heavy             | 500-1000                  | Daily              | Every Other Month            | None (Only when required) |
| Extra Heavy       | 1000-2000                 | Daily              | Monthly                      | None (Only when required) |
| Extremely Heavy   | Over 2000                 | Twice Daily        | Weekly to Monthly            | None (Only when required) |

\*The term "traffics" means each time one person walks in the area. The same person walking in the same area 20 times a day equals 20 traffics.

*Note: Spotting maintenance should be performed on a daily basis.*

You are now on your way to total solution carpet care provided by your partner in business, Beaulieu Commercial, in an effort to increase your return on investment of your floor coverings. For additional technical information pertaining to installation (broadloom or carpet tile), adhesives maintenance, Specifications and warranties please see our website at [beaulieucommercial.com](http://beaulieucommercial.com) or feel free to contact technical services at 800 451 1250.

*Interface*FLOR®

Item 248

'MAT'

# ***Maintenance Specification Guide***

Exclusive to all InterfaceFLOR Products



# ***Table of Contents***

|                                              |           |
|----------------------------------------------|-----------|
| <b>Introduction</b>                          | <b>3</b>  |
| Why is Maintenance Important?                |           |
| Comprehensive Maintenance Plan               |           |
| Identifying your needs                       |           |
| <b>Frequency Chart</b>                       | <b>4</b>  |
| <b>Maintenance Techniques</b>                | <b>5</b>  |
| Preventative Maintenance                     |           |
| Chair Pads                                   |           |
| Vacuum Cleaning                              |           |
| Spot Cleaning                                |           |
| Dry Extraction                               |           |
| Crystallizing Application                    |           |
| Bonnet Cleaning                              |           |
| Hot Water Extraction                         |           |
| <b>Cleaning Solutions</b>                    | <b>9</b>  |
| Floor Care Products                          |           |
| <b>Maintenance Equipment</b>                 | <b>10</b> |
| Vacuum                                       |           |
| Low Moisture Applicator                      |           |
| Hot Water Extractor                          |           |
| <b>Miscellaneous Maintenance Issues</b>      | <b>12</b> |
| Indoor Air Quality: Antimicrobial Protection |           |
| Tile Replacement                             |           |
| Access Floors                                |           |
| <b>Spot Removal Guide</b>                    | <b>13</b> |
| <b>Consultants and Additional References</b> | <b>16</b> |

# ***Introduction***

Why is maintenance important? By implementing a routine carpet maintenance program, you preserve and maintain your floor covering and extend the life of your carpet investment. Routine care can prolong the need for restorative cleaning. Restorative cleaning is needed when carpet has been neglected and its appearance has degenerated to a point when cleaning is an absolute necessity. Excessive soils and stains may require different methods or a combination of methods to be utilized. However, even restorative cleaning typically will not achieve the desired original beauty and appearance of the floor covering if the carpet has been neglected. Routine care means a longer lasting product. What is important is to implement a maintenance program from the beginning. An effective maintenance program is carefully planned and executed on schedule. There are many factors that can affect the appearance of carpet including color, pattern, yarn fiber, and of course maintenance.

## **Comprehensive Maintenance Plan**

An effective maintenance program consists of five key elements:

- **Preventative Maintenance** – containing the soil entering the building using walk-off mats at entrances. This includes outside matting, inside matting and mats at certain other high traffic interior areas.
- **Vacuuming** - regular vacuuming is the single most important part of a maintenance program. Vacuuming is designed to remove dry soil matter.
- **Spot and Spill Removal** – quick response to spills is the key. The faster spills are dealt with the less chance that it will leave a stain.
- **Interim Cleaning** – several different methods can be utilized. If used regularly, interim cleaning can prolong the need for restorative cleaning.
- **Restorative Cleaning** – deep cleaning designed to remove trapped soils. Hot water extraction is the most effective method and the **only** restorative method recommended by InterfaceFLOR.

## **Identifying Your Specific Maintenance Needs**

Just as various areas of your office or building are subject to different uses, each area demands a different level of maintenance and care. Heavily trafficked areas such as entrances and corridors require more frequent vacuuming and cleaning. Areas around vending machines and desks need daily attention to spills and stains. Also certain areas may require different types of equipment to be used. A comprehensive maintenance program should have a chart or diagram of the building's floor space outlining proper cleaning frequency rates, methods and equipment. This well designed maintenance plan will add years of useful life to your carpet investment.



## ***Commercial Carpet Cleaning Frequency Chart***

| <b>Traffic<br/>Soil<br/>Rating</b>                                  | <b>Carpet Owner/ Maintainer</b>                           |                                             | <b>Professional Carpet Cleaner/<br/>Restorer</b>                           |                                 |
|---------------------------------------------------------------------|-----------------------------------------------------------|---------------------------------------------|----------------------------------------------------------------------------|---------------------------------|
|                                                                     | <b>Vacuuming</b>                                          | <b>Spot Cleaning</b>                        | <b>Interim<br/>Maintenance<br/>(Between<br/>Restorative<br/>Cleanings)</b> | <b>Restorative<br/>Cleaning</b> |
| <b>Light<br/>&lt;500 foot traffics<br/>per day</b>                  | 1 to 2x per week                                          | Daily or as soon<br>as spots are<br>noticed | 1 to 3x annually                                                           | 1 to 2x<br>annually             |
| <b>Medium<br/>(moderate)<br/>500-1000 foot<br/>traffics per day</b> | Daily in traffic areas.<br>Overall 3 to 4x per<br>week    | Daily or as soon<br>as spots are<br>noticed | 3 to 6x annually                                                           | 2 to 4x<br>annually             |
| <b>Heavy<br/>1000 – 2500 foot<br/>traffics per day</b>              | Daily in traffic areas.<br>Overall 4 to 7x per<br>week    | Daily or as soon<br>as spots are<br>noticed | 6 to 12x<br>annually                                                       | 3 to 6x<br>annually             |
| <b>Very Heavy<br/>&gt;2500 foot traffics<br/>per day</b>            | 1 to 2x daily in traffic<br>areas. Overall 7x per<br>week | Daily or as soon<br>as spots are<br>noticed | 12 to 52x<br>annually                                                      | 6 to 24x<br>annually            |

\*Recommended frequency guide per IICRC S100  
(Institute of Inspection, Cleaning, and Restoration Certification)

## ***Maintenance Techniques***

The maintenance program is designed to prevent soil from reaching the carpet and to remove soil before it causes damage. To keep your carpet clean and looking like new, this soil management program uses a combination of methods. These methods are tailored to your facility's needs. Cleaning frequencies are based on the specific needs of trafficked areas in your facility.

### **Preventative Maintenance**

Maintaining your carpet's appearance means more than choosing the right cleaning method. Choosing the right products up front contributes greatly to the overall performance of your floor covering. The use of walk-off mats helps keep soil from entering the building. Outside mats are designed to scrape dirt and debris off shoes while interior mats are designed to remove smaller soil particles as well as help absorb moisture. Interior walk-off mats should extend a minimum of six feet inside the entrance. At 15 feet, these mats can effectively remove 80% of soil and moisture before it reaches the carpet. Mats can also be effective in other interior areas including elevators, around water coolers and food station areas, and at stair thresholds. Walk-off matting should be maintained the same way as interior carpet using the frequency guidelines for 'Very Heavy' based on the chart on page 4.

### **Chair Pads**

Chair pads are **NOT** required with any InterfaceFLOR carpet.

### **Vacuum Cleaning**

A good vacuuming program is essential to the success of your carpet maintenance efforts. Effective daily vacuuming reduces the frequency of periodic maintenance procedures required to maintain clean carpet. In addition to removing soil, vacuum cleaning also helps to lift and restore pile particularly for cut pile carpet. Proper equipment and technique are critical to the success of a vacuuming program.

Machines with cylinder brushes should be used and set so that brushes are in contact with pile surfaces. Twin motor machines with independent motors for suction and brushing are preferred for this task. In most cases upright vacuum cleaners are advised; canister and back pack type machines without brushes and riding sweepers with rotary brushes are generally not recommended. Vacuums with top loading soil bags and HEPA filters are highly recommended as are those that are Green Label certified by The Carpet and Rug Institute. For a list of these certified vacuum cleaners see the CRI website at [www.carpet-rug.org](http://www.carpet-rug.org).

The frequency of vacuuming is determined by visual inspection, but should be done daily. Heavy traffic areas such as lobbies, entryways and barrier mats, particularly those exposed to various weather conditions, may require more frequent vacuuming. Vacuuming these areas more than



once a day will help prevent soil from being tracked into other areas. The procedure for thorough vacuuming is using slow overlapping strokes making sure that the entire carpet surface is covered. Strokes should be no longer than 2 -3 feet in length to avoid constant bending.

**NOTE: FOR FLOR S AND SUPER FLOR PRODUCTS A SUCTION ONLY VACUUM IS RECOMMENDED OR IF EQUIPPED, USE THE SUCTION ONLY SETTING ON A STANDARD UPRIGHT.**

### **Spot Cleaning (NYLON CARPETS ONLY)**

Daily removal of spots and spills helps maintain the carpet's appearance between scheduled cleanings. Immediate action against spots and spills also reduces the probability of a permanent stain. It is important to use solutions that are appropriate for the specific type of spot or spill – water based, oil based, or solids including gum. Use spotting solutions sparingly and always try to remove the spot with water only before using a spotting solution. If available, using a portable extractor will significantly improve the ability to remove spots.

#### **Treating Water-Based Spots**

For liquid spills, blot up as much of the liquid as possible with a clean white cloth. If the spill is semi-solid or has hardened, gently scrape it with a spoon or spatula and then blot the spot with a damp sponge. Always work from the edge of the spot towards the center. Never rub across a wet spill in a manner that causes the stain or contamination to be spread from the original area.

If spot remains after using water, refer to our spotting guide and choose the appropriate solution. Apply a minimal amount of solution and using a hand brush, gently agitate the solution. Rinse with water and allow the area to dry about 1 hour and then vacuum. Repeat the application if necessary. Protect the freshly cleaned area until the carpet is completely dry. Do not brush aggressively on the spot.

#### **Treating Oil-Based Spots**

When removing oily stains such as paint, grease, tar, asphalt, always check for color fastness by applying your cleaning solution to an inconspicuous area of the carpet. Spray or pour the solvent onto a white cloth and press it onto the carpet. Check the cloth for any evidence of dye transfer to the cloth. If color transfer is evident, do not use the solution. If colorfastness is not a problem, apply your solution sparingly to a clean white cloth and press the cloth onto the spot.

Again, do not rub across the stain, but wipe gently from the outer edge toward the center of the spot. Repeat the procedure until the spot has been removed. Rinse with water and allow the area to dry about 1 hour and then vacuum. Protect the freshly cleaned area until the carpet is completely dry.

**NOTE: IF AVAILABLE, A SMALL PORTABLE EXTRACTOR MAKES THE TASK OF FLUSHING SPOT AND REMOVING EXCESS MOISTURE MUCH EASIER. IF STAIN CANNOT BE REMOVED PLEASE CONTACT AN INTERFACE CONSULTANT.**

### **Interim Cleaning**

#### **Dry Extraction**

The low moisture dry extraction method is a safe, easy, and effective method for handling maintenance on a regular basis. The procedure uses a moist compound (powder) that does not leave the carpet wet and allows for immediate access and traffic once the procedure is

complete.

Follow this process for dry extraction: Thoroughly vacuum the carpet. Spread extraction compound on the carpet and then agitate using a low moisture applicator with counter rotating brushes to gently brush the moist compound into the fiber, dislodging and dispersing accumulated soil. Allow 30 minutes for drying before thoroughly vacuuming compound and soil from the carpet. For best results in removing particulate matter use a commercial-grade upright vacuum with HEPA filters.

### **Crystallizing Application (Dry Foam or Encapsulation)**

The crystallizing method of maintenance is a low moisture procedure similar in some respects to the dry extraction method but instead of using the powder, a liquid encapsulation solution is used. Benefits include immediate access to the area without the necessity of extended drying time.

Follow this procedure for crystallizing application: Thoroughly vacuum the carpet. Apply the encapsulation solution using an electric sprayer or a simple pump-up garden type sprayer. Agitate the carpet pile using a low moisture applicator with counter rotating brushes to gently brush the solution into the fiber, dislodging and dispersing accumulated soil. Allow time for the solution to dry. Drying time will vary accordingly to several factors including humidity, air flow and air temperature but can normally be expected to be 30 - 60 minutes. Finish with vacuuming. This process is designed to encapsulate the soil as the solution dries forming small crystals that can easily be vacuumed out of the carpet.

**NOTE: FOR FLOR S AND SUPER FLOR PRODUCTS, HOT WATER EXTRACTION IS THE ONLY RECOMMENDED CLEANING PROCEDURE.**

### **Bonnet Cleaning**

**NOTE: USE OF A BONNET OR ANY OTHER TYPE OF ROTARY MACHINE FOR CLEANING OR DRYING IS NOT RECOMMENDED AND MAY VOID ALL WARRANTIES.**

### **Hot Water Extraction**

As with all other maintenance methods, always prepare the carpet by vacuuming.

Hot water extraction is an effective method for removing heavy soil and residue from carpeting. Start by applying a detergent pre-spray appropriate for carpet using an electric or pump type sprayer. Agitate the pre-spray with a low moisture applicator. Using only clean water in the extractor, thoroughly rinse the carpet. For heavily soiled high-traffic areas the addition of a minimal amount of detergent designed for extractors can be added to the clean water tank. The hot water extraction method injects water into the carpet. The injected water suspends the soil and contaminants in the solution for easy removal by the built-in vacuum system.

The recommended technique: Operate the floor wand or self-contained extractor by engaging the solution valve or button and pulling or pushing the equipment for approximately three to five feet (or at a comfortable distance). Release the solution valve



before reaching the end of your pass to assure that you vacuum up all of the solution. Cover the same area two or three times with the solution valve off to remove as much moisture from the carpet as possible.

Overlap approximately two inches on the area already cleaned and proceed as described above. In extremely soiled areas, it may be necessary to make two or three additional passes with the solution valve on. Make several additional passes with the solution valve off to remove as much moisture from the area as possible, always being careful not to over wet the carpet.

NOTE: ALTHOUGH IT IS RECOMMENDED THAT WATER TEMPERATURE RANGE BETWEEN 110° AND 130° F, USING WATER WITH TEMPERATURES ABOVE THAT RANGE WILL NOT CAUSE ANY DAMAGE TO OUR PRODUCTS .

Make sure HVAC system is on and use drying fans (air movers) on wet areas during and after cleaning to allow the carpet to dry completely. Complete the procedure with a thorough vacuuming.

NOTE: DRYING TIMES WILL VARY BASED ON INTERNAL AND EXTERNAL ENVIRONMENTAL CONDITIONS. PLAN ON A MINIMUM OF 3 HOURS UNDER NORMAL CONDITIONS. DO NOT ALLOW FOOT TRAFFIC ON THE CARPET UNTIL IT IS DRY. ALLOWING FOOT TRAFFIC BEFORE CARPET IS DRY CAN CAUSE FIBER DAMAGE AND RAPID RE-SOILING.

## *Cleaning Solutions*

Some commercial carpet cleaning solutions are very harsh and can damage the carpet fiber. It is important to select solutions that meet the basic standards outlined here and to evaluate each product before using it.

InterfaceFLOR brand carpet may be maintained using a number of widely recognized and readily available carpet cleaning agents. Some cleaners have actually earned the Carpet & Rug Institute's Seal of Approval. For a list of these certified cleaning solutions see the CRI website at [www.carpet-rug.org](http://www.carpet-rug.org). Always follow the manufacturer's recommended guidelines for using any cleaning solution. Avoid products with pH levels over 9.5 and products that contain toxic or flammable solvents. Do not use oil-based defoamers of any kind. Detergents designed for use in hot water extraction equipment should not contain an oil-based defoamer and caution should be used with the amount of detergent added. Oil based defoamers have the potential to leave oily residues and adding too much detergent could leave excess detergent on the carpet. Both scenarios will lead to rapid re-soiling and the need for more frequent cleanings. In addition, cleaning solutions containing optical brighteners should not be used. Optical brighteners can adversely affect the coloration of carpet and lead to premature aging or yellowing of the carpet.

Cleaning solutions used for Interim and/or Restorative cleaning should be tested for sticky residues that may cause re-soiling. To test a solution, pour a small amount in a clean glass dish. Allow the solution to air dry completely (24 hours minimum). Break up any hard residue on the surface of the glass dish and examine it. If the residue can be characterized as dry powder, dry flakes or dry crystals, the solution is acceptable. If the residue appears oily, greasy, sticky, or in waxy flakes, the solution is not acceptable since it would likely contribute to rapid re-soiling.

Spotting solutions should be used as needed and should be flushed out with clean water after the spot has been treated.



## ***Maintenance Equipment***

Using the right equipment is as important as using the right cleaning solutions and the best techniques. These guidelines provide the basic technical specifications you need for key pieces of carpet maintenance equipment.

### **Vacuum**

**(For twin motor uprights)**

|                   |                                                                      |
|-------------------|----------------------------------------------------------------------|
| Power             | • 8 amp                                                              |
| Filtration        | • Down to .3 microns or lower                                        |
| Vacuum            | • 60 " waterlift-motor or better @ 90+ cfm                           |
| Brush             | • Toothed belt drive preferred                                       |
|                   | • Brush speed 2,500 - 5000 rpm                                       |
|                   | • Brush diameter 2" - 3½"                                            |
|                   | • Brush height adjustment essential; self-adjusting design preferred |
| Working Width     | • 15" - 22"                                                          |
| Dust Bag Capacity | • 300 - 400 cubic inches                                             |

**NOTE: VACUUM CLEANER SHOULD HAVE THE CARPET AND RUG INSTITUTE'S SEAL OF APPROVAL THROUGH THEIR SEAL OF APPROVAL/GREEN LABEL CERTIFICATION PROGRAM. TOP-LOADING DUST BAG MACHINES WITH HEPA FILTERS ARE STRONGLY RECOMMENDED. BATTERY POWERED VACUUM CLEANERS ARE NOT RECOMMENDED.**

### **Low Moisture Applicator**

|             |                              |
|-------------|------------------------------|
| Power       | • 2-8 amp                    |
| Width       | • 12" - 22"                  |
| Brushes (2) | • 10" - 20" Counter-rotating |
| Brush speed | • 400 rpm                    |

### **Hot Water Extractor**

|                |                                               |
|----------------|-----------------------------------------------|
| Power          | • 10 - 15 amp                                 |
| Fluid Delivery | • (minimum) ½ gallons/minute 50-100 psi       |
| Tanks          | • 8-20 gallon solution                        |
|                | • 8-20 gallon recovery                        |
| Vacuum         | • 100" - 140" water lift at around 90-100 cfm |
| Vacuum Shoe    | • 11" - 18" wide                              |
| Wheels         | • Non-marking 4" - 10" diameter               |

**NOTE: ALTHOUGH TRUCK-MOUNTED UNITS GENERALLY GIVE OPTIMAL PERFORMANCE, HIGH QUALITY SELF-CONTAINED UNITS ARE EQUALLY AS EFFECTIVE AND ARE THE PREFERRED METHOD FOR MOST COMMERCIAL ACCOUNTS.**

## *Miscellaneous Maintenance Issues*

### **Indoor Air Quality: Antimicrobial Protection**

Indoor air quality problems cost North America more than \$100 billion each year in health care, absenteeism, lost production time, and lost revenue. Microorganisms have been identified as a major cause of common indoor air quality issues. Although all InterfaceFLOR products have the patented antimicrobial treatment Intersept, regular maintenance of your floor covering can assist in the reduction of microorganisms in your floor covering.

### **Tile Replacement**

Tiles that become badly stained or damaged can be replaced from shelf stock. Tiles can be removed by slipping a knife edge under one corner and peeling it from the floor. Be sure that the face pile of the surrounding tiles are brushed upright and that the replacement is fitted carefully to prevent pile fibers from becoming trapped between joints. Carpet tiles taken from shelf stock will likely have a newer appearance than the ones being replaced. If new tiles stand out in sharp contrast to surrounding older tiles, you may want to shuffle them around. Place the new tile(s) in less visible areas, and place the aged, undamaged tiles in a more visible area.

InterfaceFLOR's i2 products are specifically designed for tile replacement. These products can be inserted into an existing floor of the same style with no noticeable appearance of a new tile. This is the perfect solution for those tiles that have a permanent stain. Selective replacement of tiles can also be an effective maintenance procedure. During times of constant traffic such as in a cafeteria during lunch, tiles that have a spot can be replaced with a new tile. The dirty tile can then be cleaned at a later time and reused.

### **Access Floors**

Where applicable, contact should be made with the relevant access floor manufacturer for recommendations for carpet cleaning directions in relation to the methods and techniques recommended herein. Low moisture methods and techniques are generally preferred.



## *Spot Removal Guide*

The chart below is a guideline to spot removal. Follow each step in order, proceeding to the next step only if the previous step failed to remove the stain. The use of a portable extractor with water is highly recommended for a first attempt at spot removal and can be used after each step to flush solution. For unknown spots use water first then try dry cleaning solvent, followed by detergent solution.

If you cannot remove the spot following these guidelines, call InterfaceFLOR maintenance support at 1.800.336.0225, ext. 6268

### **Spotting Solutions**

1. **Detergent Solution** - Mix 1/4 teaspoon colorless mild detergent in 1 cup water.
2. **Ammonia Solution** - Mix 1 tablespoon clear household ammonia in 1/2 cup water.
3. **Vinegar Solution** - Mix 1/3 cup white household vinegar in 2/3 cup water.
4. **Dry Cleaning Solvent** - Apply isopropyl alcohol (standard rubbing alcohol) to clean cloth and blot. DO NOT apply directly on carpet.

|                               |                                                                                     |                                            |   |
|-------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------|---|
| <b>Beer</b>                   | 1                                                                                   | 3                                          |   |
| <b>Blood</b>                  | 1                                                                                   | 2                                          |   |
| <b>Butter &amp; Margarine</b> | 4                                                                                   | 1                                          |   |
| <b>Candle Wax</b>             | Scrape away as much as possible with a spoon or dull knife.                         | 4                                          |   |
| <b>Catsup/ Tomato Sauce</b>   | 1                                                                                   | 2                                          |   |
| <b>Chewing Gum</b>            | Harden gum with ice until brittle enough to scrape away with a spoon or dull knife. | 4 or use a commercial chewing gum remover. |   |
| <b>Chocolate</b>              | Scrape away as much as possible with a spoon or dull knife.                         | 1                                          | 2 |
| <b>Cocktails</b>              | 1                                                                                   | 3                                          |   |
| <b>Coffee</b>                 | 1                                                                                   | 3                                          |   |
| <b>Cough Syrup</b>            | 1                                                                                   | 2                                          |   |

|                                        |                                                            |                                                                                                  |   |
|----------------------------------------|------------------------------------------------------------|--------------------------------------------------------------------------------------------------|---|
| <b>Crayons</b>                         | Scrape away as much as possible with a spoon or dull knife | 4                                                                                                |   |
| <b>Egg (raw)</b>                       | Blot up as much as possible.                               | 1                                                                                                | 2 |
| <b>Food Coloring</b>                   | 1, until color no longer transfers to towel.               | 2                                                                                                |   |
| <b>Fruit Juice</b>                     | 1                                                          | 2                                                                                                |   |
| <b>Furniture Stain</b>                 | 4                                                          |                                                                                                  |   |
| <b>Glue</b>                            | 1                                                          | 4                                                                                                |   |
| <b>Grass</b>                           | 1                                                          |                                                                                                  |   |
| <b>Gravy</b>                           | 1                                                          | 2                                                                                                |   |
| <b>Greases</b>                         | Scrape away as much as possible with a spoon or dull knife | 4                                                                                                |   |
| <b>Ice Cream</b>                       | 1                                                          | 2                                                                                                |   |
| <b>Ink (Ballpoint)</b>                 | 4                                                          |                                                                                                  |   |
| <b>Ink (India)</b>                     | 4                                                          |                                                                                                  |   |
| <b>Jam and Jelly</b>                   | 1                                                          | 2                                                                                                |   |
| <b>Lipstick</b>                        | Scrape away as much as possible with a spoon or dull knife | 2                                                                                                |   |
| <b>Merthiolate &amp; Mercurochrome</b> | 1                                                          | 2                                                                                                |   |
| <b>Mildew</b>                          | 1                                                          | 2                                                                                                |   |
| <b>Milk</b>                            | 1                                                          | 2                                                                                                |   |
| <b>Mucilage</b>                        | 1                                                          | 2                                                                                                |   |
| <b>Mud</b>                             | Scrape away as much as possible with a spoon or dull knife | 1                                                                                                | 2 |
| <b>Mustard</b>                         | 1                                                          | 3                                                                                                |   |
| <b>Nail Polish</b>                     | 4                                                          | Apply amyl acetate or non-acetone based nail polish remover to cloth and blot.<br>PRETEST FIRST. |   |
| <b>Oils</b>                            | 4                                                          |                                                                                                  |   |
| <b>Paint (Oil-Based)</b>               | 4                                                          |                                                                                                  |   |
| <b>Paint (Water-Based)</b>             | 1                                                          | 2                                                                                                |   |



|                          |                                                                   |   |   |
|--------------------------|-------------------------------------------------------------------|---|---|
| <b>Rubber Cement</b>     | Roll the glue off if it has hardened sufficiently.                | 4 |   |
| <b>Rust</b>              | Apply rust remover or warm oxalic acid solution for 10-15 minutes | 2 |   |
| <b>Shoe Polish</b>       | 4                                                                 |   |   |
| <b>Soft Drinks</b>       | 1                                                                 | 2 |   |
| <b>Soot</b>              | 1                                                                 | 4 |   |
| <b>Tar &amp; Asphalt</b> | Scrape away as much as possible with a spoon or dull knife        | 4 |   |
| <b>Toothpaste</b>        | 1                                                                 | 3 |   |
| <b>Urine</b>             | Blot up as much as possible if still wet.                         | 1 | 3 |
| <b>Vomit</b>             | Blot up as much as possible if still wet.                         | 1 | 2 |
| <b>Wine</b>              | 1                                                                 | 3 |   |

## ***Consultants***

For more information about carpet maintenance, please contact one of the following consultants:

[www.interfaceflor.com](http://www.interfaceflor.com)

### **United States**

#### **Mark French**

706-812-6268

(vm) 800-336-0225 x 6268

(fax) 706-884-8669

[mark.french@interfaceflor.com](mailto:mark.french@interfaceflor.com)

InterfaceFLOR

1603 Executive Dr

LaGrange, GA 30240

### **Canada**

#### **Steven Twiss**

613-966-8090

(vm) 800-336-0225 x 2117

(fax) 613-966-8645

[steven.twiss@interfaceflor.ca](mailto:steven.twiss@interfaceflor.ca)

InterfaceFLOR

233 Lahr Drive

Belleville, ON K8N 5S2

## ***Additional References***

Carpet and Rug Institute - [www.carpet-rug.org](http://www.carpet-rug.org)

The Institute of Inspection, Cleaning and Restoration Certification - [www.iicrc.org](http://www.iicrc.org)



# BioBased Tile

## MIGRATIONS

Armstrong commercial BioBased Tile is coated with the Fast Start Factory Finish. Fortunately, the Fast Start Factory Finish makes initial maintenance quick and easy and does not require removal after installation. It is compatible with commercial floor polishes such as Armstrong S-480 Commercial Floor Polish and reduces the need to strip the tile. BioBased Tile requires polishing for protection, ease of maintenance and an attractive overall appearance.

### A. Initial Maintenance

#### Immediately After Installation

1. Sweep, dust mop or vacuum the floor thoroughly to remove all loose dust and dirt.
2. Remove any dried adhesive residue with a clean white cloth dampened with mineral spirits, carefully following warnings on container.
3. Damp mop the floor with a properly diluted neutral detergent solution such as Armstrong S-485 Commercial Floor Cleaner.

**NOTE: Do not wet wash, machine scrub, or strip the floor for at least four days after installation. This is to prevent excess moisture from interfering with the adhesive bond and/or seam treatments.**

4. Apply two coats of a high-quality commercial floor polish such as Armstrong S-480 Commercial Floor Polish. The use of a high-quality stain-resistant sealer such as Armstrong S-495 Commercial Floor Sealer beneath the polish should be considered in areas of high traffic, high soil load and areas where staining potential is high.

**NOTE: It is important to protect the floor during the installation and construction phase. If other on-site work is continuing, consider using a protective covering such as plain, undyed kraft paper to guard against damage to the new floor. When moving heavy fixtures or appliances over the flooring on casters or dollies, the flooring should be protected with 1/4" or thicker plywood, hardboard or other underlayment panels.**

#### Preparation for Commercial Traffic

1. Scrub the floor with a properly diluted neutral detergent solution such as Armstrong S-485 Commercial Floor Cleaner using an automatic or single-disc floor machine (300 rpm or less) equipped with a scrubbing pad (3M blue/green or equal), or equivalent brushes. If the floor is badly soiled and/or scratched, strip it using the same procedure but substituting a stripping solution such as Armstrong S-490 Commercial Floor Stripper.

**NOTE: The use of aggressive strippers such as mop-on/mop-off, no-scrub and no-rinse strippers is not recommended on tile floors less than two years old because they may affect the adhesive bond.**

**NOTE: Do not use brown or black pads, or equivalent brushes on any Armstrong resilient floors. Their use could result in permanent damage to the floor.**

2. Thoroughly rinse the entire floor with fresh, clean water and allow it to dry completely.



3. Apply 3 to 5 coats of high-quality commercial floor polish such as Armstrong S-480 Commercial Floor Polish. The use of a high-quality stain-resistant sealer such as Armstrong S-495 Commercial Floor Sealer should be considered in areas of high traffic, soil load and staining potential.

#### **B. Daily/Regular Maintenance**

1. Sweep, dust mop or vacuum daily to remove dirt, grit and soil that can damage the floor and become ground into the surface. Use walk-off mats that are as wide as the doorway and long enough to trap dirt and moisture before traffic reaches the resilient floor. Remember to clean walk-off mats regularly.
2. Spills should be cleaned up immediately.
3. Damp mopping of the floor should be performed on a regular or daily basis depending upon traffic and soil levels in the building. Use a properly diluted neutral detergent solution such as Armstrong S-485 Commercial Floor Cleaner.

#### **C. Periodic Maintenance**

1. When needed, scrub the floor with a properly diluted neutral detergent solution such as Armstrong S-485 Commercial Floor Cleaner using a single disc (300 rpm or less) or automatic floor machine and the appropriate scrubbing pad (red for light scrub, blue/green for a deep scrub) or equivalent brushes.
2. Thoroughly rinse the entire floor with fresh, clean water and allow to dry completely.
3. If there is sufficient (3 to 5 coats) polish remaining on the floor, buff, spray buff or burnish to restore gloss.
4. If needed, additional coats of floor polish may be applied at this time.

#### **D. Restorative Maintenance—Stripping**

**NOTE: Stripping is the process of removing existing layers of sealer and finish and should only be performed when routine daily/periodic procedures are no longer effective. The use of high-quality maintenance products such as Armstrong commercial floor care products and adherence to a well-planned maintenance program will greatly reduce the need for stripping.**

**NOTE: The use of aggressive strippers such as mop-on/mop-off, no-scrub and no-rinse strippers is not recommended on tile floors less than two years old because they may affect the adhesive bond.**

1. Scrub the floor with a properly diluted stripping solution such as Armstrong S-490 Commercial Floor Stripper using a single-disc floor machine (300 rpm or less) equipped with a scrubbing pad (3M blue/green or equal) or equivalent scrub brush.
2. Remove dirty stripping solution with a wet vacuum or mop.
3. Thoroughly rinse the entire floor with fresh, clean water and allow it to dry completely.
4. Apply 3 to 5 coats of high-quality commercial floor polish such as Armstrong S-480 Commercial Floor Polish. The use of a high-quality stain-resistant sealer such as Armstrong S-495 Commercial Floor Sealer should be considered in areas of high traffic, soil load and staining potential.

