

UNIVERSITEIT VAN PRETORIA
UNIVERSITY OF PRETORIA
YUNIBESITHI YA PRETORIA
Faculty of Engineering, Built Environment and Information Technology

# EBB 320

## Control Systems

### Practical 3: PID Controller Design



| Name and Surname | Student Number | Signature | % Contribution |
|---|---|---|---|
| Hanré Coetzer | 21507334 |  | 33 |
| Cornelis Claasen | 24704611 |  | 33 |
| B.J. Mncube | 23700816 |  | 33 |



By signing this assignment we confirm that we have read and are aware of the University of Pretoria's policy on academic dishonesty and plagiarism and we declare that the work submitted in this assignment is our own as delimited by the mentioned policies. We explicitly declare that no parts of this assignment have been copied from current or previous students' work or any other sources (including the internet), whether copyrighted or not. We understand that we will be subjected to disciplinary actions should it be found that the work we submit here does not comply with the said policies.

October 24, 2026

# Contents


**1 Theoretical Background** **2**
- 1.1 First Order Responses . . . 2
- 1.2 Second Order Responses . . . 2
- 1.3 PID Controllers . . . 2

**2 Design and Simulation** **4**
- 2.1 PID Controller Design for $G_{11}(s)$ Using the Frequency Design Techniques 4
- 2.2 PID Controller Design for $G_{22}(s)$ Using the Frequency Design Techniques 6
- 2.3 PID Controller Design for $G_{11}(s)$ Using the Root Locus Techniques . 10
- 2.4 PID Controller Design for $G_{22}(s)$ Using the Root Locus Techniques . 12

**3 Results** **16**
- 3.1 Root Locus Designs . . . 16
- 3.2 Frequency Response Designs . . . 19

**4 Discussion** **22**
- 4.1 Reference Tracking Simulation Results . . . 22
  - 4.1.1 Comparison of Controllers Designed for $G_{11}(s)$ . . . 22
  - 4.1.2 Comparison of Controllers Designed for $G_{22}(s)$ . . . 22
- 4.2 Measured and Simulated Experiment Results . . . 23
  - 4.2.1 Frequency Response Technique . . . 23
  - 4.2.2 Root Locus Technique . . . 24
  - 4.2.3 Comparison of PID Coefficients Between Design Methods . . . 24

**A Code** **28**
- A.1 Plotting Code . . . 28
  - A.1.1 Measured Results . . . 28
  - A.1.2 Root Locus Step Responses . . . 30
- A.2 Model Fit Code . . . 34
- A.3 Matlab App Code . . . 37
- A.4 MCU Code . . . 55

# 1 Theoretical Background

## 1.1 First Order Responses

To find the rise time of a First Order Plus Dead Time (FOPDT) transfer function the following equation can be used: [1]

$$T_r = \frac{2.2}{a} \tag{1}$$

The dead time of the FOPDT transfer function can be approximated using Padé first order approximation:

$$e^{-\theta s} \approx \frac{1 - \frac{\theta}{2}s}{1 + \frac{\theta}{2}s} \tag{2}$$

## 1.2 Second Order Responses

The equation defining a standard second order response is defined as:

$$G(s) = \frac{{\omega_n}^2}{s^2 + 2\zeta\omega_n s + {\omega_n}^2}$$

The equations that then define the dampening ratio and natural radian frequency of the second order response using a pre-define overshoot and rise time are found to be: [1]

$$\zeta = \frac{-\ln(\%\mathrm{OS}/100)}{\sqrt{\pi^2 + \ln^2(\%\mathrm{OS}/100)}} \tag{3}$$

$$\begin{aligned} \omega_n T_r &= 1.76\zeta^3 - 0.417\zeta^2 + 1.039\zeta + 1 \\ \omega_n &= (1.76\zeta^3 - 0.417\zeta^2 + 1.039\zeta + 1)/T_r \end{aligned} \tag{4}$$

The equation defining the natural frequency using the system's rise time is found using curve fitting, as a precise analytical equation is not available. [1]

A design point associated with the found dampening ration and natural radian frequency can then be found using: [1]

$$\sigma_d = \zeta\omega_n \tag{5}$$

$$\omega_d = \omega_n\sqrt{1 - \zeta^2} \tag{6}$$

## 1.3 PID Controllers

From [1] the basic equations that define a PID controller's transfer function are:

$$G_c(s) = K_p + \frac{K_i}{s} + K_d s = \frac{K_c(s + z_1)(s + z_2)}{s} \tag{7}$$

Therefore, it can be found that:

$$K_p = K_c(z_1 + z_2) \tag{8}$$
$$K_i = K_c(z_1 z_2) \tag{9}$$
$$K_d = K_c \tag{10}$$

To find the parameters of the PID controller the following equations must be satisfied in order to ensure system stability.

The angle equation:

$$\sum \text{zero angles} - \sum \text{pole angles} = \pm 180^\circ \tag{11}$$

The magnitude equation:

$$|K_c G_c(s_d) G_p(s_d)| = 1 \tag{12}$$

# 2 Design and Simulation

The following table contains the derived transfer functions that were used to simulate and implement the controllers.

Table 1: 2x2 Process Transfer Function Matrix

| | **Input 1 ($U_1$)** | **Input 2 ($U_2$)** |
|---|---|---|
| **Output 1 ($Y_1$)** | $G_{11}(s) = \frac{0.1179}{s+0.0076}e^{-0.145s}$ | $G_{12}(s) = \frac{0.03658}{s+0.005254}e^{-0.145s}$ |
| **Output 2 ($Y_2$)** | $G_{21}(s) = \frac{0.06368}{s+0.006012}e^{-0.145s}$ | $G_{22}(s) = \frac{0.05872}{s+0.005984}e^{-0.145s}$ |

## 2.1 PID Controller Design for $G_{11}(s)$ Using the Frequency Design Techniques

The design specifications are a 10% overshoot and a rise time of $T_r = 96.1$ s. The damping ratio $\zeta$ is calculated as:

$$\zeta = \frac{-\ln(0.1)}{\sqrt{\pi^2 + [\ln(0.1)]^2}} = 0.591$$

The required natural frequency $\omega_n$ is:

$$\omega_n = \frac{1.76(0.591)^3 - 0.417(0.591)^2 + 1.039(0.591) + 1}{96.1} = 0.01906 \text{ rad/s}$$

The required closed-loop bandwidth $\omega_{BW}$ and phase margin $\Phi_M$ are:

$$\omega_{BW} = \omega_n\sqrt{(1 - 2\zeta^2) + \sqrt{4\zeta^4 - 4\zeta^2 + 2}} = 0.02211 \text{ rad/s}$$

$$\Phi_M = \tan^{-1}\left(\frac{2\zeta}{\sqrt{-2\zeta^2 + \sqrt{1 + 4\zeta^4}}}\right) = 58.58^\circ$$

Following the prescribed procedure, the PI controller zero is fixed at $z_2 = 0.1$, yielding $G_{PI}(s) = \frac{s+0.1}{s}$. The new phase-margin frequency $\omega_s$ is selected as 80% of the bandwidth:

$$\omega_s = 0.8 \times 0.02211 = 0.01769 \text{ rad/s}$$

The target total loop phase at $\omega_s$ is:

$$\phi_{required}(\omega_s) = -180^\circ + 58.58^\circ = -121.42^\circ$$

The phase contributions of the uncompensated plant (including dead time) and the PI controller at $\omega_s$ are:

$$\phi_G(0.01769) = -0.07^\circ - 66.77^\circ = -66.84^\circ$$
$$\phi_{PI}(0.01769) = -90^\circ + \tan^{-1}\left(\frac{0.01769}{0.1}\right) = -79.97^\circ$$

The required phase addition from the D-action zero is:

$$\phi_{add}(\omega_s) = -121.42^\circ - (-66.84^\circ) - (-79.97^\circ) = +25.39^\circ$$

The D-action zero $z_1$ is located to provide exactly $25.39^\circ$ of phase:

$$\tan(25.39^\circ) = \frac{0.01769}{z_1} \implies z_1 = 0.03727$$

The controller gain $K_{cPID}$ is calculated to force unity magnitude at $\omega_s$:

$$|G_{11}(j0.01769)| \times \frac{K_{cPID}|j0.01769 + 0.03727||j0.01769 + 0.1|}{|j0.01769|} = 1$$
$$6.121 \times K_{cPID} \times \frac{0.04126 \times 0.10155}{0.01769} = 1 \implies K_{cPID} = 0.6901$$

Expanding the controller transfer function yields the parallel PID gains:

$$G_{c11}(s) = 0.6901\frac{(s + 0.03727)(s + 0.1)}{s} = 0.6901s + 0.0947 + \frac{0.00257}{s}$$

**Final Gains for $G_{11}$:** $K_p = 0.0947$, $K_i = 0.00257$, $K_d = 0.6901$

To confirm the design, the bode plot of the open-loop system was plotted and the crossover frequency was compared to the designed crossover frequency.

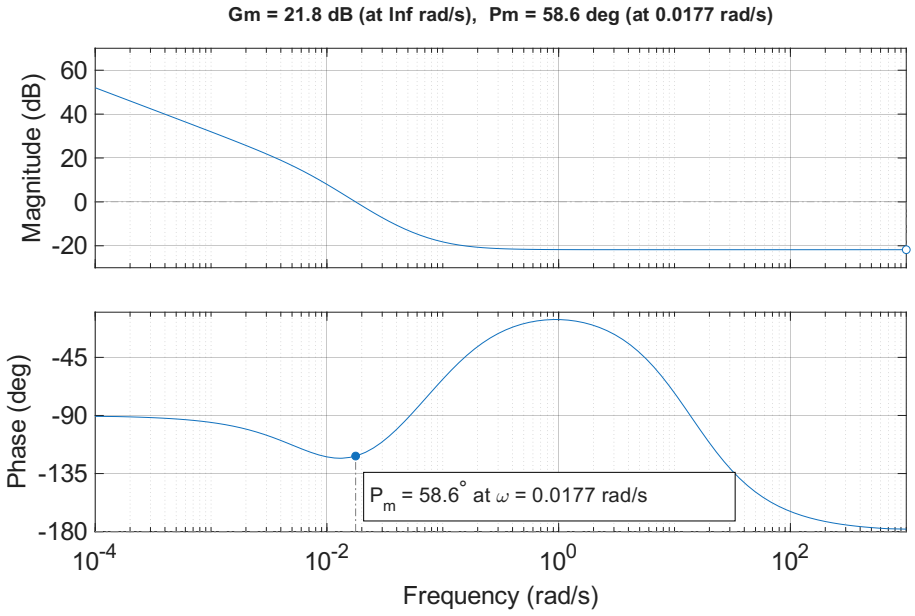



Figure 1: G11 Open-Loop Bode Plot verifying the 58.6° Phase Margin at 0.0177 rad/s.

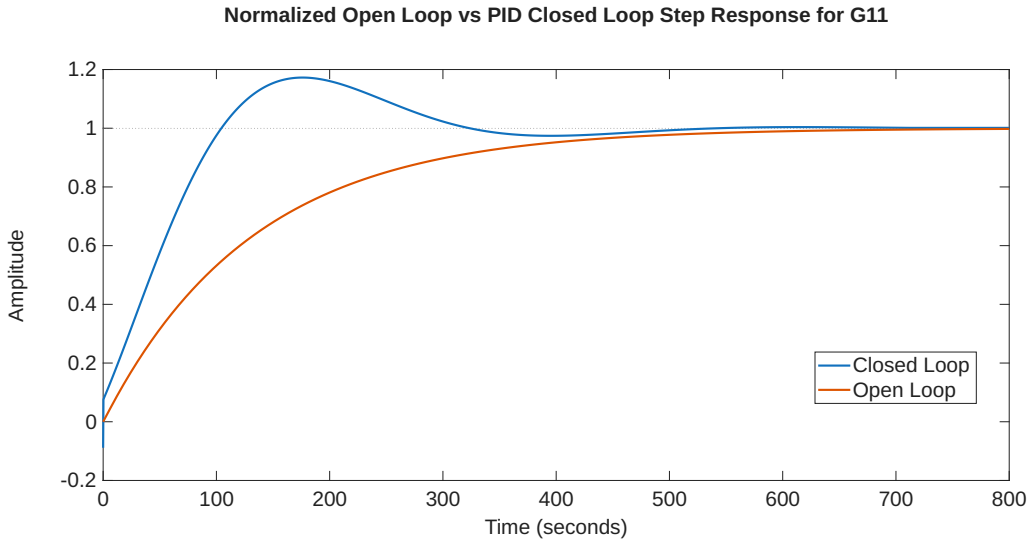



Figure 2: G11 Normalized Open-Loop vs Closed-Loop Step Response.

Figure 2 compares the step response of the open-loop and closed-loop system. It can be observed that the closed-loop system yielded a faster rise time compared to the open loop system.

The following table compares the step response information of the closed-loop and open-loop system.

Table 2: Table comparing open vs closed loop step response characteristics of G11

| Step Response Parameter | Open Loop | Closed Loop |
|---|---|---|
| Rise Time (s) | 289.08 | 85.29 |
| Transient Time (s) | 514.89 | 432.80 |
| Settling Time (s) | 514.89 | 441.73 |
| Overshoot (%) | 0.00 | 17.26 |
| Undershoot (%) | 0.00 | 8.86 |
| Peak Time (s) | 963.45 | 176.04 |

## 2.2 PID Controller Design for $G_{22}(s)$ Using the Frequency Design Techniques

For a target rise time of $T_r = 122.55$ s and identical 10% overshoot ($\zeta = 0.591$, $\Phi_M = 58.58°$), the bandwidth requirements shift:

$$\omega_n = \frac{1.8316}{122.55} = 0.01495 \text{ rad/s}$$
$$\omega_{BW} = 0.01495 \times 1.160 = 0.01734 \text{ rad/s}$$

With $z_2 = 0.1$, the new phase-margin frequency is:

$$\omega_s = 0.8 \times 0.01734 = 0.01387 \text{ rad/s}$$

The required total loop phase is identical: $\phi_{required} = -121.42°$. Evaluating the $G_{22}$ plant and PI controller at the new $\omega_s$:

$$\phi_G(0.01387) = -66.61°(\text{Core}) - 0.12°(\text{Delay}) = -66.73°$$
$$\phi_{PI}(0.01387) = -90° + \tan^{-1}\left(\frac{0.01387}{0.1}\right) = -82.10°$$

The required phase addition is:

$$\phi_{add}(\omega_s) = -121.42° - (-66.73°) - (-82.10°) = +27.41°$$

The D-action zero $z_1$ is located to provide 27.41° of phase:

$$\tan(27.41°) = \frac{0.01387}{z_1} \implies z_1 = 0.02674$$

The overall controller gain $K_{cPID}$ is found via unity magnitude mapping:

$$|G_{22}(j0.01387)| \times \frac{K_{cPID}|j0.01387 + 0.02674||j0.01387 + 0.1|}{|j0.01387|} = 1$$
$$3.885 \times K_{cPID} \times \frac{0.03013 \times 0.10096}{0.01387} = 1 \implies K_{cPID} = 1.174$$

Expanding the controller polynomial yields:

$$G_{c22}(s) = 1.174\frac{(s + 0.02674)(s + 0.1)}{s} = 1.174s + 0.1488 + \frac{0.00314}{s}$$

**Final Gains for $G_{22}$:** $K_p = 0.1488$, $K_i = 0.00314$, $K_d = 1.174$

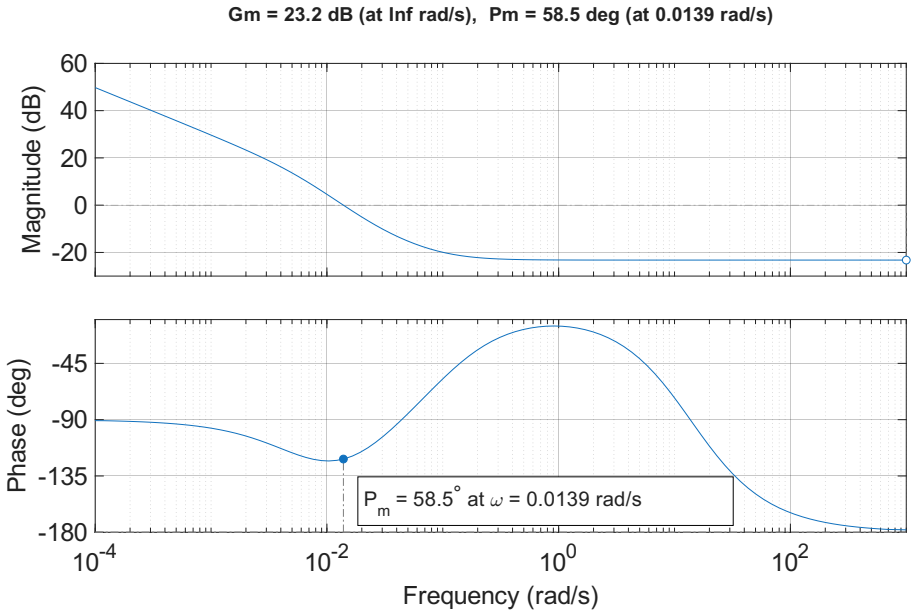



Figure 3: G22 Open-Loop Bode Plot verifying the 58.5° Phase Margin at 0.0139 rad/s.

Figure 3 confirms the designed phase margin of 58.5° at the gain crossover frequency of 0.0139 rad/s. The gain margin is infinite, which is expected for a first-order plant with a PID controller, as the loop phase never reaches −180°. The phase peak visible above −90° is the contribution of the D-action zero $z_1$, which adds the phase lead required to meet the phase margin specification.

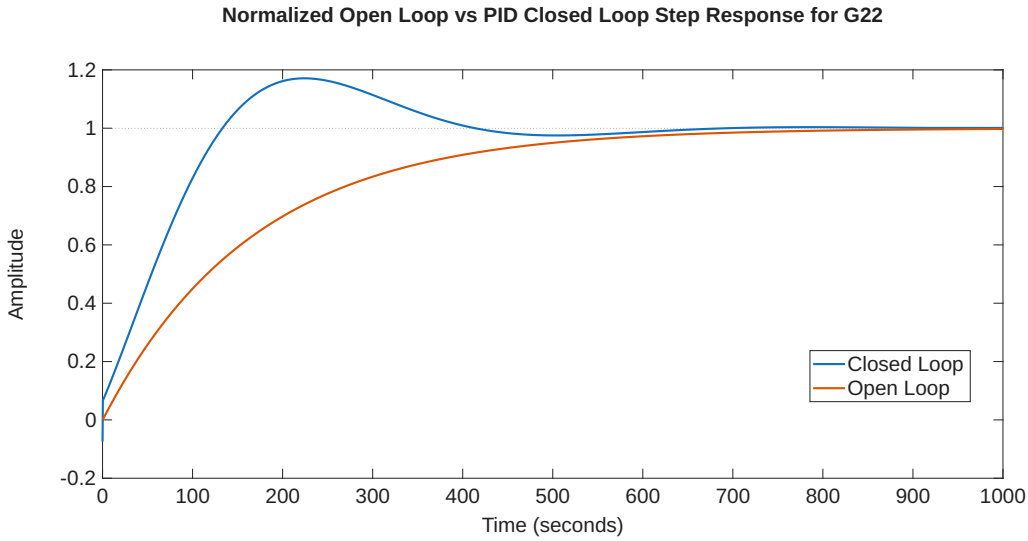



Figure 4: G22 Normalized Open-Loop vs Closed-Loop Step Response.

Figure 4 compares the normalised step response of the open-loop plant and the closed-loop system with the CFR22 controller. The closed-loop system achieves a significantly faster rise time relative to the open-loop plant, satisfying the threefold reduction specification. The initial undershoot observed in the closed-loop response is caused by the dead time approximation, which introduces a right-half-plane zero into

the loop. The closed-loop response converges to unity steady-state value, confirming zero steady-state error as provided by the integrator in the PID controller.

Table 3: Table comparing open vs closed loop step response characteristics of G22

| Step Response Parameter | Open Loop | Closed Loop |
|---|---|---|
| Rise Time (s) | 367.15 | 107.47 |
| Transient Time (s) | 653.90 | 548.75 |
| Settling Time (s) | 653.90 | 559.16 |
| Overshoot (%) | 0.00 | 17.10 |
| Undershoot (%) | 0.00 | 7.40 |
| Peak Time (s) | 1223.60 | 224.25 |

The closed-loop rise time of 107.47 s represents a 3.42× reduction from the open-loop rise time of 367.15 s, exceeding the required threefold specification. The overshoot of 17.10% is higher than the target of 10%. This is a known limitation of the frequency response design method, as the procedure assumes a second-order closed-loop approximation. The actual closed-loop is higher order due to the PID zeros, which increase the overshoot beyond what the damping ratio alone predicts. The zero steady-state error is confirmed by the DC gain of unity, achieved through the integrator in the PID controller.

## 2.3 PID Controller Design for $G_{11}(s)$ Using the Root Locus Techniques

For the transfer function $G_{11}$ using equation [1] the current rise time was found to be $\approx 289.78$ sec. Therefore, the target rise time is 96.593 sec.

Then using equations [3] and [4] it was found that:

$$\begin{aligned}\zeta &\approx 0.5912\\ \omega_n &\approx 0.018967\end{aligned}$$

The design point was then found using [5] and [6] giving $s_d = -0.01121 + j0.0153$.

The second form of the PID equation [7] was then used to find the controller transfer function.

Furthermore, the Padé approximation [2] was used to find an approximation of the transfer function's dead time. The new plant transfer function was then found to be:

$$G_p(s) = \frac{(1 - 0.0725s)}{(1 + 0.0725s)} \frac{0.1175}{(s + 0.007592)}$$

Letting $z_2 = 0.1$ the angles of the poles and zeros to the design point, and [11], it was found:

$$\begin{aligned}&\theta_{z=z_1} + \theta_{z=z_2} + \theta_{z=13.793} - (\theta_{p=0} + \theta_{p=-13.793} + \theta_{p=-0.007592}) = \pm 180^\circ\\ &\theta_{z=z_1} \approx -180^\circ + 219.90^\circ\\ &\theta_{z=z_1} \approx 39.905^\circ\end{aligned}$$

Therefore, the value of $z_1$ was found as:

$$\begin{aligned}\tan(\theta_{z=z_1}) &= \frac{0.0153}{z_1 - 0.01121}\\ z_1 &= \frac{0.0153 + 0.01121\tan(\theta_{z=z_1})}{\tan(\theta_{z=z_1})}\\ z_1 &\approx 0.0295055\end{aligned}$$

The controller gain $K_c$ was found using [12] where:

$$\begin{aligned}|K_c G_c(s_d) G_p(s_d)| &= 1\\ |G_c(s_d) G_p(s_d)| &\approx 0.848\end{aligned}$$

Therefore:

$$K_c = \frac{1}{|G_c(s_d) G_p(s_d)|} \approx 1.17921$$

The final controller transfer function was then found to be:

$$G_c(s) = \frac{1.17921(s + 0.1)(s + 0.0295055)}{s}$$

Using [10], [9] and [8] the PID values where found to be:

$$\begin{aligned} K_p &= K_c(z_1 + z_2) = 0.152714 \\ K_i &= K_c(z_1 z_2) = 0.003479 \\ K_d &= K_c = 1.17921 \end{aligned}$$

In order to confirm the design, the root locus was made using matlab, where the root locus plot has an intersection very close to the design point.

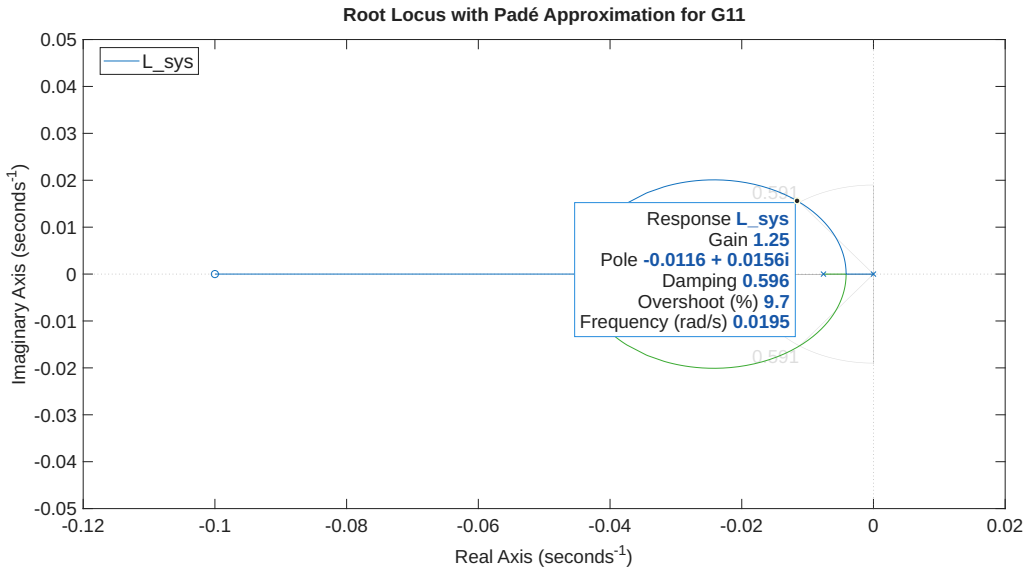



Figure 5: Root Locus plot of G11 with PID controller showing the intersection with the design point.

The resulting time domain comparison of the new closed loop transfer function and the open loop transfer function are shown below:

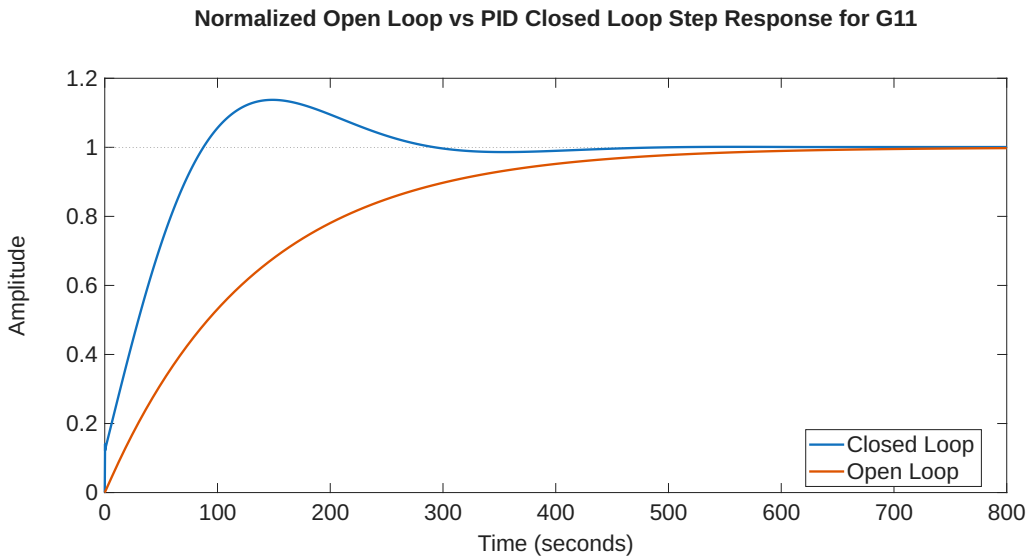



Figure 6: Time domain comparison of open loop plant transfer function against the closed loop system transfer function for G11

The following table compares the open loop and closed loop step response information.

Table 4: Table comparing open vs closed loop step response characteristics of G11

| Step Response Parameter | Open Loop | Closed Loop |
|---|---|---|
| Rise Time (s) | 289.39 | 71.09 |
| Transient Time (s) | 515.43 | 263.99 |
| Settling Time (s) | 515.43 | 263.99 |
| Overshoot (%) | 0.00 | 13.75 |
| Undershoot (%) | -0.00 | -0.00 |
| Peak Time (s) | 1025.12 | 148.79 |

It is evident from figure 6 and table 4 that the steady state error specification is met, along with a reduction in rise time of $\times 4.071$. The overshoot specification is not exactly met, as it is 3.75% higher than the specified 10%.

## 2.4 PID Controller Design for $G_{22}(s)$ Using the Root Locus Techniques

For the transfer function $G_{22}$ using equation [1] the current rise time was found to be $\approx 367.65$ sec. Therefore, the target rise time is 122.55 sec.

Then using equations [3] and [4] it was found that:

$$\zeta \approx 0.5912$$
$$\omega_n \approx 0.01495$$

The design point was then found using [5] and [6] giving $s_d = -0.008838 + j0.0121$.

The second form of the PID equation [7] was then used to find the controller transfer function.

Furthermore, the Padé approximation [2] was used to find an approximation of the transfer function's dead time. The new plant transfer function was then found to be:

$$G_p(s) = \frac{(1 - 0.0725s)}{(1 + 0.0725s)} \frac{0.05872}{(s + 0.005984)}$$

Letting $z_2 = 0.1$ the angles of the poles and zeros to the design point, and [11], it was found:

$$\begin{aligned}
&\theta_{z=z_1} + \theta_{z=z_2} + \theta_{z=13.793} - (\theta_{p=0} + \theta_{p=-13.793} + \theta_{p=-0.005984}) = \pm 180^\circ \\
&\theta_{z=z_1} \approx -180^\circ + 222.12^\circ \\
&\theta_{z=z_1} \approx 42.119^\circ
\end{aligned}$$

Therefore, the value of $z_1$ was found as:

$$\begin{aligned}
\tan(\theta_{z=z_1}) &= \frac{0.0121}{z_1 - 0.00884} \\
z_1 &= \frac{0.0121 + 0.00884 \tan(\theta_{z=z_1})}{\tan(\theta_{z=z_1})} \\
z_1 &\approx 0.0221733
\end{aligned}$$

The controller gain $K_c$ was found using [12] where:

$$\begin{aligned}
|K_c G_c(s_d) G_p(s_d)| &= 1 \\
|G_c(s_d) G_p(s_d)| &\approx 0.52473
\end{aligned}$$

Therefore:

$$K_c = \frac{1}{|G_c(s_d) G_p(s_d)|} \approx 1.90571$$

The final controller transfer function was then found to be:

$$G_c(s) = \frac{1.90571(s + 0.1)(s + 0.0221733)}{s}$$

Using [10], [9] and [8] the PID values where found to be:

$$\begin{aligned}
K_p &= K_c(z_1 + z_2) = 0.232827 \\
K_i &= K_c(z_1 z_2) = 0.0042256 \\
K_d &= K_c = 1.90571
\end{aligned}$$

In order to confirm the design, the root locus was made using matlab, where the root locus plot has an intersection very close to the design point.

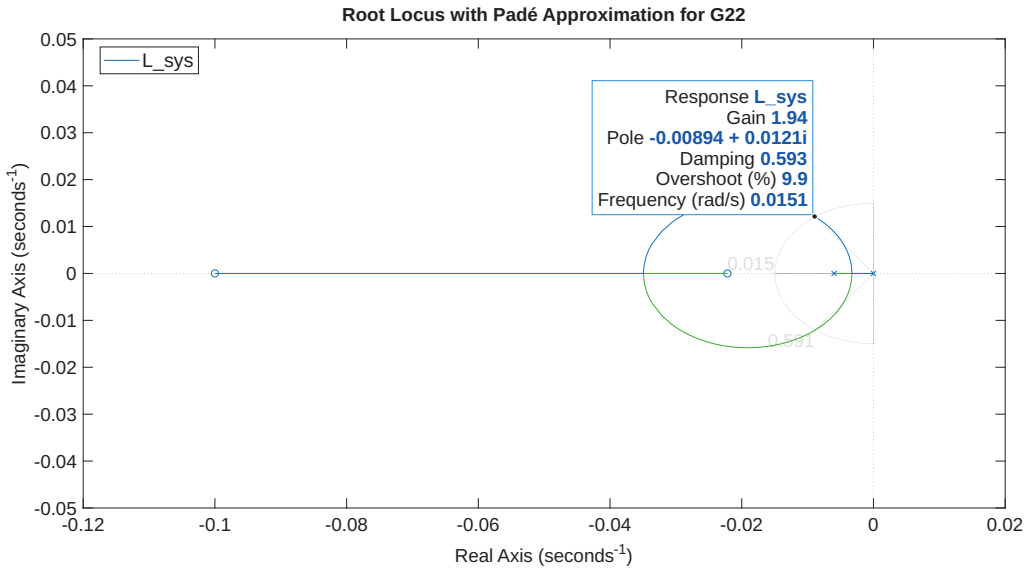



Figure 7: Root Locus plot of G22 with PID controller showing the intersection with the design point.

The resulting time domain comparison of the new closed loop transfer function and the open loop transfer function are shown below as normalised step responses.

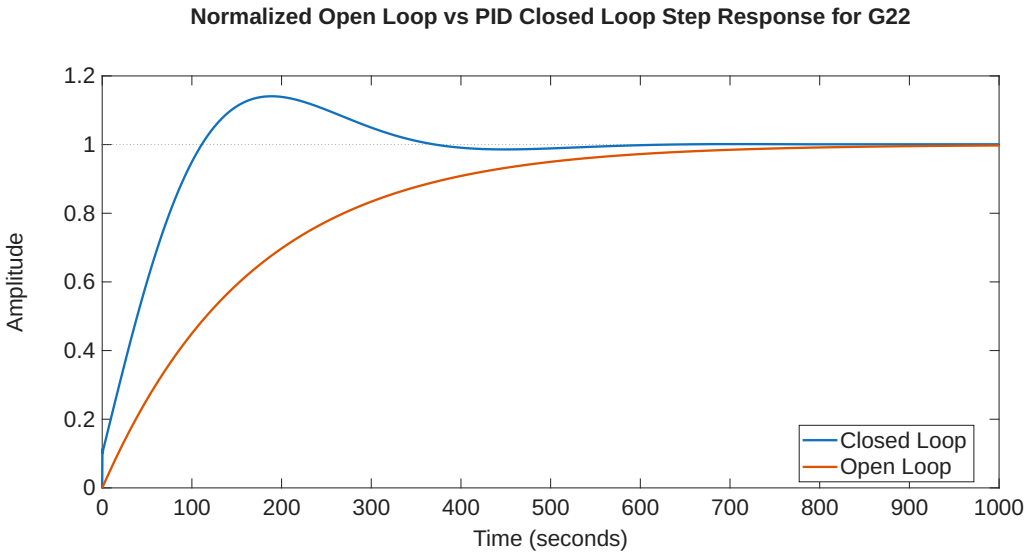



Figure 8: Time domain comparison of open loop plant transfer function against the closed loop system transfer function for G22

The following table compares the open loop and closed loop step response information.

Table 5: Table comparing open vs closed loop step response characteristics of G22

| Step Response Parameter | Open Loop | Closed Loop |
|---|---|---|
| Rise Time (s) | 367.15 | 90.64 |
| Transient Time (s) | 653.90 | 335.60 |
| Settling Time (s) | 653.90 | 335.60 |
| Overshoot (%) | 0.00 | 14.07 |
| Undershoot (%) | -0.00 | -0.00 |
| Peak Time (s) | 1300.59 | 188.79 |

It is evident from figure 8 and table 5 that the steady state error specification is met, along with a reduction in rise time of $\times 4.051$. The overshoot specification is not exactly met, as it is 4.07% higher than the specified 10%.

# 3 Results

## 3.1 Root Locus Designs

The plots below show the measured experiment data for both controlled systems $G_{11}$ and $G_{22}$ when the controllers were designed using root locus techniques. Furthermore, the simulated results from the Simulink model are shown.

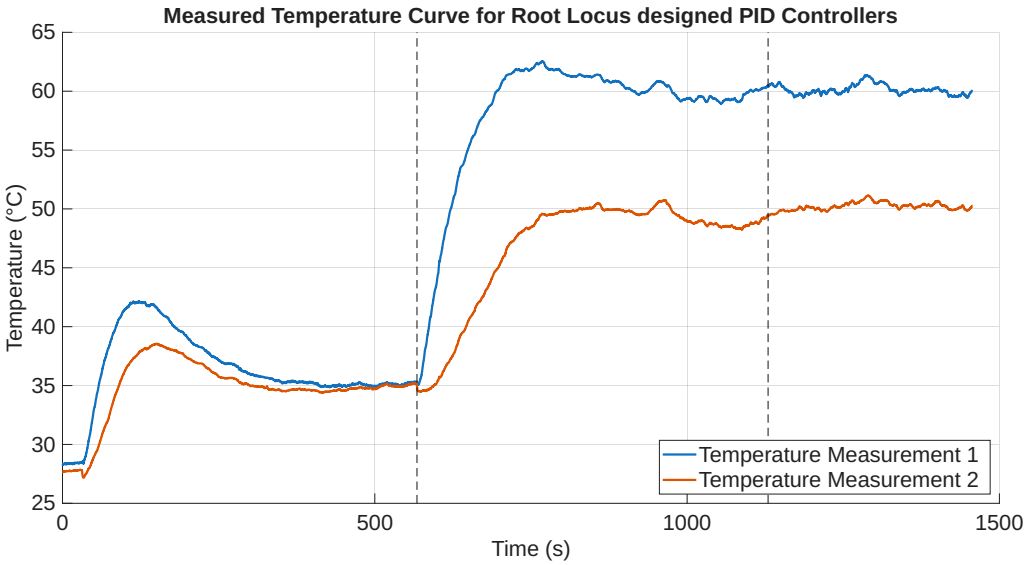



Figure 9: Measured Temperature results for the root locus designed controllers, with state transitions shown using dotted vertical lines

Performing manual measurements on the manual data resulted in the estimated overshoot and rise time values for each state transition shown in the table below:

Table 6: Measured rise times and overshoots for each state transition for the root locus designed system

| **State Transition** | **Overshoot (%)** | **Rise Time (s)** |
|---|---|---|
| State 1 ($G_{11}$) | 20.29 | 18.17 |
| State 1 ($G_{22}$) | 10.15 | 37.59 |
| State 2 ($G_{11}$) | 3.33 | 90.05 |
| State 3 ($G_{22}$) | 2.0 | 37.00 |

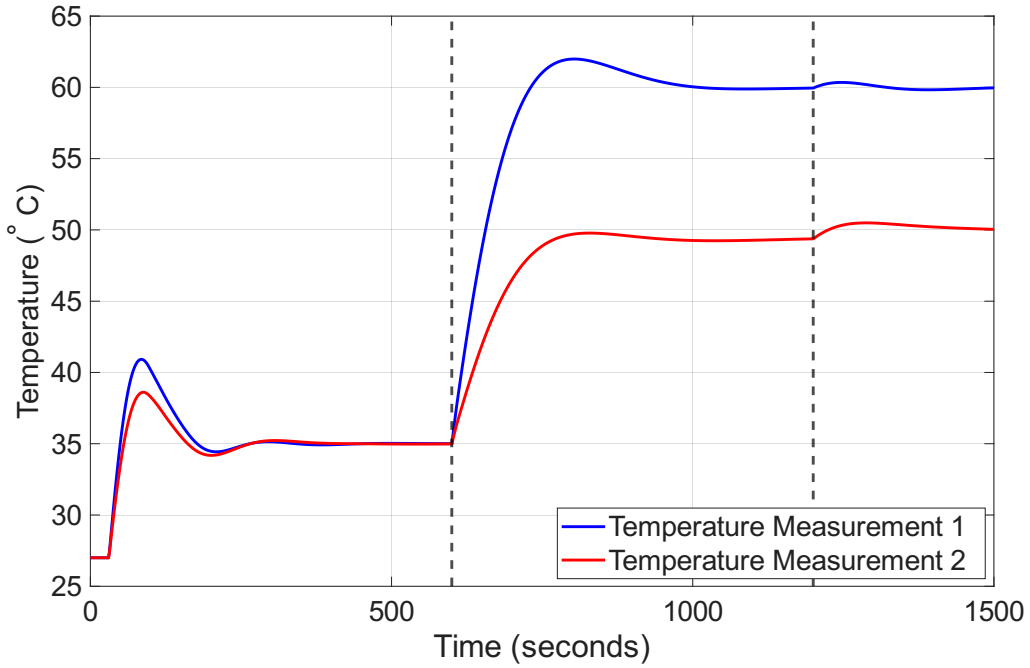



Figure 10: Measured simulated temperature results for the root locus designed controllers, with state transitions shown using dotted vertical lines

Similarly, manual graphical measurements were made for the simulated results, with the table below showing the overshoots and rise times associated with each state transition.

Table 7: Simulated rise times and overshoots for each state transition for the root locus designed system

| **State Transition** | **Overshoot (%)** | **Rise Time (s)** |
|---|---|---|
| State 1 ($G_{11}$) | 16.90 | 14.56 |
| State 1 ($G_{22}$) | 10.35 | 19.59 |
| State 2 ($G_{11}$) | 3.40 | 95.08 |
| State 3 ($G_{22}$) | 0.90 | 19.72 |

Below, two plots show both the measured and simulated control actions performed by the PID controllers.

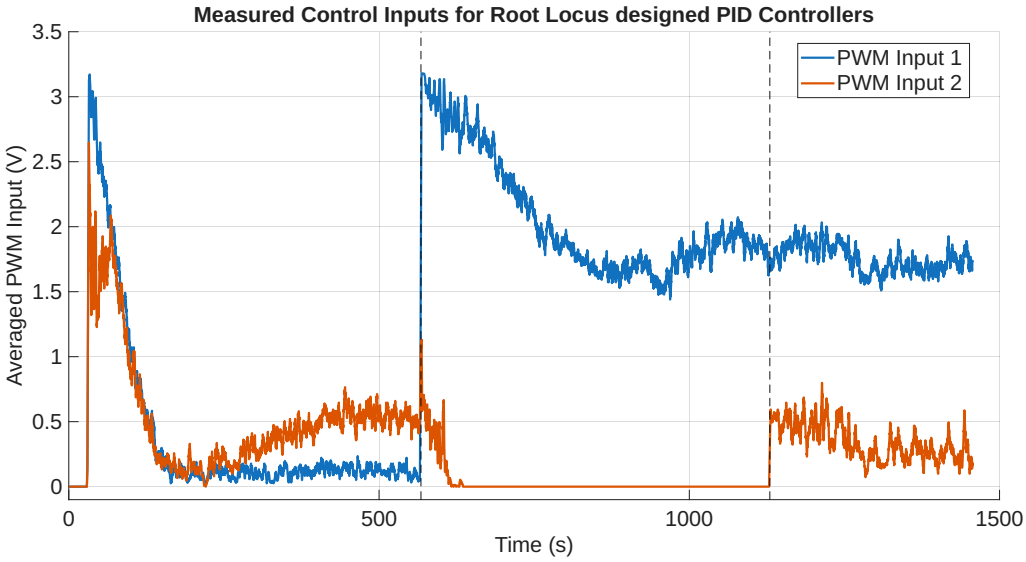



Figure 11: Measured control input results for the root locus designed controllers, with state transitions shown using dotted vertical lines

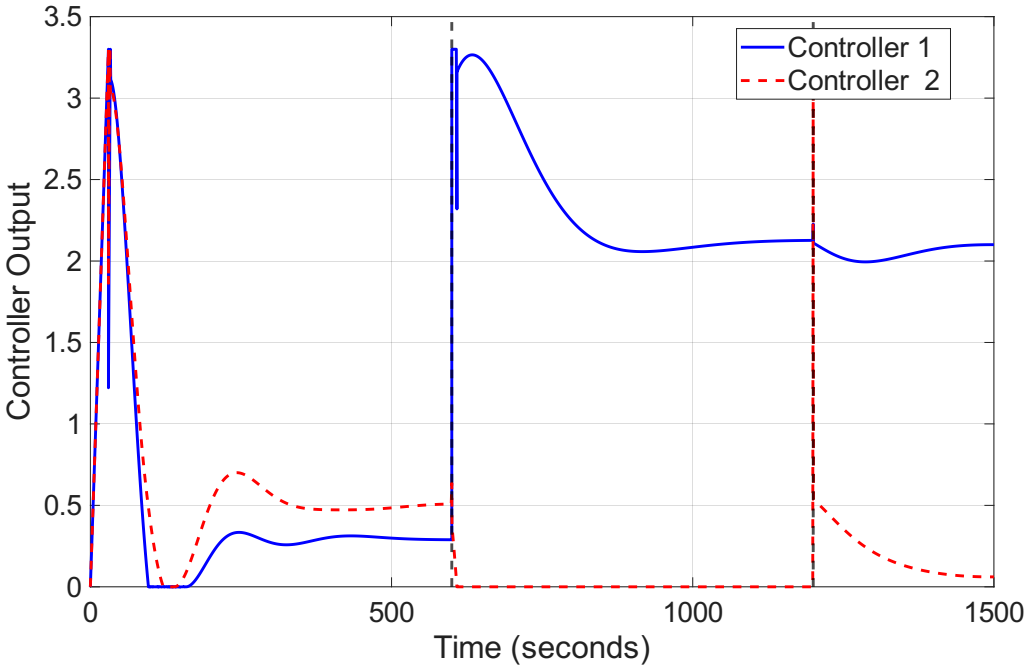



Figure 12: Measured simulated control input results for the root locus designed controllers, with state transitions shown using dotted vertical lines

## 3.2 Frequency Response Designs

The plots below show the measured experiment data for both controlled systems $G_{11}$ and $G_{22}$ when the controllers were designed using frequency response techniques. Furthermore, the simulated results from the Simulink model are shown.

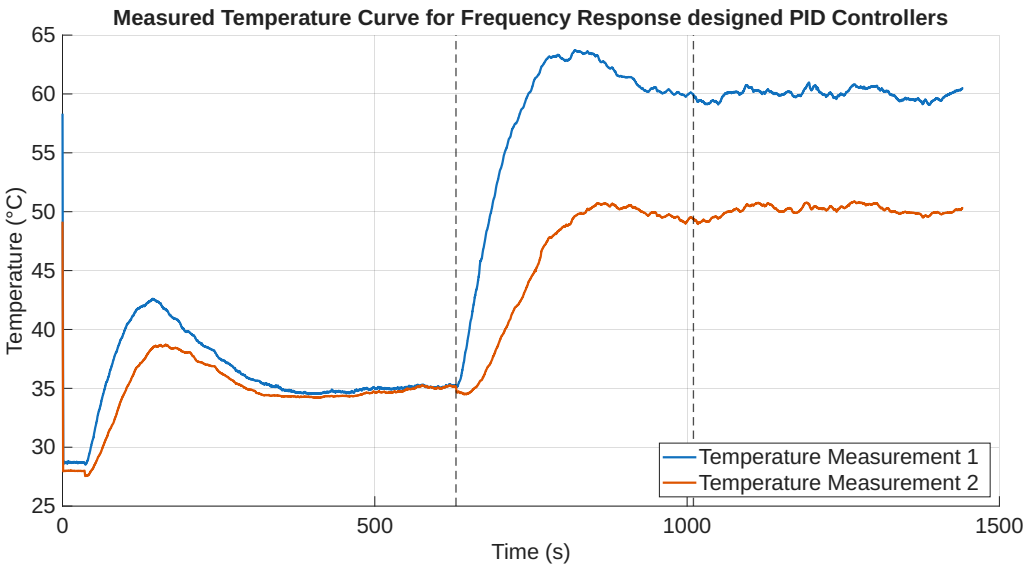



Figure 13: Measured Temperature results for the frequency response designed controllers, with state transitions shown using dotted vertical lines

Performing manual measurements on the manual data resulted in the estimated overshoot and rise time values for each state transition shown in the table below:

Table 8: Measured rise times and overshoots for each state transition for the frequency response designed system

| **State Transition** | **Overshoot (%)** | **Rise Time (s)** |
|---|---|---|
| State 1 ($G_{11}$) | 21.14 | 22.18 |
| State 1 ($G_{22}$) | 10.43 | 43.85 |
| State 2 ($G_{11}$) | 6.17 | 82 |
| State 3 ($G_{22}$) | 1.68 | 37.63 |

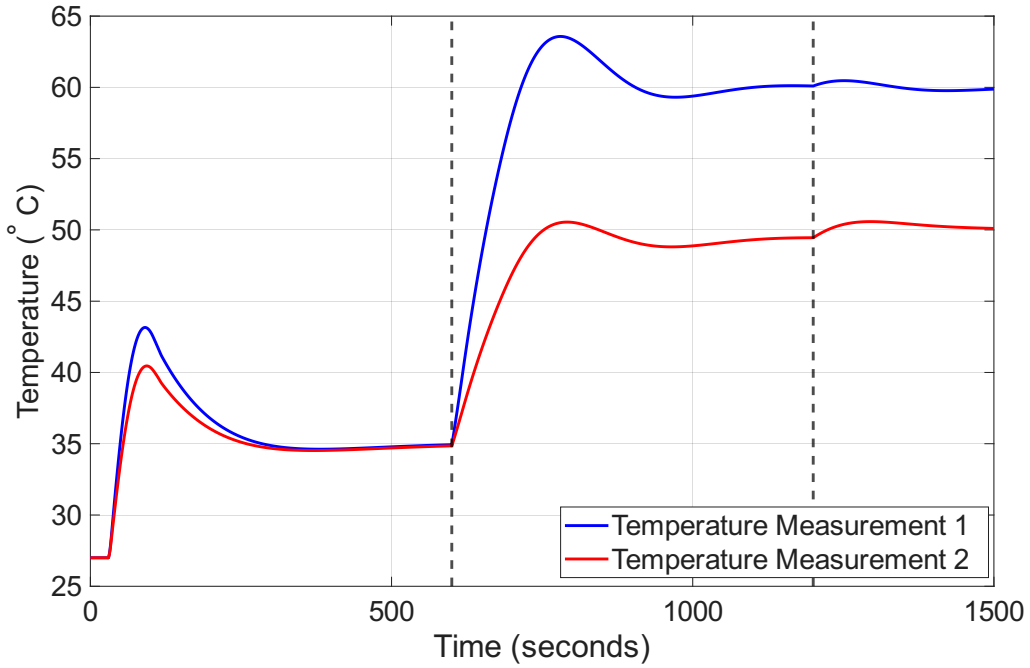



Figure 14: Measured simulated temperature results for the frequency response designed controllers, with state transitions shown using dotted vertical lines

Again, the table below shows the response characteristics measured from the simulated results.

Table 9: Simulated rise times and overshoots for each state transition for the frequency response designed system

| **State Transition** | **Overshoot (%)** | **Rise Time (s)** |
|---|---|---|
| State 1 ($G_{11}$) | 23.54 | 13.91 |
| State 1 ($G_{22}$) | 16.09 | 18.27 |
| State 2 ($G_{11}$) | 5.78 | 88.89 |
| State 3 ($G_{22}$) | 0.95 | 18.63 |

Below, two plots show both the measured and simulated control actions performed by the PID controllers.

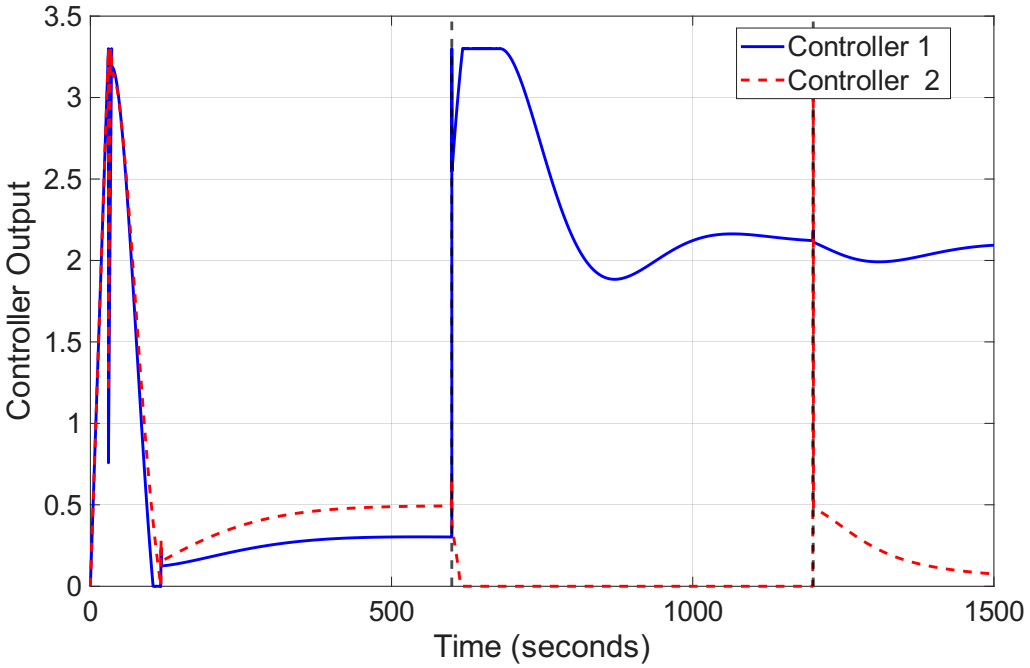



Figure 15: Measured simulated control input results for the frequency response designed controllers, with state transitions shown using dotted vertical lines

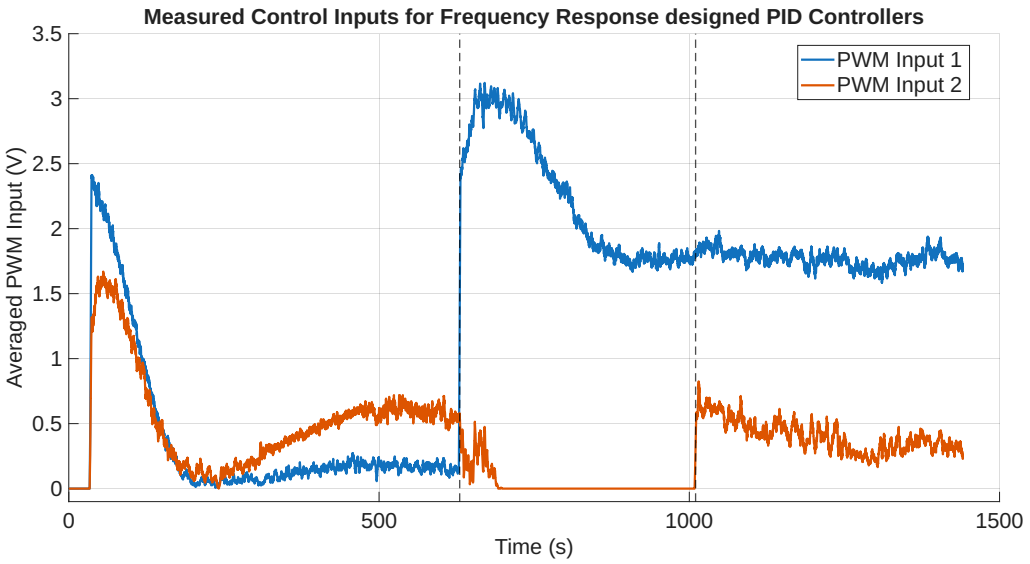



Figure 16: Measured control input results for the frequency response designed controllers, with state transitions shown using dotted vertical lines

# 4 Discussion

## 4.1 Reference Tracking Simulation Results

### 4.1.1 Comparison of Controllers Designed for $G_{11}(s)$

Analysing the results for the controller design for $G_{11}$ shows how the frequency response technique yielded the worse theoretical step response characteristics. With the frequency response having an overshoot that is 7.26% over the desired 10%, and the root locus technique having an overshoot that is 3.75% over the desired 10%.

Similarly, even though both controller designs have a rise time that is less than the desired 96.59 sec, the root locus design had a rise time that is 25.50 sec faster, while the frequency response design had a rise time that is 11.30 sec faster. The root locus design also has a 0.00% undershoot, while the frequency response design has a undershoot of 8.86%.

As seen above, even though both controller designs meet the rise time requirements, they both fail in exactly reaching/exceeding the overshoot specification. This is due to both design techniques using second order approximations to find design points, while the actual system has a higher order due to the pole and zeros introduced by the PID controller. The effect of the PID controller zeros is easily seen on the root locus plot 5 where the zero $z_1 = 0.0295055$ is only $0.0295055 - 0.01121 = 0.0182955$ away from the real component of the design point.

Table 10: Table comparing controller design parameters for different PID controller designs.

| Step Response Parameter | Open Loop | Frequency Response Technique | Root Locus Technique |
|---|---|---|---|
| Rise Time (s) | 289.08 | 85.29 | 71.09 |
| Transient Time (s) | 514.89 | 432.80 | 263.99 |
| Settling Time (s) | 514.89 | 441.73 | 263.99 |
| Overshoot (%) | 0.00 | 17.26 | 13.75 |
| Undershoot (%) | -0.00 | 8.86 | -0.00 |
| Peak Time (s) | 963.45 | 176.04 | 148.79 |

### 4.1.2 Comparison of Controllers Designed for $G_{22}(s)$

Analysing the results for the controller design for $G_{22}$ shows how the frequency response technique again yielded the worse theoretical step response characteristics than the root locus technique. With the frequency response design having an overshoot that is 7.10% over the desired 10%, and the root locus design having an overshoot that is 4.07% over the desired 10%.

Again, even though both controller designs have a rise time that is less than the desired 122.55 sec, the root locus design had a rise time that is 31.91 sec faster, while the frequency response design had a rise time that is 15.08 sec faster. The root

locus design also has a 0.00% undershoot, while the frequency response design has a undershoot of 7.40%.

Table 11: Table comparing controller design parameters for different PID controller designs.

| Step Response Parameter | Open Loop | Frequency Response Technique | Root Locus Technique |
|---|---|---|---|
| Rise Time (s) | 367.15 | 107.47 | 90.64 |
| Transient Time (s) | 653.90 | 548.75 | 335.60 |
| Settling Time (s) | 653.90 | 559.16 | 335.60 |
| Overshoot (%) | 0.00 | 17.10 | 14.07 |
| Undershoot (%) | -0.00 | 7.40 | -0.00 |
| Peak Time (s) | 1300.59 | 224.25 | 188.79 |

## 4.2 Measured and Simulated Experiment Results

### 4.2.1 Frequency Response Technique

Table 12: Comparison of Simulated vs. Measured Transient Performance for Frequency Response PID Controllers

| | **Overshoot (%)** | | **Rise Time (s)** | |
|---|---|---|---|---|
| **State Transition** | **Simulated** | **Measured** | **Simulated** | **Measured** |
| State 1 ($G_{11}$) | 23.54 | 21.14 | 13.91 | 22.18 |
| State 1 ($G_{22}$) | 16.09 | 10.43 | 18.27 | 43.85 |
| State 2 ($G_{11}$) | 5.78 | 6.17 | 88.89 | 82 |
| State 3 ($G_{22}$) | 0.95 | 1.68 | 18.63 | 37.63 |

Table 12 compares the overshoot and rise time of the simulated Simulink model against the measured physical system (Figure 13 and 14). Overall, the physical implementation exhibited less overshoot and a noticeably longer rise time. This difference primarily occurs because the plant transfer function approximates a nonlinear thermodynamic process as a perfectly linear system. Unmodeled environmental variables, such as ambient laboratory temperature shifts or constant convective cooling from air conditioning drafts, act as continuous thermal disturbances. Because real-world heat loss is exponential rather than linear, the physical environment drains heat much faster than the linear model predicts. This acts as physical damping that slows the rise time and suppresses the expected overshoot.

However, as seen in Figure 16 and Figure 15, the measured steady-state control action sits at a lower average voltage than the simulation predicted. This indicates that the physical system is more efficient at maintaining its temperature once settled. This discrepancy is likely due to the linear model underestimating the plant's true

DC gain during system identification, or a warmer ambient laboratory temperature during testing, which reduces the total electrical power required to hold a specific setpoint compared to the model's baseline assumption.

### 4.2.2 Root Locus Technique

Table 13: Comparison of Simulated vs. Measured Transient Performance for Root Locus PID Controllers

| | **Overshoot (%)** | | **Rise Time (s)** | |
|---|---|---|---|---|
| **State Transition** | **Simulated** | **Measured** | **Simulated** | **Measured** |
| State 1 ($G_{11}$) | 16.90 | 20.29 | 14.56 | 18.17 |
| State 1 ($G_{22}$) | 10.35 | 10.15 | 19.59 | 37.59 |
| State 2 ($G_{11}$) | 3.40 | 3.33 | 95.08 | 90.05 |
| State 3 ($G_{22}$) | 0.90 | 2.0 | 19.72 | 37.00 |

Table 13 compares the overshoots and rise times of the measured physical system (plotted in figure 9) to those of the simulated Simulink model. (figure 10) It is evident that the plant $G_{11}$ had an overshoot and rise time larger than the simulation during state 1, while in the transition to state 2, it had a slightly faster rise time and a slightly lower overshoot.

The plant $G_{22}$ had significantly higher rise times than the simulation for all the state transitions, while having a slightly better overshoot in the transition to state 1, and a slightly worse overshoot in the transition to state 3. Overall for both systems the simulation performed better in all the design criteria, showing a more aggressive and fast approach to the setpoint than the physical systems.

Factors that can explain these differences are the same as those mentioned during the discussion of the frequency response technique results. External factors like laboratory temperature shifts, cooling drafts, and the inaccuracies due to estimating non-linear thermal cooling and heating as a linear system.

### 4.2.3 Comparison of PID Coefficients Between Design Methods

Table 14 summarises the PID coefficients obtained for $G_{11}$ and $G_{22}$ using both design methods.

Table 14: Comparison of PID coefficients across design methods

| | $G_{11}$ **(PWM1 → T1)** | | $G_{22}$ **(PWM2 → T2)** | |
|---|---|---|---|---|
| **Coefficient** | **Freq. Response** | **Root Locus** | **Freq. Response** | **Root Locus** |
| $K_p$ | 0.0947 | 0.1527 | 0.1488 | 0.2328 |
| $K_i$ | 0.00257 | 0.003479 | 0.00314 | 0.004226 |
| $K_d$ | 0.6901 | 1.17921 | 1.174 | 1.90571 |

A consistent pattern is visible across both plants: the root locus method produces larger $K_p$, $K_i$, and $K_d$ values than the frequency response method. Since $K_d = K_c$ and both $K_p = K_c(z_1 + z_2)$ and $K_i = K_c z_1 z_2$ scale directly with $K_c$, this difference originates in how each method determines $K_c$. The root locus method enforces the magnitude condition at the complex design point $s_d$, where the plant has lower magnitude, requiring a larger $K_c$. The frequency response method enforces the same condition at the real frequency $\omega_s = 0.8\omega_{BW}$, where the plant magnitude is higher, so a smaller $K_c$ suffices. For $G_{22}$ this gives $K_c = 1.906$ (root locus) versus $K_c = 1.174$ (frequency response), a factor of $1.6\times$.

The D-action zeros also differ slightly between the two methods , $z_1 = 0.02674$ (frequency response) versus $z_1 = 0.02217$ (root locus) for $G_{22}$ , further amplifying the coefficient differences through the $K_p$ and $K_i$ expressions. Despite these numerical differences, both controller pairs met the design specifications and performed comparably in the physical implementation, confirming that the plant is robust to this level of gain variation between the two design methods.

# References

[1] N. S. Nise, *Control Systems Engineering*, 8th. John Wiley & Sons, 2019, ISBN: 978-1-119-47421-0.

# List of Tables

1 2x2 Process Transfer Function Matrix . . . . . 4
2 Table comparing open vs closed loop step response characteristics of G11 . . . . . 6
3 Table comparing open vs closed loop step response characteristics of G22 . . . . . 9
4 Table comparing open vs closed loop step response characteristics of G11 . . . . . 12
5 Table comparing open vs closed loop step response characteristics of G22 . . . . . 15
6 Measured rise times and overshoots for each state transition for the root locus designed system . . . . . 16
7 Simulated rise times and overshoots for each state transition for the root locus designed system . . . . . 17
8 Measured rise times and overshoots for each state transition for the frequency response designed system . . . . . 19
9 Simulated rise times and overshoots for each state transition for the frequency response designed system . . . . . 20
10 Table comparing controller design parameters for different PID controller designs. . . . . 22
11 Table comparing controller design parameters for different PID controller designs. . . . . 23
12 Comparison of Simulated vs. Measured Transient Performance for Frequency Response PID Controllers . . . . . 23
13 Comparison of Simulated vs. Measured Transient Performance for Root Locus PID Controllers . . . . . 24
14 Comparison of PID coefficients across design methods . . . . . 24

# List of Figures

1 G11 Open-Loop Bode Plot verifying the 58.6° Phase Margin at 0.0177 rad/s. . . . . 5
2 G11 Normalized Open-Loop vs Closed-Loop Step Response. . . . . 6
3 G22 Open-Loop Bode Plot verifying the 58.5° Phase Margin at 0.0139 rad/s. . . . . 8
4 G22 Normalized Open-Loop vs Closed-Loop Step Response. . . . . 8
5 Root Locus plot of G11 with PID controller showing the intersection with the design point. . . . . 11
6 Time domain comparison of open loop plant transfer function against the closed loop system transfer function for G11 . . . . . 12
7 Root Locus plot of G22 with PID controller showing the intersection with the design point. . . . . 14

8 Time domain comparison of open loop plant transfer function against the closed loop system transfer function for G22 . . . . . 14
9 Measured Temperature results for the root locus designed controllers, with state transitions shown using dotted vertical lines . . . . . 16
10 Measured simulated temperature results for the root locus designed controllers, with state transitions shown using dotted vertical lines . . 17
11 Measured control input results for the root locus designed controllers, with state transitions shown using dotted vertical lines . . . . . 18
12 Measured simulated control input results for the root locus designed controllers, with state transitions shown using dotted vertical lines . . 18
13 Measured Temperature results for the frequency response designed controllers, with state transitions shown using dotted vertical lines . . 19
14 Measured simulated temperature results for the frequency response designed controllers, with state transitions shown using dotted vertical lines . . . . . 20
15 Measured simulated control input results for the frequency response designed controllers, with state transitions shown using dotted vertical lines . . . . . 21
16 Measured control input results for the frequency response designed controllers, with state transitions shown using dotted vertical lines . . 21

# A Code

## A.1 Plotting Code

### A.1.1 Measured Results

```
filepath = fullfile('..', 'DataPrac3', 'PID_root_V4.csv')
    ;
PID_Root_Data = readmatrix(filepath);
PID_Root_Step = PID_Root_Data(10:end,1:5);

filepath = fullfile('..', 'DataPrac3', 'PID_freq_V4.csv')
    ;
PID_Freq_Data = readmatrix(filepath);
PID_Freq_Step = PID_Freq_Data(10:end,1:5);

y = PID_Root_Step(:, 1:2);
time = PID_Root_Step(:, 5)/1000;
pwms = PID_Root_Step(:, 3:4);
tempName = "Measured Temperature Curve for Root Locus
    designed PID Controllers";
inputName = "Measured Control Inputs for Root Locus
    designed PID Controllers";
saveName = "PID_Root";
trans_times = [567516, 1129700]/1000;

plotResults(pwms, y, time, tempName, inputName, saveName,
    trans_times);

y = PID_Freq_Step(:, 1:2);
time = PID_Freq_Step(:, 5)/1000;
pwms = PID_Freq_Step(:, 3:4);
tempName = "Measured Temperature Curve for Frequency
    Response designed PID Controllers";
inputName = "Measured Control Inputs for Frequency
    Response designed PID Controllers";
saveName = "PID_Freq";
trans_times = [629974, 1010150]/1000;
plotResults(pwms, y, time, tempName, inputName, saveName,
    trans_times);

function plotResults(PWM_Input, dataY, time, figNameTemp,
    figNamePWM, saveName, state_trans_times)
figure;
% subplot(2, 1, 1);
hold on; grid on;

%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%
%Plot the actual temperature output.
```

```
%Plot both temeratures.
t1 = plot(time, dataY(:, 1), LineWidth=2);
t2 = plot(time, dataY(:, 2), LineWidth=2);
title(figNameTemp);
legend([t1, t2], {'Temperature Measurement 1', '
   Temperature Measurement 2'}, 'Location','southeast',
   FontSize=14);
ylabel('Temperature °(C)');
xlabel('Time (s)');

if ~isempty(state_trans_times)
    for transitionTime = state_trans_times
        xline(transitionTime, '--k', 'LineWidth', 1.2, '
           HandleVisibility', 'off');
    end
end

fontsize(gcf, 20, "points");
hold off;

filepath = fullfile('..', '..', 'Prac-3-Report', 'Images'
   , 'Results', saveName + "_Temps.pdf");
exportgraphics(gcf, filepath, 'ContentType','vector');

figure;
% subplot(2, 1, 2);
hold on; grid on;

% Plot the PWM input signal.
ylim([-0.1, 3.5])
plot(time, movmean(PWM_Input(:, 1), 500), LineWidth=2);
plot(time, movmean(PWM_Input(:, 2), 500), LineWidth=2);
title(figNamePWM)
legend('PWM Input 1', 'PWM Input 2', 'Location','best',
   FontSize=14);
xlabel('Time (s)');
ylabel('Averaged PWM Input (V)');

if ~isempty(state_trans_times)
    for transitionTime = state_trans_times
        xline(transitionTime, '--k', 'LineWidth', 1.2, '
           HandleVisibility', 'off');
    end
end

fontsize(gcf, 20, "points");
hold off;
```

```
filepath = fullfile('..', '..', 'Prac-3-Report', 'Images'
    , 'Results', saveName + "_Inputs.pdf");
exportgraphics(gcf, filepath, 'ContentType','vector');

end
```

### A.1.2 Root Locus Step Responses

```
%Obtaining the transfer function

%Package the input arrays of both transistors into one
    matrix (Needs to be
%columns)
filepath = fullfile('..', 'Data1', 'Step_PWM1_V0.csv');
PWM1StepV1Data = readmatrix(filepath);
PWM1StepV1 = PWM1StepV1Data(7920:end,1:5);

filepath = fullfile('..', 'Data1', 'Step_PWM2_V0.csv');
PWM2StepV0Data = readmatrix(filepath);
PWM2StepV0 = PWM2StepV0Data(6400:end,1:5);

%pwm1 data prep
V_PWM1 = [PWM1StepV1(:,3)];
Temp_PWM1 = [PWM1StepV1(:,1)-22.28, PWM1StepV1(:,2)
    -21.24];
time_step = 0.005;

%pwm2 data prep
V_PWM2 = [PWM2StepV0(:,4)];
Temp_PWM2 = [PWM2StepV0(:,1)-20.26, PWM2StepV0(:,2)
    -19.05];

%use iddata to set up the data for tfest
tfest_data1 = iddata(Temp_PWM1, V_PWM1, time_step);
tfest_data2 = iddata(Temp_PWM2, V_PWM2, time_step);

%estimate nr of poles and zeros, 2 poles since there are
    two transistors
n_poles = 1;
n_zeros = 0;

%estimate the transfer functions
% simo_transfer1 = tfest(tfest_data1(:, 1, 1), n_poles,
    n_zeros, NaN) % PWM1 to T1
% simo_transfer2 = tfest(tfest_data2(:, 2, 1), n_poles,
    n_zeros, NaN) % PWM2 to T2
% G12 = tfest(tfest_data2(:, 1, 1), n_poles, n_zeros, NaN
    )
% G21 = tfest(tfest_data1(:, 2, 1), n_poles, n_zeros, NaN
```

```
    )

s = tf('s');
G11 = exp(-0.145*s) * (0.1175/(s + 0.007592));
G22 = exp(-0.145*s) * (0.05872/(s + 0.005984));
G12 = exp(-0.145*s) * (0.03658/(s + 0.005254));
G21 = exp(-0.145*s) * (0.06368/(s + 0.006012));


%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%% For G11
    %%%%%%%%%%%%%%%%%%%%%%%%%%
G_c11 = 1.17921 * ((s + 0.1)*(s + 0.0295055)/s);
plotRootLocus(G11, G_c11, 1.17921, "Root Locus with ePad
    Approximation for G11", "G11_root.pdf");

omega_n = 0.018967;
zeta = 0.5912;

G11_SecondOrder = (omega_n^2)/(s^2 + 2*zeta*omega_n*s +
    omega_n^2);

plotStep(G11, G_c11, G11, "Normalized Open Loop vs PID
    Closed Loop Step Response for G11", "G11_time.pdf");

%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%% For G22
    %%%%%%%%%%%%%%%%%%%%%%%%%%
G_c22 = 1.90571 * ((s + 0.1)*(s + 0.0221733)/s);
plotRootLocus(G22, G_c22, 1.90571, "Root Locus with ePad
    Approximation for G22", "G22_root.pdf");

omega_n = 0.01495;
zeta = 0.5912;

G22_SecondOrder = (omega_n^2)/(s^2 + 2*zeta*omega_n*s +
    omega_n^2);

plotStep(G22, G_c22, G22, "Normalized Open Loop vs PID
    Closed Loop Step Response for G22", "G22_time.pdf");

function plotStep(plant, controller, Second_order_approx,
     figName, fileSaveName)

opts = timeoptions('cstprefs');
opts.Title.FontSize = 20;
opts.XLabel.FontSize = 20;
opts.YLabel.FontSize = 20;
opts.TickLabel.FontSize = 16;
```

```
%Get feedback tf
G_closed = feedback(controller * plant, 1);

%Plot ideal 2nd order response with controlled tf.
figure;
hold on; grid on;
stepplot(G_closed, opts, Name="Closed Loop", LineWidth=2)
    ;
stepplot(Second_order_approx/dcgain(Second_order_approx),
     opts, Name="Open Loop", LineWidth=2);
legend('Location','best', FontSize=20);
title(figName);

%Print out table comparing characteristics of the two.
G_closed_info = stepinfo(G_closed);
ideal_info = stepinfo(Second_order_approx);

fields = fieldnames(G_closed_info);

disp("For" + figName)
for i = 1:numel(fields)
    fieldName = fields{i};
    fieldValue_open = ideal_info.(fieldName);
    fieldValue_closed = G_closed_info.(fieldName);

    fprintf('%s & %.2f & %.2f \\\\ \n', fieldName,
       fieldValue_open, fieldValue_closed);
end

%Update font sizes.
fontsize(gcf, 20, "points");
hold off;

filepath = fullfile('..', '..', 'Prac-3-Report', 'Images'
    , 'RootLocus', fileSaveName);
exportgraphics(gcf, filepath, 'ContentType','vector');

end

function plotRootLocus(plant, controller, K_c, figName,
    fileSaveName)
G_pade = pade(plant, 1);
G_c = 1/K_c * controller;

L_sys = G_pade * G_c;

figure("Name", 'Root Locus PID Verification')
rlocus(L_sys)
```

```
% set(findall(gca, 'Type', 'Line'), 'LineWidth', 2); %
   Change 2 to your desired thickness
hold on;

% 4. Target Design Specifications
Mp = 0.10; % 10% overshoot
zeta = -log(Mp) / sqrt(pi^2 + (log(Mp))^2); % ~0.5912

tr_uncomp = log(9) / plant.Denominator{1}(2);
tr_req = tr_uncomp / 3; % ~96.47 seconds
wn = (1.76*zeta^3 - 0.417 * zeta^2 + 1.039*zeta + 1)/
   tr_req; %(pi - acos(zeta)) / (tr_req * sqrt(1 - zeta
   ^2)); % ~0.0283 rad/s

% Target closed-loop dominant pole
sd_real = -zeta * wn;
sd_imag = wn * sqrt(1 - zeta^2);
sd = sd_real + 1i*sd_imag;

% Overlay damping ratio and natural frequency grid
sgrid(zeta, wn);

% Mark the desired closed-loop pole s_d
% plot(real(sd), imag(sd), 'r*', 'MarkerSize', 12, '
   LineWidth', 2, 'DisplayName', 'Target s_d');
% plot(real(sd), -imag(sd), 'r*', 'MarkerSize', 12, '
   LineWidth', 2, 'HandleVisibility', 'off');

% Formatting
title(figName);
legend('show', 'Location', 'best');
axis([-0.12 0.02 -0.05 0.05]); % Zoom into relevant locus
    area
grid on;

% 2. Find the Root Locus Line Closest to target s_d
sd_target = sd; % Your target s_d
hLines = findobj(gca, 'Type', 'Line');
bestLine = [];
bestIdx = 1;
minDist = inf;

for k = 1:length(hLines)
    xData = hLines(k).XData;
    yData = hLines(k).YData;
    if ~isempty(xData)
        dist = (xData - real(sd_target)).^2 + (yData -
           imag(sd_target)).^2;
```

```
            [val, idx] = min(dist);
            if val < minDist
                minDist = val;
                bestLine = hLines(k);
                bestIdx = idx;
            end
        end
    end

    % 3. Create Native Data Tip (Modern R2019b+ syntax)
    if ~isempty(bestLine)
        targetX = bestLine.XData(bestIdx);
        targetY = bestLine.YData(bestIdx);

        % Directly attach data tip to line object
        dt = datatip(bestLine, targetX, targetY);
    end

    %Update font sizes.
    fontsize(gcf, 16, "points");
    hold off;

    filepath = fullfile('..', '..', 'Prac-3-Report', 'Images'
       , 'RootLocus', fileSaveName);
    exportgraphics(gcf, filepath, 'ContentType','vector');
    end
```

## A.2 Model Fit Code

Listing 1: Model fitting and plotting code

```
% Obtaining the transfer function
% Package the input arrays of both transistors into one
   matrix (Needs to be columns)
PWM1StepV1Data = readmatrix('..\Data1\Step_PWM1_V0.csv');
PWM1StepV1 = PWM1StepV1Data(7920:end,1:5);
PWM2StepV0Data = readmatrix('..\Data1\Step_PWM2_V0.csv');
PWM2StepV0 = PWM2StepV0Data(6400:end,1:5);

PWM1TestDataFile = readmatrix('..\Data1\
   Step_PWM1_VtestData50.csv');
PWM1TestData = PWM1TestDataFile(6230:end,1:5);
PWM2TestDataFile = readmatrix('..\Data1\
   Step_PWM2_VtestData50.csv');
PWM2TestData = PWM2TestDataFile(6160:end,1:5);

% pwm1 data prep
V_PWM1 = [PWM1StepV1(:,3)];
Temp_PWM1 = [PWM1StepV1(:,1)-22.28, PWM1StepV1(:,2)
```

```
    -21.24];
time_step = 0.005;

% pwm2 data prep
V_PWM2 = [PWM2StepV0(:,4)];
Temp_PWM2 = [PWM2StepV0(:,1)-20.26, PWM2StepV0(:,2)
    -19.05];

% pwm1 test data prep
V_PWM1_Test = [PWM1TestData(:,3)];
Temp_PWM1_test = [PWM1TestData(:,1)-21.2, PWM1TestData
    (:,2)-20.2];

% pwm2 test data prep
V_PWM2_Test = [PWM2TestData(:,4)];
Temp_PWM2_test = [PWM2TestData(:,1)-21.1, PWM2TestData
    (:,2)-20.2] ;

% use iddata to set up the data for tfest
tfest_data1 = iddata(Temp_PWM1, V_PWM1, time_step);
tfest_data2 = iddata(Temp_PWM2, V_PWM2, time_step);
testData1 = iddata(Temp_PWM1_test, V_PWM1_Test, time_step
    );
testData2 = iddata(Temp_PWM2_test, V_PWM2_Test, time_step
    );

% estimate nr of poles and zeros
n_poles = 1;
n_zeros = 0;

% Estimate the transfer functions independently (SISO) to
    avoid idss error
% tfest_data(samples, output, input)
sys11 = tfest(tfest_data1(:, 1, 1), n_poles, n_zeros, NaN
    ); % PWM1 to T1
sys21 = tfest(tfest_data1(:, 2, 1), n_poles, n_zeros, NaN
    ); % PWM1 to T2

sys12 = tfest(tfest_data2(:, 1, 1), n_poles, n_zeros, NaN
    ); % PWM2 to T1
sys22 = tfest(tfest_data2(:, 2, 1), n_poles, n_zeros, NaN
    ); % PWM2 to T2

% Combine the individual SISO models back into SIMO
    systems
simo_transfer1 = [sys11; sys21];
simo_transfer2 = [sys12; sys22];
```

```
% set up graph details
tfest_data1.Name = 'Measured Data';
tfest_data2.Name = 'Measured Data';
testData1.Name = 'Measured Data';
testData2.Name = 'Measured Data';
simo_transfer2.Name = 'Simulated Model';
simo_transfer1.Name = 'Simulated Model';

figure(1)
compare(tfest_data1, simo_transfer1);
legend('Location', 'best');
ylabel('Change in Temperature (C)')

figure(2)
compare(tfest_data2, simo_transfer2);
legend('Location', 'best');
ylabel('Change in Temperature (C)')

figure(3)
compare(testData1, simo_transfer1);
legend('Location', 'best');
ylabel('Change in Temperature (C)')

figure(4)
compare(testData2, simo_transfer2);
legend('Location', 'best');
ylabel('Change in Temperature (C)')

lines = findobj(gcf, 'Type', 'Line');
set(lines, 'LineWidth', 1.5);

% display the transfer functions of PWM1
[num1, den1] = tfdata(simo_transfer1(1, 1), 'v');
delay1 = simo_transfer1(1, 1).IODelay; % Extract dead
   time
[num2, den2] = tfdata(simo_transfer1(2, 1), 'v');
delay2 = simo_transfer1(2, 1).IODelay;

disp('--- Transfer Function 1 (PWM1 to T1) ---');
disp('Numerator:'); disp(num1);
disp('Denominator:'); disp(den1);
disp(['Estimated Dead Time (s): ', num2str(delay1)]);

disp('--- Transfer Function 2 (PWM1 to T2) ---');
disp('Numerator:'); disp(num2);
disp('Denominator:'); disp(den2);
disp(['Estimated Dead Time (s): ', num2str(delay2)]);
```

```
% display transfer functions of PWM2
[num12, den12] = tfdata(simo_transfer2(1, 1), 'v');
delay12 = simo_transfer2(1, 1).IODelay;
[num22, den22] = tfdata(simo_transfer2(2, 1), 'v');
delay22 = simo_transfer2(2, 1).IODelay;

disp('--- Transfer Function 1 (PWM2 to T1) ---');
disp('Numerator:'); disp(num12);
disp('Denominator:'); disp(den12);
disp(['Estimated Dead Time (s): ', num2str(delay12)]);

disp('--- Transfer Function 2 (PWM2 to T2) ---');
disp('Numerator:'); disp(num22);
disp('Denominator:'); disp(den22);
disp(['Estimated Dead Time (s): ', num2str(delay22)]);
```

## A.3 Matlab App Code

Listing 2: App Code For Sampling

```
classdef EBBPrac < matlab.apps.AppBase

    % Properties that correspond to app components
    properties (Access = public)
        UIFigure                    matlab.ui.Figure
        GridLayout                  matlab.ui.container.
           GridLayout
        LeftPanel                   matlab.ui.container.
           Panel
        TabGroup                    matlab.ui.container.
           TabGroup
        Tab2                        matlab.ui.container.Tab
        SamplingtoofastLabel        matlab.ui.control.Label
        UpdateChannelsButton        matlab.ui.control.Button
        DataSaveEditField           matlab.ui.control.
           EditField
        DataSaveEditFieldLabel      matlab.ui.control.Label
        SaveDirEditField            matlab.ui.control.
           EditField
        SaveDirEditFieldLabel       matlab.ui.control.Label
        StopControllingButton       matlab.ui.control.Button
        StartControllingButton      matlab.ui.control.Button
        StartMeasuringButton        matlab.ui.control.
           StateButton
        StopButton                  matlab.ui.control.
           StateButton
        BaudRateEditField           matlab.ui.control.
           NumericEditField
        BaudRateEditFieldLabel      matlab.ui.control.Label
```

```
    COMPortEditField          matlab.ui.control.
       EditField
    COMPortEditFieldLabel     matlab.ui.control.Label
    Tab                       matlab.ui.container.Tab
    Setpoint2EditField        matlab.ui.control.
       NumericEditField
    Setpoint2EditFieldLabel   matlab.ui.control.Label
    D2EditField               matlab.ui.control.
       NumericEditField
    D2EditFieldLabel          matlab.ui.control.Label
    I2EditField               matlab.ui.control.
       NumericEditField
    I2EditFieldLabel          matlab.ui.control.Label
    P2EditField               matlab.ui.control.
       NumericEditField
    P2EditFieldLabel          matlab.ui.control.Label
    Setpoint1EditField        matlab.ui.control.
       NumericEditField
    Setpoint1EditFieldLabel   matlab.ui.control.Label
    D1EditField               matlab.ui.control.
       NumericEditField
    D1EditFieldLabel          matlab.ui.control.Label
    I1EditField               matlab.ui.control.
       NumericEditField
    I1EditFieldLabel          matlab.ui.control.Label
    P1EditField               matlab.ui.control.
       NumericEditField
    P1EditFieldLabel          matlab.ui.control.Label
    RightPanel                matlab.ui.container.
       Panel
    UIAxes_2                  matlab.ui.control.UIAxes
    UIAxes                    matlab.ui.control.UIAxes
end

% Properties that correspond to apps with auto-reflow
properties (Access = private)
    onePanelWidth = 576;
end


properties (Access = private)
    %Live lines 1 and 2 are for the temperature
       measurements.
    liveLine1
    liveLine2

    %Live lines 3 and 4 are for the PWM signals.
    liveLine3
```

```
        liveLine4

        %Live line for setpoint tracking.
        liveLine5

        %PID values and setpoint for the first controller
           .
        P1
        I1
        D1
        setpoint1

        %PID values and setpoint for the second
           controller.
        P2
        I2
        D2
        setpoint2

        disturbance
        start_controlling
        output
        capturing
        COM_port
        baud_rate
        window_size
        esp32
        data_save_name % Description
        data_save_dir

        %
        set1_yline
        set2_yline
    end

    methods (Access = private)

        function updateAllFields(app)
            %Update all fields related to the first
               controller.
            app.P1EditFieldValueChanged();
            app.I1EditFieldValueChanged();
            app.D1EditFieldValueChanged();
            app.Setpoint1EditFieldValueChanged();

            %Update all fields related to the second
               controller.
            app.P2EditFieldValueChanged();
```

```
        app.I2EditFieldValueChanged();
        app.D2EditFieldValueChanged();
        app.Setpoint2EditFieldValueChanged();

        %Update the data save information.
        app.SaveDirEditFieldValueChanged();
        app.DataSaveEditFieldValueChanged();

        %Update the current state information. (
           Baudrate, COMPort, etc.)
        app.BaudRateEditFieldValueChanged();
        app.COMPortEditFieldValueChanged();
    end

    function sendUpdatedFields(app)
        %check if serial connection has already been
           made.
        if isempty(app.esp32)
            app.esp32 = serialport(app.COM_port, app.
               baud_rate);
            configureTerminator(app.esp32, "LF");
        end
        flush(app.esp32);

        pause(1);

        %Make sure all info is read into esp.
        %First send values for the first controller.
        writeline(app.esp32, sprintf("%d, %.10f", 0,
           app.P1));
        writeline(app.esp32, sprintf("%d, %.10f", 1,
           app.I1));
        writeline(app.esp32, sprintf("%d, %.10f", 2,
           app.D1));
        writeline(app.esp32, sprintf("%d, %.10f", 3,
           app.setpoint1));

        %Then send the values for the second
           controller.
        writeline(app.esp32, sprintf("%d, %.10f", 8,
           app.P2));
        writeline(app.esp32, sprintf("%d, %.10f", 9,
           app.I2));
        writeline(app.esp32, sprintf("%d, %.10f", 10,
            app.D2));
        writeline(app.esp32, sprintf("%d, %.10f", 11,
            app.setpoint2));
```

```
            writeline(app.esp32, sprintf("%d, %d", 5, app
                .start_controlling)); %
            writeline(app.esp32, sprintf("%d, %.5f", 7,
                app.capturing)); %
        end
    end


    % Callbacks that handle component events
    methods (Access = private)

        % Value changed function: P1EditField
        function P1EditFieldValueChanged(app, event)
            app.P1 = app.P1EditField.Value;
        end

        % Value changed function: I1EditField
        function I1EditFieldValueChanged(app, event)
            app.I1 = app.I1EditField.Value;
        end

        % Value changed function: D1EditField
        function D1EditFieldValueChanged(app, event)
            app.D1 = app.D1EditField.Value;
        end

        % Value changed function: Setpoint1EditField
        function Setpoint1EditFieldValueChanged(app,
            event)
            app.setpoint1 = app.Setpoint1EditField.Value;
        end

        % Callback function
        function DisturbanceEditFieldValueChanged(app,
            event)
            app.disturbance = app.DisturbanceEditField.
                Value;
        end

        % Callback function
        function DutyCycleEditFieldValueChanged(app,
            event)
            app.start_controlling = app.
                DutyCycleEditField.Value;
        end

        % Callback function
        function OutputDropDownValueChanged(app, event)
```

```
        app.output = str2double(app.OutputDropDown.
            Value);
    end

    % Value changed function: StartMeasuringButton
    function StartMeasuringButtonValueChanged(app,
        event)
        app.StartMeasuringButton.Visible = "off";
        app.StopButton.Visible = "on";
        app.UpdateChannelsButton.Visible = "on";
        app.capturing = 1;
        app.start_controlling = 0; %Always start off
            with controllers turned off.

        %Call all of the other functions to make sure
            their values are
        %captured.
        updateAllFields(app);
        sendUpdatedFields(app);

        %Clear axes.
        cla(app.UIAxes);
        cla(app.UIAxes_2);

        %Plotting axes for the temperature
            measurements.
        app.liveLine1 = animatedline(app.UIAxes, '
            Color', 'r', 'DisplayName', 'Temperature 1
            Output');
        app.liveLine2 = animatedline(app.UIAxes, '
            Color', 'b', 'DisplayName', 'Temperature 2
            Output');

        %Plotting axes for the PWM signals.
        app.liveLine3 = animatedline(app.UIAxes_2, '
            Color', 'r', 'DisplayName', 'Control Input
            1');
        app.liveLine4 = animatedline(app.UIAxes_2, '
            Color', 'b', 'DisplayName', 'Control Input
            2');
        legend(app.UIAxes_2, 'Location', 'best');

        %Plotting axis for setpoint tracking. On the
            same axis as the
        %temperatures.
        app.set1_yline = yline(app.UIAxes, app.
            setpoint1, 'LineStyle', ':', 'Color', 'g',
            LineWidth=2, DisplayName='Setpoint 1');
```

```
app.set2_yline = yline(app.UIAxes, app.
   setpoint2, 'LineStyle', ':', 'Color', 'g',
    LineWidth=2, DisplayName='Setpoint 2');
legend(app.UIAxes, 'Location', 'best');

app.window_size = 30; %seconds

%Define data csv that we will safe to.
app.SaveDirEditFieldValueChanged();
mkdir(app.data_save_dir);
filepath = fullfile(app.data_save_dir, app.
   data_save_name + ".csv");
fid = fopen(filepath, 'wt');

%Running average arrays for the PWM signals.
N_average = 30;
pwm1_points = zeros(N_average);
pwm2_points = zeros(N_average);

while(app.capturing)
    if app.esp32.NumBytesAvailable > 0
        rawData = readline(app.esp32);
        if isstring(rawData)
            data = str2double(split(rawData,
               ','));
            if length(data) > 4
                data(5) = data(5)/1000;
            else
                continue;
            end
        end

        if ~isnan(data(1)) && (length(data)
           == 6)
            %Plot temperature data.
            addpoints(app.liveLine1, data(5),
                data(1));
            addpoints(app.liveLine2, data(5),
                data(2));

            %Plot setpoint.
            % addpoints(app.liveLine5, data
               (5), app.setpoint);
            %Resize axis.
            xlim(app.UIAxes, [data(5) - app.
               window_size, data(5)]);

            %Update running averages for PWM
```

```
                    signals.
                pwm1_points = [pwm1_points(2:end)
                    , data(3)];
                pwm2_points = [pwm2_points(2:end)
                    , data(4)];

                %Plot PWM signals.
                addpoints(app.liveLine3, data(5),
                    mean(pwm1_points));
                addpoints(app.liveLine4, data(5),
                    mean(pwm2_points));
                %Resize axis.
                xlim(app.UIAxes_2, [data(5) - app
                    .window_size, data(5)]);

                %Write data to file.
                fprintf(fid, rawData);

                if data(end) == 0
                    app.SamplingtoofastLabel.
                        Visible = "on";
                else
                    app.SamplingtoofastLabel.
                        Visible = "off";
                end
            end

            drawnow limitrate
        end
    end

    %Close file we are saving to.
    fclose(fid);

    %Send stop signal.
    writeline(app.esp32, sprintf("%d, %.2f", 7,
        app.capturing));

    clear app.esp32;
end

% Value changed function: COMPortEditField
function COMPortEditFieldValueChanged(app, event)
    app.COM_port = app.COMPortEditField.Value;
end

% Value changed function: BaudRateEditField
function BaudRateEditFieldValueChanged(app, event
```

```
    )
        app.baud_rate = app.BaudRateEditField.Value;
    end

    % Value changed function: StopButton
    function StopButtonValueChanged(app, event)
        app.capturing = false;
        app.start_controlling = false;

        app.StopButton.Visible = "off";
        app.UpdateChannelsButton.Visible = "off";
        app.StartMeasuringButton.Visible = "on";
        app.StartControllingButton.Visible = "on";
        app.StopControllingButton.Visible = "off";
    end

    % Button pushed function: UpdateChannelsButton
    function UpdateChannelsButtonPushed(app, event)
        %Make sure all info is read into esp.
        %First send values for the first controller.
        writeline(app.esp32, sprintf("%d, %.10f", 0,
            app.P1));
        writeline(app.esp32, sprintf("%d, %.10f", 1,
            app.I1));
        writeline(app.esp32, sprintf("%d, %.10f", 2,
            app.D1));
        writeline(app.esp32, sprintf("%d, %.10f", 3,
            app.setpoint1));

        %Then send the values for the second
            controller.
        writeline(app.esp32, sprintf("%d, %.10f", 8,
            app.P2));
        writeline(app.esp32, sprintf("%d, %.10f", 9,
            app.I2));
        writeline(app.esp32, sprintf("%d, %.10f", 10,
             app.D2));
        writeline(app.esp32, sprintf("%d, %.10f", 11,
             app.setpoint2));

        writeline(app.esp32, sprintf("%d, %d", 5, app
            .start_controlling));

        delete(app.set1_yline)
        delete(app.set2_yline)

        app.set1_yline = yline(app.UIAxes, app.
            setpoint1, 'LineStyle', ':', 'Color', 'g',
```

```
        LineWidth=2, DisplayName='Setpoint 1');
    app.set2_yline = yline(app.UIAxes, app.
       setpoint2, 'LineStyle', ':', 'Color', 'g',
        LineWidth=2, DisplayName='Setpoint 2');
end

% Value changed function: DataSaveEditField
function DataSaveEditFieldValueChanged(app, event
   )
    app.data_save_name = app.DataSaveEditField.
       Value;

end

% Button pushed function: StartControllingButton
function StartControllingButtonPushed(app, event)
    app.start_controlling = 1;
    app.UpdateChannelsButtonPushed();

    app.StartControllingButton.Visible = "off";
    app.StopControllingButton.Visible = "on";
end

% Button pushed function: StopControllingButton
function StopControllingButtonPushed(app, event)
    app.start_controlling = 0;
    app.UpdateChannelsButtonPushed();

    app.StartControllingButton.Visible = "on";
    app.StartControllingButton.Visible = "off";
end

% Value changed function: SaveDirEditField
function SaveDirEditFieldValueChanged(app, event)
    app.data_save_dir = app.SaveDirEditField.
       Value;

end

% Value changed function: P2EditField
function P2EditFieldValueChanged(app, event)
    app.P2 = app.P2EditField.Value;

end

% Value changed function: I2EditField
function I2EditFieldValueChanged(app, event)
    app.I2 = app.I2EditField.Value;
```

```
        end

        % Value changed function: D2EditField
        function D2EditFieldValueChanged(app, event)
            app.D2 = app.D2EditField.Value;

        end

        % Value changed function: Setpoint2EditField
        function Setpoint2EditFieldValueChanged(app,
           event)
            app.setpoint2 = app.Setpoint2EditField.Value;

        end

        % Changes arrangement of the app based on
           UIFigure width
        function updateAppLayout(app, event)
            currentFigureWidth = app.UIFigure.Position(3)
               ;
            if(currentFigureWidth <= app.onePanelWidth)
                % Change to a 2x1 grid
                app.GridLayout.RowHeight = {449, 449};
                app.GridLayout.ColumnWidth = {'1x'};
                app.RightPanel.Layout.Row = 2;
                app.RightPanel.Layout.Column = 1;
            else
                % Change to a 1x2 grid
                app.GridLayout.RowHeight = {'1x'};
                app.GridLayout.ColumnWidth = {204, '1x'};
                app.RightPanel.Layout.Row = 1;
                app.RightPanel.Layout.Column = 2;
            end
        end
    end

    % Component initialization
    methods (Access = private)

        % Create UIFigure and components
        function createComponents(app)

            % Create UIFigure and hide until all
               components are created
            app.UIFigure = uifigure('Visible', 'off');
            app.UIFigure.AutoResizeChildren = 'off';
            app.UIFigure.Position = [100 100 702 449];
```

```
app.UIFigure.Name = 'MATLAB App';
app.UIFigure.SizeChangedFcn =
   createCallbackFcn(app, @updateAppLayout,
   true);

% Create GridLayout
app.GridLayout = uigridlayout(app.UIFigure);
app.GridLayout.ColumnWidth = {204, '1x'};
app.GridLayout.RowHeight = {'1x'};
app.GridLayout.ColumnSpacing = 0;
app.GridLayout.RowSpacing = 0;
app.GridLayout.Padding = [0 0 0 0];
app.GridLayout.Scrollable = 'on';

% Create LeftPanel
app.LeftPanel = uipanel(app.GridLayout);
app.LeftPanel.Layout.Row = 1;
app.LeftPanel.Layout.Column = 1;

% Create TabGroup
app.TabGroup = uitabgroup(app.LeftPanel);
app.TabGroup.Position = [3 3 197 442];

% Create Tab2
app.Tab2 = uitab(app.TabGroup);
app.Tab2.Title = 'Tab2';

% Create COMPortEditFieldLabel
app.COMPortEditFieldLabel = uilabel(app.Tab2)
   ;
app.COMPortEditFieldLabel.HorizontalAlignment
    = 'right';
app.COMPortEditFieldLabel.Position = [13 385
   58 22];
app.COMPortEditFieldLabel.Text = 'COM Port';

% Create COMPortEditField
app.COMPortEditField = uieditfield(app.Tab2,
   'text');
app.COMPortEditField.ValueChangedFcn =
   createCallbackFcn(app, @
   COMPortEditFieldValueChanged, true);
app.COMPortEditField.Position = [85 385 100
   22];
app.COMPortEditField.Value = '/dev/ttyUSB0';

% Create BaudRateEditFieldLabel
app.BaudRateEditFieldLabel = uilabel(app.Tab2
```

```
    );
app.BaudRateEditFieldLabel.
    HorizontalAlignment = 'right';
app.BaudRateEditFieldLabel.Position = [9 355
    62 22];
app.BaudRateEditFieldLabel.Text = 'Baud Rate'
    ;

% Create BaudRateEditField
app.BaudRateEditField = uieditfield(app.Tab2,
    'numeric');
app.BaudRateEditField.ValueChangedFcn =
    createCallbackFcn(app, @
    BaudRateEditFieldValueChanged, true);
app.BaudRateEditField.Position = [85 355 100
    22];
app.BaudRateEditField.Value = 1152000;

% Create StopButton
app.StopButton = uibutton(app.Tab2, 'state');
app.StopButton.ValueChangedFcn =
    createCallbackFcn(app, @
    StopButtonValueChanged, true);
app.StopButton.Visible = 'off';
app.StopButton.Text = 'Stop';
app.StopButton.Position = [84 316 100 23];

% Create StartMeasuringButton
app.StartMeasuringButton = uibutton(app.Tab2,
    'state');
app.StartMeasuringButton.ValueChangedFcn =
    createCallbackFcn(app, @
    StartMeasuringButtonValueChanged, true);
app.StartMeasuringButton.Text = 'Start
    Measuring';
app.StartMeasuringButton.Position = [85 316
    100 23];

% Create StartControllingButton
app.StartControllingButton = uibutton(app.
    Tab2, 'push');
app.StartControllingButton.ButtonPushedFcn =
    createCallbackFcn(app, @
    StartControllingButtonPushed, true);
app.StartControllingButton.Position = [83 273
    101 23];
app.StartControllingButton.Text = 'Start
    Controlling';
```

```
% Create StopControllingButton
app.StopControllingButton = uibutton(app.Tab2
    , 'push');
app.StopControllingButton.ButtonPushedFcn =
    createCallbackFcn(app, @
    StopControllingButtonPushed, true);
app.StopControllingButton.Visible = 'off';
app.StopControllingButton.Position = [83 273
    100 23];
app.StopControllingButton.Text = 'Stop
    Controlling';

% Create SaveDirEditFieldLabel
app.SaveDirEditFieldLabel = uilabel(app.Tab2)
    ;
app.SaveDirEditFieldLabel.HorizontalAlignment
     = 'right';
app.SaveDirEditFieldLabel.Position = [18 220
    51 22];
app.SaveDirEditFieldLabel.Text = 'Save Dir';

% Create SaveDirEditField
app.SaveDirEditField = uieditfield(app.Tab2,
    'text');
app.SaveDirEditField.ValueChangedFcn =
    createCallbackFcn(app, @
    SaveDirEditFieldValueChanged, true);
app.SaveDirEditField.Position = [84 220 100
    22];
app.SaveDirEditField.Value = 'DataDemo';

% Create DataSaveEditFieldLabel
app.DataSaveEditFieldLabel = uilabel(app.Tab2
    );
app.DataSaveEditFieldLabel.
    HorizontalAlignment = 'right';
app.DataSaveEditFieldLabel.Position = [7 180
    61 22];
app.DataSaveEditFieldLabel.Text = 'Data Save'
    ;

% Create DataSaveEditField
app.DataSaveEditField = uieditfield(app.Tab2,
     'text');
app.DataSaveEditField.ValueChangedFcn =
    createCallbackFcn(app, @
    DataSaveEditFieldValueChanged, true);
```

```
app.DataSaveEditField.Position = [83 180 100
   22];
app.DataSaveEditField.Value = 'PID_root_V4';

% Create UpdateChannelsButton
app.UpdateChannelsButton = uibutton(app.Tab2,
    'push');
app.UpdateChannelsButton.ButtonPushedFcn =
   createCallbackFcn(app, @
   UpdateChannelsButtonPushed, true);
app.UpdateChannelsButton.Visible = 'off';
app.UpdateChannelsButton.Position = [80 123
   108 23];
app.UpdateChannelsButton.Text = 'Update
   Channels';

% Create SamplingtoofastLabel
app.SamplingtoofastLabel = uilabel(app.Tab2);
app.SamplingtoofastLabel.Visible = 'off';
app.SamplingtoofastLabel.Position = [85 17
   101 22];
app.SamplingtoofastLabel.Text = 'Sampling too
    fast!';

% Create Tab
app.Tab = uitab(app.TabGroup);
app.Tab.Title = 'Tab';

% Create P1EditFieldLabel
app.P1EditFieldLabel = uilabel(app.Tab);
app.P1EditFieldLabel.HorizontalAlignment = '
   right';
app.P1EditFieldLabel.Position = [46 385 25
   22];
app.P1EditFieldLabel.Text = 'P1';

% Create P1EditField
app.P1EditField = uieditfield(app.Tab, '
   numeric');
app.P1EditField.ValueChangedFcn =
   createCallbackFcn(app, @
   P1EditFieldValueChanged, true);
app.P1EditField.Position = [85 385 100 22];
app.P1EditField.Value = 0.09474;

% Create I1EditFieldLabel
app.I1EditFieldLabel = uilabel(app.Tab);
app.I1EditFieldLabel.HorizontalAlignment = '
```

```
    right';
app.I1EditFieldLabel.Position = [46 355 25
    22];
app.I1EditFieldLabel.Text = 'I1';

% Create I1EditField
app.I1EditField = uieditfield(app.Tab, '
    numeric');
app.I1EditField.ValueChangedFcn =
    createCallbackFcn(app, @
    I1EditFieldValueChanged, true);
app.I1EditField.Position = [85 355 100 22];
app.I1EditField.Value = 0.00257;

% Create D1EditFieldLabel
app.D1EditFieldLabel = uilabel(app.Tab);
app.D1EditFieldLabel.HorizontalAlignment = '
    right';
app.D1EditFieldLabel.Position = [46 326 25
    22];
app.D1EditFieldLabel.Text = 'D1';

% Create D1EditField
app.D1EditField = uieditfield(app.Tab, '
    numeric');
app.D1EditField.ValueChangedFcn =
    createCallbackFcn(app, @
    D1EditFieldValueChanged, true);
app.D1EditField.Position = [85 326 100 22];
app.D1EditField.Value = 0.6904;

% Create Setpoint1EditFieldLabel
app.Setpoint1EditFieldLabel = uilabel(app.Tab
    );
app.Setpoint1EditFieldLabel.
    HorizontalAlignment = 'right';
app.Setpoint1EditFieldLabel.Position = [14
    296 56 22];
app.Setpoint1EditFieldLabel.Text = 'Setpoint1
    ';

% Create Setpoint1EditField
app.Setpoint1EditField = uieditfield(app.Tab,
     'numeric');
app.Setpoint1EditField.ValueChangedFcn =
    createCallbackFcn(app, @
    Setpoint1EditFieldValueChanged, true);
app.Setpoint1EditField.Position = [85 296 100
```

```
    22];
app.Setpoint1EditField.Value = 35;

% Create P2EditFieldLabel
app.P2EditFieldLabel = uilabel(app.Tab);
app.P2EditFieldLabel.HorizontalAlignment = '
   right';
app.P2EditFieldLabel.Position = [44 261 25
   22];
app.P2EditFieldLabel.Text = 'P2';

% Create P2EditField
app.P2EditField = uieditfield(app.Tab, '
   numeric');
app.P2EditField.ValueChangedFcn =
   createCallbackFcn(app, @
   P2EditFieldValueChanged, true);
app.P2EditField.Position = [83 261 100 22];
app.P2EditField.Value = 0.1488;

% Create I2EditFieldLabel
app.I2EditFieldLabel = uilabel(app.Tab);
app.I2EditFieldLabel.HorizontalAlignment = '
   right';
app.I2EditFieldLabel.Position = [44 231 25
   22];
app.I2EditFieldLabel.Text = 'I2';

% Create I2EditField
app.I2EditField = uieditfield(app.Tab, '
   numeric');
app.I2EditField.ValueChangedFcn =
   createCallbackFcn(app, @
   I2EditFieldValueChanged, true);
app.I2EditField.Position = [83 231 100 22];
app.I2EditField.Value = 0.00314;

% Create D2EditFieldLabel
app.D2EditFieldLabel = uilabel(app.Tab);
app.D2EditFieldLabel.HorizontalAlignment = '
   right';
app.D2EditFieldLabel.Position = [44 202 25
   22];
app.D2EditFieldLabel.Text = 'D2';

% Create D2EditField
app.D2EditField = uieditfield(app.Tab, '
   numeric');
```

```
app.D2EditField.ValueChangedFcn =
   createCallbackFcn(app, @
   D2EditFieldValueChanged, true);
app.D2EditField.Position = [83 202 100 22];
app.D2EditField.Value = 1.174;

% Create Setpoint2EditFieldLabel
app.Setpoint2EditFieldLabel = uilabel(app.Tab
   );
app.Setpoint2EditFieldLabel.
   HorizontalAlignment = 'right';
app.Setpoint2EditFieldLabel.Position = [12
   172 56 22];
app.Setpoint2EditFieldLabel.Text = 'Setpoint2
   ';

% Create Setpoint2EditField
app.Setpoint2EditField = uieditfield(app.Tab,
    'numeric');
app.Setpoint2EditField.ValueChangedFcn =
   createCallbackFcn(app, @
   Setpoint2EditFieldValueChanged, true);
app.Setpoint2EditField.Position = [83 172 100
    22];
app.Setpoint2EditField.Value = 35;

% Create RightPanel
app.RightPanel = uipanel(app.GridLayout);
app.RightPanel.Layout.Row = 1;
app.RightPanel.Layout.Column = 2;

% Create UIAxes
app.UIAxes = uiaxes(app.RightPanel);
title(app.UIAxes, 'Temperature output')
xlabel(app.UIAxes, 'Time (seconds)')
ylabel(app.UIAxes, 'Temperature (Celcius)')
zlabel(app.UIAxes, 'Z')
app.UIAxes.Position = [7 213 489 235];

% Create UIAxes_2
app.UIAxes_2 = uiaxes(app.RightPanel);
title(app.UIAxes_2, 'Control and Disturbance
   inputs')
xlabel(app.UIAxes_2, 'Time (seconds)')
ylabel(app.UIAxes_2, 'Average control input (
   V)')
zlabel(app.UIAxes_2, 'Z')
app.UIAxes_2.Position = [8 7 488 207];
```

```
            % Show the figure after all components are
               created
            app.UIFigure.Visible = 'on';
        end
    end

    % App creation and deletion
    methods (Access = public)

        % Construct app
        function app = EBBPrac

            % Create UIFigure and components
            createComponents(app)

            % Register the app with App Designer
            registerApp(app, app.UIFigure)

            if nargout == 0
                clear app
            end
        end

        % Code that executes before app deletion
        function delete(app)

            % Delete UIFigure when app is deleted
            delete(app.UIFigure)
        end
    end
end
```

## A.4 MCU Code

```
#include <fmt/core.h>
#include <Arduino.h>
#include <iostream>
#include <sstream>
#include <vector>
#include <string>
#include <queue>
#include "ValuesPID.cpp"


double duty1 = 128; //50% duty cycle by default.
double duty2 = 128;
int control_outputs = 0; //By default only pwm1 is on.
bool start = 0; //Start off.
```

```
int message = 100; //Flags for certain messages.
int start_time = 0;
bool startControlling = 0; //See if we should start
    controlling, or continue just measuring.




//New PID structs for eventual use in the controllers.
ValuesPID controllerG11 = {0, 0, 0, 0, 0, 0, 0, 0};
ValuesPID controllerG22 = {0, 0, 0, 0, 0, 0, 0, 0};


double temp1 = 0; //Final temperature measurement that is
    sent to PC and used by controller/s.
double temp2 = 0; //Final temperature measurement that is
    sent to PC and used by controller/s.
int N_samples = 200; //Amount of samples being averaged.
std::queue<double> samples1; //Storage of samples for temp
    measurements for T1
std::queue<double> samples2; //Storage of samples for temp
    measurements for T2

hw_timer_t *timer = NULL; //Timer to ensure constant sample
    rate.
const int PWM_Out_1 = GPIO_NUM_32;
const int PWM_Out_2 = GPIO_NUM_25;
const int PWM_Meas_1 = GPIO_NUM_33;
const int PWM_Meas_2 = GPIO_NUM_26;

const int Temp_Meas1 = GPIO_NUM_27;
const int Temp_Meas2 = GPIO_NUM_35;

const double A = (3.3/4095.0); //Constant multiplier used to
     scale PWM outputs to voltages.
const int PWM_freq = 10;
const int PWM_res = 8;

const int BaudRate = 1152000;
const int sampling_period = 5000; //In microseconds.
const float dt = sampling_period/1000000.0; //t delta used
    in PWM calculations.
bool first_run = true; //Check if this is the very first run
    , used the prevent initial derivative kick. (Can be used
    for both controllers at once since they are controlling
    at the same time?)

float calculatePID(ValuesPID& controller){
```

```
        float duty = 0;
        float next_integral = controller.integral + controller
           .error * dt;

        controller.derivative = (controller.error - controller
           .prev_error)/dt;

        float pid_out = controller.P * controller.error +
           controller.I*next_integral + controller.D*
           controller.derivative;
        //anti-windup logic
        if  (pid_out >= 3.3 )
        {
          duty = 1;
          if ( controller.error < 0){
          controller.integral = next_integral;
          }

        }

        else if (pid_out <= 0.0 ) {
        duty = 0.0; // You cannot have a negative duty cycle
           for a simple heater/cooler
        if ( controller.error > 0){
          controller.integral = next_integral;
          }

        }

        else{
          duty = pid_out/3.3;
          controller.integral = next_integral;
        }
        duty = (pow(2, PWM_res) - 1)*(duty);

    return duty;
}

void setup() {
  //Start the USB-C serial/UART port.
  Serial.begin(BaudRate);

  //Setup I/O pins.
  pinMode(Temp_Meas1, INPUT);
  pinMode(Temp_Meas2, INPUT);
  pinMode(PWM_Meas_1, INPUT);
  pinMode(PWM_Meas_2, INPUT);
```

```
  ledcChangeFrequency(0, PWM_freq, PWM_res);
  ledcChangeFrequency(1, PWM_freq, PWM_res);
  ledcAttachPin (PWM_Out_1, 0);
  ledcAttachPin(PWM_Out_2, 1);

  timer = timerBegin(0, 80, true);

  samples1.push(0);
  samples2.push(0);
}

void loop() {

  //If receiving communication from computer, update values.
  if(Serial.available() > 0)
  {
    //Read the entire line, trim whitespace, and separate
       the comma separated line into the command value pair.
    String received = Serial.readStringUntil('\n');
    received.trim();

    std::istringstream stream(received.c_str());
    std::string command;
    std::string value_str;
    double value;

    std::getline(stream, command, ',');
    std::getline(stream, value_str, ',');
    value = std::stod(value_str);

    //Essentially a "switch case" to update the appropriate
       values for each command.
    if(command == "0") // P value for PWM1
    {
      controllerG11.P = value;
    }
    else if(command == "1") // I value for PWM1
    {
      controllerG11.I = value;
    }
    else if(command == "2") // D value for PWM1
    {
      controllerG11.D = value;
    }
    else if(command == "3") // Setpoint value for PWM1
    {
      controllerG11.setpoint = value;
```

```
  }

  else if(command == "5") //Change from duty cycle set to
     the startControlling flag.
  {
    startControlling = value;
  }
  else if(command == "7") //Flag to start process of
     taking measurements and sending them over UART.
  {
    start = value;

    //Check if start is true, then start timer.
    if(start)
    {
      start_time = millis();
    }
  }

  else if(command == "8") // P value for PWM2
  {
    controllerG22.P = value;
  }
  else if(command == "9") // I value for PWM2
  {
    controllerG22.I = value;
  }
  else if(command == "10") // D value for PWM2
  {
    controllerG22.D = value;
  }
  else if(command == "11") // Setpoint value for PWM2
  {
    controllerG22.setpoint = value;
  }
}

//If start flag is true, start measuring inputs/start
   controlling aswell.
if(start)
{
  //Check when we started in order to see how long we were
     busy.
  timerRestart(timer);

  if(startControlling)
  {
    //Turn on the appropriate PWM signals.
```

```
    ledcWrite(0, duty1);
    ledcWrite(1, duty2);
}

//Interpret sensor data.
double temp1_raw = (analogReadMilliVolts(Temp_Meas1)
   /1000.0 - 0.5)/0.01;
double temp2_raw = (analogReadMilliVolts(Temp_Meas2)
   /1000.0 - 0.5)/0.01;

if(samples1.size() > N_samples)
{
  temp1 -= samples1.front();
  temp2 -= samples2.front();

  samples1.pop();
  samples2.pop();
}

temp1 += temp1_raw/N_samples;
temp2 += temp2_raw/N_samples;

samples1.push(temp1_raw/N_samples);
samples2.push(temp2_raw/N_samples);

//Send sensor input data as a comma seperated list.
std::string sending = fmt::format("{0}, {1}, {2}, {3},
   {4}, {5}",
temp1, temp2, analogRead(PWM_Meas_1)*A, analogRead(
   PWM_Meas_2)*A, millis() - start_time, message);

Serial.println(String(sending.c_str()));
Serial.flush();


if (startControlling)
{
  //PID controller start
  controllerG11.prev_error = controllerG11.error;
  controllerG11.error = controllerG11.setpoint - temp1;

  controllerG22.prev_error =  controllerG22.error;
  controllerG22.error =  controllerG22.setpoint - temp2;

  // Prevent derivative kick on first run

  if (first_run) {
    controllerG11.prev_error = controllerG11.error;
```

```
        controllerG22.prev_error = controllerG22.error;

        first_run = false;
      }

      duty1 = calculatePID(controllerG11);
      duty2 =calculatePID(controllerG22);



      // std::string sending = fmt::format("{0}, {1}, {2},
         {3}, {4}", P, I, D, error, duty);
      // Serial.println(String(sending.c_str()));
      // Serial.flush();
    }
    //Otherwise turn off control signals.
    else
    {
      ledcWrite(0, 0);
      ledcWrite(1, 0);
    }

    //Check how long everything took in microseconds.
    int elapsed = timerReadMicros(timer);

    if(elapsed <= sampling_period)
    {
      delayMicroseconds(sampling_period - elapsed);
      message = 100; //Reset message flag to show nothing.
    }
    else
    {
      delayMicroseconds(sampling_period);
      message = 0; //Set message flag for sampling too fast.
    }


  //Otherwise deactivate PWM outputs.
  }
  else
  {
    ledcWrite(0, 0);
    ledcWrite(1, 0);
  }
}
```