


COSMOS / Keyboard + Hyprland

Repository keymap · Hyprland reviewed 2026-09-30 · compact / 2-3 per page

Keymap bottom: hold/sticky. Hyprland bottom: Base key; top: +Shift. Pink: hold; dashed: optional Shift.

Base · typing and thumb keys


Center = tap; bottom = hold / sticky modifier

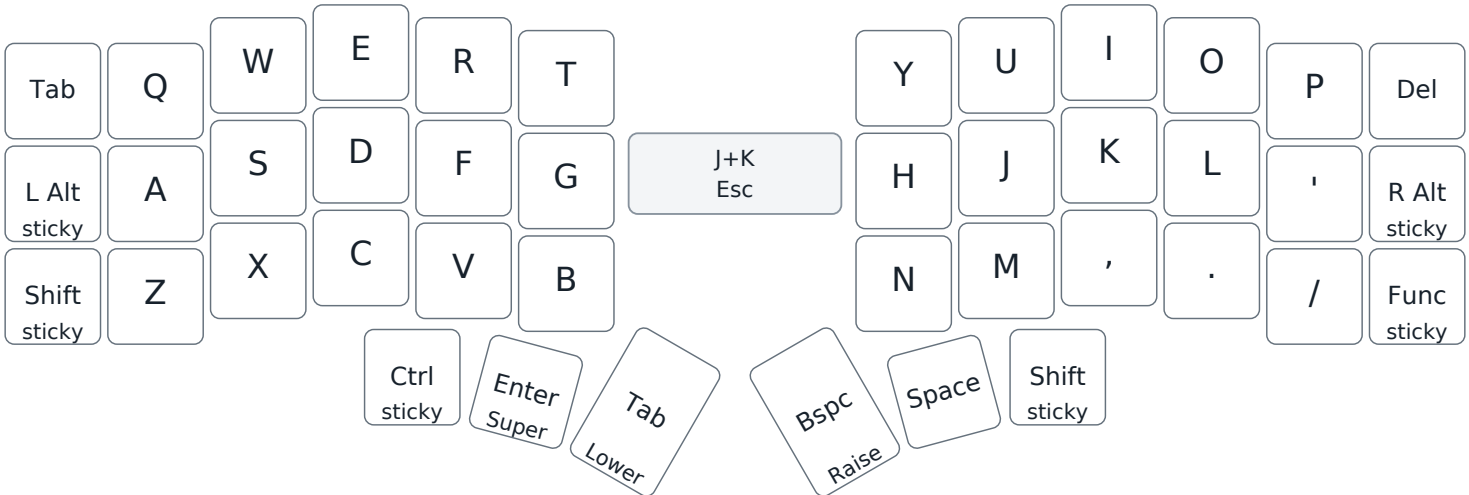

Super: hold 200 ms. Lower/Raise: immediate key chords; 200 ms when held alone. J+K = Escape. Sticky Alt/Ctrl/Shift/Func: tap for the next key, or hold. Use left Alt and outer left Shift.

Lower · numbers and symbols

Hold the left inner Tab / Lower thumb

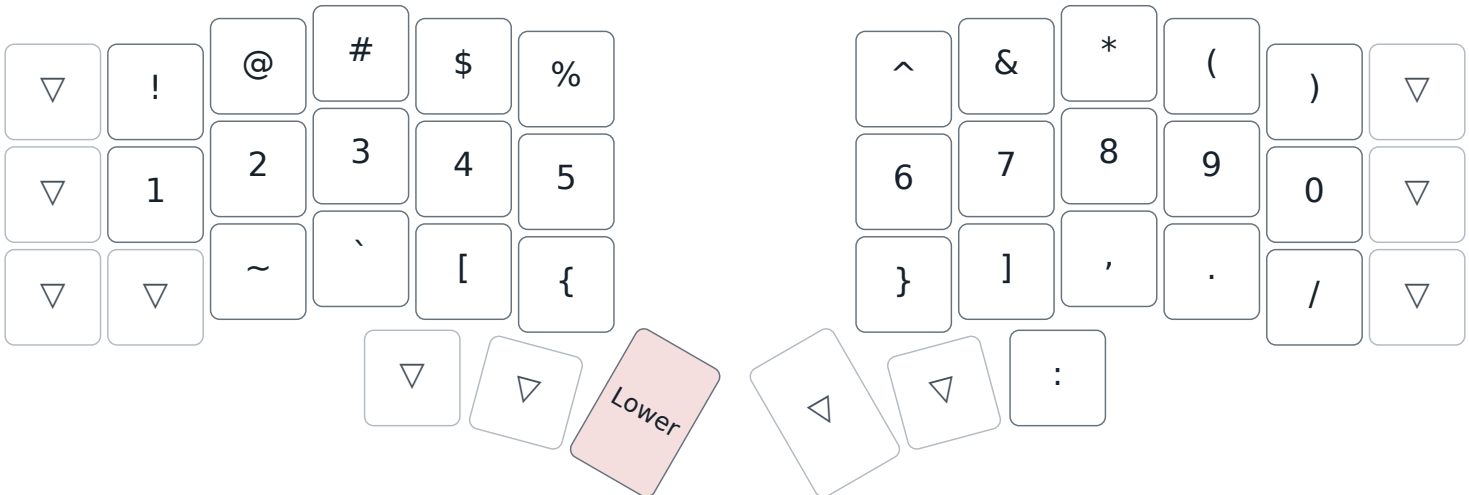


Chord Tab/Lower for immediate symbols; tap alone for Tab. For fast Tab → letter, use top-left Tab. ▽ means the layer underneath. For one-shot Func, press modifiers before tapping Func.

COSMOS / Keyboard + Hyprrland

Repository keymap · Hyprrland reviewed 2026-09-30 · compact / 2-3 per page
Keymap bottom: hold/sticky. Hyprrland bottom: Base key; top: +Shift. Pink: hold; dashed: optional Shift.

Raise · navigation and media


Hold right thumb Backspace / Raise; another key activates Raise immediately

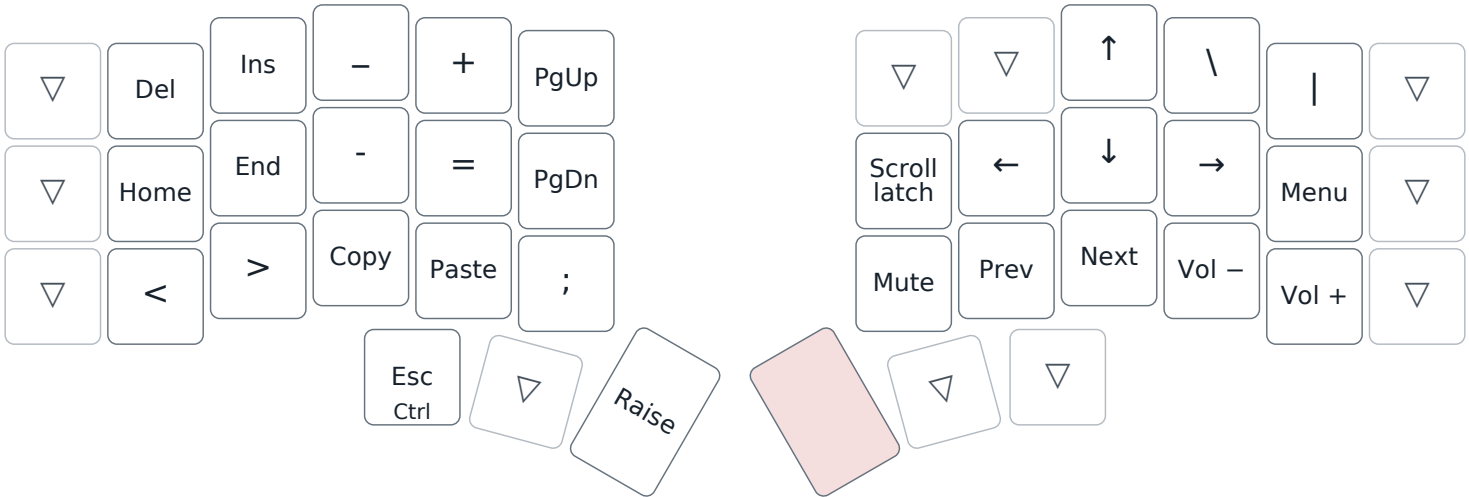

I/J/K/L = ↑/←/↓/→. Raise+H latches scrolling after release; any next key/button press cancels.
Esc/Ctrl thumb: tap Escape, hold Ctrl. Pause after a Backspace tap before holding for Raise.

Func · function keys and utilities

Tap Func for the next key; hold for several actions

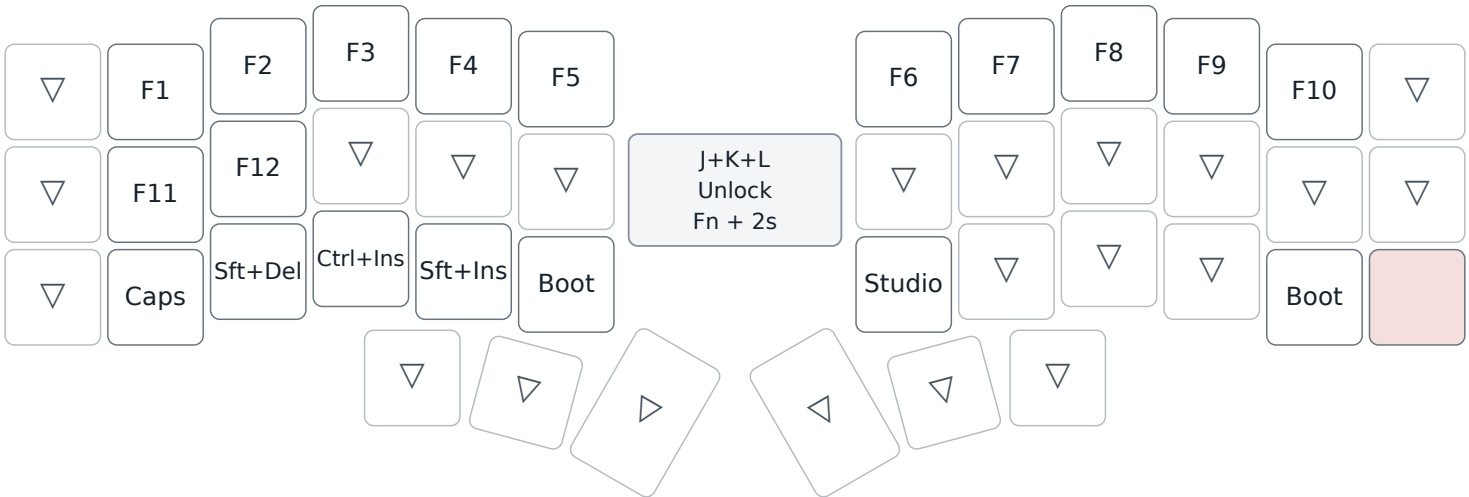


Fn+N unlocks Studio. Fn+B / Fn+Slash enters the left / right bootloader.
Private unlock: hold physical Fn+J+K+L for 2 s; requires USB and a provisioned right half.

COSMOS / Keyboard + Hyprland

Repository keymap · Hyprland reviewed 2026-09-30 · compact / 2-3 per page
Keymap bottom: hold/sticky. Hyprland bottom: Base key; top: +Shift. Pink: hold; dashed: optional Shift.

Super · workspaces and launcher


Hold Enter / Super; top legends add Shift

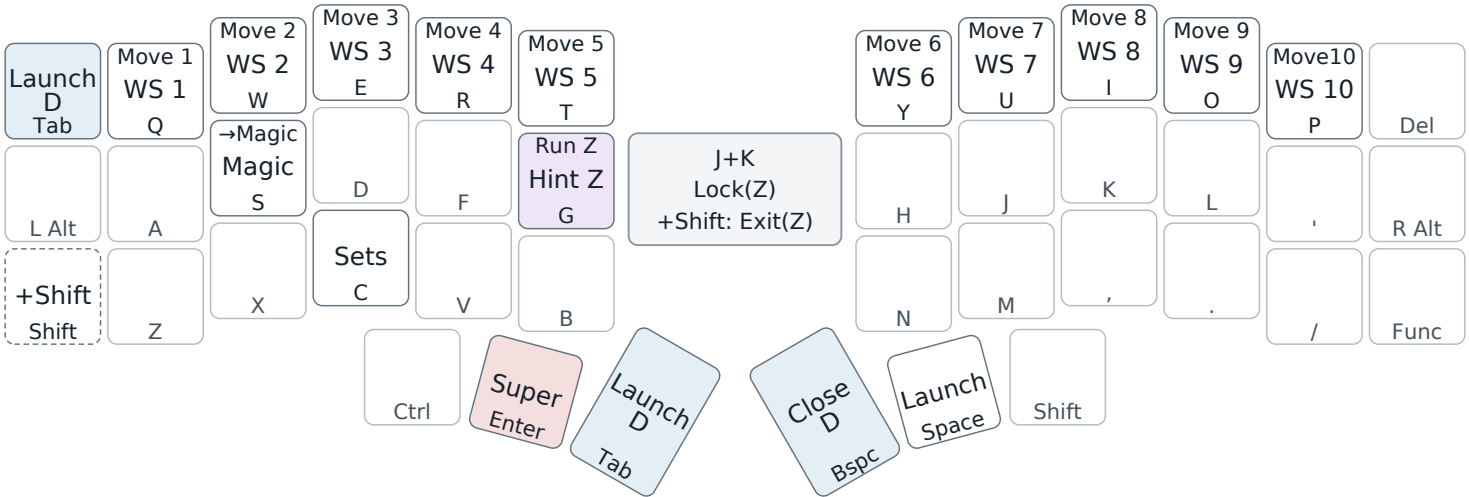

Move 1-10 moves the window and follows. Magic = special:magic. Z actions on G fire on release.
Sets = the monitor-dependent workspace-set helper. Resolve the Super hold before the action key.

Alt · applications and window groups


Hold LEFT Alt; top legends add Shift

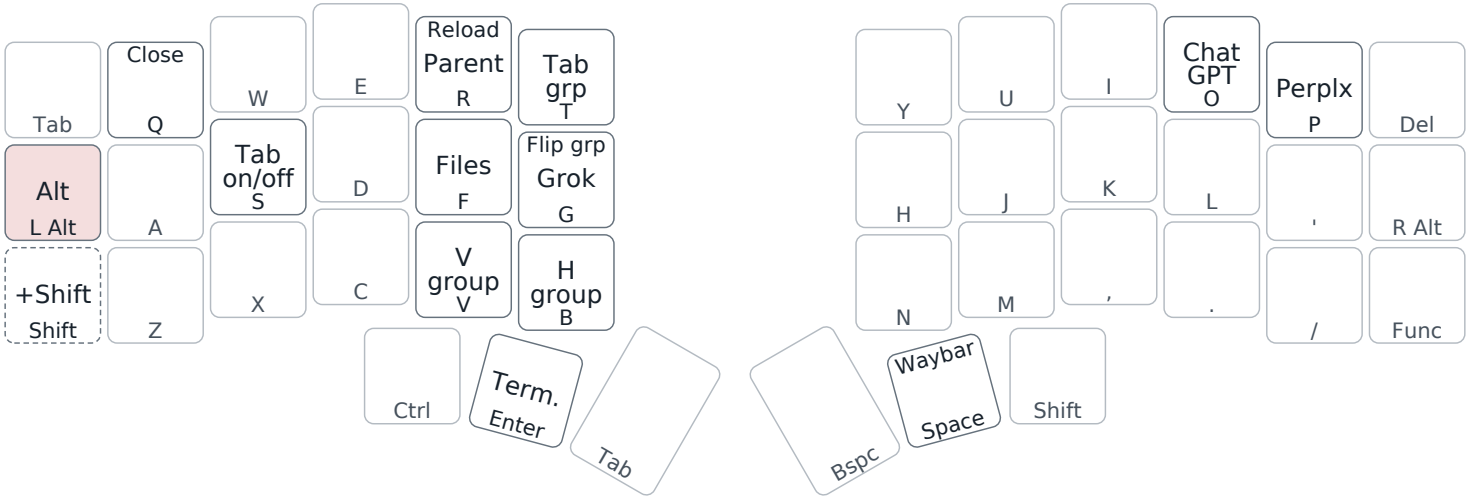

Parent selects the enclosing group; Flip grp changes its orientation. Term. = terminal.
For Terminal, tap Enter while holding Alt. Alt+Shift+Space toggles Waybar.

Alt + Raise · focus, move and resize

Hold left Alt + Backspace / Raise; top legends add Shift

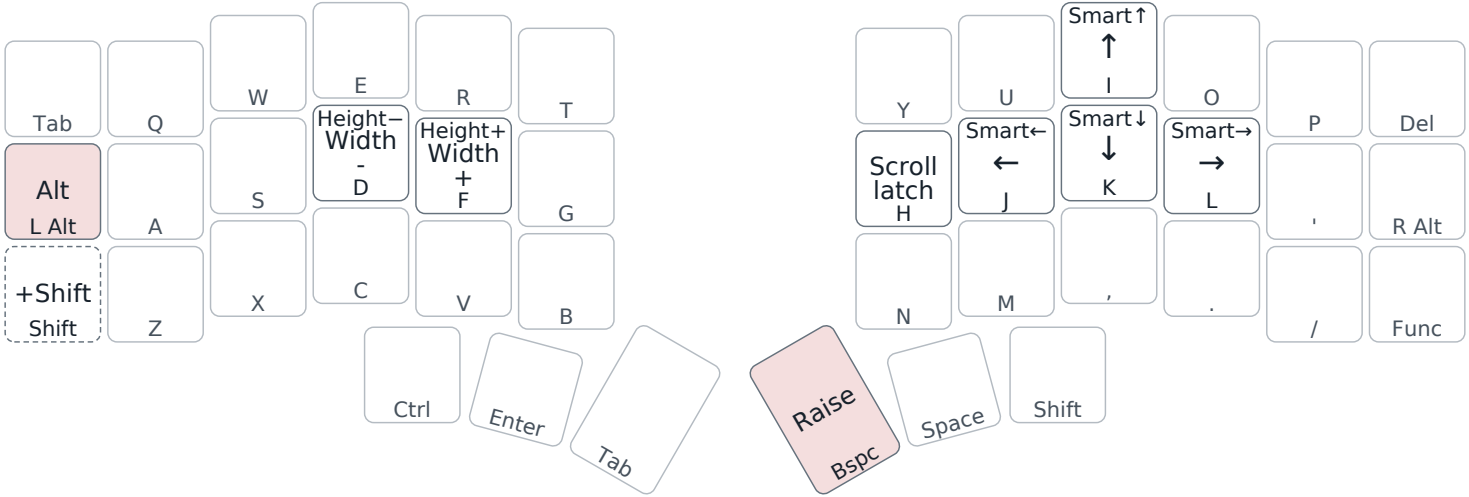


Add outer Shift for smart window movement or height resize. Smart move can cross monitor edges.
Resize: physical D/F (minus/equal), 100 px per tap. Retap directions for repeated focus/move.

COSMOS / Keyboard + Hyprland

Repository keymap · Hyprland reviewed 2026-09-30 · compact / 2-3 per page
Keymap bottom: hold/sticky. Hyprland bottom: Base key; top: +Shift. Pink: hold; dashed: optional Shift.

Alt + Lower · numeric workspaces


Hold left Alt + Tab / Lower; top legends add Shift

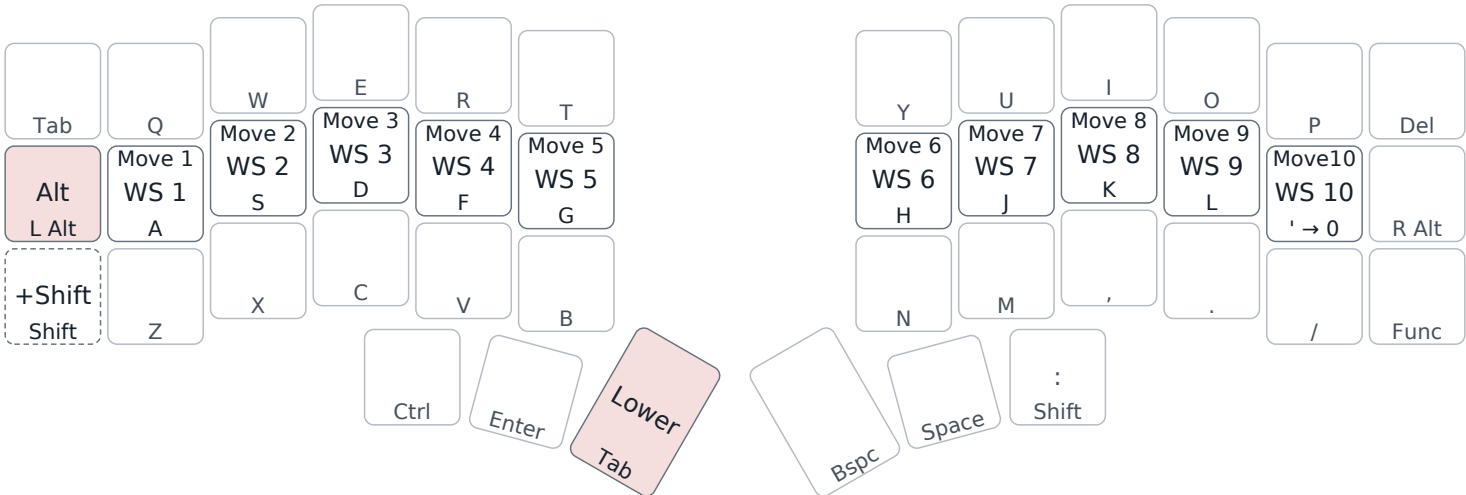

Physical A S D F G H J K L Quote = 1-10. Add outer left Shift to move the window and follow. The right Shift thumb sends colon on Lower. Super + Q-P is the simpler workspace shortcut.

Raise · physical-key reference


Hold Backspace / Raise; bottom legends identify Base keys

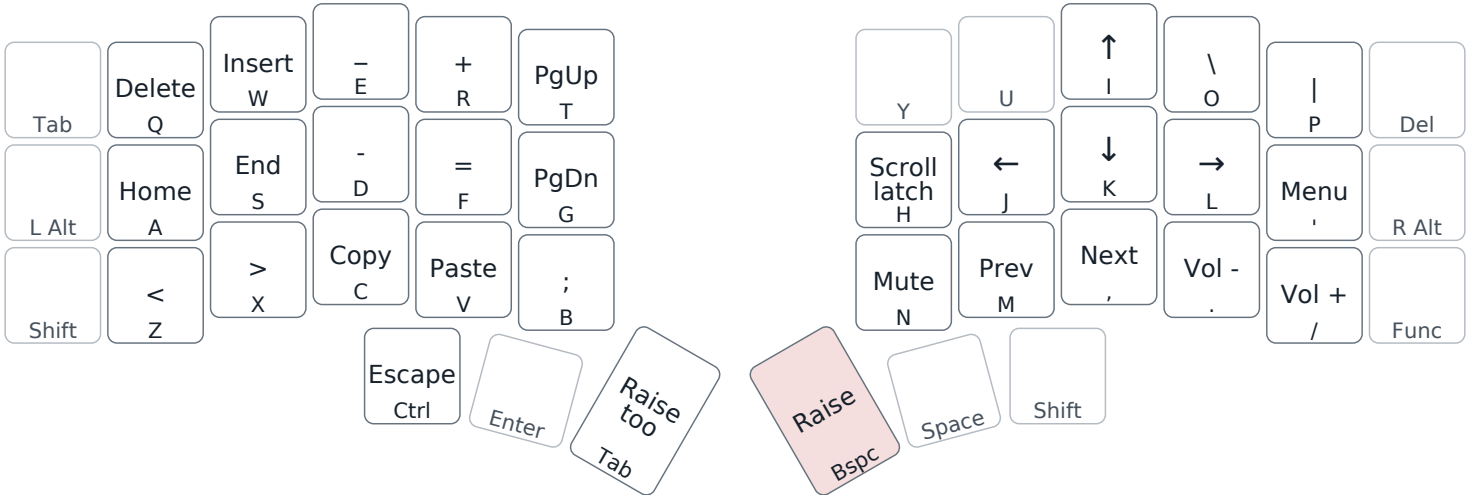

Raise+H latches scrolling; any next key/button press cancels. Super + scrolling changes workspace. Drag/resize: release Raise, hold left Alt + left/right microswitch, and roll the trackball.

Deck · Super + Raise navigation

Hold Enter / Super + Backspace / Raise; top legends add Shift

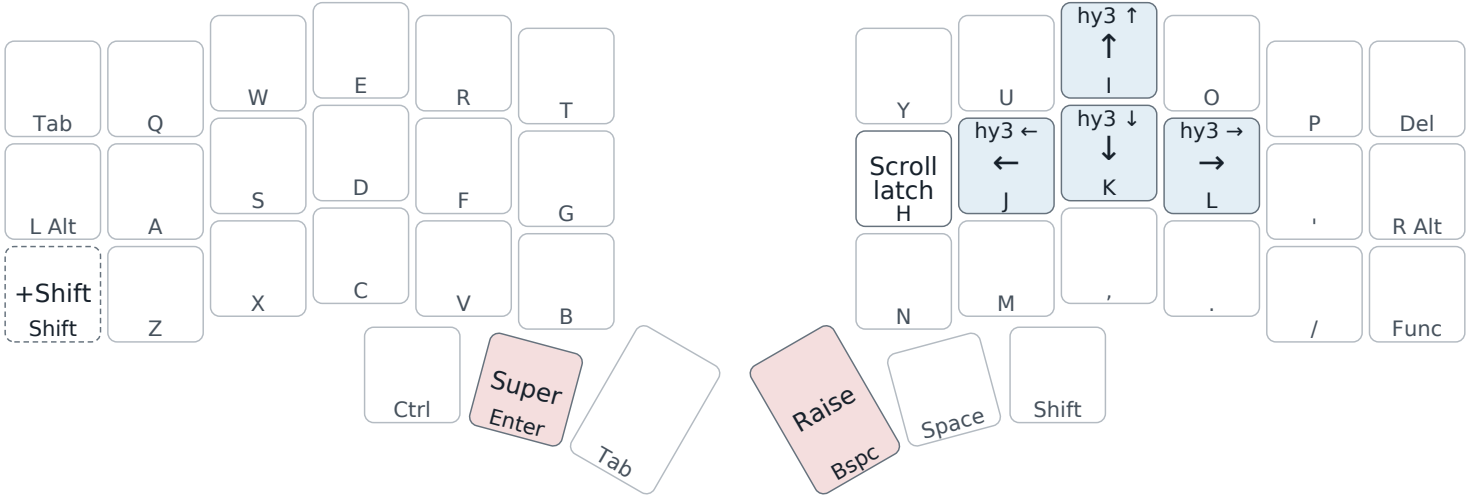

Super+arrows focuses; add Shift to move via hy3 directly, without the smart-move fallback. Super+Escape lock and Super+Shift+Escape exit are unbound on Deck; use the rail lock button.