Name of Student : ARAV PALOD

Class : **SE**

Division : **S1**

Roll Number : 70

Batch : **S13**

Subject : **Fundamentals of Telecommunication Systems**

Experiment Number : **9**

Experiment Title : **Generation and Observation of Amplitude Modulated (AM) Signals**

Date of Performance : **9TH March 2026**

Date of Submission : **11TH March 2026**

Experiment No. 09

Title: Generation and Observation of Amplitude Modulated (AM) Signals

Aim

To design and simulate an Amplitude Modulation (AM) circuit in LTspice using a Behavioral Voltage Source acting as a multiplier. To observe the modulated waveform in the time domain and calculate the modulation index for three different modulating signal amplitudes.

Software Used

LTspice 26.0.1 (High-performance SPICE simulation software).

Theory

1. What is Modulation?

Modulation is the process of varying a property of a high-frequency carrier signal according to the information (message) signal so that the signal can be transmitted over long distances.

- The message signal (audio, data, etc.) usually has low frequency and cannot travel far efficiently.
- Therefore, it is combined with a high frequency carrier wave.
- During modulation, one parameter of the carrier wave is changed based on the message signal.

The parameters that can be varied are:

- Amplitude
- Frequency
- Phase

Hence, common types of modulation are AM (Amplitude Modulation), FM (Frequency Modulation), and PM (Phase Modulation).

Purpose of modulation:

- Enables long distance communication
- Reduces antenna size
- Prevents mixing of signals
- Improves signal transmission efficiency

2. What is Amplitude Modulation (AM)?

Amplitude Modulation (AM) is a type of modulation in which the amplitude of the carrier wave is varied according to the amplitude of the message signal while frequency and phase remain constant.

- The carrier signal has constant frequency and phase.
- The message signal changes the amplitude of the carrier.

Example:
AM radio broadcasting uses amplitude modulation to transmit audio signals.

Characteristics:

- Carrier frequency remains constant
- Phase remains constant
- Only amplitude changes with the information signal

3. What is Modulation Index?

The modulation index (m) indicates the degree of modulation applied to the carrier signal.

It shows how much the carrier amplitude varies due to the message signal.

Formula:

$$m = \frac{A_m}{A_c}$$

Where:

- A_m= Amplitude of message signal
- A_c= Amplitude of carrier signal

Another formula used in AM signals:

$$m = \frac{A_{max} - A_{min}}{}$$

$$A_{max} + A_{min}$$

Where:

- A_{max}= Maximum amplitude of modulated wave
- A_{min}= Minimum amplitude of modulated wave

Range of modulation index:

- $0 \leq m \leq 1$

4. Under Modulation, Critical Modulation, and Over Modulation

1. Under Modulation

- Occurs when modulation index $m < 1$
- Message signal amplitude is smaller than carrier amplitude.
- The modulated signal is clear but not fully utilizing the carrier power.

Result:

- Signal is transmitted correctly
- No distortion

2. Critical Modulation (100% Modulation)

- Occurs when modulation index $m = 1$
- Message signal amplitude is equal to carrier amplitude.

Result:

- Maximum possible modulation without distortion
- Efficient use of carrier power

3. Over Modulation

- Occurs when modulation index $m > 1$
- Message signal amplitude is greater than carrier amplitude.

Result:

- The modulated waveform becomes distorted
- Causes signal distortion and loss of information

Mathematical Representation of AM

Let:

- Carrier signal: $c(t) = A_c \sin(2\pi f_c t)$
- Message signal: $m(t) = A_m \sin(2\pi f_m t)$

The standard expression for an AM signal is represented as:

$$s(t) = [A_c + m(t)] \sin(2\pi f_c t) \qquad \text{..... (1)}$$

where

- A_m is the peak amplitude of the modulating signal
- A_c the peak amplitude of the carrier signal

The modulation index is defined as the ratio of the peak amplitude of the modulating signal (A_m) to the peak amplitude of the carrier signal (A_c).

$$\text{Modulation index } (\mu) = \frac{A_m}{A_c}$$

For simplicity, we can take $A_c = 1$, so that A_m will directly represent modulation index. Thus, the AM signal can be given by:

$$s(t) = [1 + m(t)] \sin(2\pi f_c t) \qquad \text{.... (2)}$$

Circuit Implementation of the AM Equation

The AM equation $s(t) = [A_c + m(t)] \sin(2\pi f_c t)$ has three distinct parts:

Part 1 – [Ac + m(t)]: A DC value Ac (=1) added to the message signal m(t). This is realised by connecting one DC source (Ac = 1) and one SINE voltage source (message m(t)) in series (A_m value will decide the modulation index).

Part 2 – sin ($2\pi f_c t$): Multiplication by the normalised carrier c(t) with $A_c = 1$. This is realised by a separate SINE voltage source for the carrier.

Part 3 – multiplication of Part 1 and Part 2: This can be realised by a Behavioral Voltage Source multiplier.

Component	Source Type	Signal Produced	Key Setting
V1	SINE source	Normalised carrier: $\sin(2\pi \cdot f_c \cdot t)$	Amplitude = 1V, Freq = 100k, DC offset = 0

V2	SINE source	Message signal: $Am \cdot \sin(2\pi \cdot f_m \cdot t)$	Amplitude = Am (varies per case from 0 to 2), Freq = 1k, DC offset = 0
V3	DC source	Bias: Ac = 1V	DC Value = 1 (equals A_c)
B1	Behavioral Voltage (BV)	AM output: V(sum) × V(carrier)	V = V(sum) * V(carrier)
R1	Resistor	50Ω output load	Value = 50

Simulation Procedure

Step 1: Place the Normalised Carrier Source Vc (SINE, 100 kHz, Vamp = 1)

- Select voltage source, and place it.
- Right-click on the voltage source → Advanced → select SINE.
- Enter the following values:

  DC offset (Voffset) = 0
  Amplitude (Vamp) = 1 ← Unit amplitude — normalised carrier
  Frequency = 100k ← fc = 100kHz (carrier frequency)
  Tdelay = 0, Theta = 0, Phi = 0

- Right-click on the label V1 and replace it by Vc
- Press 'G' → place ground below Vc.
- Press ‘W’ to wire the components. Connect negative (–) terminal of Vc to Ground.
- Connect a free wire from positive (+) terminal of Vc
- Press ‘N’ for assigning Net Name. Type ‘carrier’ and press Ok.
- Paste it on the free wire.
- Hover over the free wire — bottom status bar must show 'carrier' (not N001 or N002).

Step 2: Place the Message Signal Source Vm (SINE, 1 kHz)

- Select voltage source, and place it to the right to voltage source Vc.
- Right-click on the voltage source → Advanced → select SINE.
- Enter the following values:

  DC offset (Voffset) = 0
  Amplitude (Vamp) = 0.5 ← Am = 0.5 (change for other cases)
  Frequency = 1k ← fm = 1kHz (message frequency)
  Tdelay = 0, Theta = 0, Phi = 0

- Right-click on the label V2 and replace it by Vm

Step 3: Place the DC Bias Source V3 (Ac = 1V DC)

- Select voltage source, and place the third source below Vm
- Right-click V3 → in the simple Value field type:

  1 ← 1V DC = Ac (carrier amplitude)

- Press 'G' → place ground below V3.
- Press 'W' to wire the components. V3 negative (−) → GND
- V3 positive (+) → Vm negative (−) ← wire these two pins together
- Vm positive (+) → free wire
- Press 'N' for assigning Net Name. Type 'sum' and press Ok.
- Paste it on the free wire.
- Hover over the free wire — bottom status bar must show 'sum' (not N001 or N002).

Step 4: Place the Behavioral Voltage Source B1 (Multiplier)

- Press 'P' → search bv → select Behavioral Voltage → place to the right of Vc, Vm, V3.
- Right-click B1 → in the Value field type EXACTLY:

  V = V(sum) * V(carrier)

B1 Expression — Verification:
V(sum) = Ac + Am·sin(2π·fm·t) ← from V3 + Vm series (Step 3)
V(carrier) = sin(2π·fc·t) ← from Vc with Vamp=1 (Step 1)
B1 output = V(sum) × V(carrier)

= [Ac + Am·sin(2π·fm·t)] × sin(2π·fc·t)

= s(t) matches standard AM equation (1)

Step 5: Place Load Resistor R1 and Complete the Circuit

- Press 'R' → place resistor. Right-click → set value to 50.
- Press 'W' → connect B1 positive (+) terminal to top of R1.
- Press 'N' → label this wire: AM_out
- Press 'G' → ground B1 negative (−) terminal and R1 bottom terminal.

Step 6: Set Up and Run Transient Simulation

- Click Simulate → Edit Simulation Cmd → Transient tab.

- Set Stop Time:
    - .tran 5m ← 5 milliseconds = 5 complete message cycles at 1 kHz
- Place this directive on the schematic canvas. Click Run.

Step 7: View Waveforms

- Click on the AM_out wire → adds V(AM_out) to the plot.
- Click on the sum wire → adds V(sum) to see [Ac + m(t)] envelope.
- Click on the carrier wire → adds V(carrier) to see normalised carrier.

Measuring μ from the Waveform

Measure V_{max} (highest peak) and V_{min} (lowest trough) of the AM waveform:

$$\text{Modulation index } (\mu) = \frac{V_{max} - V_{min}}{V_{max} + V_{min}}$$

Observations

Perform the simulation for THREE cases by changing ONLY the Amplitude of Vm each time. Vc (Vamp=1), V3 (1V DC), B1 expression, R1, and simulation time remain unchanged for all cases.

Case-1 :

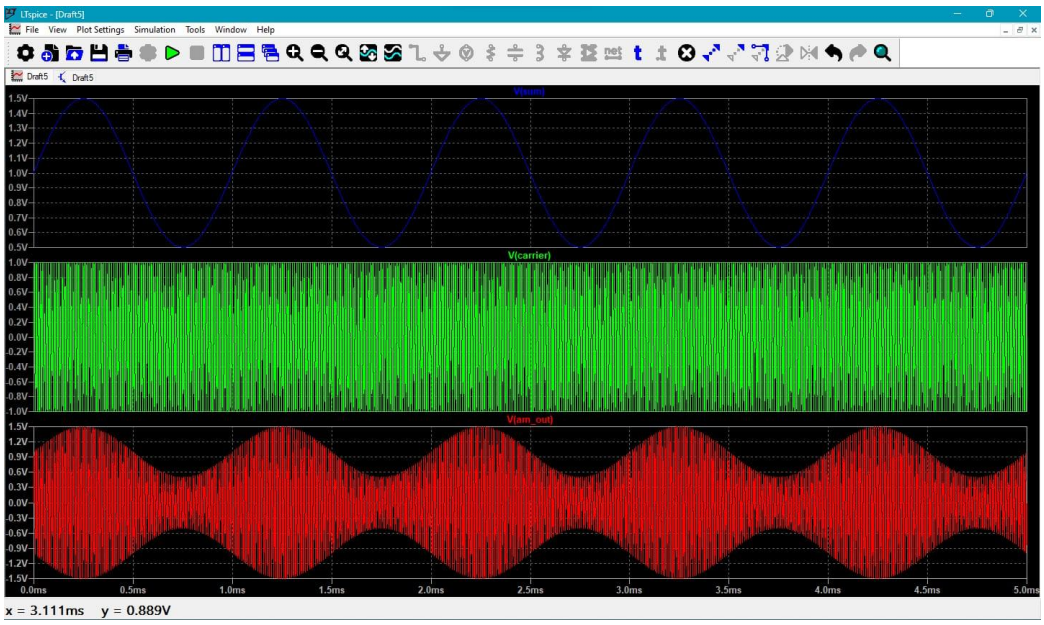

Case-2 :

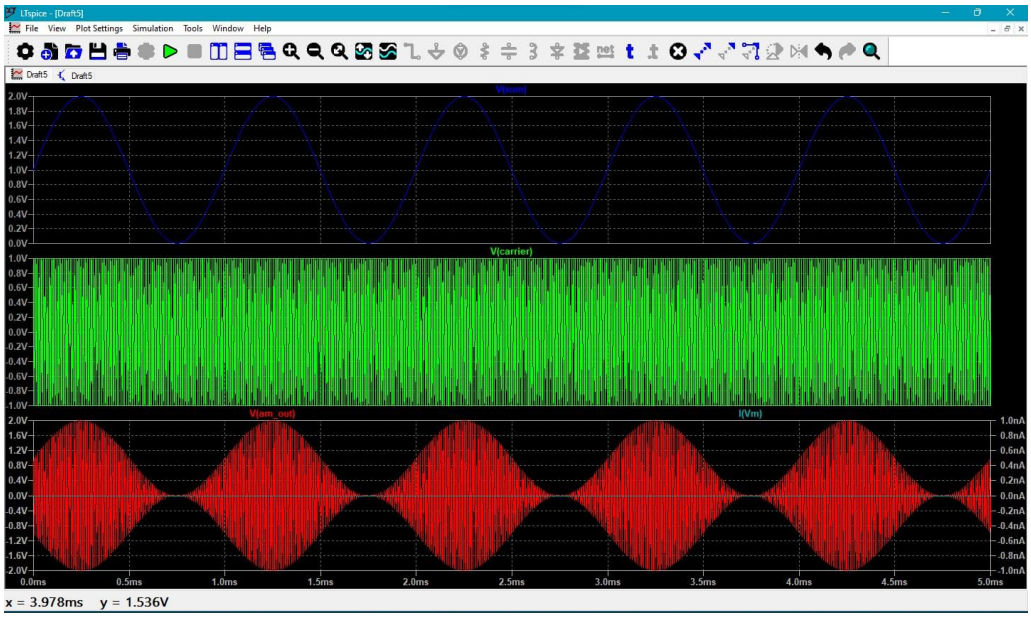
LTspice - [Draft5]
File View Plot Settings Simulation Tools Window Help
Draft5 Draft5
Vsrcm1
V(carrier)
V(am_out)
I(Vm)
0.0ms 0.5ms 1.0ms 1.5ms 2.0ms 2.5ms 3.0ms 3.5ms 4.0ms 4.5ms 5.0ms
x = 3.978ms y = 1.536V

Case-3 :

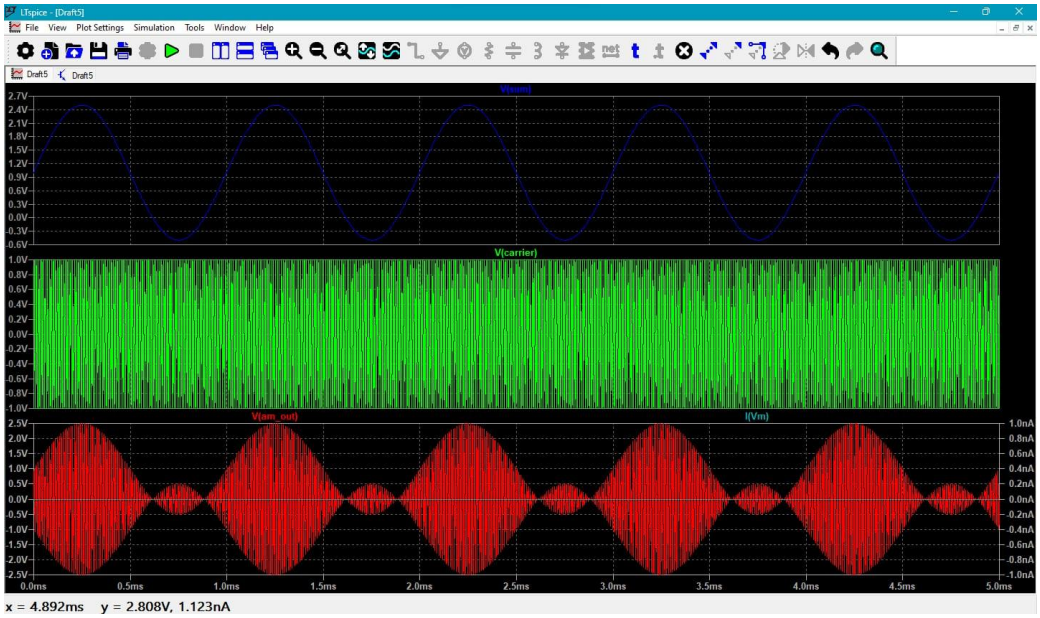
LTspice - [Draft5]
File View Plot Settings Simulation Tools Window Help
Draft5 Draft5
Vsrcm1
V(carrier)
V(am_out)
I(Vm)
0.0ms 0.5ms 1.0ms 1.5ms 2.0ms 2.5ms 3.0ms 3.5ms 4.0ms 4.5ms 5.0ms
x = 4.892ms y = 2.808V, 1.123nA

Observation Table

Case	Vm (Am)	Vc (Ac)	Theor. μ	V_max	V_min	Meas. μ	Modulation Type
1	0.5V	1V	0.5	1.5V	0.5V	0.5	Under-modulation
2	1.0V	1V	1.0	2V	0V	1	Critical modulation
3	1.5V	1V	1.5	2.5V	-0.5V	1.5	Over-modulation

Conclusion

The AM simulation was performed using four components — Vc (normalised carrier, Vamp=1), Vm (message signal), V3 (DC bias = Ac = 1), and B1 (BV multiplier) — directly implementing the standard AM equation:

$$s(t) = [A_c + m(t)] \sin(2\pi f_c t)$$

- Case 1 (μ=0.5): Clean under-modulated AM. Envelope varied between 1.5V and 0.5V. Measured μ = 0.5.
- Case 2 (μ=1.0): Critical modulation. Envelope minimum just touched 0V. Measured μ = 1.
- Case 3 (μ=1.5): Over-modulation. Phase reversal observed when V(sum) went negative. Measured μ = 1.5.