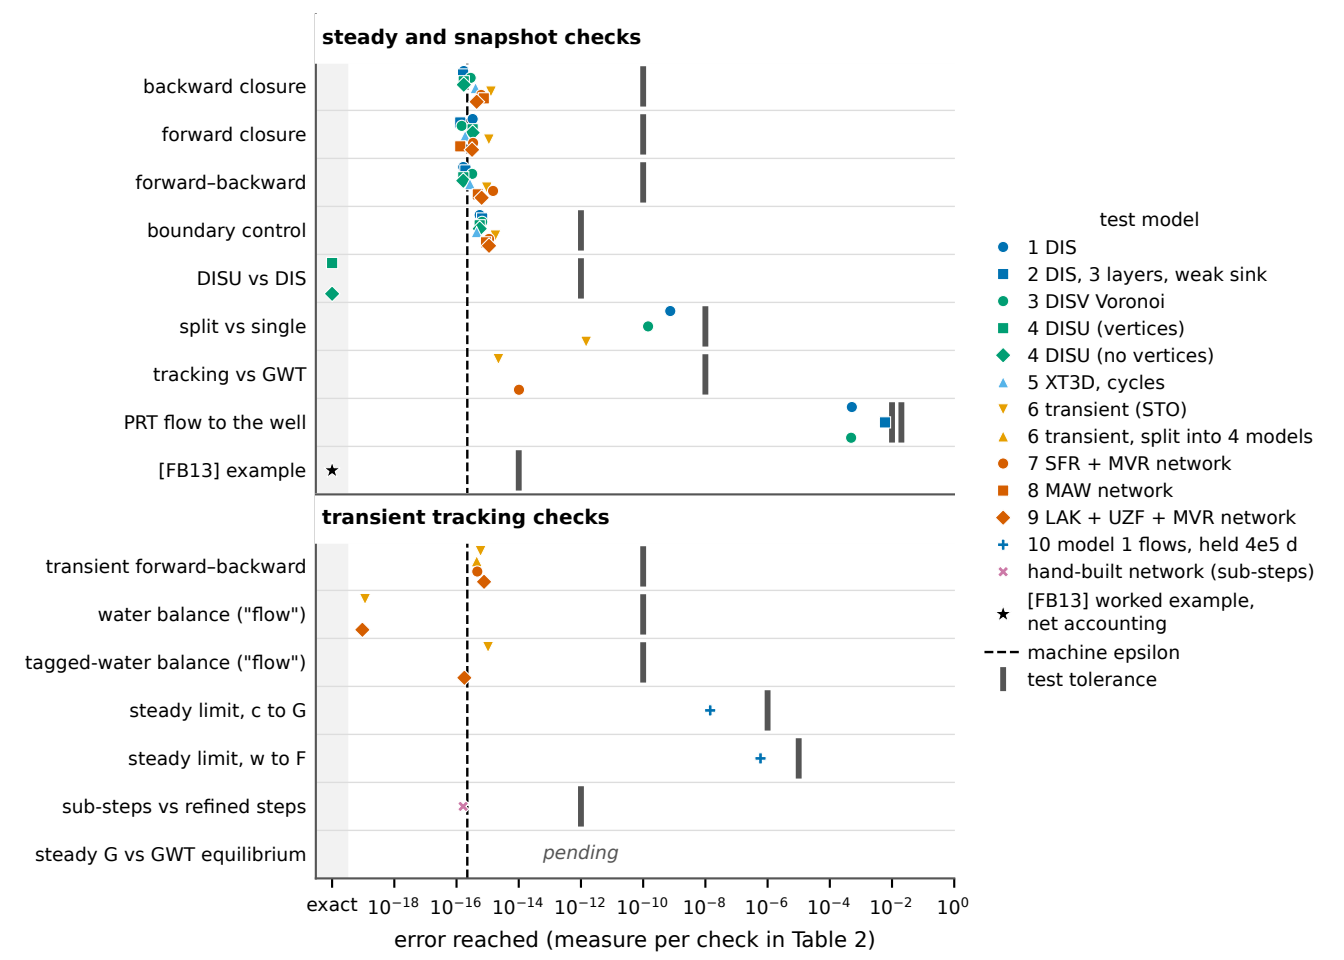
steady and snapshot checks
backward closure
forward closure
forward–backward
boundary control
DISU vs DIS
split vs single
tracking vs GWT
PRT flow to the well
[FB13] example
transient tracking checks
transient forward–backward
water balance ("flow")
tagged-water balance ("flow")
steady limit, c to G
steady limit, w to F
sub-steps vs refined steps
steady G vs GWT equilibrium
pending
exact
10^{-18}
10^{-16}
10^{-14}
10^{-12}
10^{-10}
10^{-8}
10^{-6}
10^{-4}
10^{-2}
10^{0}
error reached (measure per check in Table 2)
test model
1 DIS
2 DIS, 3 layers, weak sink
3 DISV Voronoi
4 DISU (vertices)
4 DISU (no vertices)
5 XT3D, cycles
6 transient (STO)
6 transient, split into 4 models
7 SFR + MVR network
8 MAW network
9 LAK + UZF + MVR network
10 model 1 flows, held 4e5 d
hand-built network (sub-steps)
[FB13] worked example, net accounting
machine epsilon
test tolerance