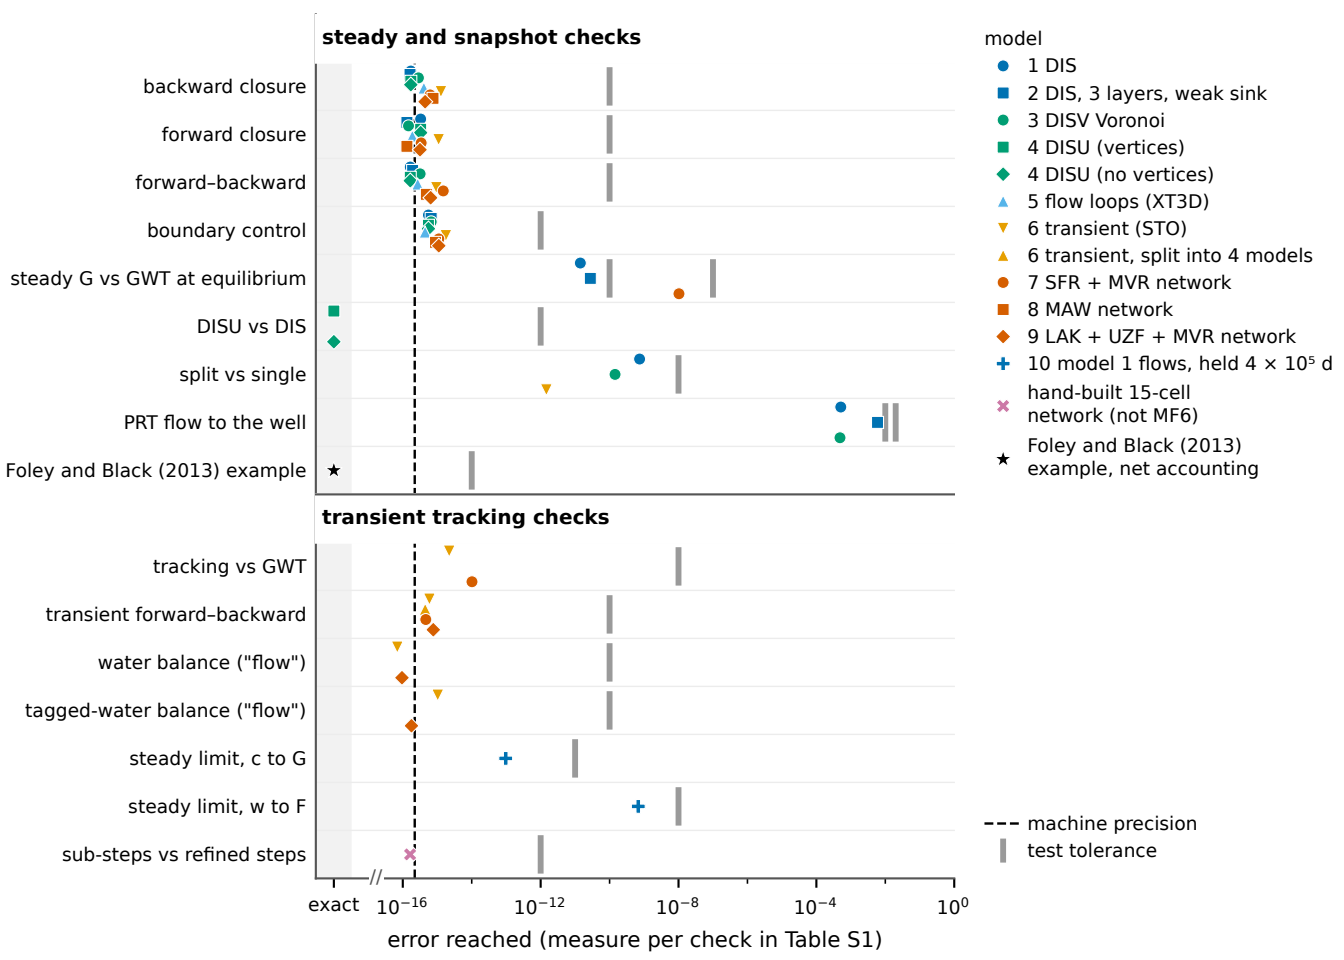
steady and snapshot checks
backward closure
forward closure
forward–backward
boundary control
steady G vs GWT at equilibrium
DISU vs DIS
split vs single
PRT flow to the well
Foley and Black (2013) example
transient tracking checks
tracking vs GWT
transient forward–backward
water balance ("flow")
tagged-water balance ("flow")
steady limit, c to G
steady limit, w to F
sub-steps vs refined steps
exact
10^{-16}
10^{-12}
10^{-8}
10^{-4}
10^{0}
error reached (measure per check in Table S1)
model
1 DIS
2 DIS, 3 layers, weak sink
3 DISV Voronoi
4 DISU (vertices)
4 DISU (no vertices)
5 flow loops (XT3D)
6 transient (STO)
6 transient, split into 4 models
7 SFR + MVR network
8 MAW network
9 LAK + UZF + MVR network
10 model 1 flows, held 4 × 10^5 d
hand-built 15-cell network (not MF6)
Foley and Black (2013) example, net accounting
machine precision
test tolerance