


The WaveLabX Browser Application — Client-Side Reflection Analysis

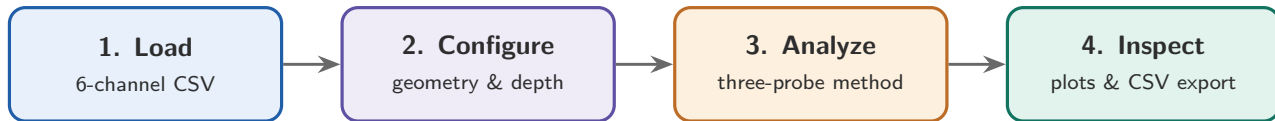

(a) Configuration: probe arrays, sampling rate and water depth

Settings

Sampling freq (Hz) Detect band min (Hz) Detect band max (Hz) Skip first (waves) Analyze (waves, 0 = all) Water depth d (m) — all files Apply to all

Analysis method ⓘ

Array 1 — ch 1–3 (seaward)
X 12 X 23


Array 2 — ch 4–6 (shoreward)
X 45 X 56

Each array is defined by two gauge spacings; gauge positions are taken as 0, X_{12} , $X_{12}+X_{23}$. Water depth and gauge layout apply to every file; wave frequency is detected per file and is editable in the table. The number of gauges per file is auto-detected from the CSV: 2-column CSVs run two-probe Goda–Suzuki on the single pair (only X_{12} is used); 3-column CSVs run three-probe on Array 1 only; 6-column CSVs run two three-probe arrays.


(b) Time series



(c) Energy spectrum

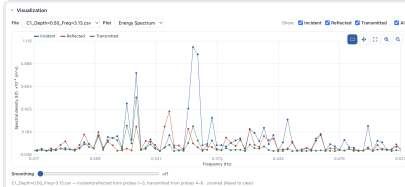

(d) Power spectrum

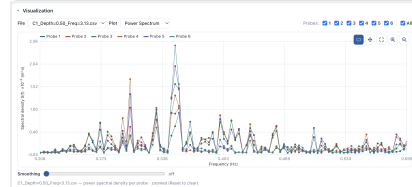

(e) Per-file results: incident/reflected heights and coefficients

Results · 1 file(s) Recompute Export CSV Clear

File	d (m)	f_D (Hz)	T_D (s)	H_{I1} (m)	H_{R1} (m)	K_{R1}	H_{I2} (m)	H_{R2} (m)	K_{R2}	K_t
jonswap_example.csv	0.5	0.785	1.274	0.0557	0.0447	0.803	0.0315	0.0570	1.810	0.566