Hand Mobility Assessment Glove: Technical Document

14 October 2026

Contents

1. Summary 2
2. Problem and objectives 2
3. System overview 3
4. Hardware design 3
5. I²C communication 5
6. Firmware design 6
7. Operating states 8
8. Movement detection algorithm 9
9. Detection settings 11
10. Serial protocol 11
11. Live demo page 12
12. Testing and results 13
13. Limitations and safety 15
14. Future improvements 15
15. Appendix 16

Summary

The Hand Mobility Assessment Glove detects hand movement in a coma patient and alerts a caregiver with a buzzer and an LED. An Arduino reads an IMU sensor on the back of the hand 50 times a second over I²C and compares two movement values with thresholds.

The glove also reports the tilt of the hand, labels each movement by type and strength, beeps faster for a big movement, and keeps its settings when switched off.

The Arduino program compiles for the Uno and Nano, and its detection logic passes every simulated test. It has not yet been run on real hardware.

Deliverable	File	Status
Arduino program	`firmware/HandMobilityGlove/HandMobilityGlove.ino`	Compiles; not yet run on hardware
Live demo page	`index.html`	Working in the browser
Project README	`README.md`	Complete

Item	Value
Controller	Arduino Uno or Nano
Sensor	IMU sensor with a 3-axis accelerometer and a 3-axis gyroscope
Sensor link	I²C at 400 kHz, address 0x68
Sample rate	50 readings a second
Alert outputs	Buzzer on pin D8, LED on pin D13
Default thresholds	0.030 g acceleration change, 3.0 °/s rotation rate
Shortest detection time	60 ms (3 readings in a row)
Tilt reported	Roll and pitch of the hand, in degrees
Movement labels	Type: short, long or shaking. Strength: small or big
Settings	Saved in the Arduino's permanent memory
Program size	15,008 bytes, 46% of an Arduino Uno

Problem and objectives

A coma patient may move a hand at any moment, and staff cannot watch every patient all the time. These movements can be involuntary, reflexive or spontaneous. A caregiver needs to know when one happens so that the patient can be assessed.

The glove watches the hand continuously and raises an alert when it moves. It reports that movement happened; it does not judge what the movement means.

Objectives

- Detect hand movement in real time with a wearable IMU sensor.
- Read the IMU sensor from an Arduino over I²C.
- Separate real movement from normal sensor noise.
- Alert the caregiver automatically with sound and light.
- Let a caregiver pause the alert while attending the patient.
- Keep the design low-cost: one microcontroller and one sensor.
- Show the system working without hardware, through a live demo page.

Out of scope

- Deciding whether a movement is voluntary, involuntary or a reflex.
- Judging the patient's level of consciousness or recovery.
- Clinical validation and medical safety approval.

System overview

The system is one IMU sensor, one Arduino and two alert outputs. Everything else is optional.

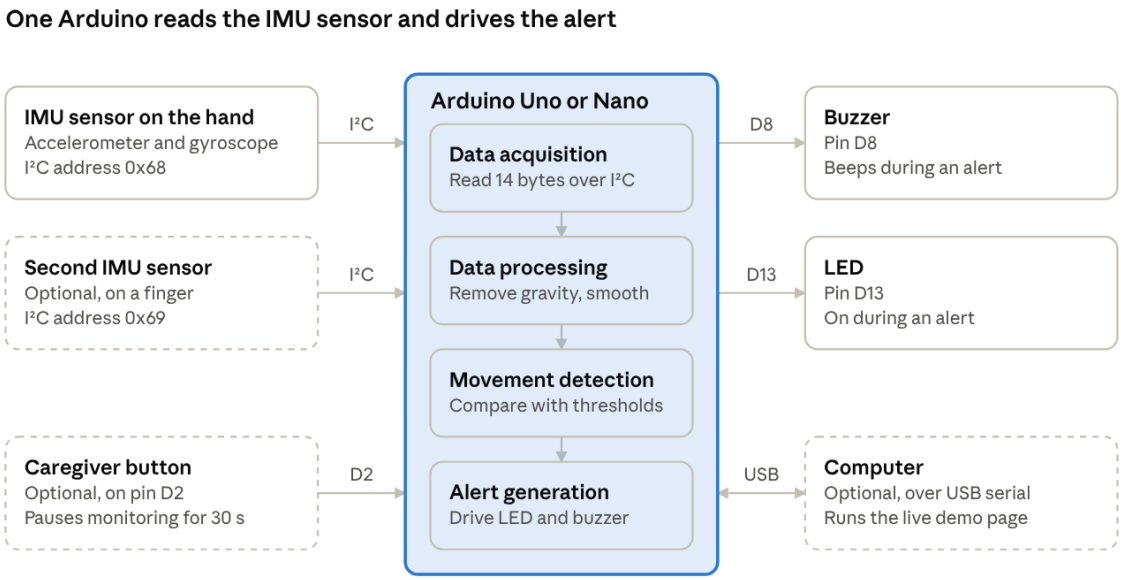


Figure 1. System block diagram: the Arduino and the six parts around it.

Readings flow from left to right: the IMU sensor measures, the Arduino decides, and the buzzer and LED alert. Dashed boxes are optional parts.

The Arduino repeats five stages 50 times a second:

1. **Motion sensing.** The IMU sensor measures acceleration and rotation on three axes.
2. **Data acquisition.** The Arduino reads 14 bytes from the sensor over I²C.
3. **Data processing.** Gravity and bias are removed, and two movement values are worked out and smoothed. The tilt of the hand is worked out from gravity.
4. **Movement detection.** Each value is compared with its threshold. Three readings in a row above a threshold confirm movement, which is then labelled by type and strength.
5. **Alert generation.** The LED turns on and the buzzer beeps until the hand has been still for 3 seconds. A big movement beeps faster than a small one.

Hardware design

The required hardware is an Arduino, one IMU sensor and a buzzer, joined by six wires. An LED, a button and a second IMU sensor are optional.

Parts

Part	Role	Needed
Arduino Uno or Nano	Runs the program, reads the sensor, drives the outputs	Required
IMU sensor	Measures acceleration and rotation of the hand	Required
Active buzzer, 5 V	Beeps during an alert	Required
Glove	Holds the IMU sensor on the back of the hand	Required
Jumper wires and USB cable	Connections, programming and power	Required
LED and 220 Ω resistor	A brighter alert light. The Arduino's on-board LED on pin 13 lights without it	Optional
Push button	Caregiver button: pauses monitoring for 30 seconds	Optional
Second IMU sensor	On a finger, to catch small finger movements	Optional

The IMU sensor

The IMU sensor is an MPU-6050 on a GY-521 breakout board. One chip holds a 3-axis accelerometer and a 3-axis gyroscope, so no separate sensors are needed. The program is written for this model; another IMU model would need different register settings.

Property	Setting used
Accelerometer range	±2 g, at 16,384 counts per g
Gyroscope range	±250 °/s, at 131 counts per °/s
Output values	16-bit signed numbers
Built-in low-pass filter	About 20 Hz
Readings	50 a second
I²C address	0x68, or 0x69 with the AD0 pin tied to 3.3 V
Supply	5 V to the board's VCC pin; the board regulates it to 3.3 V

Mounted as the demo page draws it, the sensor's X axis points across the hand, Y toward the fingers and Z out of the back of the hand. A resting hand then reads about +1 g on Z, which is gravity. Detection uses the size of the movement across all three axes, so the mounting direction does not change the result.

Wiring

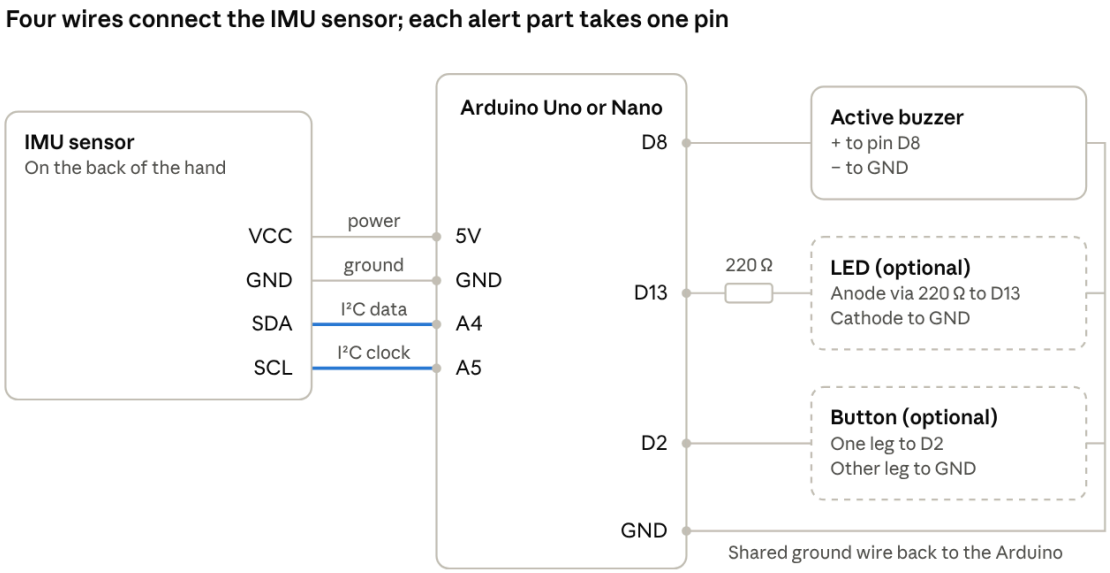


Figure 2. Wiring diagram: IMU sensor, buzzer, LED and button on an Arduino Uno or Nano.

The two highlighted wires are the I²C bus; the other two power the sensor. Every part's ground goes back to a GND pin on the Arduino. The Appendix lists each connection as a table.

Power

The Arduino is powered through its USB port, from a computer or a 5 V power bank. It supplies the IMU sensor, buzzer and LED from its own pins.

I²C communication

The Arduino is the I²C controller and gets a complete reading in one 14-byte exchange every 20 ms.

I²C uses two wires. SDA carries the data and is on Arduino pin A4. SCL carries the clock and is on pin A5. The bus runs at 400 kHz. Each device has an address: the IMU sensor on the hand answers at 0x68, and an optional second one at 0x69.

Start-up settings

At power-up the Arduino checks that the sensor answers, then writes five registers.

Register	Value written	Purpose
0x75 WHO_AM_I	None, read only	Check that a sensor answers at this address
0x6B PWR_MGMT_1	0x01	Wake the sensor and use the gyroscope clock
0x19 SMPLRT_DIV	19	1 kHz ÷ (1 + 19) = 50 readings a second
0x1A CONFIG	0x04	Built-in low-pass filter, about 20 Hz
0x1B GYRO_CONFIG	0x00	Gyroscope range ±250 °/s
0x1C ACCEL_CONFIG	0x00	Accelerometer range ±2 g

Reading the sensor

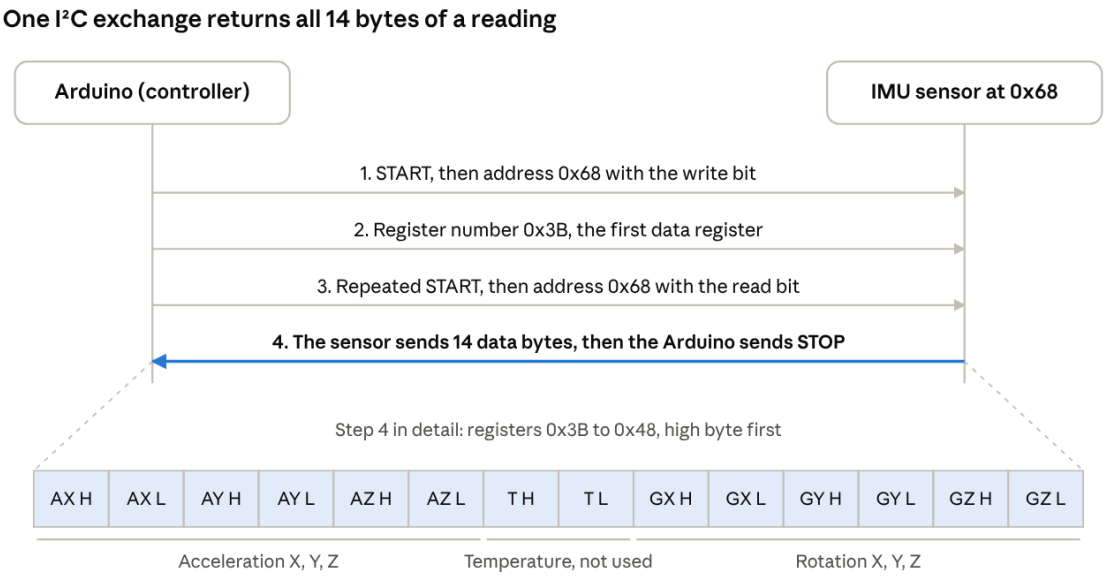


Figure 3. I²C read sequence: four steps and the 14 bytes returned.

Each value is two bytes, high byte first, read as a signed 16-bit number. The two temperature bytes arrive in the middle of the block and are skipped.

Value	Conversion	Example
Acceleration	counts ÷ 16,384 = g	Bytes 0x40 0x00 = 16,384 counts = 1.000 g
Rotation	counts ÷ 131 = °/s	Bytes 0x01 0x06 = 262 counts = 2.0 °/s

When the sensor does not answer

- A bus timeout of 3 ms stops a loose wire from freezing the program.
- A failed read is skipped; the previous reading is never reused.
- After 10 failed reads in a row the glove enters the sensor fault state.
- In that state it tries to wake the sensor once a second, and recalibrates when it answers.

Firmware design

The program is one Arduino sketch of 674 lines that never waits. Inputs and outputs are handled on every pass of the loop, and the sensor is read every 20 ms.

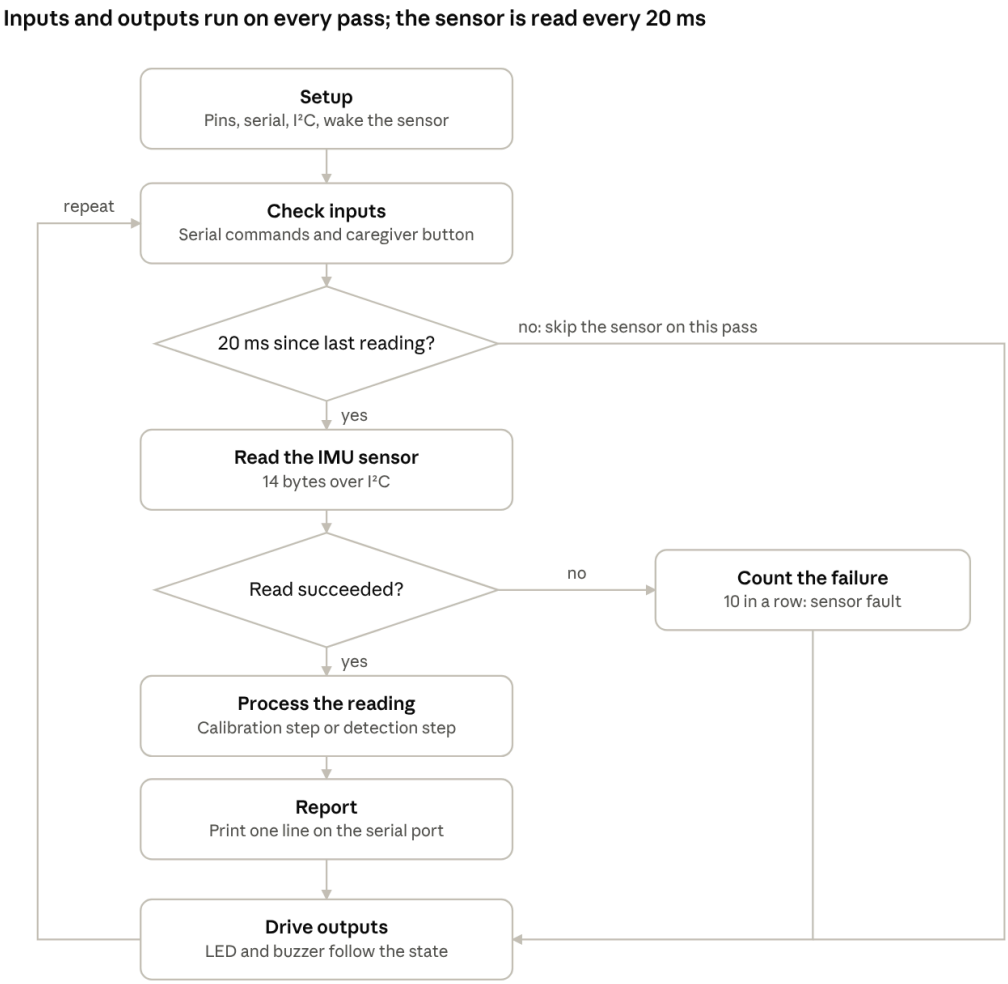


Figure 4. Main loop flowchart: seven steps and two decisions.

Because nothing blocks, the caregiver button and the buzzer pattern stay responsive between sensor readings.

Structure

Group	Functions	Job
I²C	`writeRegister` `readRegisters` `imuBegin` `imuRead`	Talk to the IMU sensor and convert its bytes to g and °/s
Settings	`defaultsStamp` `useDefaultSettings` `loadSettings` `saveSettings`	Keep the settings in the Arduino's permanent memory
Calibration	`startCalibration` `calibrationStep`	Measure gyroscope bias and gravity with the hand still
Detection	`countReversal` `updateMotion` `updateTilt` `detect` `caregiverButton`	Work out the movement values and the tilt, and change state
Movement labels	`startEvent` `updateEvent` `endEvent`	Label each movement by type and strength, and sum it up when it ends
Faults	`enterFault` `recoverFromFault`	Handle a sensor that stops answering
Outputs	`setBuzzer` `driveOutputs`	Turn the state into LED and buzzer patterns
Serial	`printSample` `printSettings` `handleCommand` `pollSerial`	Send readings and accept commands
Scheduling	`pollButton` `sampleTick` `setup` `loop`	Debounce the button and run everything on time

Timing

- The loop compares `millis()` with the time of the last reading and takes a new one when 20 ms have passed.
- If the loop falls more than one period behind, it does not try to catch up. It restarts the 20 ms count from now.
- Sending one output line takes about 9 ms, so a full pass fits inside the period.
- The button is debounced: a press counts only after the pin has been steady for 40 ms.
- Saving the settings is the one slow step. It can hold the loop for up to about 60 ms, once, 2 seconds after the last change.

Dependencies and size

The sketch uses only the Wire and EEPROM libraries that ship with the Arduino software. On an Uno it takes 15,008 bytes of program memory and 775 bytes of RAM, under half of each.

Operating states

The glove is always in one of five states, and the LED and buzzer show which one.

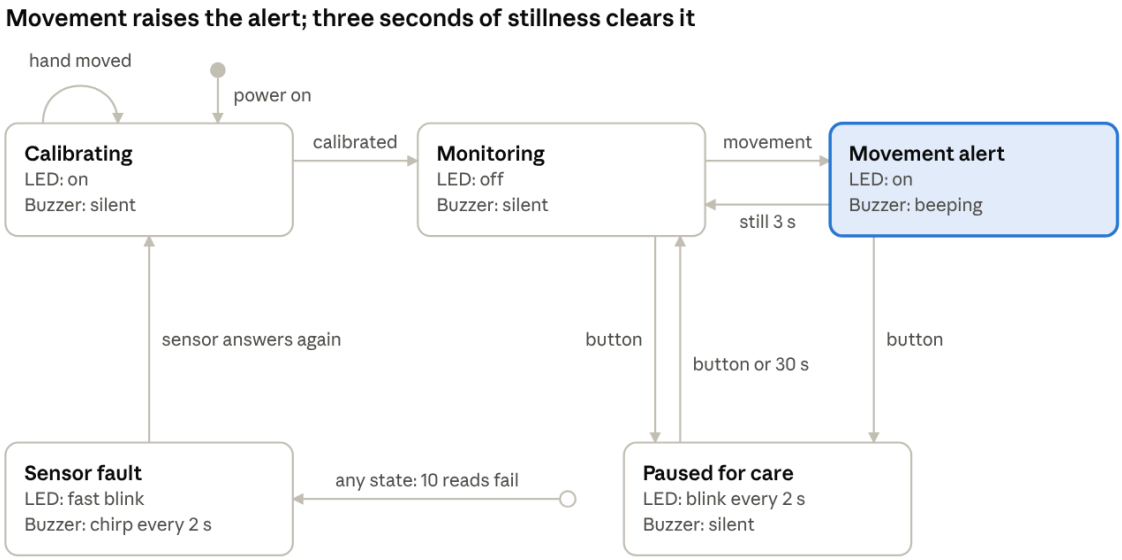


Figure 5. State diagram: five states and what moves the glove between them.

Movement confirmed in the monitoring state raises the alert. The alert clears by itself once the hand has been still for the hold time, 3 seconds by default.

State	Serial code	LED	Buzzer
Monitoring	0	Off	Silent
Movement alert, small movement	1	On	Slow beeps: 150 ms on, 650 ms off
Movement alert, big movement	1	On	Fast beeps: 125 ms on, 125 ms off
Paused for care	2	100 ms flash every 2 s	Silent
Calibrating	3	On	Silent
Sensor fault	4	100 ms on, 100 ms off	100 ms chirp every 2 s

At power-up the buzzer also gives one 120 ms beep, so a dead buzzer is noticed straight away.

Calibration

Calibration takes 100 readings, which is 2 seconds, with the hand still. The average gyroscope reading becomes the bias to subtract, and the average accelerometer reading becomes the first gravity estimate. If any gyroscope axis varies by more than 4 °/s during those readings, the hand moved and calibration starts again.

The caregiver button

One press silences an alert and pauses monitoring, so that touching the patient does not set the alarm off. Monitoring resumes after 30 seconds, or at once on a second press. Movement during the pause is ignored and not counted.

Movement detection algorithm

Movement is confirmed when either of two values stays above its threshold for 3 readings in a row. The acceleration change comes from the accelerometer, and the rotation rate comes from the gyroscope.

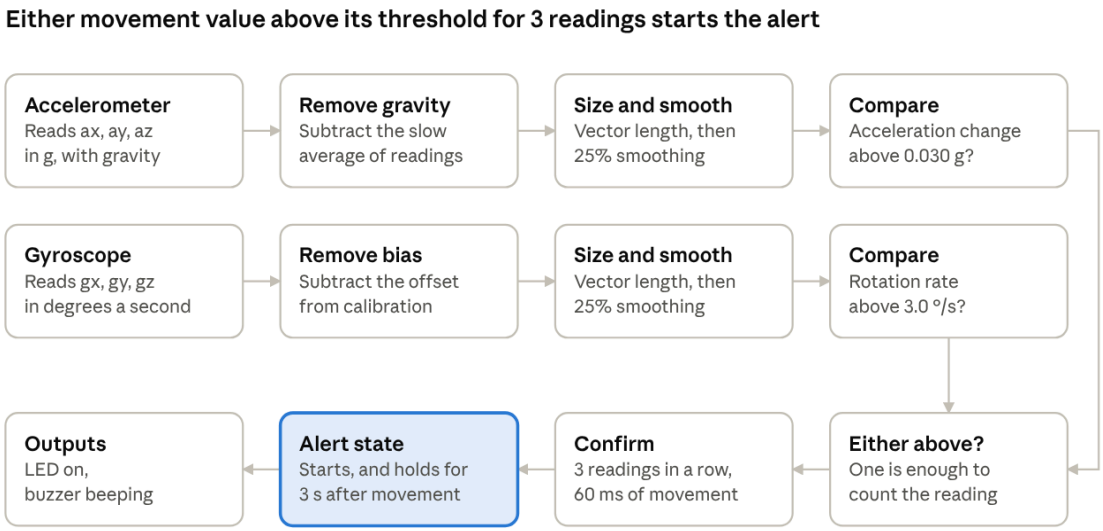


Figure 6. Detection pipeline: two sensor lanes and one decision lane.

The top lane handles shaking and shifting, the middle lane handles turning, and the bottom lane makes the decision.

Acceleration change

The accelerometer always feels gravity, about 1 g, even when the hand is still. The program keeps a slow-moving estimate of gravity and measures how far each reading is from it.

$$c = \|\mathbf{a} - \mathbf{g}_{est}\| \qquad \mathbf{g}_{est} \leftarrow \mathbf{g}_{est} + 0.04(\mathbf{a} - \mathbf{g}_{est})$$

Here `a` is the reading in g and `g_est` is the gravity estimate, which moves 4% of the way toward each new reading. It catches up with a new tilt in about half a second. A hand that is tilted but still therefore reads zero, and only real movement stands out.

Rotation rate

The gyroscope reads zero when the hand is still, once its bias is removed. The rotation rate is the size of the reading across the three axes.

$$r = \sqrt{g_x^2 + g_y^2 + g_z^2}$$

Smoothing

Both values are smoothed so that a single noisy reading cannot cross a threshold. Each smoothed value moves 25% of the way toward its new reading, which gives a response time of about 70 ms.

$$m \leftarrow m + 0.25(x - m)$$

Decision

1. A reading counts if the smoothed acceleration change is above 0.030 g, or the smoothed rotation rate is above 3.0 °/s.
2. A counter adds one for each reading that counts, and returns to zero on the first that does not.
3. When the counter reaches 3, movement is confirmed and the alert starts.
4. Every further confirmed reading restarts the hold timer.
5. The alert ends when the hold time, 3 seconds, passes with no confirmed movement.

Why two sensors

Each sensor catches movement the other misses. A straight knock has almost no rotation, so only the accelerometer sees it. A gentle turn has almost no acceleration, so only the gyroscope sees it. With a second IMU sensor fitted, the larger value from the two sensors is used.

Movement type

While an alert is on, the movement is labelled by how long it has lasted and how often it has changed direction.

Type	Rule
Short	The movement has lasted under 0.5 s
Long	The movement has lasted 0.5 s or more
Shaking	The movement has lasted 1 s or more and changed direction 6 times or more on any one axis

A change of direction is counted when the value on one axis swings from clearly positive to clearly negative, or back. Six axes are watched: the three parts of the acceleration change and the three rotation axes. Values smaller than half a threshold are ignored, so sensor noise around zero is not counted. The label only moves up during one alert: from short to long to shaking.

Movement strength

A movement starts as small. It becomes big when the acceleration change or the rotation rate reaches 4 times its threshold, which is 0.120 g or 12 °/s at the default settings. The buzzer beeps slowly for a small movement and quickly for a big one, so a caregiver can hear the difference.

Tilt angles

The gravity estimate also gives the tilt of the hand. Roll is the tilt to the side, and pitch is the fingers lifting or dropping.

$$\text{roll} = \text{atan2}(-g_{est,x}, g_{est,z}) \qquad \text{pitch} = \text{atan2}(g_{est,y}, \sqrt{g_{est,x}^2 + g_{est,z}^2})$$

Both angles are given in degrees, and a flat hand reads 0° and 0°. Because they come from the slow gravity estimate, they settle about half a second after the hand stops. They cannot show the hand turning flat on the bed, like a compass needle, because gravity does not change in that turn.

Worked example

In simulation a finger twitch lasts about a quarter of a second. Its smoothed values peak at 0.045 g and 6.9 °/s, both above their thresholds but under 4 times them. Movement is confirmed 120 ms after the twitch begins, and it is labelled short and small. The buzzer gives slow beeps, and the alert stays on for 3 seconds after the twitch ends.

Detection settings

Five settings control how sensitive the glove is and how the alert behaves. In simulation the resting values peak at 0.009 g and 0.18 °/s, so the default thresholds sit about 3.5 and 17 times above sensor noise.

Setting	Variable in the sketch	Default	Range by serial command	What it controls
Acceleration-change threshold	`accelThresholdG`	0.030 g	0.005 to 1.0 g	How big a shake or shift counts as movement
Rotation threshold	`gyroThresholdDps`	3.0 °/s	0.5 to 100 °/s	How fast a turn counts as movement
Readings in a row to confirm	`confirmSamples`	3 (60 ms)	1 to 50	How long movement must last before the alert starts
Alert hold time	`alertHoldMs`	3,000 ms	500 to 60,000 ms	How long the alert stays on after the hand is still
Care pause	`carePauseMs`	30,000 ms	1,000 to 600,000 ms	How long the caregiver button pauses monitoring

The trade-off

A lower threshold catches smaller movements but lets sensor noise set off the alarm. A higher threshold stops false alarms but misses small movements. The simulated faint finger flex peaks at about 1.3 °/s, so it is missed at 3.0 °/s and caught at 1.0 °/s.

Saved settings

A changed setting is saved in the Arduino's permanent memory (EEPROM) 2 seconds after the last change, and loaded at the next power-up. Waiting for the changes to stop avoids wearing the memory out while a slider is being dragged.

The starting values are the `DEFAULT_` constants at the top of the sketch, such as `DEFAULT_ACCEL_THRESHOLD_G`. Saved settings are used instead of them. If a `DEFAULT_` value is edited and the sketch uploaded again, the saved settings are discarded, so the new defaults take effect. Saved values outside the allowed ranges are discarded too.

Tuning on a real glove

1. Fix the IMU sensor to the glove and connect the demo page over USB.
2. Keep the hand still for one minute. Note the highest resting value on each of the two lower charts.
3. Set each threshold to about three times its resting peak.
4. Make the smallest movement the glove should catch. Lower the thresholds until it is detected every time.
5. If false alerts appear, first raise the readings in a row to confirm, then the thresholds.
6. Nothing more is needed, because the glove saves the settings itself. To make them the starting values of a new glove, copy the four lines the page shows into the sketch.

Serial protocol

The Arduino sends one text line per reading at 115200 baud and accepts single-letter commands. The Arduino Serial Plotter and the demo page both read the same line format.

Output line

```
ax:0.012,ay:-0.004,az:1.002,gx:0.10,gy:-0.20,gz:0.00,am:0.004,gm:0.21,roll:0.7,pitch:-0.2,st:0,ty:0,lv:0
```

Field	Meaning	Unit
`ax` `ay` `az`	Acceleration on each axis	g
`gx` `gy` `gz`	Rotation on each axis, bias removed	°/s
`am`	Acceleration change, the first movement value	g
`gm`	Rotation rate, the second movement value	°/s
`roll` `pitch`	Tilt of the hand	degrees
`st`	State: 0 monitoring, 1 alert, 2 paused, 3 calibrating, 4 sensor fault	none
`ty`	Movement type during an alert: 1 short, 2 long, 3 shaking. 0 when there is no alert	none
`lv`	Movement strength during an alert: 1 small, 2 big. 0 when there is no alert	none

The axis and tilt fields come from the IMU sensor on the hand. When a second IMU sensor is fitted, `am` and `gm` are the larger of the two sensors' values.

Lines that start with `#` are messages for a person to read, such as `# ready` or `# settings saved`. One line takes about 9 ms to send, which fits inside the 20 ms between readings.

When an alert ends, one message sums it up. Capturing these lines on a computer gives a log of every movement:

```
# event 3 ended: long movement, big, lasted 1.9 s, peaks 0.306 g and 80.1 deg/s
```

Commands

Each command is one line: a letter, then a number where one is needed.

Command	Example	Effect
`A`	`A0.030`	Set the acceleration-change threshold, in g
`G`	`G3.0`	Set the rotation threshold, in °/s
`C`	`C3`	Set the readings in a row needed to confirm movement
`H`	`H3000`	Set the alert hold time, in ms
`P`	`P30000`	Set the care pause, in ms
`K`	`K`	Same as pressing the caregiver button
`R`	`R`	Recalibrate
`S`	`S`	Save the settings now, without waiting 2 seconds
`D`	`D`	Go back to the default settings in the sketch
`?`	`?`	Print the current settings

After every change the Arduino answers with its settings, for example `# settings A=0.030 G=3.0 C=3 H=3000 P=30000`. The demo page reads this line to set its sliders.

Live demo page

The demo page is a single HTML file that simulates the glove in a browser and can also show a real glove over USB. It needs no installation: open `index.html`, or the copy published at https://saravanakumart362-create.github.io/Hand-Movement-Detection/.

Area of the page	What it shows
The glove	A hand that can be dragged to tilt it, six movements to play, and the tilt as roll and pitch angles
The alarm	The current state, the movement's type and strength, LED, buzzer, event count and the caregiver button
Signal chain	The five system stages with live values, including the 14 I²C bytes
Live traces	Four charts: raw accelerometer, raw gyroscope, and the two movement values against their thresholds
Detection settings	Sliders for the thresholds and timing, saved automatically, with the matching lines for the sketch
Movement log	Each detected event: time, type, strength, duration, peak values and which sensor tripped it. **Download as a file** saves the log as a CSV spreadsheet file

How the simulation works

The page runs the same detection steps as the Arduino program, with the same constants. Only the sensor is simulated.

1. The hand has a pose: roll, pitch and position. Dragging the hand or playing a movement changes it.
2. Rotation rate is how much the pose changed since the last reading. Linear acceleration is how much that change itself changed.
3. Gravity is added along whichever way the tilted sensor now faces.
4. Random noise is added: 0.003 g on each accelerometer axis and 0.06 °/s on each gyroscope axis. The gyroscope also gets a fixed offset, which calibration removes.
5. The values are rounded to the 16-bit counts a real IMU sensor sends, then packed into 14 bytes.
6. The detection steps run on those bytes exactly as they do on the Arduino.

The noise figures are typical values chosen for the simulation. They are not measurements of a real sensor.

The six movements

Movement	What it models
Finger twitch	A small, quick finger movement that slightly rocks the hand
Faint finger flex	A very small finger movement, below the default thresholds
Tremor	Shaking 5 times a second for 2.5 seconds
Wrist turn	The wrist rotating 28° and returning
Hand lift	The hand tilting up 14° and rising 3 cm, then lowering
Bed bump	A knock from outside: a sharp jolt with almost no rotation

Showing a real glove

1. Open `index.html` in Chrome or Edge on a computer.
2. Close the Arduino Serial Monitor, because only one program can use the port.
3. Press **Arduino over USB** and choose the Arduino's port.

The page then plots the real readings and tilts the drawn hand to the roll and pitch the glove reports. Its sliders move to the settings the glove is using, and a slider change is sent to the glove as a command. This link has not yet been tested with a real board.

In the simulation the settings are kept in the browser, so they are still there after the page is reloaded. This stands in for the real glove's permanent memory.

Testing and results

The program compiles and the detection logic passes every simulated test, but nothing has been tested on real hardware yet. The thresholds are therefore starting values.

Build

The sketch was compiled with the Arduino AVR core 1.8.8 with all compiler warnings on. None came from the sketch.

Board	Program memory	RAM for global variables
Arduino Uno	15,008 of 32,256 bytes (46%)	775 of 2,048 bytes (37%)
Arduino Nano	15,008 of 30,720 bytes (48%)	775 of 2,048 bytes (37%)

Simulated movements

Each movement was played 40 times at the default settings, each time with different random sensor noise. Peaks are the highest seen across the 40 runs. Delay is the average time from the start of the movement to the alert. The label is the type and strength the glove gave the movement, which was the same in all 40 runs.

Movement	Runs detected	Peak acceleration change (g)	Peak rotation rate (°/s)	Delay to alert (ms)	Tripped by	Labelled
Finger twitch	40 of 40	0.045	6.9	120	Both sensors	Short, small
Faint finger flex	0 of 40	0.011	1.3	none	Neither	none
Tremor	40 of 40	0.045	8.9	280	Both sensors	Shaking, small
Wrist turn	40 of 40	0.307	80.2	140	Both sensors	Long, big
Hand lift	40 of 40	0.168	40.1	160	Both sensors	Long, big
Bed bump	40 of 40	0.087	0.5	80	Accelerometer	Short, small

The default thresholds are 0.030 g and 3.0 °/s, so a movement counts as big from 0.120 g or 12 °/s. The bed bump shows why both sensors are used: it barely rotates the hand, so only the accelerometer catches it.

Other simulated checks

Test	Result
Still hand, 40 runs of 60 s	No false alerts. Resting values peaked at 0.009 g and 0.18 °/s
Faint finger flex with the rotation threshold lowered to 1.0 °/s	Detected in 40 of 40 runs, with no false alerts in 40 still runs of 60 s
Acceleration threshold lowered to 0.005 g, still hand	10 false alerts across 10 runs of 30 s
Sensor noise raised to 8 times typical, default thresholds	10 false alerts across 10 runs of 30 s
Hand tilted 30° and held there	One alert during the tilt, then back to monitoring while still tilted
Movement during a care pause	Ignored
Movement after resuming with the button	Detected
Care pause left to run out	Monitoring resumed and the next movement was detected
Calibration with a still hand	Finished in 2.0 s
Hand moved during calibration	Calibration restarted and finished at 4.0 s
Flat hand, 20 runs	Roll and pitch stayed within 0.1° of zero
Hand held at 5 different tilts	Reported roll and pitch were within 0.1° of the true angles
Tremor, watched through one alert	The label moved from short to long to shaking, and never back
Alert acknowledged, then a new movement	The new alert started again at short and small

Demo page

The page was loaded in a headless browser at widths of 1280 px and 400 px. There were no script errors and no sideways scrolling. Alerts, the care pause, chart tooltips and dragging the hand all worked.

Three further checks were made in the browser:

- Each movement showed the expected label and beep pattern: slow beeps for the tremor and bed bump, fast beeps for the wrist turn.
- **Download as a file** produced a CSV file with one row for each logged movement.
- Changed settings were still in place after the page was reloaded, and **Reset to defaults** restored them.

Not yet tested

- The program running on a real Arduino with a real IMU sensor.
- Saving and loading settings in a real Arduino's memory.
- The thresholds against real sensor noise and real hand movements.
- The USB link between the demo page and a real board.
- A second IMU sensor on a finger.
- Long continuous running, battery power, and use on a person.

Limitations and safety

The glove is a student prototype that detects motion. It is not a medical device and must not be relied on for patient care.

Limitation	Why	What helps
It cannot tell why the hand moved	An IMU sensor measures motion only	A caregiver assesses the patient after every alert
Small finger movements can be missed	One sensor on the back of the hand feels a finger only faintly	A second IMU sensor on a finger, or lower thresholds
Outside movement trips the alert	A bumped bed or a nurse moving the arm shakes the sensor in the same way	The caregiver button pauses monitoring during care
Very slow movement can be missed	A turn slower than the rotation threshold also stays under the acceleration threshold	A lower rotation threshold
Alerts are local only	The buzzer and LED are at the bedside	A wireless link to a nurse station
Events are not stored on the glove	The Arduino keeps only a count of events	The demo page's downloadable log, or capturing the serial messages on a computer
The labels are simple rules	"Shaking" means the direction changed many times. It is not a medical finding	A caregiver assesses the patient after every alert
Tilt shows two angles only	Gravity does not change when the hand turns flat on the bed	A sensor with a compass would give the third angle

Hardware cautions

- A loose glove lets the sensor shift, which reads as movement. Fix the sensor firmly.
- If the IMU sensor stops answering, the glove cannot detect anything. The sensor fault state shows this with a fast-blinking LED and a chirp.
- An Arduino output pin supplies only a small current. Check the buzzer's rated current before wiring it straight to pin D8. A larger buzzer needs a transistor.
- Wires worn by a patient must be insulated, secured and kept clear of other medical equipment.

Real clinical use would need controlled testing, validated detection accuracy, proper alarm handling and a medical safety evaluation.

Future improvements

The first step is to build the glove and tune the thresholds on real hardware. The rest extend what it can do.

1. Build and test on real hardware, and replace the simulated results with measured ones.
2. Add IMU sensors on the fingers to catch small finger movements.
3. Send alerts wirelessly to a nurse station or a phone.
4. Log every event with its time to a memory card.
5. Run from a battery, with a low-battery warning.
6. Add a reference sensor on the bed frame to tell a bumped bed from a moving hand.
7. Add a compass sensor to report the third tilt angle.

Appendix

Pin connections

Part	Pin on the part	Arduino pin
IMU sensor	VCC	5V
IMU sensor	GND	GND
IMU sensor	SDA	A4
IMU sensor	SCL	A5
Buzzer	+	D8
Buzzer	–	GND
LED (optional)	Anode, through a 220 Ω resistor	D13
LED (optional)	Cathode	GND
Caregiver button (optional)	One leg	D2
Caregiver button (optional)	Other leg	GND
Second IMU sensor (optional)	VCC, GND, SDA, SCL	Same four pins as the first
Second IMU sensor (optional)	AD0	3.3V, which gives it address 0x69

Constants in the sketch

Constant	Value	Meaning
`SAMPLE_PERIOD_MS`	20	Time between readings, which gives 50 readings a second
`GRAVITY_ALPHA`	0.04	Share of each new reading blended into the gravity estimate
`SMOOTH_ALPHA`	0.25	Share of each new value blended into the smoothed movement values
`CALIBRATION_SAMPLES`	100	Readings averaged during calibration, which takes 2 s
`CALIBRATION_MAX_SPREAD_DPS`	4.0	Gyroscope spread, in °/s, above which calibration restarts
`MAX_READ_ERRORS`	10	Failed reads in a row before a sensor fault
`LONG_MOVEMENT_MS`	500	Movement lasting this long is labelled long
`SHAKING_MIN_MS`	1,000	Shortest movement that can be labelled shaking
`SHAKING_REVERSALS`	6	Changes of direction needed for the shaking label
`BIG_MOVEMENT_RATIO`	4.0	Times a threshold a value must reach to be labelled big
`SETTINGS_SAVE_DELAY_MS`	2,000	Wait after the last settings change before saving
`ACCEL_LSB_PER_G`	16,384	Accelerometer counts per g
`GYRO_LSB_PER_DPS`	131	Gyroscope counts per °/s
`BUZZER_IS_PASSIVE`	0	Set to 1 for a passive piezo buzzer
`BUZZER_TONE_HZ`	2,000	Tone used for a passive buzzer

Project files

File	Size	Contents
`firmware/HandMobilityGlove/HandMobilityGlove.ino`	674 lines, 30 functions	The Arduino program. Needs only the built-in Wire and EEPROM libraries
`index.html`	1,575 lines	The live demo page, in one file
`README.md`	406 lines	Wiring, upload steps and usage
`docs/TECHNICAL_DOCUMENT.md`	This document	Design, diagrams, testing and limitations
`docs/images/`	6 PNG files	The diagrams used in this document

Terms

Term	Meaning
IMU	Inertial Measurement Unit: a sensor that measures movement and turning
Accelerometer	The part of the IMU that measures acceleration, including gravity
Gyroscope	The part of the IMU that measures how fast it is turning
I²C	Inter-Integrated Circuit: a two-wire link between a controller and its sensors
SDA, SCL	The two I²C wires: data and clock
g	The acceleration of gravity, about 9.81 m/s²
°/s	Degrees per second, the unit of rotation rate
Threshold	The limit a movement value must pass to count as movement