

ELECTRIC LOCOMOTIVE SHED, VALSAD.

Before energies loco following points to be checked.

M6HR

LOCO No.: 32649

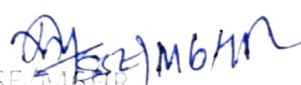
SCHEDULE: TOH

DATE: 8/4/23

Sr. No.	Description	Remarks
1	SR-1&2 oil level to be checked.	checked
2	X'mer oil level to be checked.	checked
3	All auxiliary's terminal connection to be checked.	checked
4	VCB Gapless cable connection & earthing shunt to be checked.	checked
5	VCB gapless main bushing connection & PT X'mer insulator foundation fitness & insulator cleaning to be checked.	checked
6	Harmonic filter foundation fitness & it's cable connection to be checked.	checked
7	All TM's cable connection & tensor coupler fitness to be checked.	checked
8	Ensure BV-Box in un ground position.	ENSURE

Technician sign. & Name

Supervisor sign.


SSE/M6HR

CHECK LIST FOR M6HR TESTING OF WAP-7/WAG-9 LOCO

LOCO No: 32649

SCH.: TOH

DATE: 8/4/23

Sr. No.	Testing parameters and standard				Cab-1	Cab-2	Remarks
1	Working of tube light of machine room & cabs. (all tube light are working)				Wkg	Wkg	
2	Working of marker light (all marker light are working)	Red		Wkg	Wkg		
3	Auto flasher	White		Wkg	Wkg		
4	Working of flasher light by BPFL. (all flasher light are working.)	Only by F.S		Wkg	Wkg		
5	Working of spot light.(All spot light are working.)				Wkg	Wkg	
6	Working of head light (Both head light are working.)	Front		Wkg	Wkg		
		Rear					
7	Working of parking brake	W/No-1	W/No-5	W/No-3	W/No-8		
8	(As per T.I. No. WAG-9/09/04/23) Checking of LED indications in FBV card in CEL-1&2 slot" LED 39.3 yellow must be flickering.				CEL-1	CEI-2	
9	Battery Voltage (Voltmeter) Multi meter (in PCLH)				+ve Earth 68.1V 69.2V	-ve Earth 29.1V 31.1V	Total 97.2V → Cab-1 100.3V - Cab-2
10	Working of cooling fan of						
	SR - 1	1	2			3	
	SR - 2	1	2			3	
	CEL - 1	1	2			3	
	CEL - 2	1	2			3	
	BUR - 1	E RAC		1		4 WRE - 1	
		1	2	2 GG1			
				3		5 WRE - 3	
	BUR - 2 & 3	E RAC		1GG2	4WRE2	3WRE	
		1	2	2GG3	WRE2	WRE3	
				3CHBA	5WRE2	6WRE3	
11	Condition of silica gel of SR & TFP breather.				SR-1	TR-1	
				SR-2	TR-2		
12	VCB Counting No.			13	Total K.M.		
14	Energy Re generated			15	Energy Consumed		
16	Working of all indication lamp			17	Working of Monitor(DDS)		
			Wkg.				Wkg.

18	Working & Direction of Auxiliaries.										
	(Note:- if any Motor changed, direction to be checked.)	MCP-1	X ✓	MCP-2	✓	OCB-1	✓	OCB-2	✓		
		TMB-1	X ✓	TMB-2	✓	MRB-1	X ✓	MRB-2	✓		
		TRMPH-1	✓	TRMPH-2	✓	SRMPH-1	✓	SRMPH-2	✓		
		SCTM-1	✓	SCTM-2	X ✓	SCMRB-1	✓	SCMRB-2	X ✓		
19	Working of Both cab fan					CAB-1		CAB-2			
					LP	ALP	LP	ALP			
					Wkg.	Wkg.	Wkg.	Wkg.			
20	Working of A/C Cab heater and cool	ACN/P				Cab-1	Cab-2	Remarks			
21	Working in cooling mode					Wkg.	Wkg.				
22	Battery Charging Voltage (Voltmeter) Multi meter (in PCLH)					105.9v	104.9v				
23	Working of Emergency push button Observe :- Pantograph down, emergency brake apply, Flasher working and check message on DDS.					Wkg.	Wkg.				
24	Function test in Simulation mode					OK	OK				
25	Battery charging working through MCB-100 in UBA meter	1-2	102	1-3	102	2-3	103				
26	Working of Vigilance.										
		Push button (BPVG)			Paddle switch (235)		Reset button				
	Cab - 1	-			Wkg.		Wkg.				
	Cab - 2	-			Wkg.		Wkg.				
27	Air leakage checking of contactor & pipe line In side FB panel	NO air leakage				Check SR-1,2 air leakage		NO air leakage			
28	Working of FDU by smoke to be checked (only from one cab & buzzer sound in both cab)							Wkg.			
29	Working of Speedo meter	Cab - 1		Wkg.		Cab - 2		Wkg.			
30	Working of TE/BE Meter	Cab - 1		Wkg.		Cab - 2		Wkg.			
31	Working of Sander	Cab - 1		Wkg.		Cab - 2		Wkg.			
32	Regression through A9 & RS	Cab - 1		Wkg.		Cab - 2		Wkg.			
33	Oil level should between min. & max.	SR-1		SR-2		TR-1		TR-2			
34	VCB tripping through SR pump MCB	63.1/1		OK		63.1/2		OK			
35	Movement of bogie (Through isolation SW)	Bogie-1		Wkg.		Bogie-2		Wkg.			
36	MRB - Timer 10 Sec.	54.2/1		-		54.2/2		-			
37	VCB Timer 3 Sec.	3 sec									
38	Mili volt Max.-50mV of contactor	126		4.2 mv		218		2.6 mv			
39	Mili volt Max.-50mV of contactor	48.2		18.6 mv							
40	RGCP Range	Cut in 8.00 kg/cm2				*		Cut out 10.00 kg/cm2			
41	Working of all rotating switches to be checked in SB- 1 panel						Cab 1		Cab 2		
	i	Failure mode operation 152 - '0'				Wkg.		Wkg.			
	ii	Bogie cut out 154 - Normal				Wkg.		Wkg.			
	iii	Configuration 160 - '1'				Wkg.		Wkg.			
	iv	Vigilance device cut off 237.1 - '1'				Wkg.		Wkg.			

42	Test function Earth fault - DC voltage		Cab 1	Cab 2
a	Control ckt.	i Positive PCLH + Earth	WKG	WKG
		ii Negative PCLH + Earth	WKG	WKG
b	Harmonic filter 89.6	Earth + Link		
c	Aux. ckt. 89.2	Earth +1117 in HB-2	WKG	WKG
d	415/110	Earth +1218 in HB-1	WKG	WKG
43	Calibrated Anemometer (SMI-RDSO/0255) by M3 Aux.			
i	Above SR Gate unit	m/sec 3.0	-	
ii	Above incoming hose side of SR electronics	2.5	-	
iii	Above middle of SR electronics heat sink	0.8	-	
iv	Above opposite side of incoming hose of SR electronics	1	-	
v	Control electronics heat sink top right back side	2	6.2 / 6.7	5.5 / 5.8
vi	Control electronics heat sink top left back side	2	5.5 / 5.8	
vii	Front left side above electronic rack heat sink of BUR	1.2	BUR1 BUR2	BUR3
viii	Back side of electronics rack heat sink of BUR	8.5	11.6	9.5
ix	Front middle above heat sink of GGI module of BUR	3.0	-	
x	Front right side above WRE module heat sink of BUR	2.8	-	
xi	Below under frame of opening of SCTMB	12	SCTMB-1 - 13.7 / SCTMB-2 - 10.7 ms	
xii	OCB in under frame at middle of radiator side wall	8.0		
xiii	In under frame at TM end shield jali	12	TM1 TM2 TM3 TM4 TM5 TM6	
			15.7 14.7 12.4 16.2 14.9 16.6	
xiv	Below under frame at opening of SCTMB	13	SCTMB-1 18.5 ms / SCTMB-2 - 21.6 ms	
44	Performance of oil pumps pressure			
	Measure the performance of the oil pumps of TFP & SR through the MIC view and recorded (Prescribe 45% to 55%)	SR1 SR2 TFP1 TFP2		
	SR - Earth + S slot (06) right	1.9 1.9 1.0 1.1		
	TR - Earth + T slot (04) right			
45	Performance of BURs when one BUR is isolated	BUR 1 BUR2 BUR3		
	When any one BUR goes out then rest of the two BUR's should take the load of all auxiliaries at ventilation level 3 of the loco.	OK OK OK		
46	Temperature value of TM as seen in Driver display	TM1 TM2 TM3 TM4 TM5 TM6		
		31 32 32 31 32 32		
47	FDU Calibration (OK/Not OK)			
48	Brake test on loco (OK/Not OK) _____ loco should not move on loco should move on	not move on move on		
50	No. of fire extinguisher			
51	Ensure the cleanliness :- inside the loco and cab			
52	All H/ light, F/ light, M/ light glasses are Properly cleaned			
53	04 nos. of wooden wedges			
54	Painting / Sticker instruction in cab. (OK/Not OK)			
55	Dead loco movement, sch. Date. (OK/Not OK)			
56	Check working of pantograph selector switch			

OCB - 1

11.1	9.7	10.5
9.4	7.4	9.2
11.8	8.9	10.1

OCB - 2

11.1	9.5	8.7
9.2	9.0	8.0
10.3	9.0	10.1

1. working of each traction motor in IGBT loco.

TM1	TM2	TM3	TM4	TM5	TM6
Wkg	Wkg.	Wkg.	Wkg.	Wkg.	Wkg.

2. Traction motor colore code.

TM1	TM2	TM3	TM4	TM5	TM6
-	-	-	-	-	-

3. Traction motor earthing shunt.

TM1	TM2	TM3	TM4	TM5	TM6
ok	ok	ok	ok	ok	ok

4. Working OF Hotel load converter

HLC1	HLC2
-	-

5. Battery box sealing to be check.

BA BOX 1	BA BOX 2
ok	ok

6. VCU reset working.

Cab 1	Cab 2
Wkg.	Wkg.

7. Return earth current for WAP7/WAG9.

Axle box 1	Axle box 6	Axle box 7	Axle box 12
ok 0.1 AMP	1.7 AMP	1.3 AMP	0.8 AMP.

8. Fire extinguisher Sr. No.

Cab 1	Cab 2
BL-00111 Exp. 30/12/23	BL-00111 Exp. 30/12/23 BL-00112 Exp. 30/12/23 BL-00112 Exp. 30/12/23

9. Harmonic filter current.

153.5 AMP	10.6 AMP	150 AMP
-----------	----------	---------