

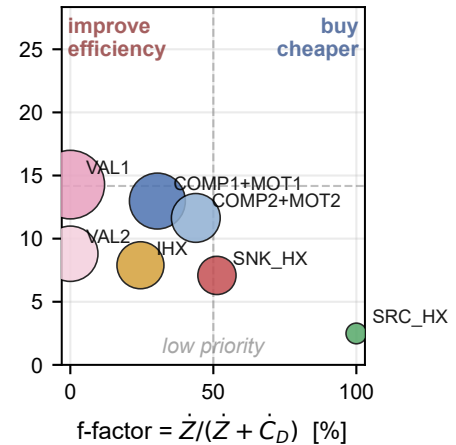
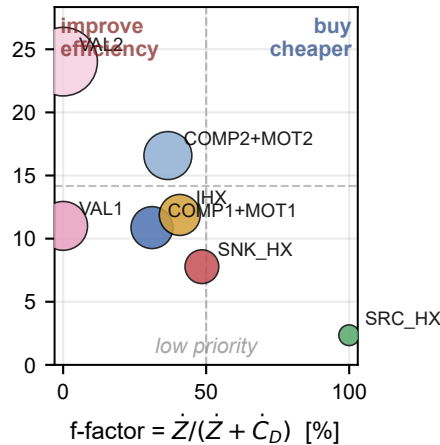
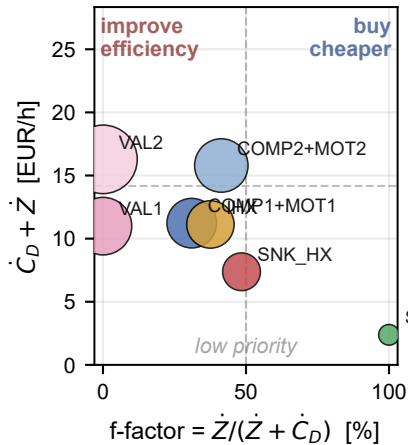
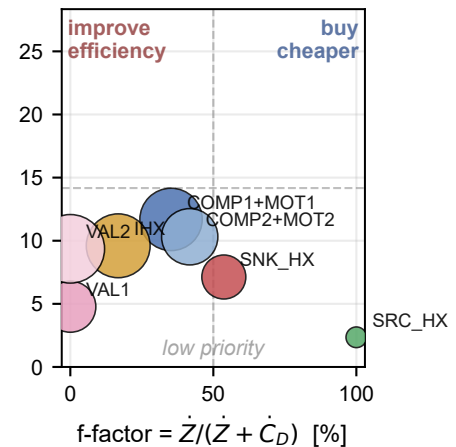


Tsatsaronis quadrant — best design per fluid pair ($T_{\text{steam}} = 110\text{ }^{\circ}\text{C}$)

R1270/R600 LS = 30 % $T_{\text{src}, \text{in}} = 50\text{ }^{\circ}\text{C}$ $C_P = 100.1\text{ EUR/GJ}_{\text{ex}}$ $T_{\text{src}, \text{in}} = 50\text{ }^{\circ}\text{C}$ $C_P = 100.1\text{ EUR/GJ}_{\text{ex}}$ $T_{\text{src}, \text{in}} = 60\text{ }^{\circ}\text{C}$ $C_P = 96.3\text{ EUR/GJ}_{\text{ex}}$

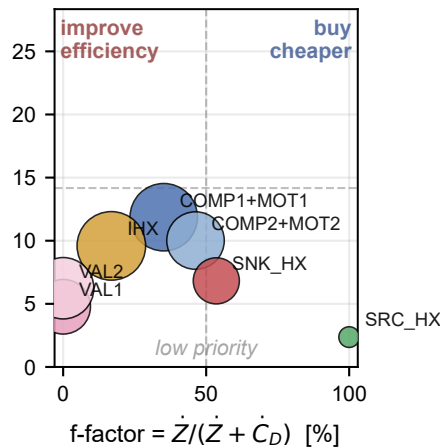

R290/R600a LS = 40 % $T_{\text{src}, \text{in}} = 60\text{ }^{\circ}\text{C}$ $C_P = 117.9\text{ EUR/GJ}_{\text{ex}}$ $T_{\text{src}, \text{in}} = 60\text{ }^{\circ}\text{C}$ $C_P = 117.9\text{ EUR/GJ}_{\text{ex}}$ $T_{\text{src}, \text{in}} = 60\text{ }^{\circ}\text{C}$ $C_P = 89.8\text{ EUR/GJ}_{\text{ex}}$

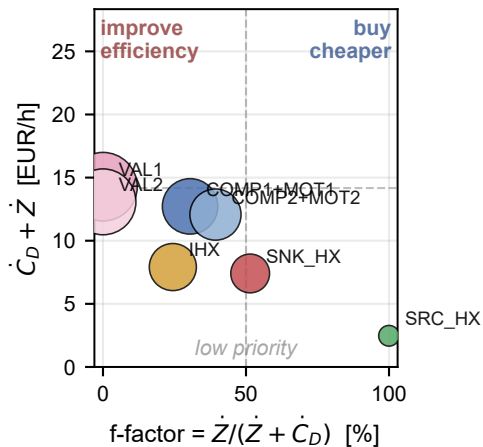

COMP1+MOT1 VAL1 IHX COMP2+MOT2 SNK_HX VAL2 SRC_HX marker size $\propto \dot{C}_D$