

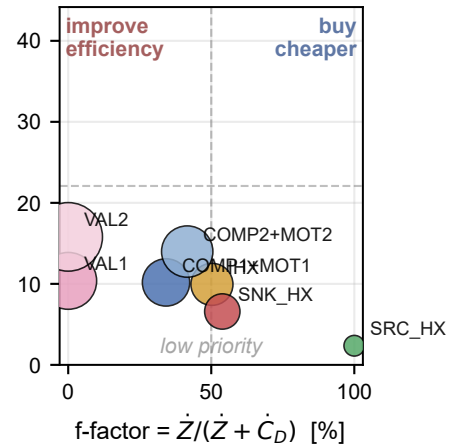
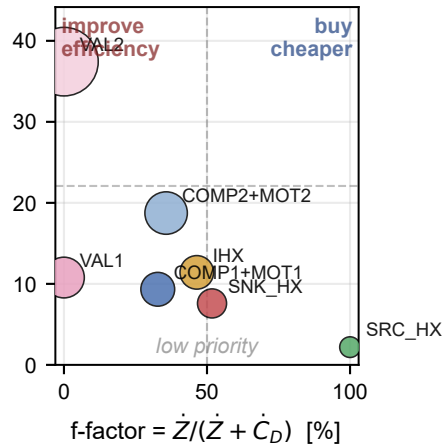
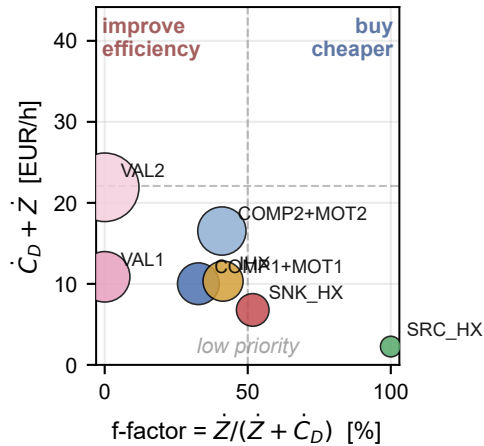
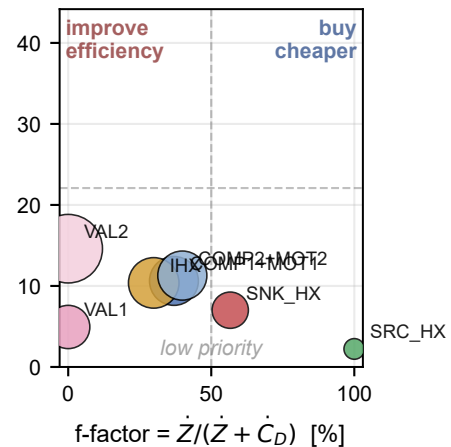


Tsatsaronis quadrant — best design per fluid pair ($T_{\text{steam}} = 120\text{ }^{\circ}\text{C}$)

R1270/R600 LS = 30 % $T_{\text{src, in}} = 50\text{ }^{\circ}\text{C}$ $C_P = 90.1\text{ EUR/GJ}_{\text{ex}}$ R1270/R600a LS = 30 % $T_{\text{src, in}} = 50\text{ }^{\circ}\text{C}$ $C_P = 90.1\text{ EUR/GJ}_{\text{ex}}$ R290/R600 LS = 30 % $T_{\text{src, in}} = 60\text{ }^{\circ}\text{C}$ $C_P = 90.1\text{ EUR/GJ}_{\text{ex}}$

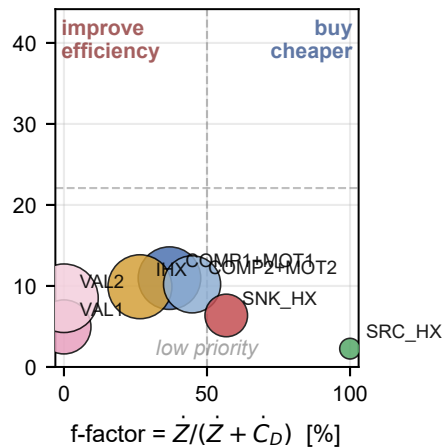

R290/R600a LS = 30 % $T_{\text{src, in}} = 60\text{ }^{\circ}\text{C}$ $C_P = 85.1\text{ EUR/GJ}_{\text{ex}}$ R717/R600 LS = 30 % $T_{\text{src, in}} = 60\text{ }^{\circ}\text{C}$ $C_P = 85.1\text{ EUR/GJ}_{\text{ex}}$ R717/R600a LS = 30 % $T_{\text{src, in}} = 60\text{ }^{\circ}\text{C}$ $C_P = 85.1\text{ EUR/GJ}_{\text{ex}}$

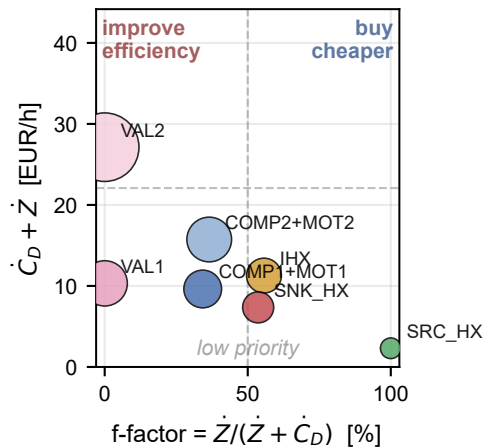

COMP1+MOT1 VAL1 IHX COMP2+MOT2 SNK_HX VAL2 marker size $\propto \dot{C}_D$
SRC_HX