Cody / Navigation Atlas

A companion to the Screen and Expression Planning Atlas.

SEE THE SCREEN.

FOLLOW THE FLOW.

Small UI previews keep the same screen IDs. Labelled arrows show actions, automatic events, failures and the route back.



Plan navigation before implementation. HTTP, PC integration and voice are future paths. Local character and UI work remain the first PoC.

38 screen entries / 40 views

HOW TO READ THE MAP

- **User action**
- **Automatic event / condition**
- **Failure / interruption**


FUTURE Planned connected features

Back is still a left-chevron icon on the UI. The map names the destination. Notes belong below each flow.

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

01 / Boot and entry

Startup checkpoints lead to first-run setup or the existing local context.

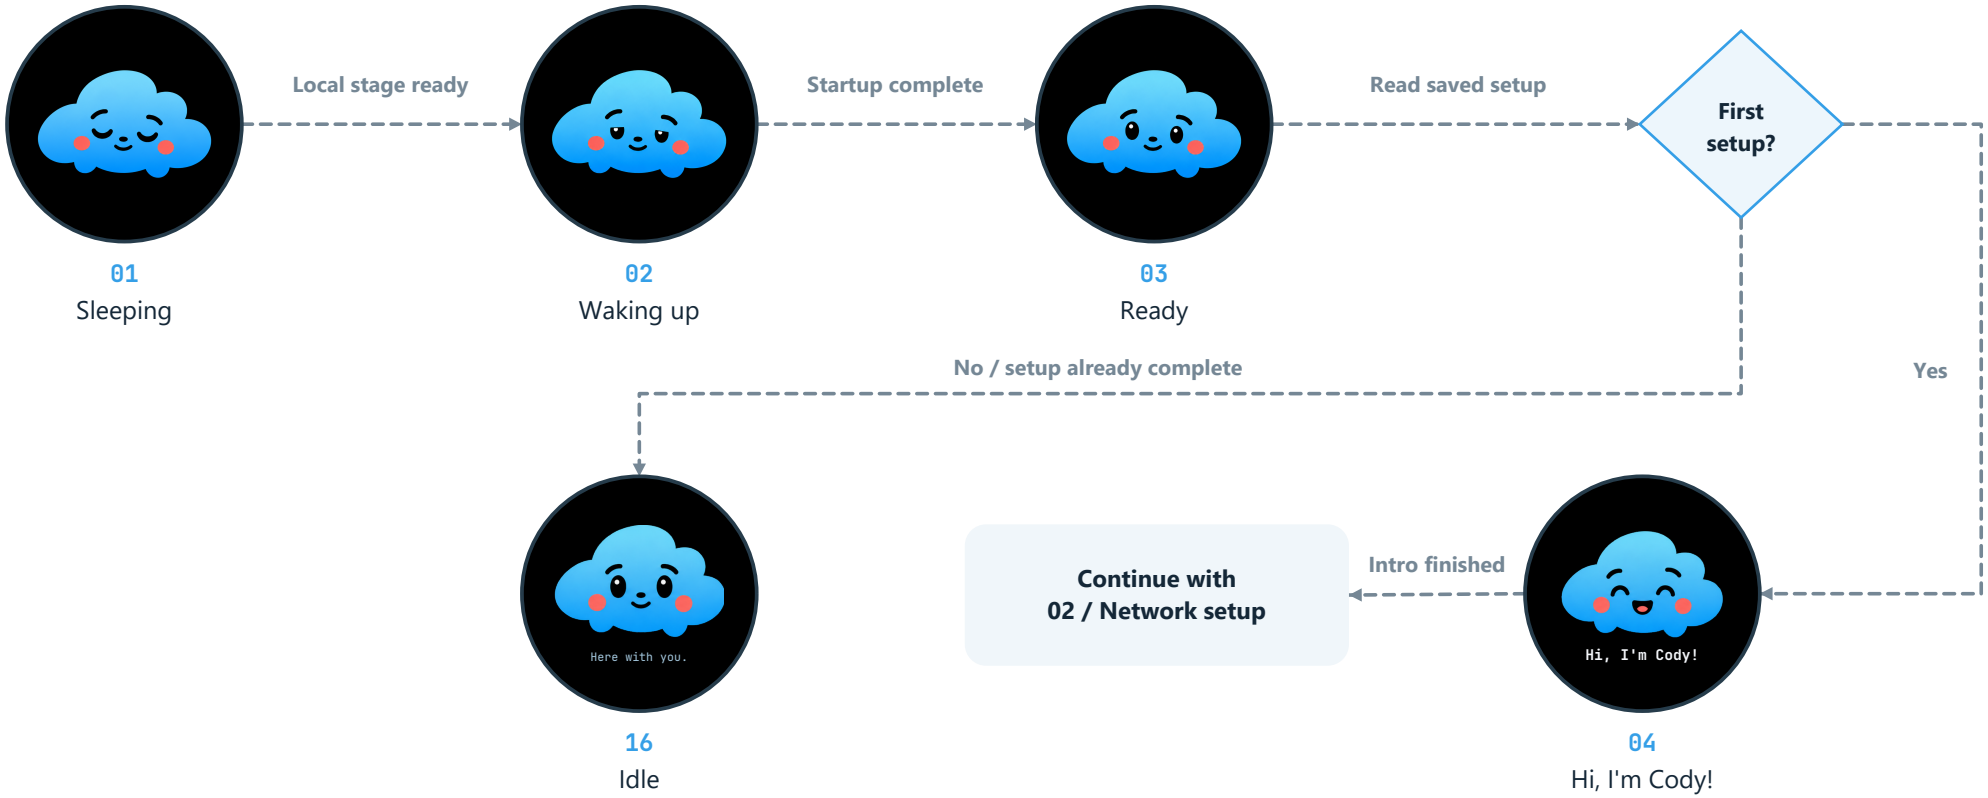


A startup failure keeps the last valid checkpoint visible. Ready never means that the PC is already connected.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

02 / Network setup

One main path, with explicit Back, Cancel and Retry loops.

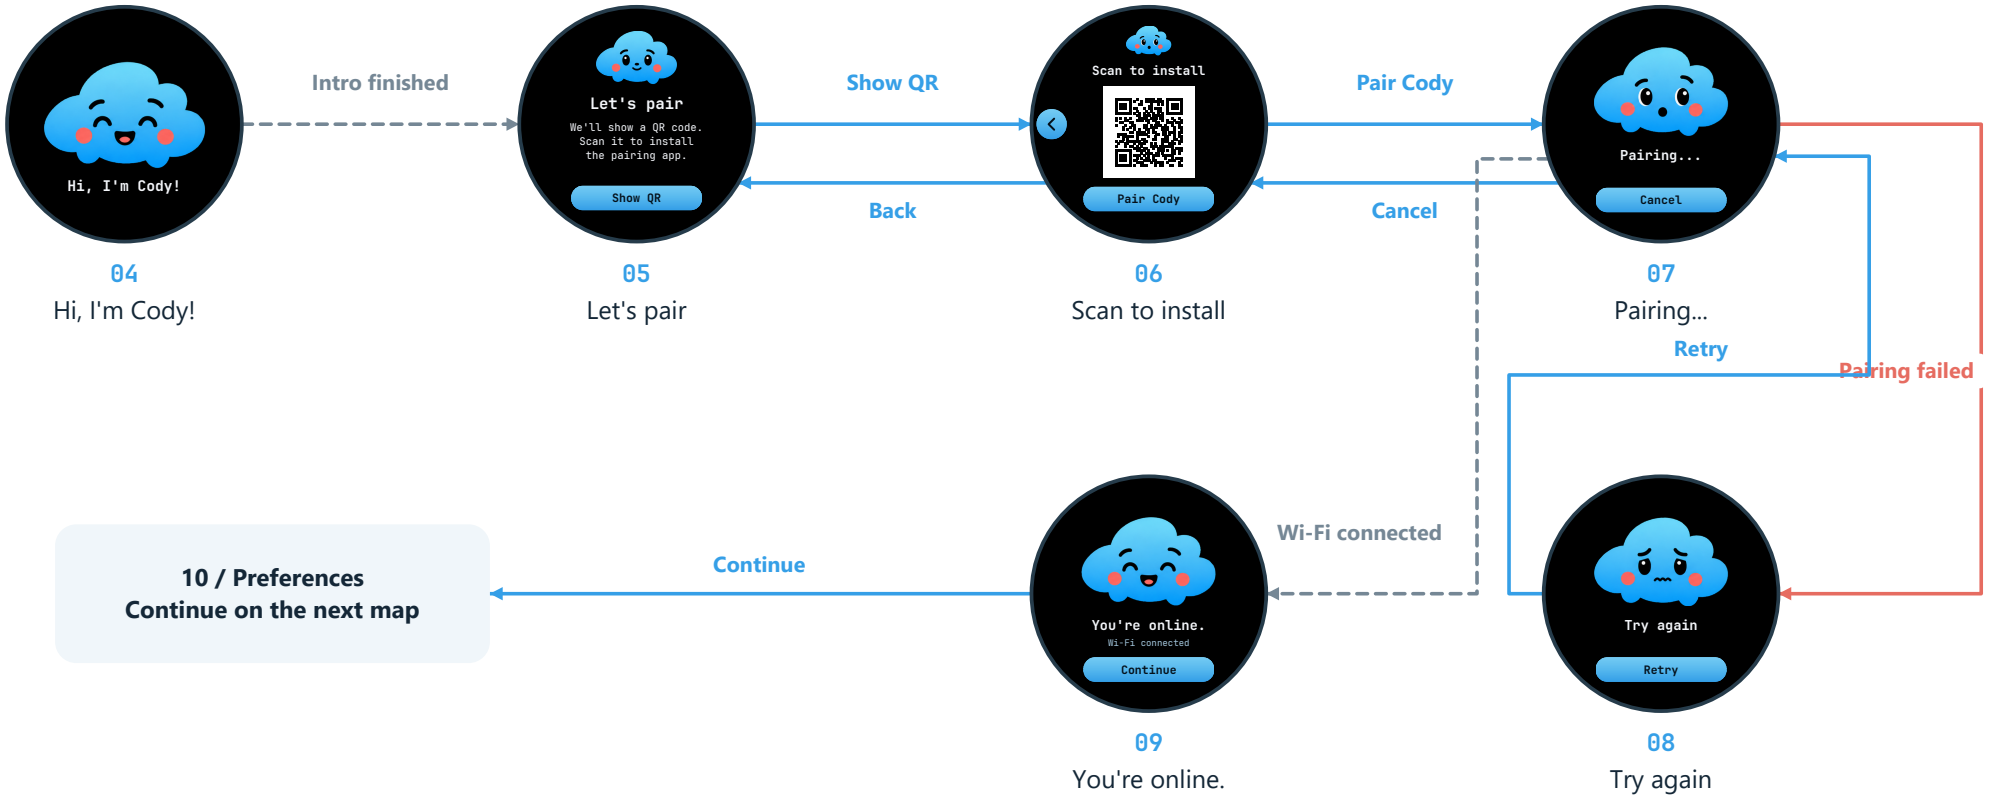

04
Hi, I'm Cody!

05
Let's pair

06
Scan to install

07
Pairing...

08
Try again

09
You're online.


The install QR and device pairing are separate steps. Retry re-enters pairing; it does not restart the entire OOBE.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

03 / Personalization

Persist preferences, then complete the local preview or the future PC setup path.

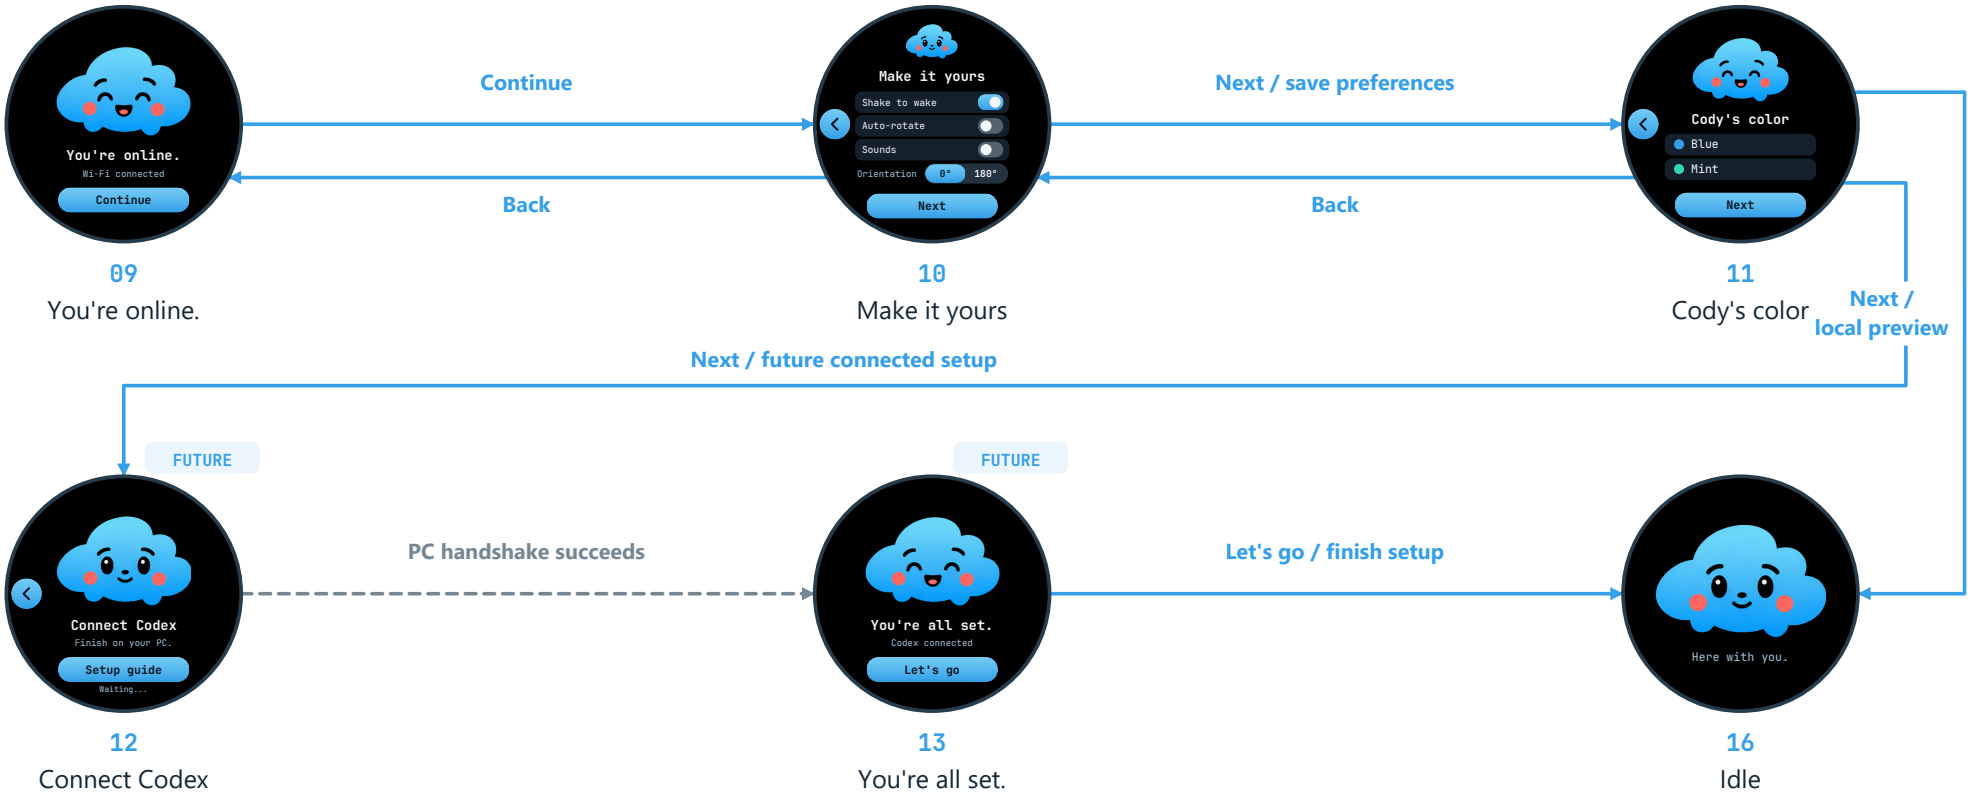


Setup guide opens PC instructions. Back from 12 returns to 11. The local-preview shortcut is a PoC proposal, not release policy.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

04 / Connect and recover

Future application connectivity is independent of local UI and expression channels.

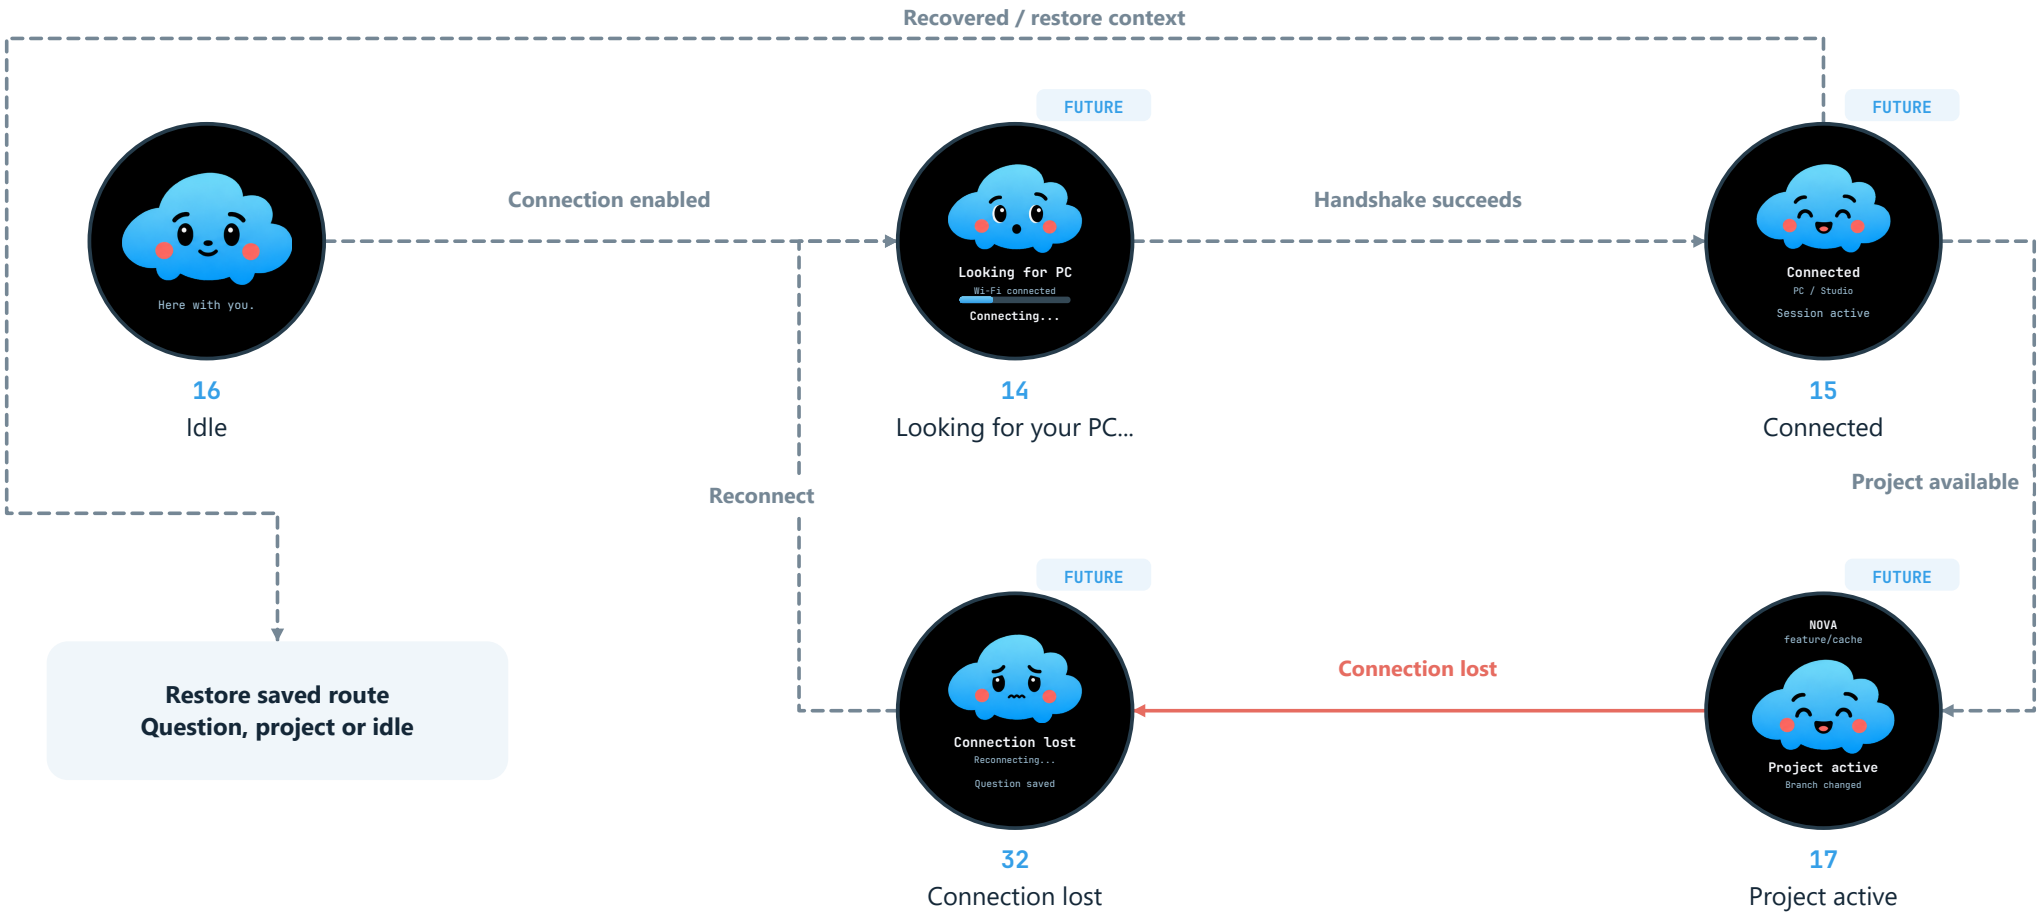


First connection selects project or idle. Recovery restores pending content. No project means 16; an open question remains open.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

05 / Everyday activity

Activity updates change the shared context view; they do not overwrite pending questions.

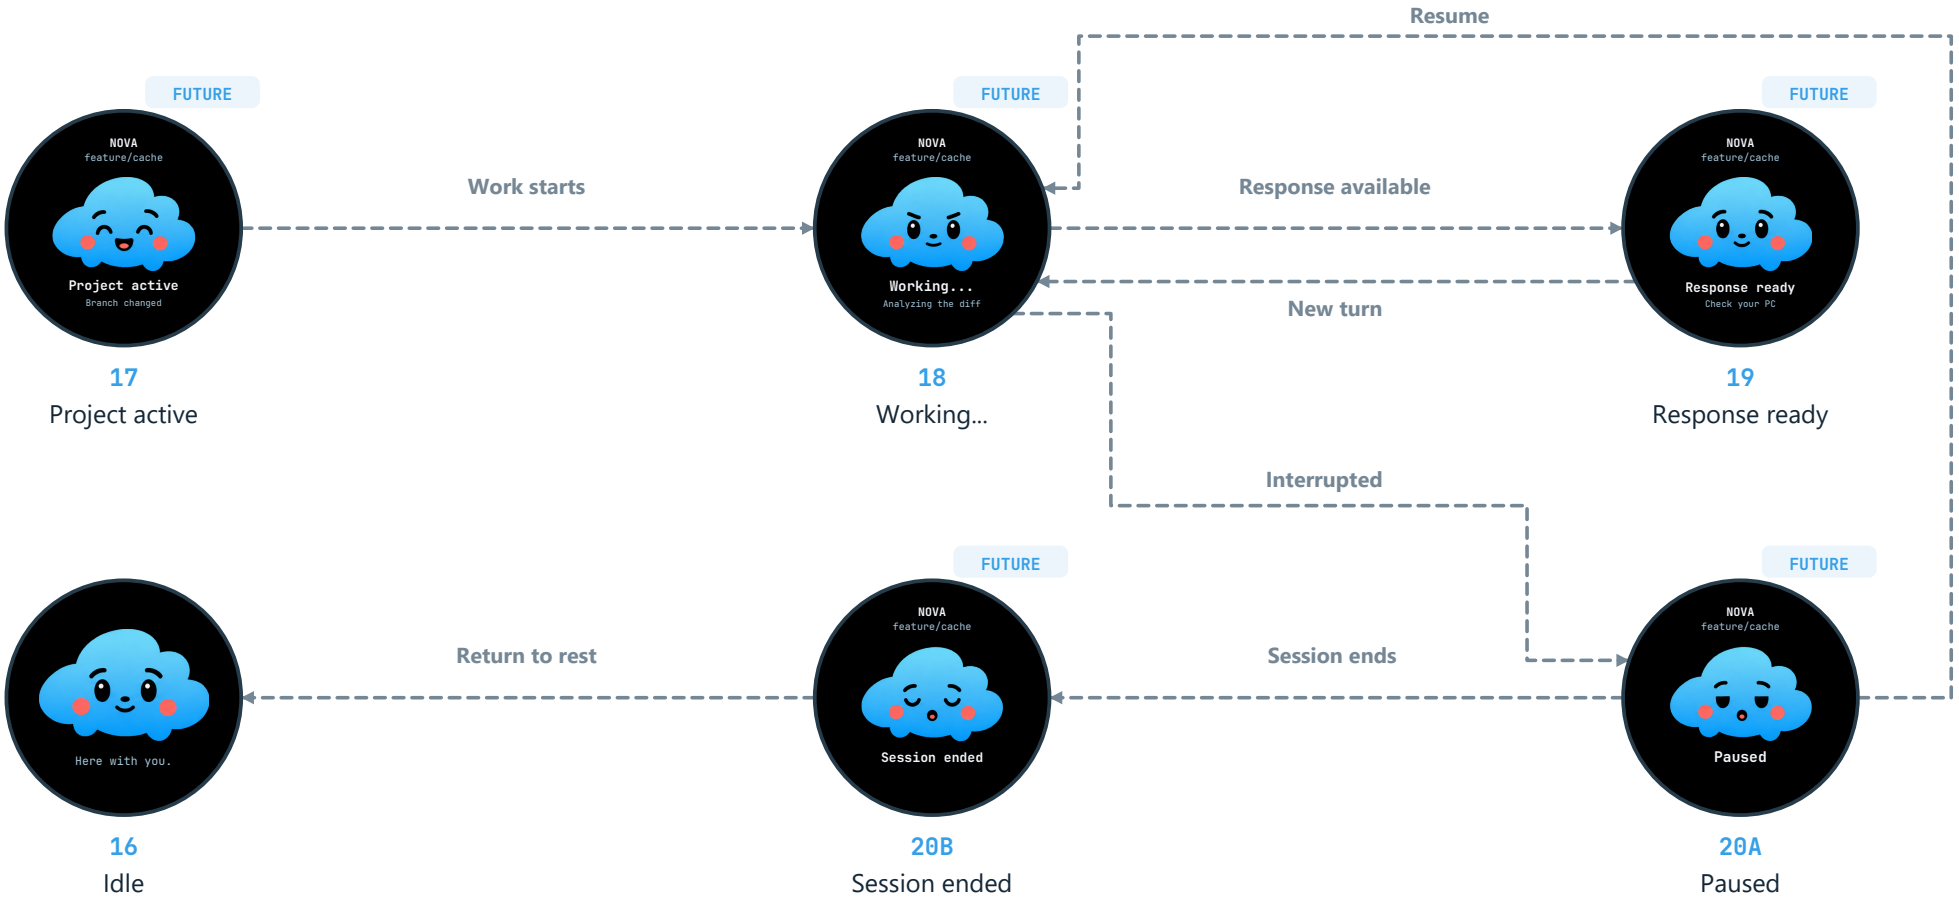


Reading, Editing and Running are variants of 18. Response ready is not proof of success. Session-ended handling also applies from 17-19.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

06 / Pull requests and checks

A result branches into details or returns to the active project.

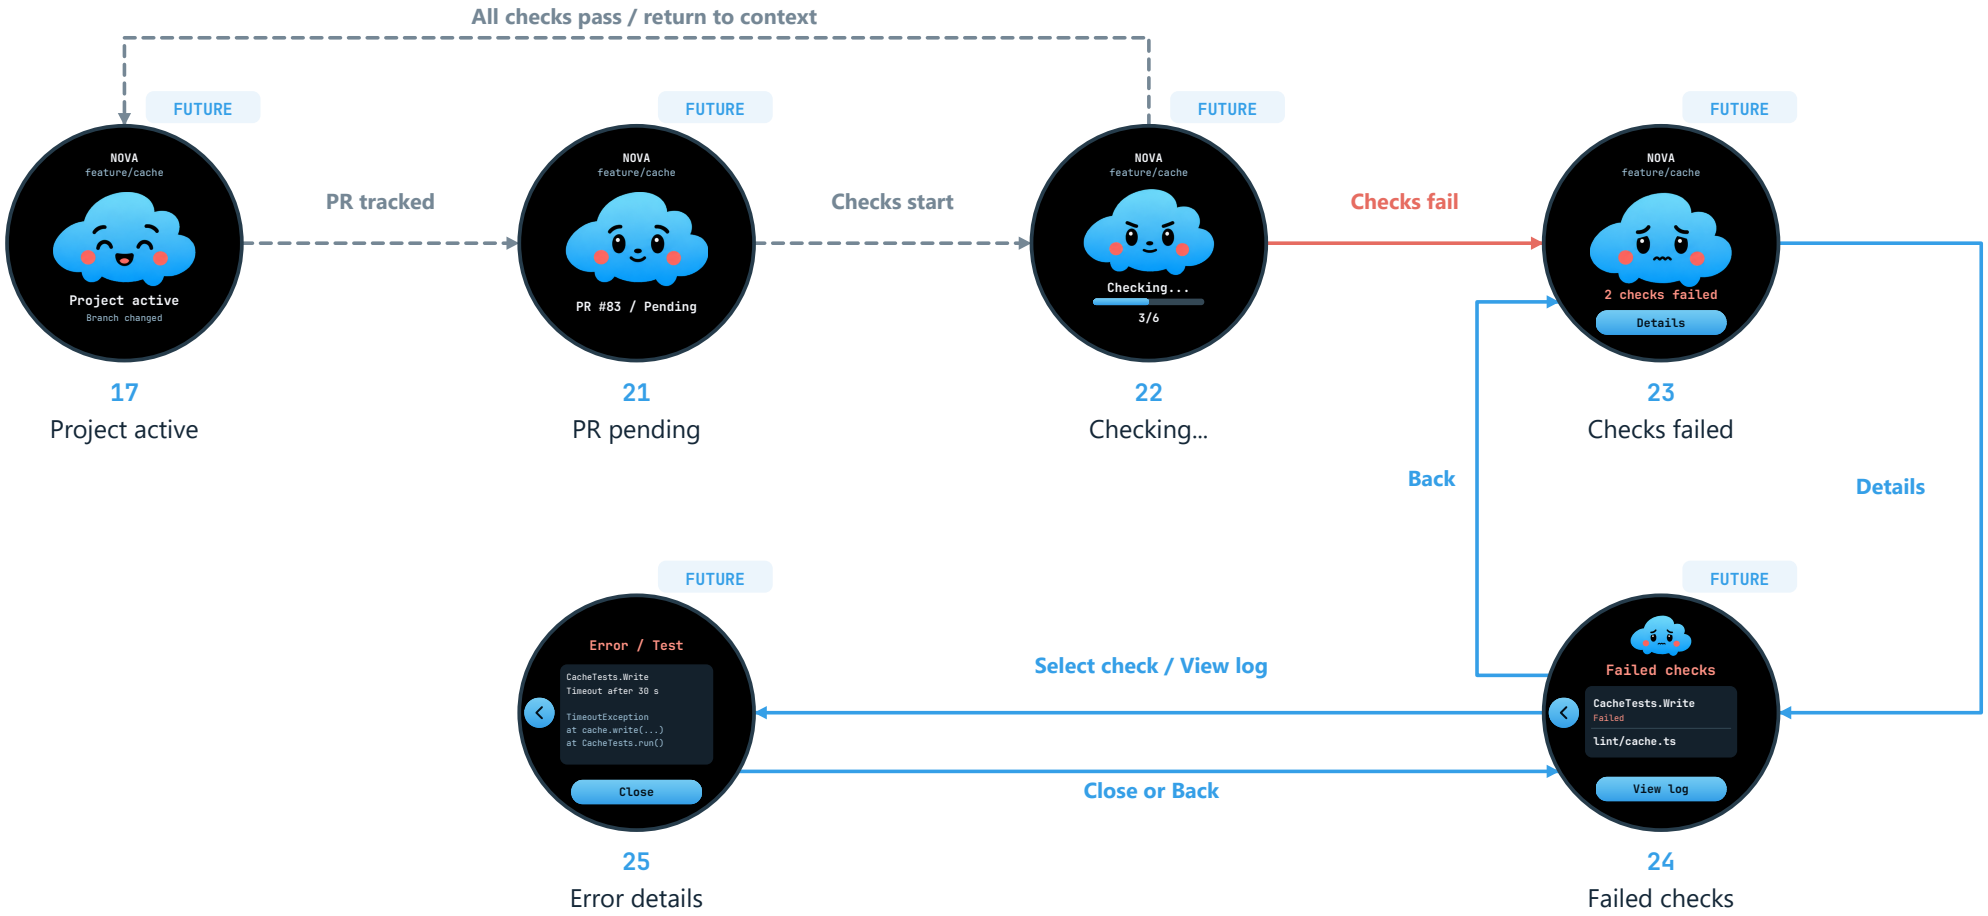


Results belong to the selected project, branch and commit. A stale result must not be shown as the current revision's status.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

07 / Questions and answers

Selection is reversible; sending is deliberate and waits for acknowledgment.

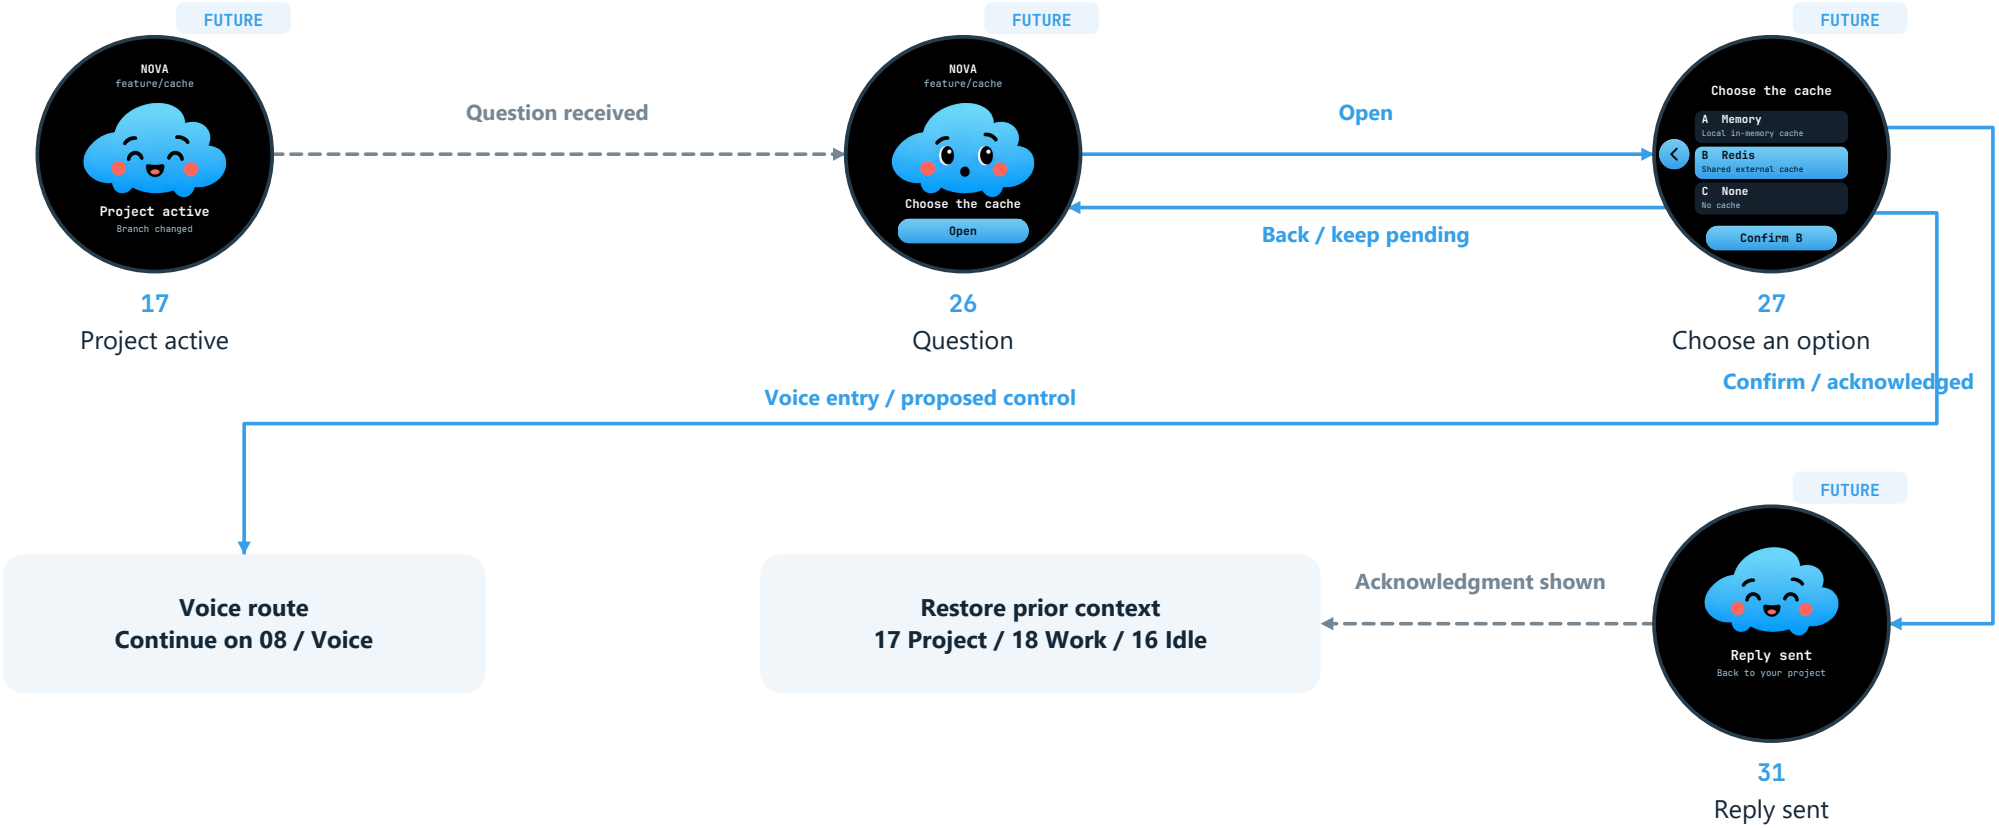


Timeout, cancel and disconnection never choose an answer. The voice-entry control is an open UI decision for the future integration.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

08 / Voice response

Record, review and send. The question remains the owner of this temporary flow.

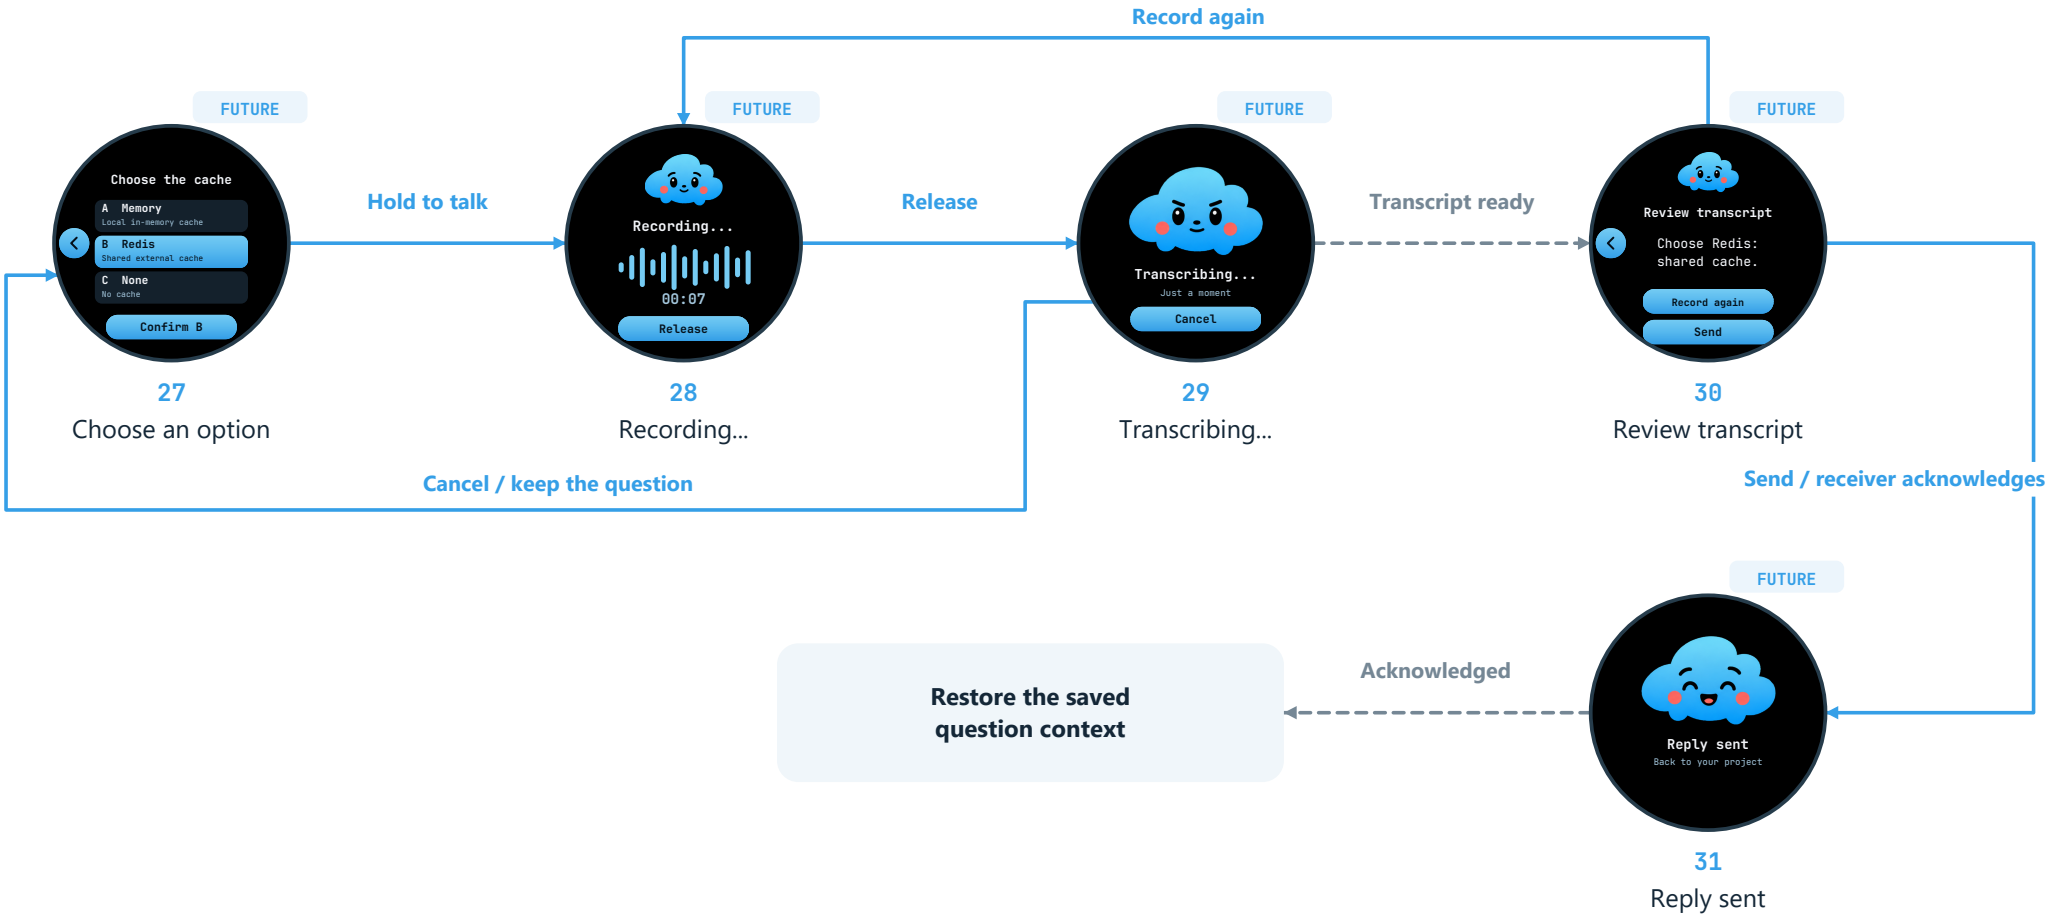


Back from review returns to 27 with the draft retained. Capture/transcription failures offer retry or cancel; no false Reply sent state.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

09 / Device state and settings

Settings is a route; charge notices are layers; sleep and wake preserve navigation history.

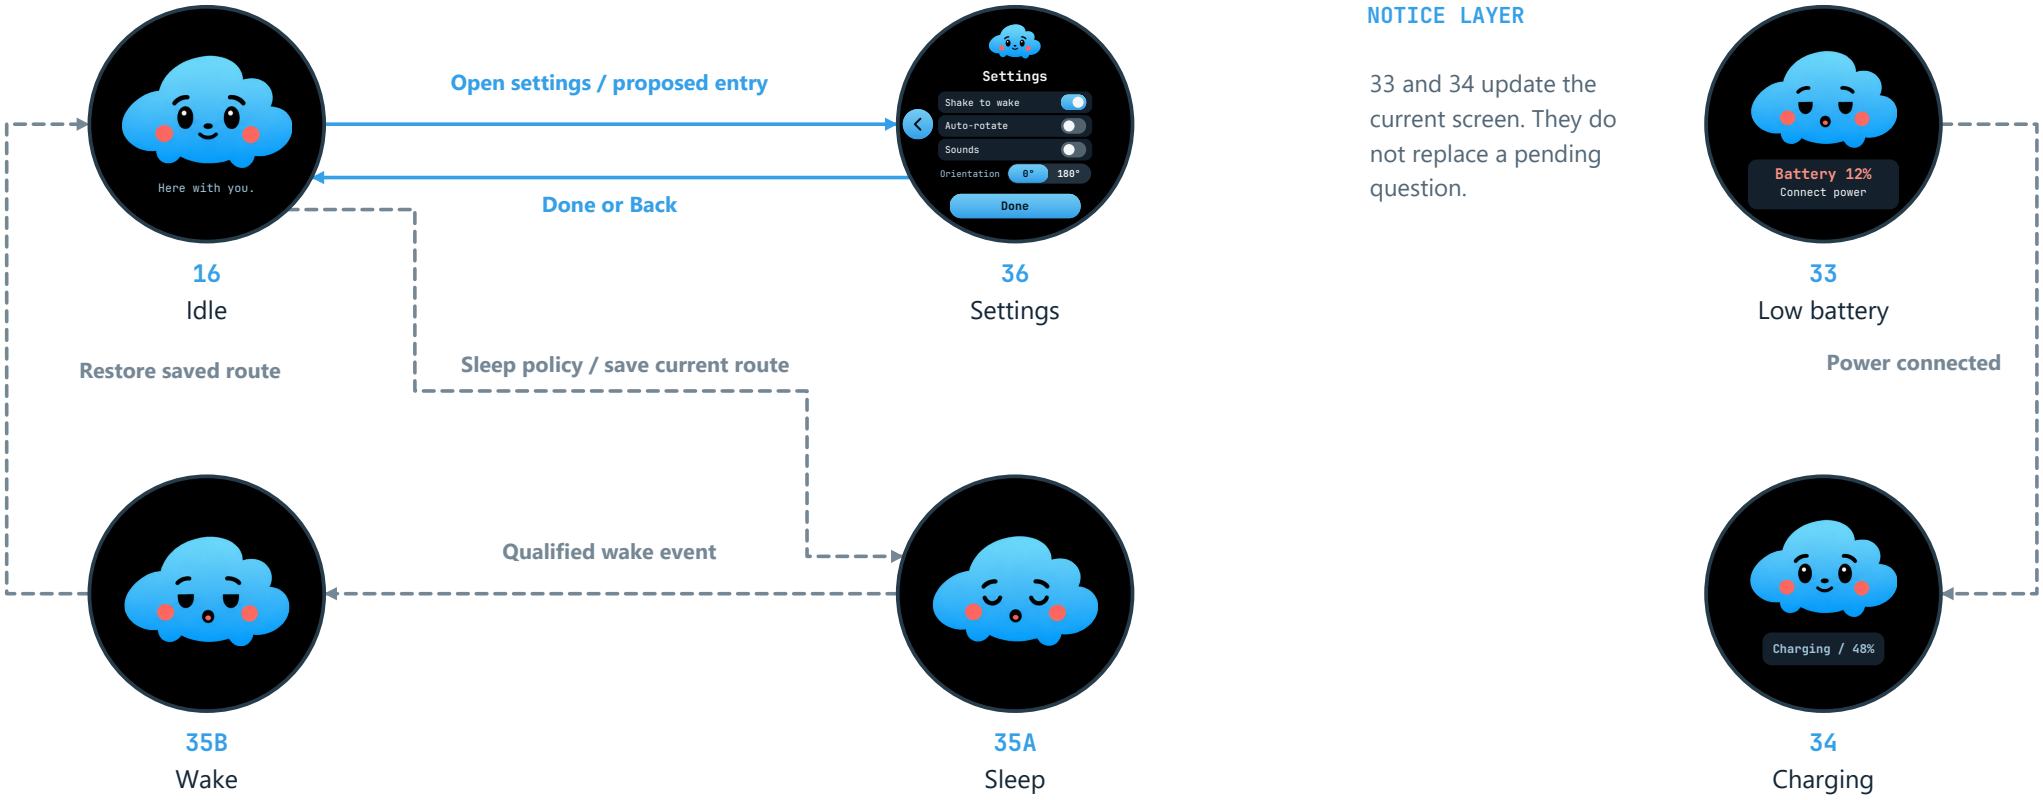

NOTICE LAYER

33 and 34 update the current screen. They do not replace a pending question.


Sleep policy must protect pending interactions. Wake restores the prior route, not always Idle. Exact settings-entry gesture remains to be chosen.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

10 / Character debug

Inspect the rig and channels while keeping the same reusable character.

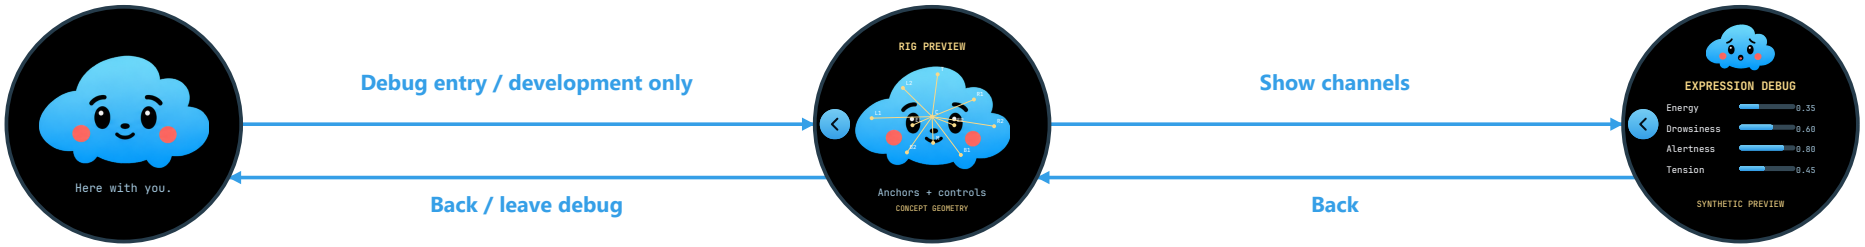

16
Idle

37
Rig view

38
Expression channels

Local events
Motion / touch / charge

Update values

Expressive values
Energy / tension / alertness

Compose channels

One composed pose
Eyes / brows / mouth / body

The lower pipeline is not screen navigation. Breathing, blinking and expression changes update the current view without changing routes.

NOTES

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

Return paths and open decisions

Use this sheet to settle navigation details before the PoC.

06 Scan to install	**Back -> 05**	Preserve the current setup attempt.
07 Pairing	**Cancel -> 06**	End the active attempt before leaving.
08 Try again	**Retry -> 07**	Restart only the failed pairing step.
10 / 11 / 12 Setup	**Back -> 09 / 10 / 11**	Persist only explicitly confirmed settings.
24 Failed checks	**Back -> 23**	Retain the selected project and PR.
25 Error details	**Close / Back -> 24**	Retain the selected check and scroll state.
27 Answer options	**Back -> 26**	Keep the question pending; do not submit.
29 Transcribing	**Cancel -> 27**	Keep the pending question intact.
30 Review transcript	**Back -> 27; Record again -> 28**	Retain a draft until replaced or discarded.
31 Reply sent	**Return -> saved context**	Display only after receiver acknowledgment.
32 Connection lost	**Recover -> saved context**	Restore the exact pending route where possible.
36 Settings	**Done / Back -> caller**	Caller may be Idle, project or another route.
37 / 38 Debug	**Back -> caller / 37**	Development-only access remains explicit.

OPEN UI DECISIONS

Settings entry gesture; future voice-entry control; final OOBE completion policy; capture/transcription error details. Planned Back icons are added to previews 10, 37 and 38 for this navigation review.

NOTES


Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

Network setup / revised route

A01 supplements base pages 03 and 12. Insert screen 06-bis; keep all existing IDs.

REQUESTED BY	AFFECTED BASE PAGES	PRINT ONLY THIS PAGE
Umberto Giacobbi (project owner)	**03 / 12**	**13 / keep the existing printout**

WHY App installation and device provisioning use different QR payloads. The route needs a distinct device-QR step.

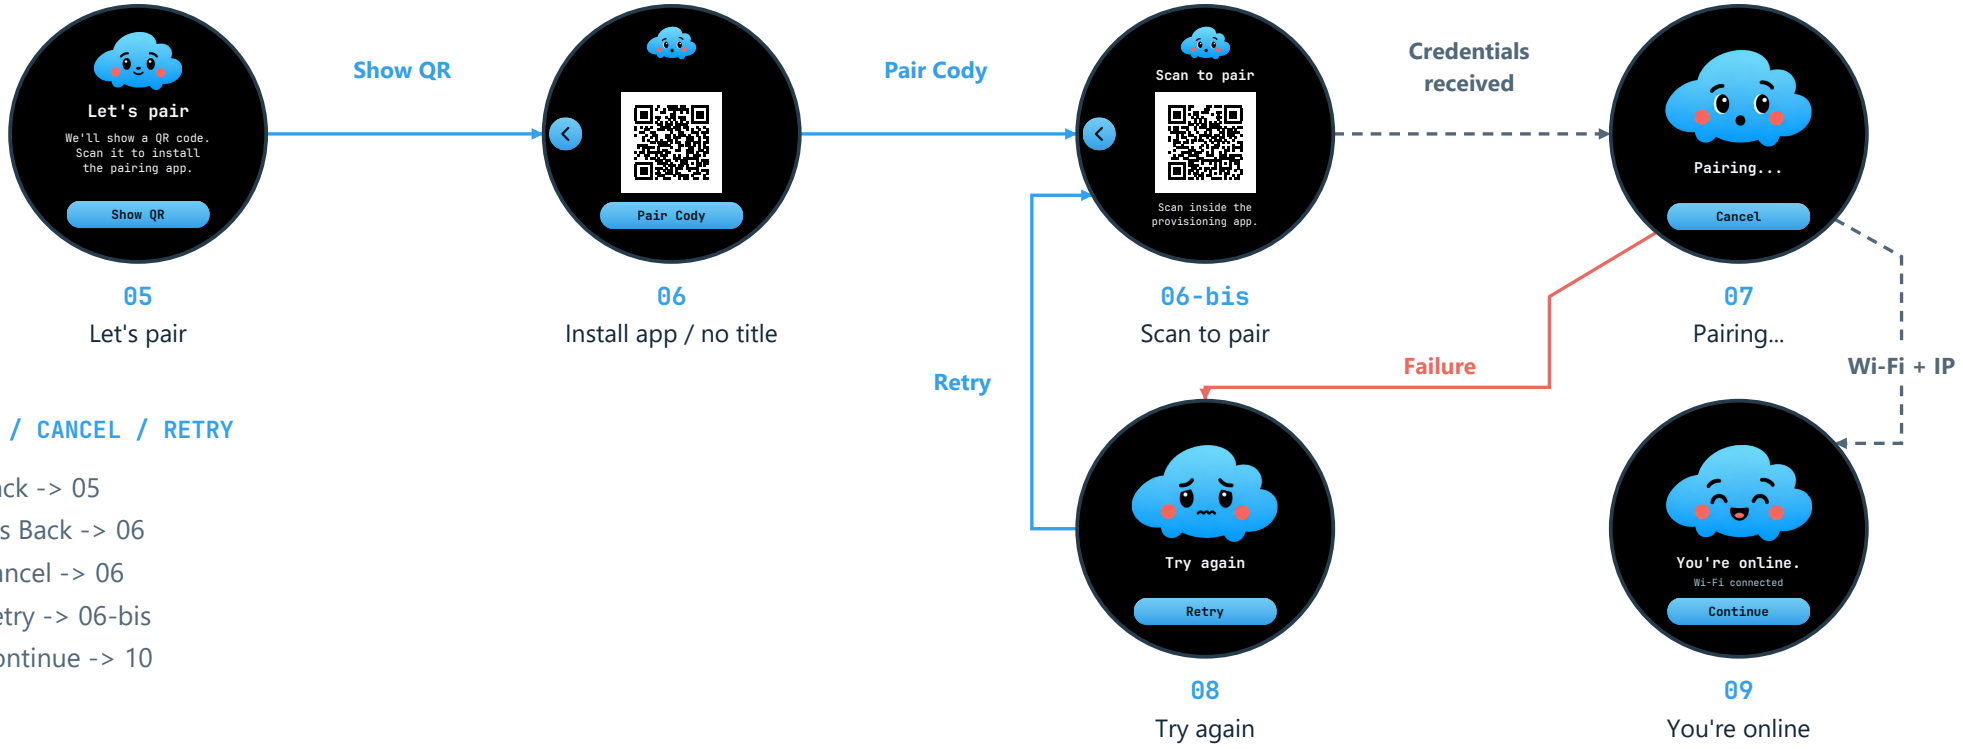

BACK / CANCEL / RETRY

06 Back -> 05
06-bis Back -> 06
07 Cancel -> 06
08 Retry -> 06-bis
09 Continue -> 10


Pair Cody starts BLE provisioning before opening 06-bis. Back, Cancel and recoverable failure close the active session before navigation; cleanup errors remain visible. Retry opens a new attempt. Credentials received advance to 07; confirmed Wi-Fi and IP advance to 09.


06: remove 'Scan to install'. QR previews remain illustrative. This is a requested design update, not firmware validation.

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

A02 / Screen 11 selection route

The same selector can be called from first setup and from future Settings.

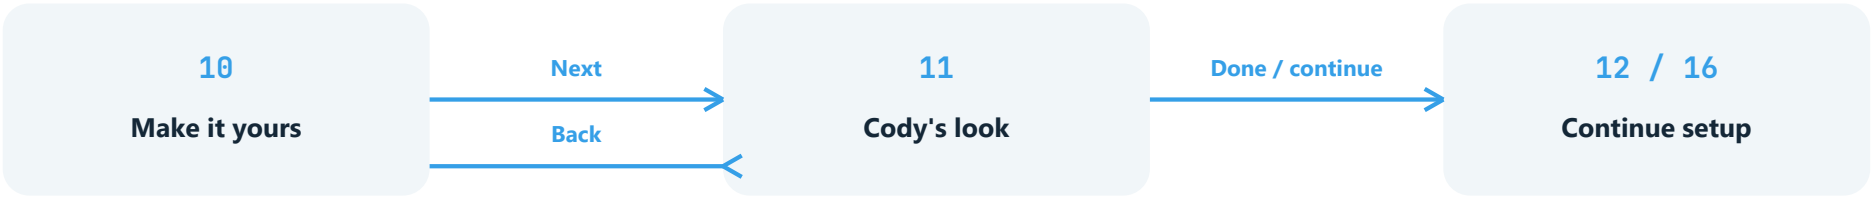

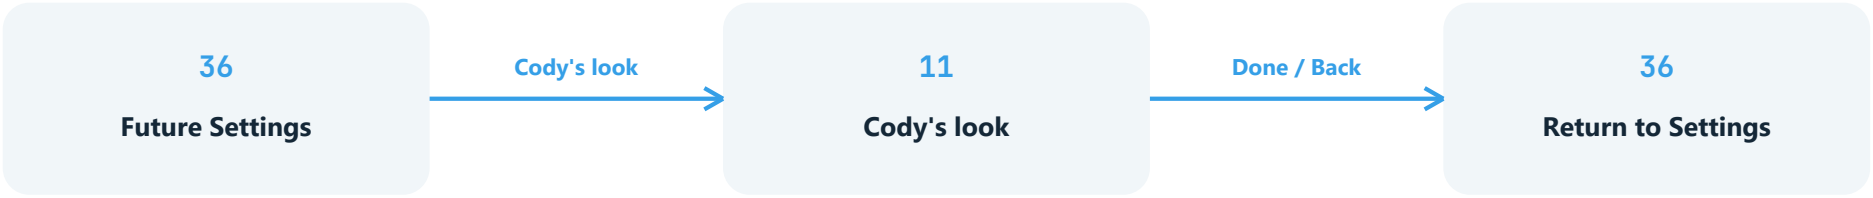

ROUTE RULE


Screen identity 11 stays stable. Only its user-facing title and content change. Selection does not create five routes: all choices remain inside one scrollable screen and preserve the caller for Back/Done. This supplements base navigation page 04.

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

A03 / Read-only pull-request flow

Cody reports verified status and failure names; PR work stays on the PC.

PRINT PAGE 15 ONLY

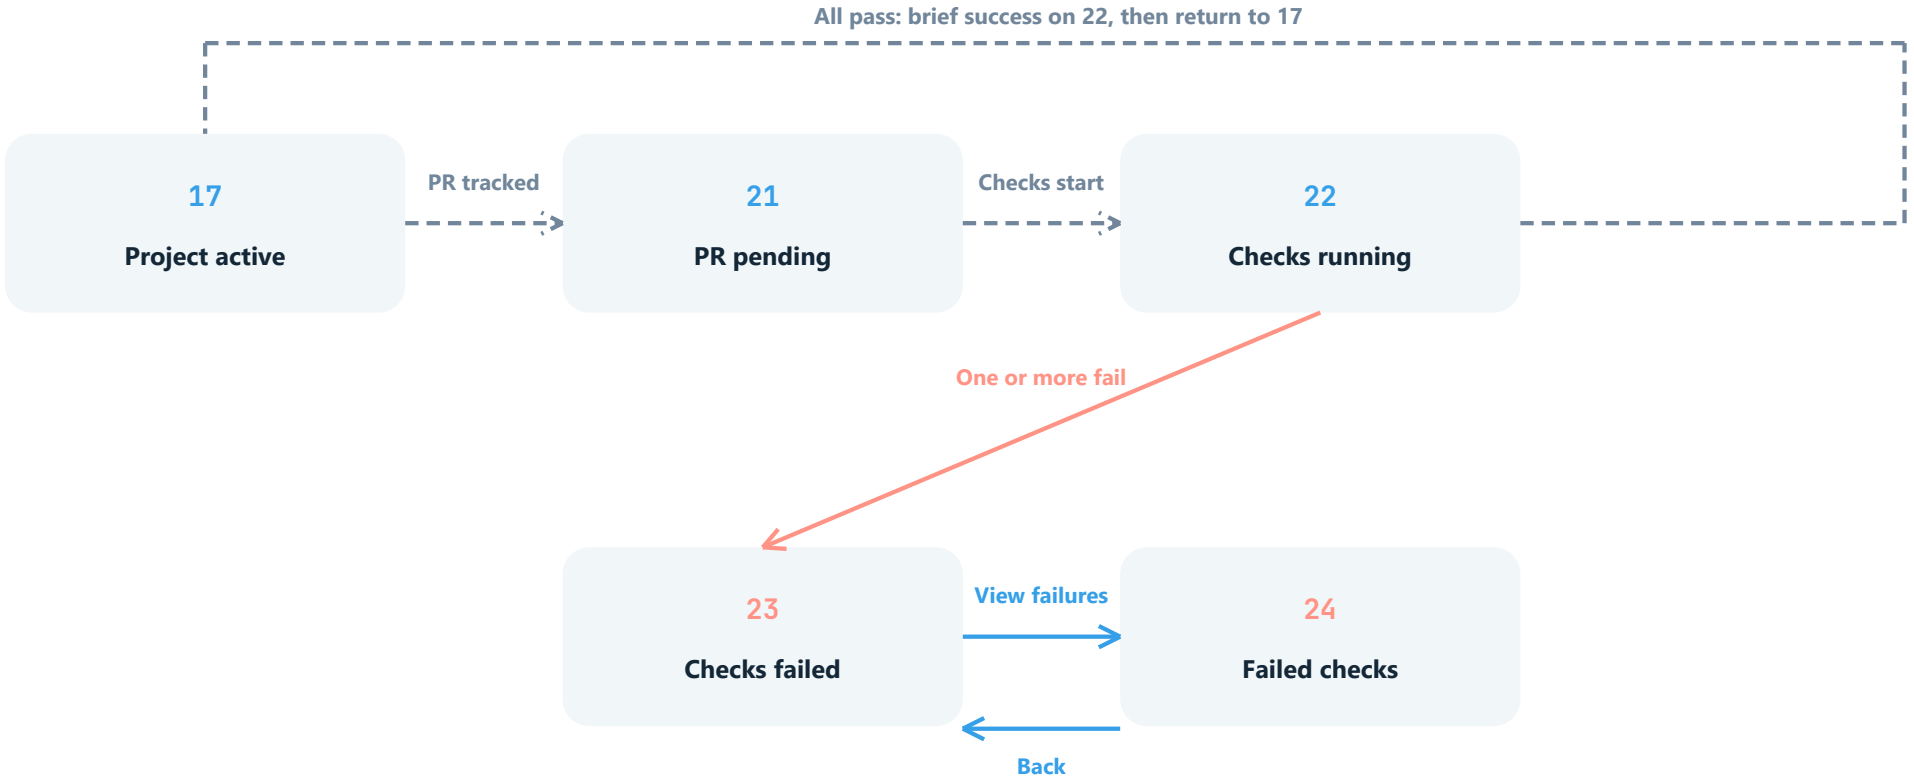


DATA RULE	Counts and conclusions belong to the exact PR head commit. If the companion cannot provide a complete, current check list, screen 22 says only 'Checks running' and does not invent progress.
25 RETIRED	No route opens raw logs on the device; detailed investigation remains on the PC.

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

A04 / Pairing-to-personalization route

Persist first boot before success UI; gate screen 12 explicitly and never invent PC connectivity.

PRINT PAGE 16 ONLY

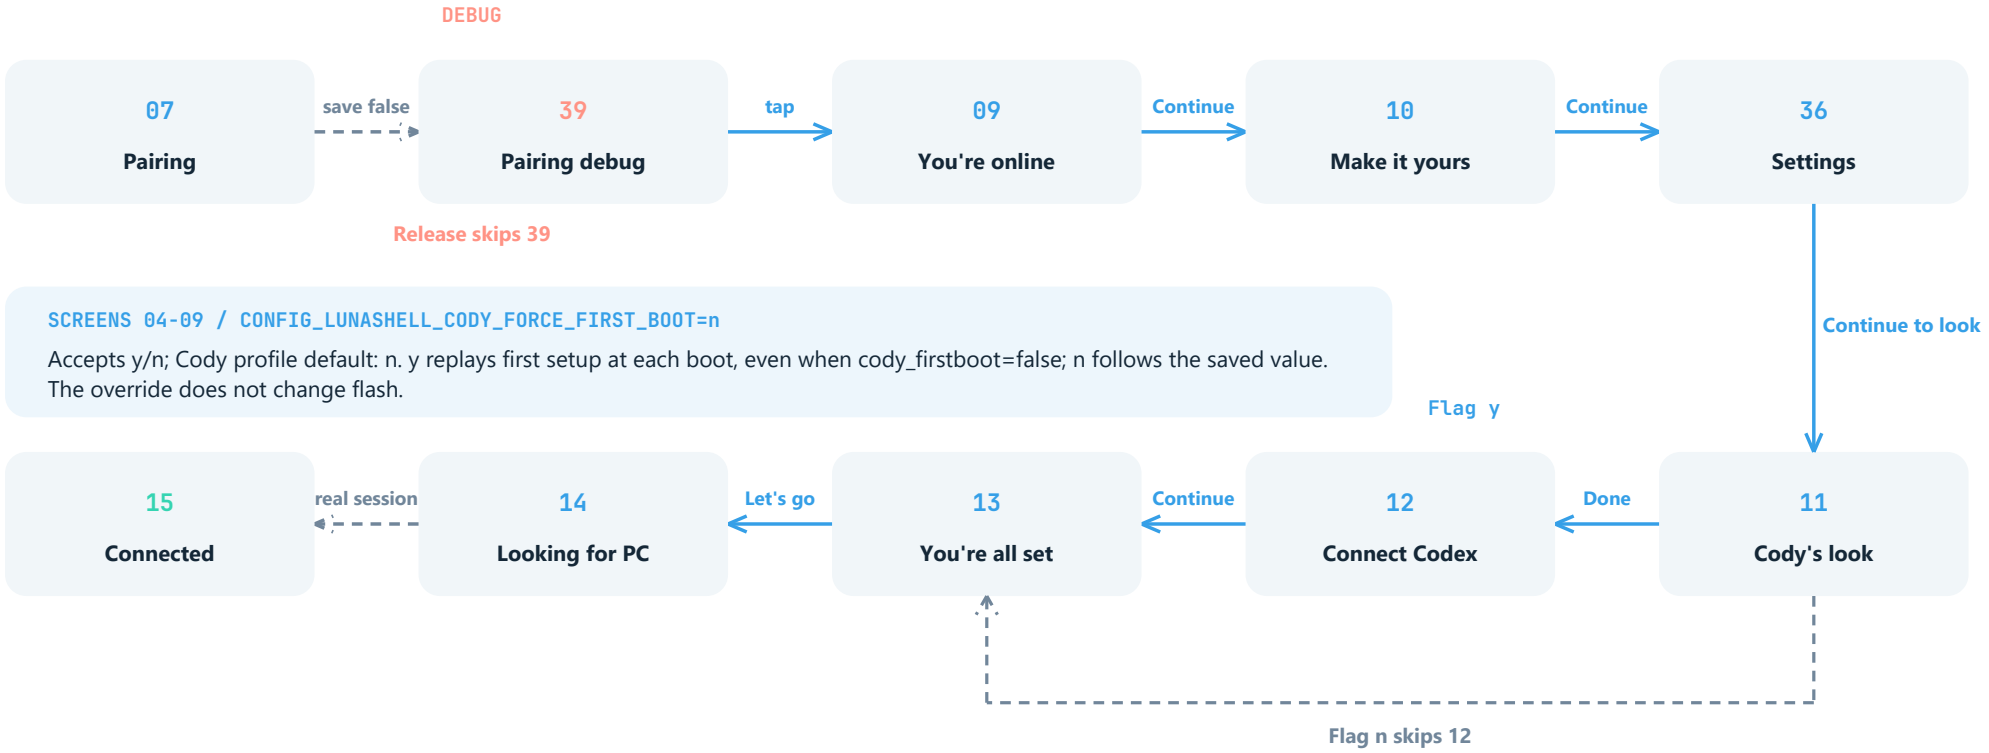

SCREENS 04-09 / CONFIG_LUNASHELL_CODY_FORCE_FIRST_BOOT=n

Accepts y/n; Cody profile default: n. y replays first setup at each boot, even when cody_firstboot=false; n follows the saved value. The override does not change flash.

ROUTE RULES

Screen 09 uses a 60-second standby override. Wake restores 09 and does not activate Continue. Screens 36 and 11 are reusable personalization routes. Screen 11 has no Back in first setup and cannot finish before an explicit row tap. Screen 15 is admitted only by a real current Codex/PC session state; screen 14 remains pending otherwise.

SCREEN 12 / CONFIG_LUNA_SHELL_CODY_ENABLE_CODEX=y

Controls Codex connection setup. Explicitly configured y and currently always enabled; n skips 12, from 11 to 13.

Umberto Giacobbi | hello@umbertogiacobbi.biz
Copyright umbertogiacobbi.biz 2026 - confidential

Idle moments without leaving Idle

A05 supplements base pages 02, 06, 10 and 11. Screen 16 retains its identity.



3.2 seconds -> return to the same Idle expression -> 40-second cooldown -> new 20-40-second wait. The automatic clock greeting may stay visible behind these accents. Onboarding Hello 04 remains a separate route.

Copyright umbertogiacobbi.biz 2026 - confidential

Interrupt promptly and protect real work

Transient gesture policy; no new settings writes and no extension of device inactivity.

Normal Idle	Allow the three gestures only while the normal Main view is running, with a resting expression and no current personality symbol or caress.
Touch, Sophia or activity	Cancel the gesture as soon as the route/model consumes the real interaction. New motion-derived stress, microphone activity or other playback also takes priority.
Settings / setup / work	Suppress scheduling outside screen 16. Never navigate away from a question, pairing attempt, working state, error, settings or Debug route to show a gesture.
Pause / Sleep / Wake	Do not admit gestures while paused or during lifecycle transitions. Active-time clocks exclude parked time; no backlog or catch-up scene is created.
Whistle admission	Only a completed visible pursed-mouth frame may request sound. Quiet hours, volume zero, disabled sounds, busy audio and cooldown suppress it; do not retry later.
Audio ownership	The audio owner publishes the actual cue identity and successful PCM level in the canonical snapshot. Cody's own whistle keeps its mouth pursed; unrelated playback interrupts.

Source implementation and the Windows visual model were updated. Firmware build, tests, simulator execution and physical appearance/acoustics remain unverified and require separate authorization.

Copyright umbertogiacobbi.biz 2026 - confidential

Errata and corrections

Revision date: 05 October 2026. Previous pages and addenda remain intact.

Breathing visibility	Clarifies a visible mouth pulse under stress: 35% closing, 16-22% reopening and a 4.5% width pulse. Affects screen 16 / Idle and the Stressed expression.
Three idle scenes	Adds IS02 Yawn, IS03 Whistle and IS04 Greeting alongside IS01 Breathing. These are transient screen-16 accents, not new routes or status measurements.
Random scheduling	Replaces the fixed idle-yawn trigger with a random 20-40-second eligible wait, a 3.2-second gesture and a 40-second cooldown. Excludes immediate repeats.
Audio and interruption	Adds one original 300-ms whistle via the existing optional sound owner. Documents cancellation, quiet/volume/busy suppression and canonical playback identity.
Affected original references	Manga pages 03-04 (cue language), 14 (circular placement), 15 (handoff/motion); Navigation pages 02, 06, 10, 11-12. Screens 04, 16, 35A/35B, 36-38 retain their identities and navigation.
Preservation and evidence	Original pages 1-16, including all earlier addenda/errata, are preserved. This revision appends two design pages and this errata page. Runtime behavior and acoustics have static source review only.

Umberto Giacobbi | hello@umbertogiacobbi.biz

Copyright umbertogiacobbi.biz 2026 - confidential

A shorter boot for a paired Cody

N01 / Supersedes startup timing on pages 02 and 06; screens 01-05 and 16.



01 Sleeping / 2.0 s



02 Waking / 1.5 s



03 Ready / 2.0 s

Returning device: 03 -> 16

A validated saved first-boot false goes straight to Idle and its clock routine. Entering Idle requests one random Affection or Joy for four seconds, using the same visible-symbol sound owner. Pairing and credential keys are preserved.

Service waits are additional

The three phases take 5.5 active seconds altogether. Actual startup checkpoints gate progression; waiting for a service does not consume the next phase. Boot shows Cody without a website logo, Debug HUD or manga symbol.

First setup: 03 -> 04 -> 05

Hello 04 uses Happy and 'Hi, I'm Cody!' at (233,225,130): 70 ms per character, then one active second after the complete text reaches the panel. It proceeds to Pair 05. There is no second bitmap intro.

Boot differs from standby wake

Sleep 35A and Wake 35B retain their separate power sequencing. A 400-ms eye closure plus 300-ms hold precedes standby; the existing panel fade is 800 ms. A sleeping expression alone does not request physical standby.

Idle keeps the route and the controls

N02 / Updates pages 10-12, the 05 October idle appendix and screens 16 / 35A / 35B.

Continuous expression and breath

The stronger mouth breath composes with the selected front-facing expression. Idle accents use the same route, active clock and response controller. They never change navigation history, sensor timestamps, timeout preferences or device activity.

Eligible quiet time

Only the normal Main/Idle view schedules Yawn, Whistle and Greeting, including the automatic clock title. Setup, Debug, explicit greetings, sleeping/working/stressed overrides, paused animation and current symbol/caress presentations are excluded.

Interaction takes priority

Eye responses, caresses and tap feedback remain available through their own owners. Real microphone activity, unrelated speaker playback, authored motion stress and touch release an active gesture. Standby can occur before a gesture becomes due.

Canonical device facts

LowBattery, Charging and NoWifi consume a valid, fresh canonical snapshot. Battery hysteresis enters at 15% and exits at 20%. Stale or disproven facts invalidate their current symbol; an artistic hold never preserves a false device status.

Circle, Back and all sizes

Canvas 466 x 466, center (233,233), radius 233. The central safe square is [73,393) on both axes. Back occupies (10,203), 60 x 60, only with a previous route. Enlarged icons may overlap Cody but must avoid Back/status controls and fit the circular chord.

Visibility precedes sound

A prepared cue or pose does not prove display presentation. A newly visible retired frame admits the SFX. Hidden or blocked icons cannot emit a delayed appearance sound. Native errors remain visible in structured state and logs.

Cody Studio on Windows

N03 / Desktop appendix: synthetic preview, audio boundary and branding assets.



VibeWare / Cody Studio

Face Shape Inputs Inspect

Consolas UI / equal tab widths and padding

Fake driver; shared original sounds

The PC driver links the existing Cody C++ personality, whistle and typewriter modules. Their original PCM reaches the Windows playback backend; boot uses the generated WAVs. Tap, newly visible symbols, whistle and greeting glyphs connect to that owner. There is one playback voice, no mixer.

Synthetic is explicit

PC playback is never published into firmware snapshots. Native playback errors are retained and shown without stopping the preview. UI launch and a responding first frame have been observed; listening, complete idle cycles and physical device behavior remain unverified.

Approved logo and useful links

The existing VibeWare PNG is reused unchanged in the desktop header and window icon. These links open only on a click:

GitHub / project

Personal website

VibeWare manifesto

Where the original asset lives

Obsidian / 20_Execution / Projects / VibeWare / Branding / vibeware-logo.png. The repository copy, MIT license and provenance are in simulator/windows/assets/branding/. Desktop branding does not change the device boot artwork.

Errata and corrections

Revision date: 06 October 2026 / Earlier pages and errata remain intact.

Mouth / Manga 03-04, 15 and 05 October idle appendix

Replace the earlier 35% closing and 16-22% reopening guidance with 75% closing and 16-24% reopening. Width moves 18% toward its limits. Stressed peak opening is 0.24. Rest lip and tongue geometry now follow the revised rig.

Icons / Manga 03-04, 14; Navigation 10-12; Idle 16

Correct Main/Sleep placement to +30 px right, +40 px down and scale to 3.6x (+20% over 3x). Both fades are 400 ms. Micro remains excluded. All fourteen cues retain an enabled, original appearance sound with bounded admission.

Interaction / Idle 16 and Sleep 35A

Document moving caress recognition, Affection, varied Fear/Frustration eye responses, hysteresis and one fresh-press tap click. Single-voice playback and best-effort logging cannot block touch/rendering.

Idle / 05 October appendices; Navigation 10-12

Correct Whistle width 0.42 to authored minimum 0.5. Retain the 20-40 s eligible wait, 3.2 s gesture and 40 s cooldown. Yawn/Greeting are silent; Whistle attempts one 300-ms sound. Stress does not schedule idle gestures.

Boot / Navigation 02, 06; screens 01-05, 16, 35A/35B

Use 2.0 s Sleeping, 1.5 s Waking and 2.0 s Ready, excluding actual service waits. Paired returning devices skip setup and request random Affection/Joy in Idle. Standby wake remains a separate sequence.

Desktop / Navigation simulator appendix; Manga 15 handoff

Record the PC fake audio driver, Consolas UI, equal tabs, approved VibeWare asset and project/site/manifesto links. Synthetic PC observations are separate from firmware and physical-device evidence.

Preserved pages 01-19, including earlier errata. Firmware checkpoint de9b8b18 built/flashed on COM10; newer mouth/Whistle checkpoint f5ae5e2 has not been compiled or flashed. Two approved checks passed; four stopped/failed and have not been rerun. No physical visual/audio observation is claimed.

Canonical sources for this revision

assets/cody/cody.yaml; assets/cody/personality.yaml; CODY_rig.cpp / CODY_response.cpp; docs/architecture/cody/runtime.md, idle-scenes.md and personality-icons.md; simulator/windows/cody_simulator.py and cody_fake_audio.py. Clip durations come from the versioned personality audio manifest.

VibeWare first. Cody next.

B01 / The approved floppy-insertion animation becomes the opening brand signature.

Every cold boot begins with the VibeWare floppy. Its familiar pixel form introduces the maker before the companion comes to life.



0.00 s | 0.58 s | 1.25 s | 1.91 s | 3.00 s

A recognizable opening

The blue floppy and VW mark remain the original approved artwork. Black resolves the transparent background; exact twofold pixel scaling keeps the retro visual character crisp and centered on the circular display.

From identity to personality

The insertion motion belongs to the VibeWare introduction. Cody's existing Sleeping 01, Waking 02 and Ready 03 follow it, so the brand has its own moment before the character takes over.

VibeWare manifesto

https://umbertogiacobbi.biz/vibeware/manifesto

A shared opening signature for Cody and Luna.

The VibeWare startup sequence

B02 / VibeWare precedes screens 01-03; first-run setup and returning-device routes retain their identities.

VIBEWARE	01 / SLEEPING	02 / WAKING	03 / READY	NEXT ROUTE
3.5 s per cycle	**2.0 s**	**1.5 s**	**2.0 s**	**Existing policy**
Approved floppy	Existing Cody fade	Existing expression	Existing expression	Hello 04 or Idle 16

Nominal artwork dwell: at least 3.5 s of branding plus the existing 5.5 s character sequence. Real startup work, frame transfer and deliberate DMA parking can add wall time.

Complete the visible cycle

The 42 original frames retain their 80/90-ms timings. Cody starts each dwell after frame retirement and repeats while the real service checkpoint is pending. A successful checkpoint never truncates the current cycle or invents numeric loading progress.

Keep the right owner

Cody uses native 2D and its existing bounded DMA owner. Luna uses LVGL with the same flash-owned data. Original transparency is composited on black. No removable SD, network request or on-device GIF decoder is required.

Preserve ordinary wake

The introduction belongs to cold boot and software reset. Cody standby wake and actual deep-sleep Wake keep their existing presentation. First-boot, pairing and stored preferences are unchanged. Errors remain real and startup-critical failures stop handoff.

Implementation evidence

Approved GIF packaged; native/LVGL and Windows source integrated. Firmware build/size, host checks, simulator execution, rotations and physical fluidity are still pending explicit authorization.

Errata and corrections

Revision date: 06 October 2026 / VibeWare boot identity / Every earlier page and correction is preserved.

Affected original pages and screens

Original page 02 (Boot and entry); page 20 / N01 (shorter boot); page 22 / N03 (Studio branding); page 23 (earlier errata). Screen IDs 01-05 and 16 remain unchanged; 35A/35B wake is unaffected.

Corrections in this revision

Replace the statement that startup shows only Cody with the VibeWare introduction before screens 01-03. Retain the existing 2 / 1.5 / 2-second character phases. Replace the old public GitHub manifesto reference with the user-provided website URL. Desktop-only branding is now extended to the device boot.

Preservation and evidence

All 23 existing pages, earlier errata, bookmarks and original page content are retained. New pages B01 and B02 document the supplied artwork and implemented behavior. This final page records the revision; it does not certify firmware compilation or physical behavior.

Approved source and canonical reference

Source: Obsidian / VibeWare / press-kit / assets / boot / vibeware-floppy-insert-transparent.gif. The original is copied unchanged into the repository; generated metadata records its SHA-256, disposal-composited crop, original durations and flash pixel-data size.

https://umbertogiacobbi.biz/vibeware/manifesto

Pending validation

Build and size budgets, frame dwell under load, real errors, rotation, first setup/returning boot, standby/deep-sleep wake, Windows presentation and physical appearance remain unverified. No firmware tests, simulator launch or hardware operation accompanied this revision.